

Most - Often - Needed

1964

Volume R-24

RADIO
DIAGRAMS
and Servicing Information



Compiled by
M. N. BEITMAN

SUPREME PUBLICATIONS

Supreme Publications for Faster Radio-Television Repairs

Most - Often - Needed

1963

Television

Servicing Information



The repair of any TV set is simple with **Supreme Television** service manuals. Every set is covered in a practical manner to simplify trouble-shooting and repair. With this help find toughest faults in a jiffy. Most \$3 TV volumes cover a whole year.

COVERS ALL POPULAR SETS


Here is your service data for faster, easier TV repairs. Lowest priced. Best by comparison. **Supreme TV** manuals have all needed service material on every popular TV set. Helpful, practical, factory-prepared data that will really make TV servicing easy for you. Benefit and save with these amazing values in service manuals. Only \$3 per large volume. Used by 184,000 wise servicemen for faster repairs. Join them; begin to make TV repairs easily.

—NO-RISK ORDER COUPON—

TELEVISION SERVICE MANUALS

Supreme TV manuals are best for faster, easier TV repairs. Lowest priced. Factory data on practically all sets. Complete circuits, all needed alignment facts, wiring board views, waveforms, voltages, production changes, and double-page schematics. Only \$3 per large annual manual. Check volumes wanted.

- ☐ New 1963 Television Servicing Manual, only \$3.
- ☐ Additional 1962 TV, \$3. ☐ Early 1962 TV, \$3.
- ☐ 1961 TV Manual, \$3. ☐ 1960 TV Manual, \$3.
- ☐ Additional 1959 TV, \$3. ☐ Early 1969 TV, \$3.
- ☐ 1958 TV Manual, \$3. ☐ Additional 1957 TV, \$3.
- ☐ Early 1957 Television, \$3. ☐ 1956 TV Manual, \$3.
- ☐ Additional 1955 TV, \$3. ☐ Early 1955 TV, \$3.
- ☐ 1954 TV, \$3. ☐ 1953 TV, \$3. ☐ 1952 TV, \$3.
- ☐ 1951 TV, \$3. ☐ Master Index to all Manuals, 25c

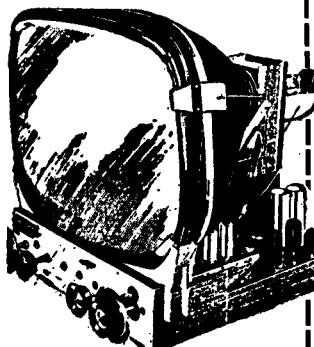

RADIO DIAGRAM MANUALS

Here are low-priced radio manuals that simplify repairing. Cover everything from most recent 1963 radios to pre-war old-timers; home radios, stereo, combinations, transistor portables, FM, and auto sets. Large schematics, all needed alignment facts, printed boards, voltages, dial stringing, hints. Volumes are big, 8 1/2 x 11", about 190 pages, each.

\$2⁵⁰

- ☐ 1963, ☐ 1962, ☐ 1961, ☐ 1960, ☐ 1959, ☐ 1958,
- ☐ 1957, ☐ 1956, ☐ 1955, ☐ 1954, ☐ 1953, ☐ 1952,
- ☐ 1951, ☐ 1950, ☐ 1949, ☐ 1948, ☐ 1947, ☐ 1946,
- ☐ 1942, ☐ 1941, ☐ 1940, ☐ 1926-38, EACH, \$2.50

RADIO Manuals

Your best source for all needed **RADIO** diagrams and service data. Covers everything from most recent 1963 radios to pre-war old-timers; home radios, stereo, combinations, transistor portables, FM. Every manual has large schematics, all needed alignment facts, printed boards, voltages, trimmers, dial stringing, and hints. Volumes are big, 8 1/2 x 11 inches, about 190 pages. See coupon at right for list of **SUPREME** popular radio service manuals ►

SUPREME PUBLICATIONS

1760 Balsam Road, Highland Park, ILL.

Rush today **TV** and **Radio** manuals checked in no-risk order form of this ad. Send postpaid, I am enclosing full price. You guarantee my complete satisfaction or my money back.


Name: _____

Address: _____

City: _____ State: _____


ADMIRAL

MODEL Y4659 - Y4677
CHASSIS 4S3A

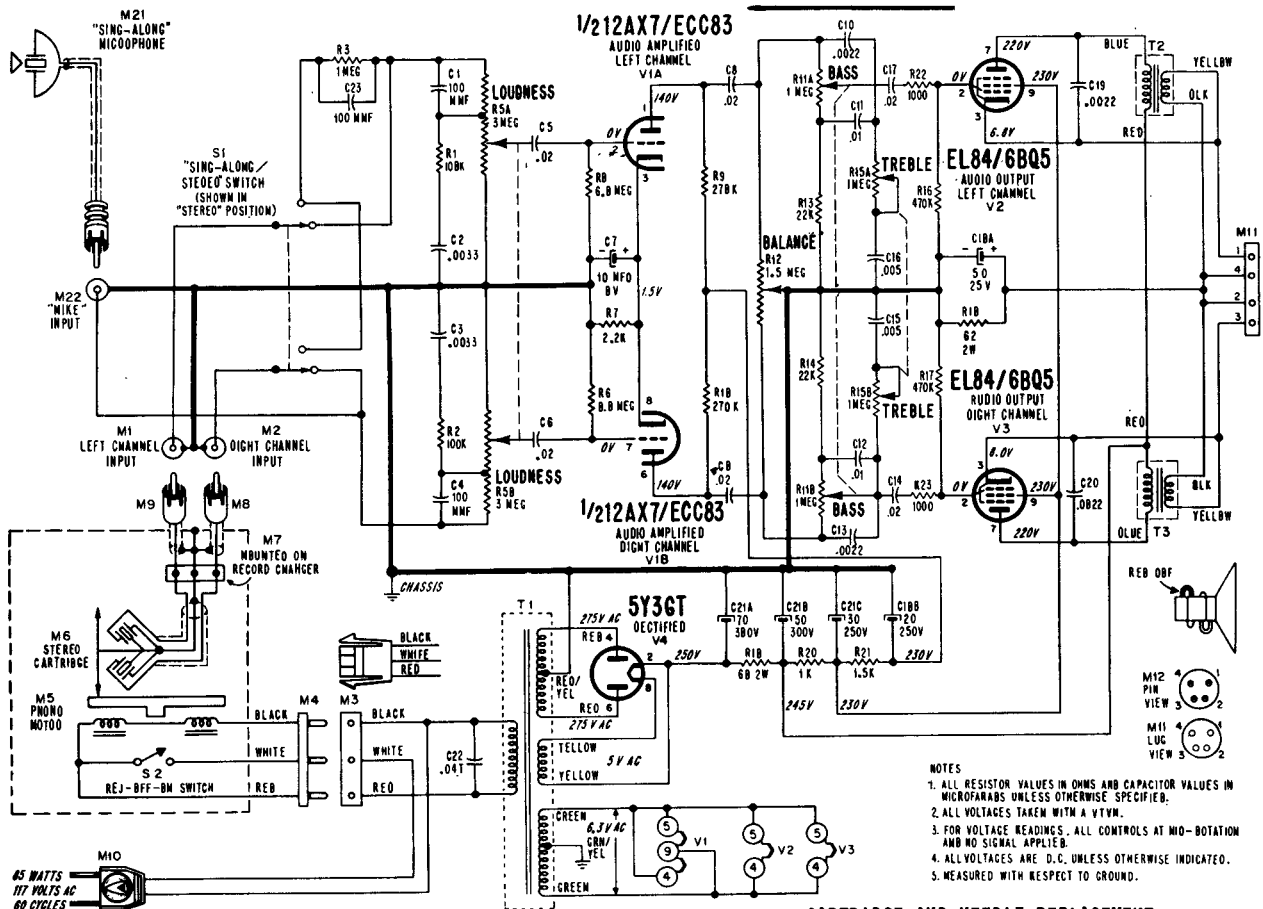

CARTRIDGE AND NEEDLE REPLACEMENT

Turn needle selector handle so that desired number (78 or LPS) faces up; corresponding needle will point down. With thumbnail, pull flange at rear of worn needle straight away from cartridge. Line up parallel flanges of new needle with opening in cartridge case and press in place with fingertip.

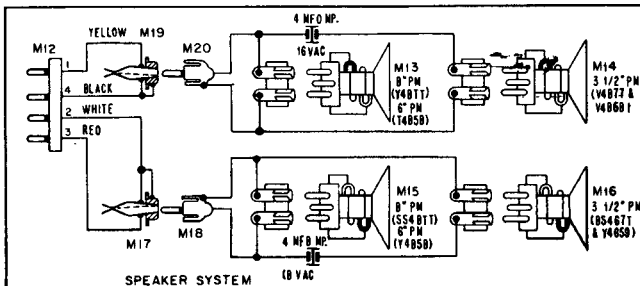


CHASSIS REMOVAL

Disconnect the line cord. Remove four screws holding chassis grille in place. Pull all control knobs off. Remove the nuts under the knobs of the treble and loudness controls while supporting the chassis. Chassis may now be lowered and pulled out for easy servicing.

IMPORTANT: For regular phonograph operation when "sing along" microphone is not being used, unplug microphone from socket and move switch back to "Stereo" position. If microphone is not disconnected with switch in "Stereo" position, the two sound channels will become out of balance, affecting satisfactory sound reproduction. Connect microphone only when using "sing along" operation.


ADMIRAL CHASSIS 1F1B MODEL Y4918

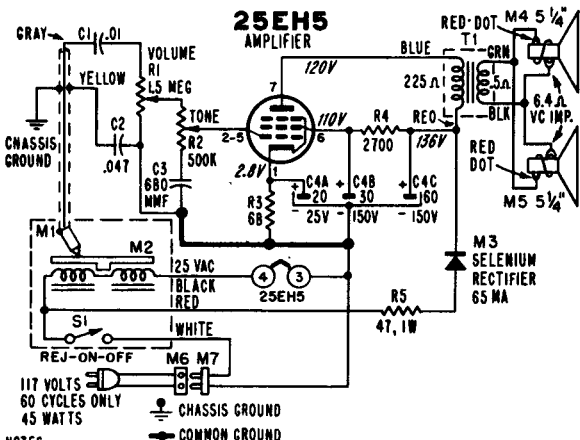

ADMIRAL

CHASSIS: 4X3, 4X3A

MODELS: Y3303, Y3308, Y3309, Y3337, Y3443

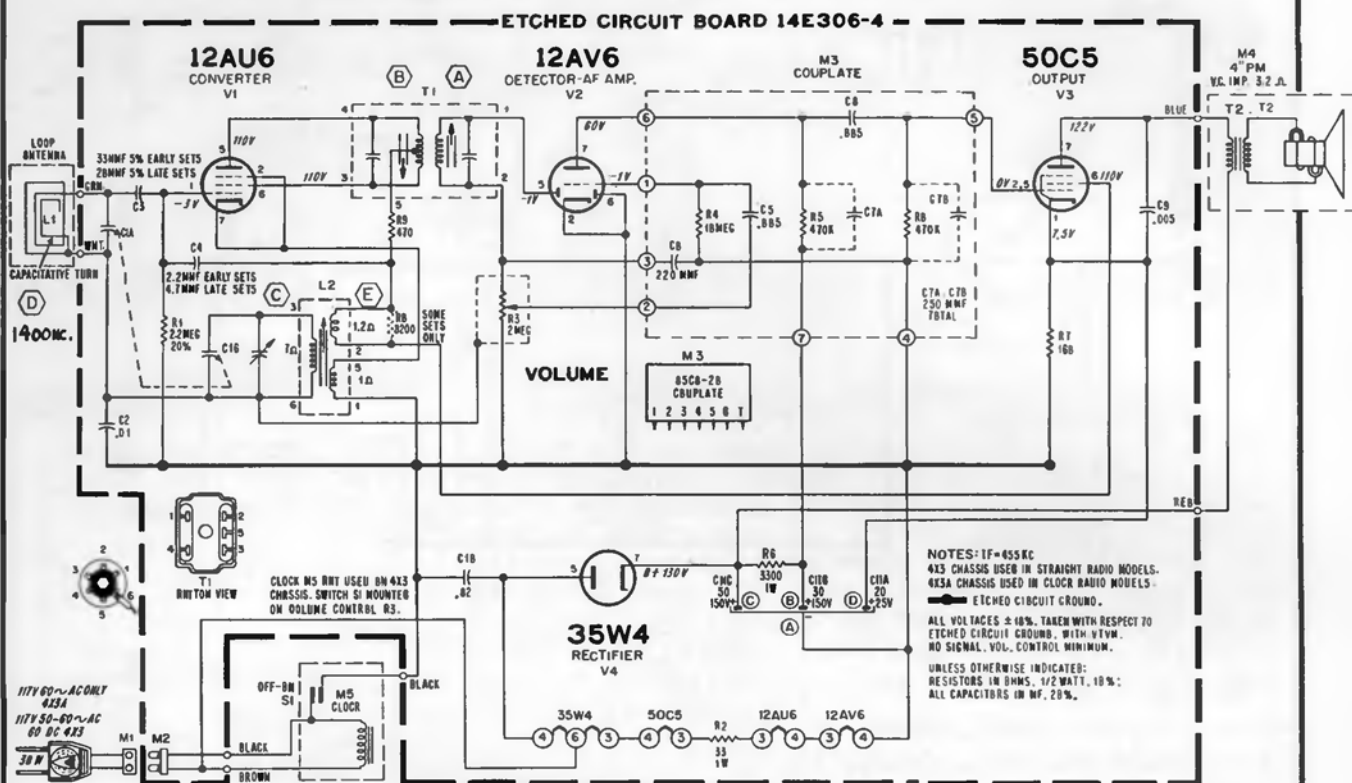


CHASSIS REMOVAL

1. Pull knob off and remove screw under tuning knob.
2. Carefully pry up top of cabinet at back with finger tips, enough to allow removal of cabinet back.
3. Remove screw holding volume control to cabinet front.
4. Remove plastic support from back of chassis and slip chassis assembly out.

WARNING! DO NOT CONNECT AN EARTH GROUND WIRE TO THIS RECEIVER.

The chassis of this receiver is connected directly to one side of the power line. To prevent damage to test equipment or to etched wiring, do not place chassis directly on a metal bench or other metal object.

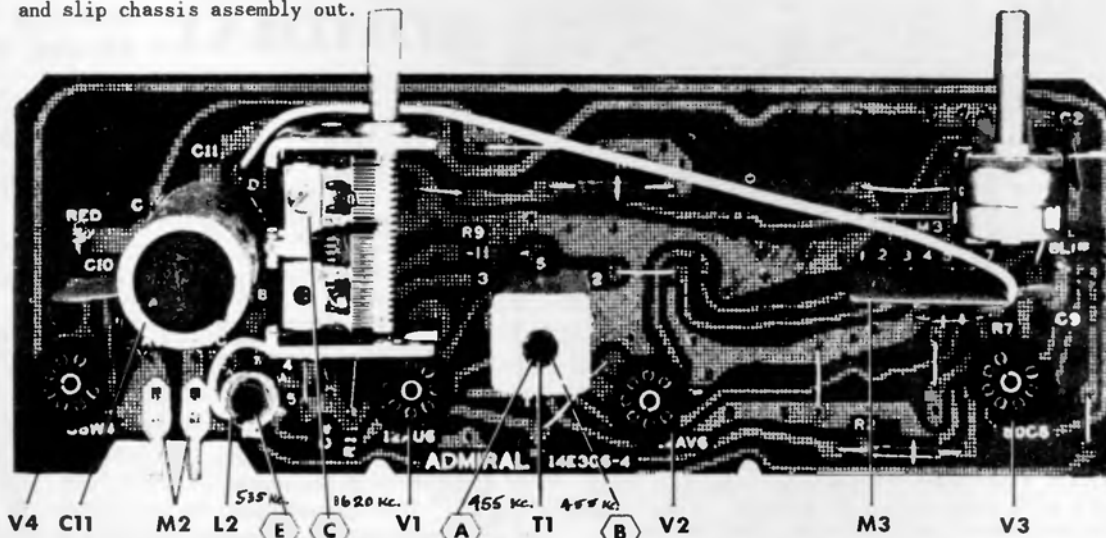


TOP VIEW OF CHASSIS (4X3) SHOWING COMPONENTS AND ALIGNMENT POINTS


ADMIRAL

Chassis 5D6A, 5D6B, 5D6C,
Models Y3321, Y3323, Y3346, Y3353,
Y3354, Y3359, Y3363, Y3364, Y3368,
Y3376, Y3377, Y3379, Y3381, Y3383.


DIAL STRINGING DIAGRAM - 5D6B CHASSIS

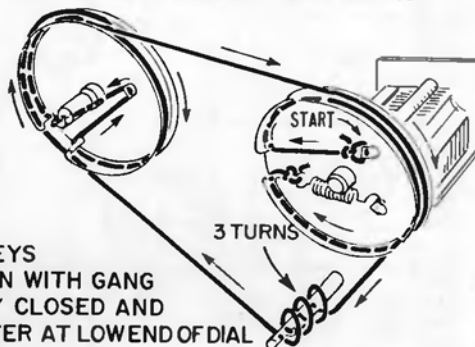

DIAL STRINGING DIAGRAM - 5D6C CHASSIS

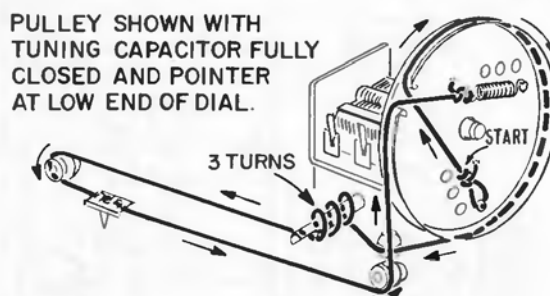

TOP VIEW OF CHASSIS (5D6B) SHOWING COMPONENTS AND ALIGNMENT POINTS

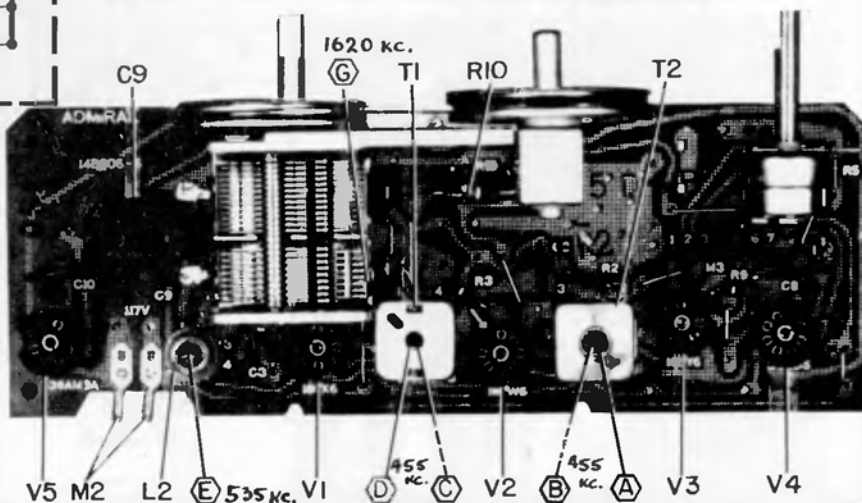

ETCHED CIRCUIT BOARD 14E306-6

34GD5
OUTPUT
V4

18FY6
DETECTOR-AVC-AMP
V3


18FW6
IF
V2

18FX6
CONVERTER
V1

SCHEMATIC NOTES

1. IF FREQUENCY 455KC.
ALL VOLTAGES TAKEN WITH VTVM. WITH 117V
AC LINE. NO SIGNAL INPUT. ALL VOLTAGES 10%
TOLERANCE.
2. ETCHED CIRCUIT BOARD
ALL CAPACITOR VALUES IN MF.
ALL RESISTOR VALUES IN OHMS.
UNLESS OTHERWISE SPECIFIED.
3. C1A PLUS C1B TOTALS 250MUF
TO REMOVE CHASSIS
TO REMOVE CHASSIS.
4. PULL KNOBS OFF.
FOR V1200 SERIES ONLY. WITH TAPED SCHEM.
DRIVER. CAREFULLY PULL OUT SQUARE PLASTIC
DIAL ESCUTCHEON.
5. FOR V1200 SERIES ONLY. PULL CIRCULAR DIAL
POINTER OFF BY CAREFULLY PULLING AT OPP-
OSITE POINTS.
6. REMOVE TWO SCREWS HOLDING CHASSIS TO CAB.
INET FRONT.
7. REMOVE PLASTIC BOARD SUPPORT AND SLIP
CHASSIS OUT.


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

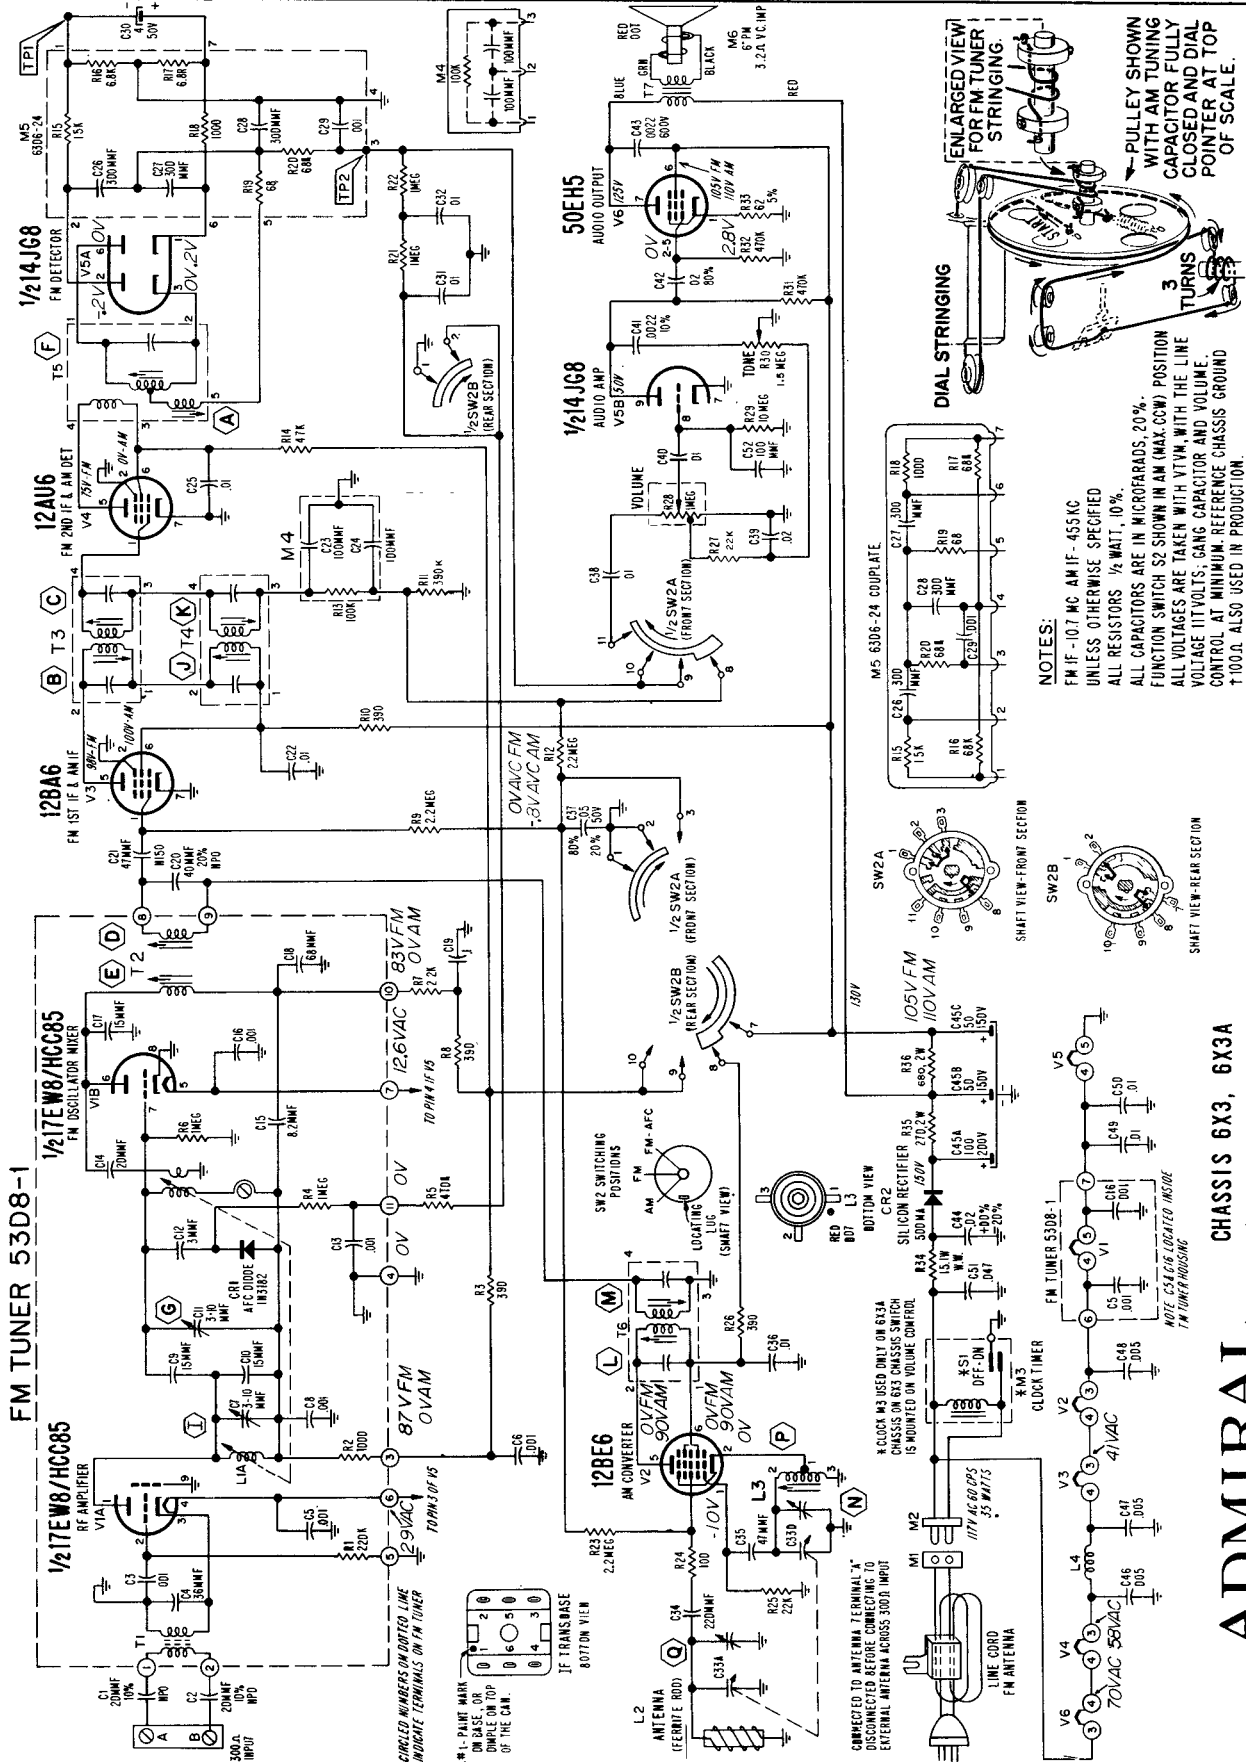

CHASSIS 6X3, 6X3A
MODELS Y3421, Y3426, Y3431, Y3436

ADMIRAL

ADMIRAL Chassis 7L2, Model Y2347

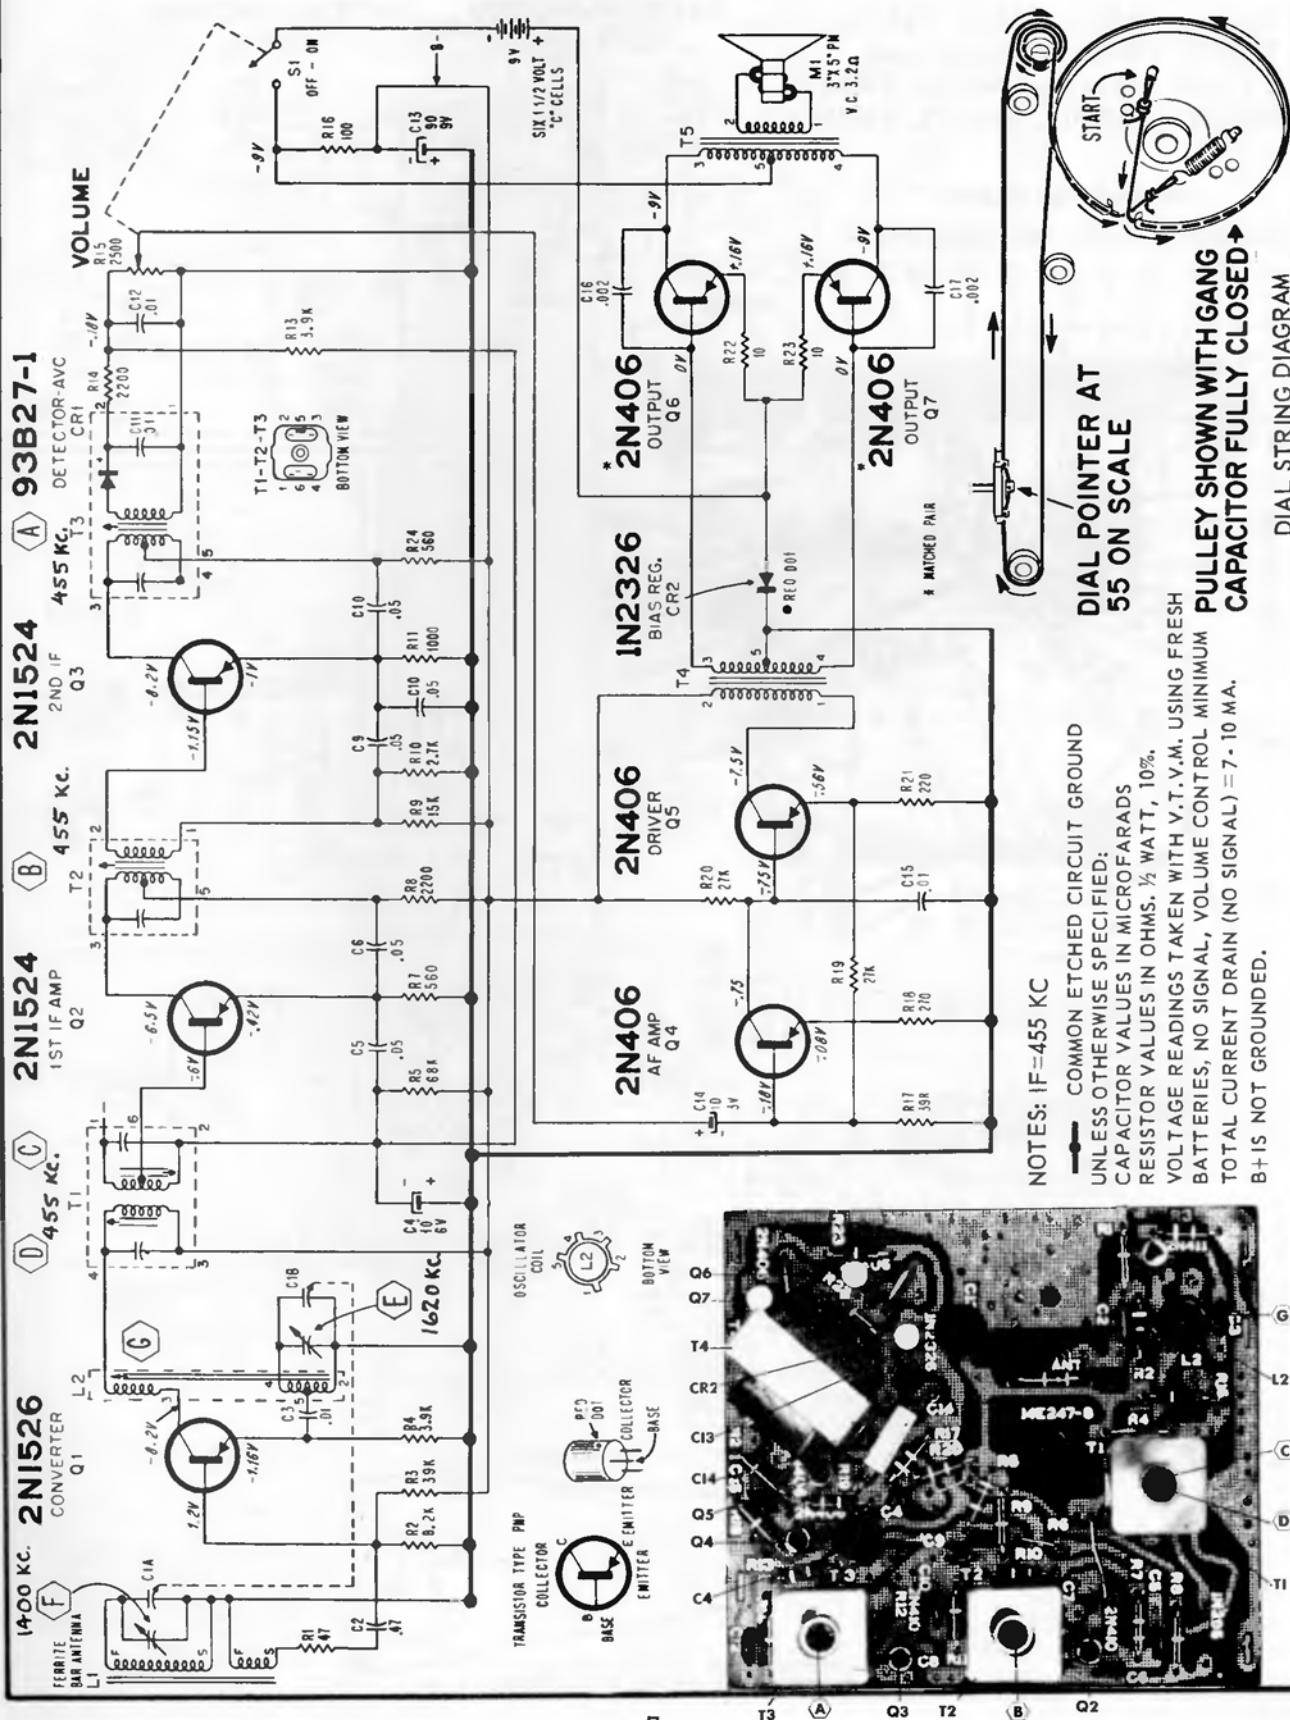

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION




ADMIRAL Chassis 9P1 and similar Chassis 8P1, list of models below, continued

Models Y4851, Y4852, Y4871, Y4872, Y4885, Y4941A, and TV sets SM3811, SM3812, SM3815, SM3831, SR3501, SR3502, SM3503.

1/217EW8/HCC85

1/217EW8/HCC85







TOP VIEW OF CHASSIS ALIGNMENT POINTS AND COMPONENTS

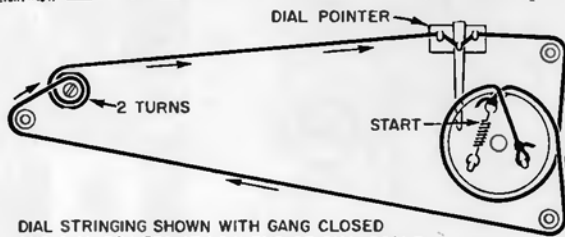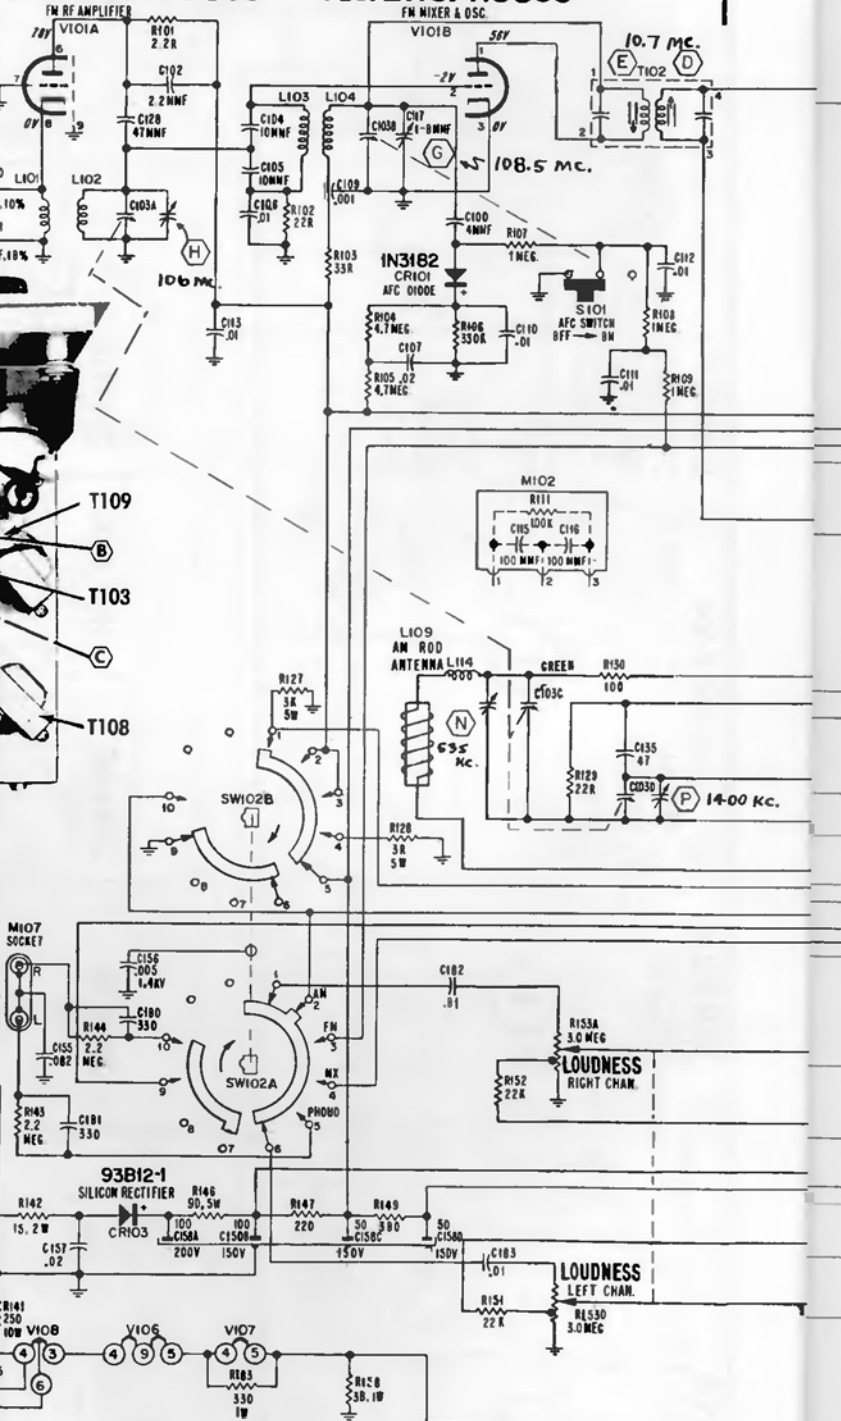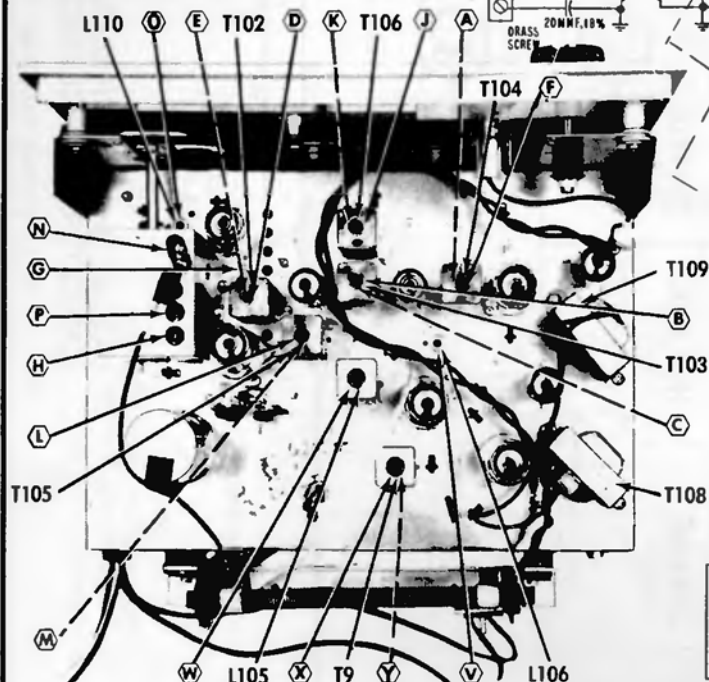

1. FM IF = 10.7 MC.
2. AM IF = 455 KC.
3. UNLESS OTHERWISE SPECIFIED: ALL RESISTORS 1/2 WATT, 10%. ALL CAPACITORS IN MICROFARADS.
4. FUNCTION SWITCH SW102 SHOWN IN AM POSITION (ARROW IS FULLY COUNTER CLOCKWISE) TO SIMPLIFY THE SCHEMATIC. SW102 SWITCH SECTIONS ARE SHOWN ON SCHEMATIC. MECHANICAL VIEWS IDENTIFY CORRECTION PTS.
5. VOLTAGES ARE MEASURED WITH 117V AC INPUT
6. ⚡ DENOTES CHASSIS GROUND.


DIAL STRINGING SHOWN WITH GANG CLOSED AND DIAL POINTER AT LOW END OF DIAL SCALE.

ADMIRAL Chassis 9P1 (and 8P1) used in models listed on preceding page

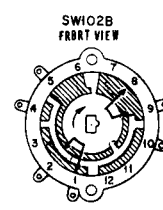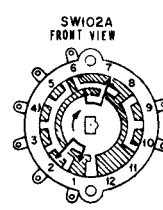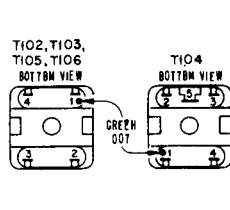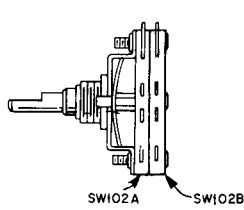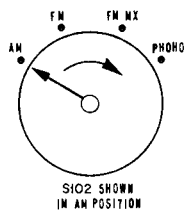



ADMIRAL

CHASSIS: 8G2
MODEL: Y2351

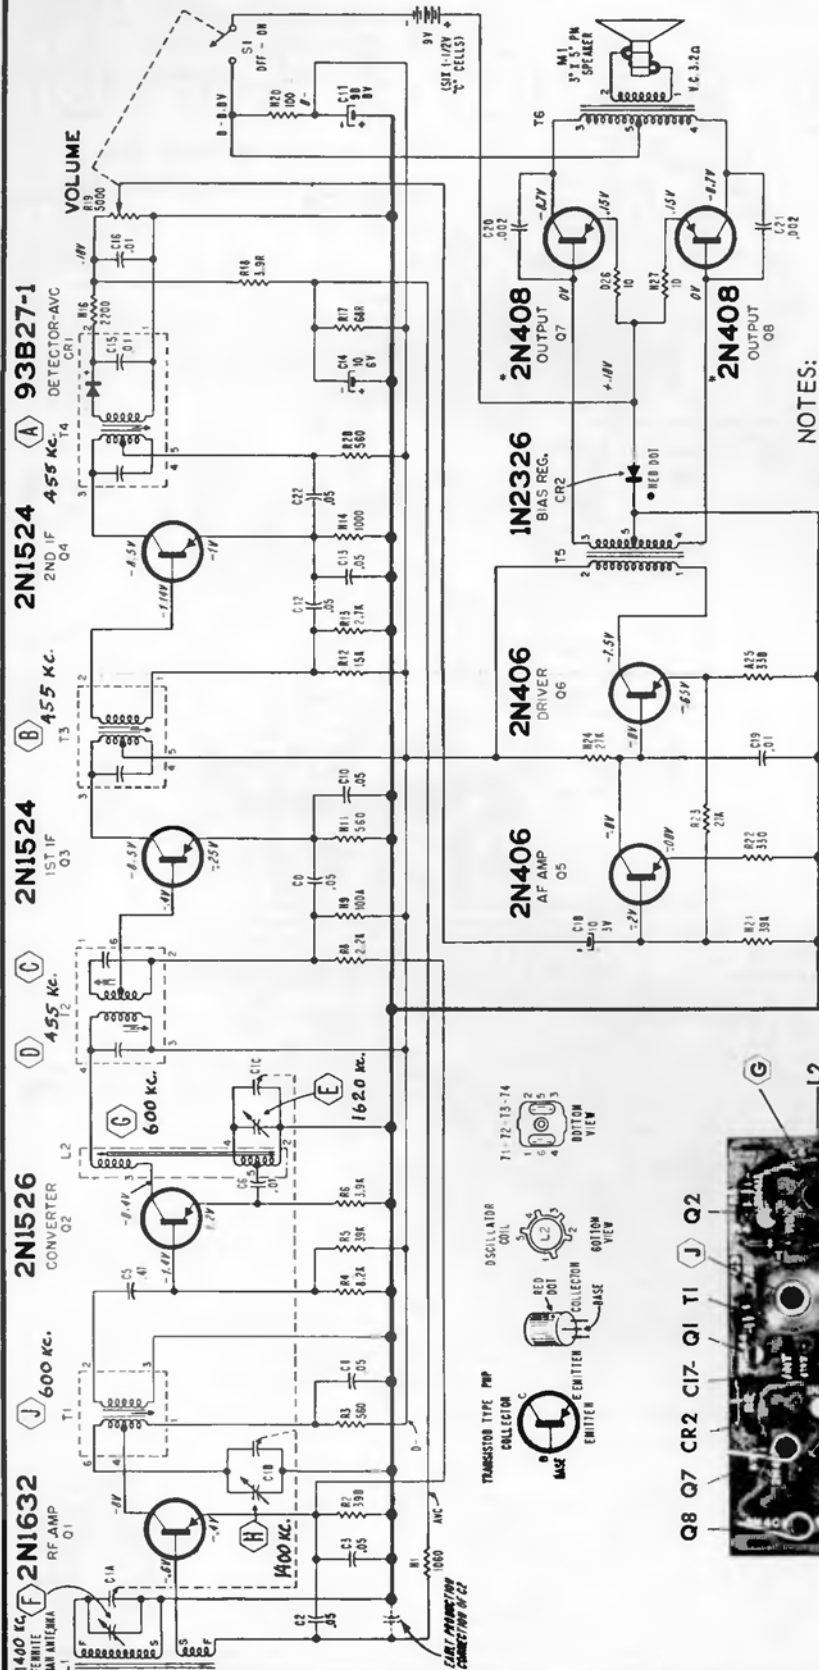

NOTES:
COMMON ETCHED CIRCUIT GROUND
UNLESS OTHERWISE SPECIFIED:
CAPACITOR VALUES IN MICROFARADS
RESISTOR VALUES IN OHMS, 1/2 WATT, 10%
VOLTAGE AND CURRENT READINGS TAKEN
WITH FRESH BATTERIES, NO SIGNAL, VOL-
UME CONTROL MINIMUM


TOTAL CURRENT DRAIN (NO SIGNAL)=8-11MA
B+ NOT GROUNDED IF=455KC *MATCHED PAIR

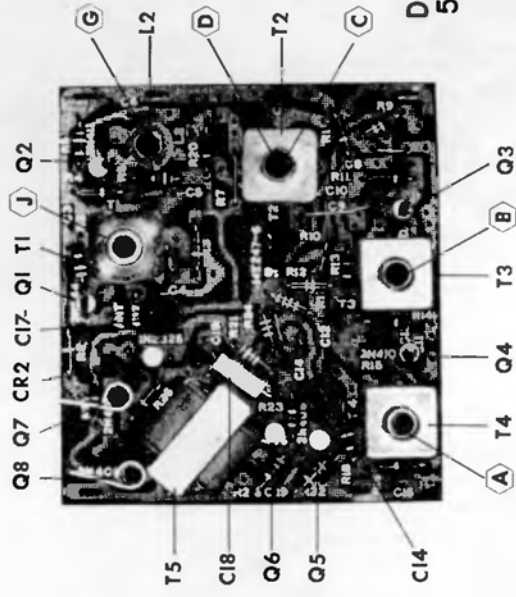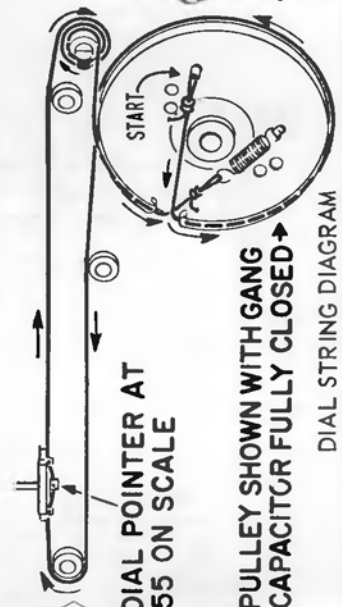

This view is of an early production set and may appear slightly altered in other sets.

Arvin

Models 53R05, 53R07, Code 1.74401, Models 53R17, 53R19, Code 1.75401, Models 53R27, 53R28, Code 1.76001, and electrically similar Models 13R35, 13R37, Code 1.74501, which use dual speakers and are less clock.

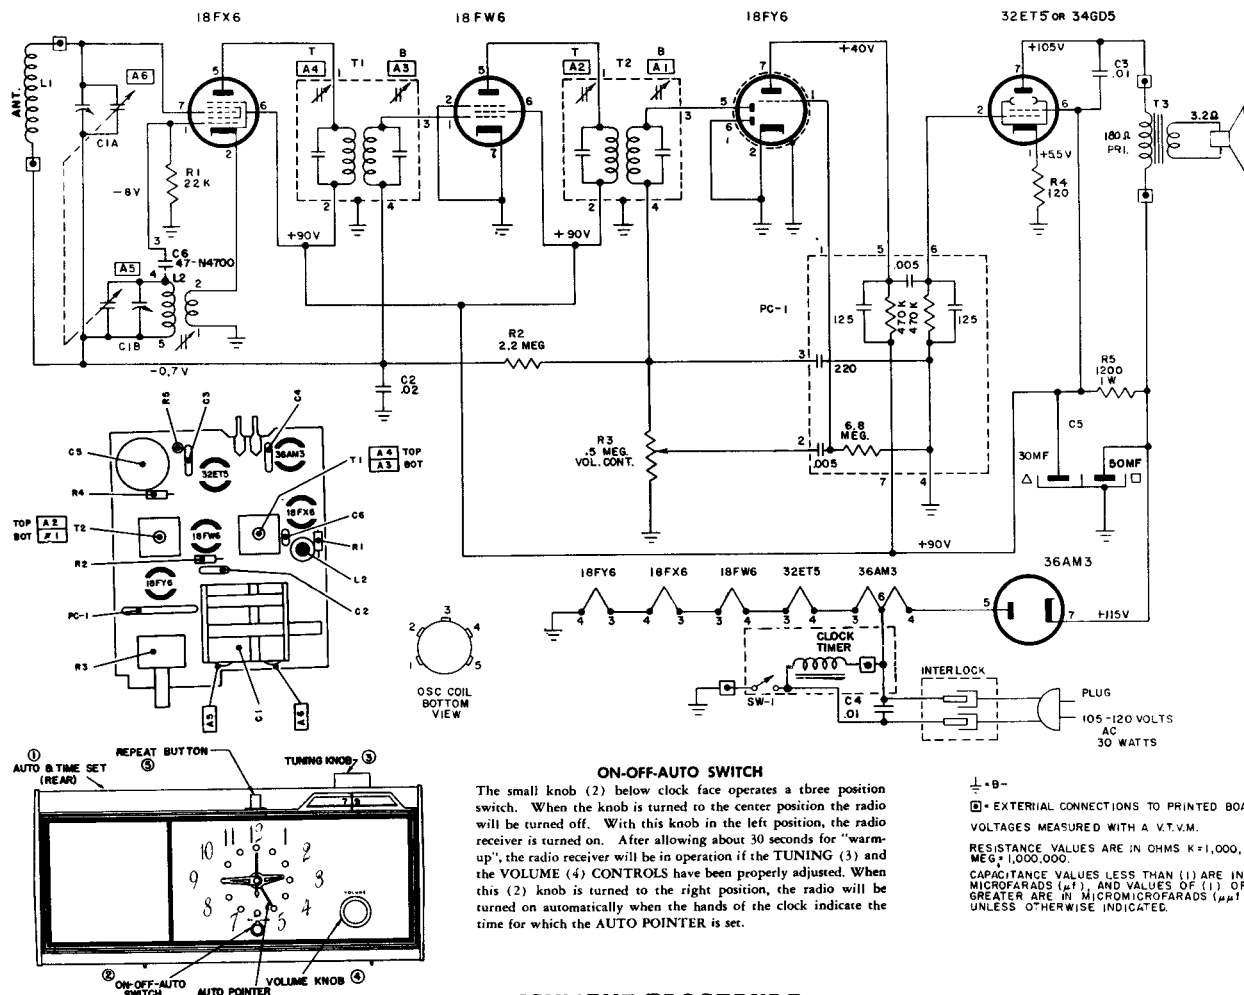

ALIGNMENT PROCEDURE

PRELIMINARY:

Output meter connection Across speaker voice coil
Output meter reading to indicate 500 milliwatts (standard output) 1.0 volts
Connection of generator ground lead Floating ground
Generator modulation 30% 400 cycles

Position of Variable	Frequency of Generator	Dummy Antenna	Generator Output Connection	Trimmers Adjusted in Order Shown for Maximum Output	Function of Trimmer
Open	455 Kc	.05 μ fd	Pin 7 18FX6	A1, A2, A3, A4	I.F. Oscillator Antenna
Open	1670 Kc		* Test Loop	A5	
1400	1400 Kc		* Test Loop	A6	
1000	1000 Kc		* Test Loop	Fan C1A Plates	
600	600 Kc		* Test Loop	Fan C1A Plates	


* Standard Hazeltine Test Loop Model 1150 or 3 turns of wire about 6" in diameter placed about one foot from the set loop.

The alignment procedure should be repeated in the original order for greatest accuracy. Always keep the output from the signal generator at its lowest possible value to make the AVC action of the receiver ineffective.

Arvin



Model 63R58

Code 1. 75101

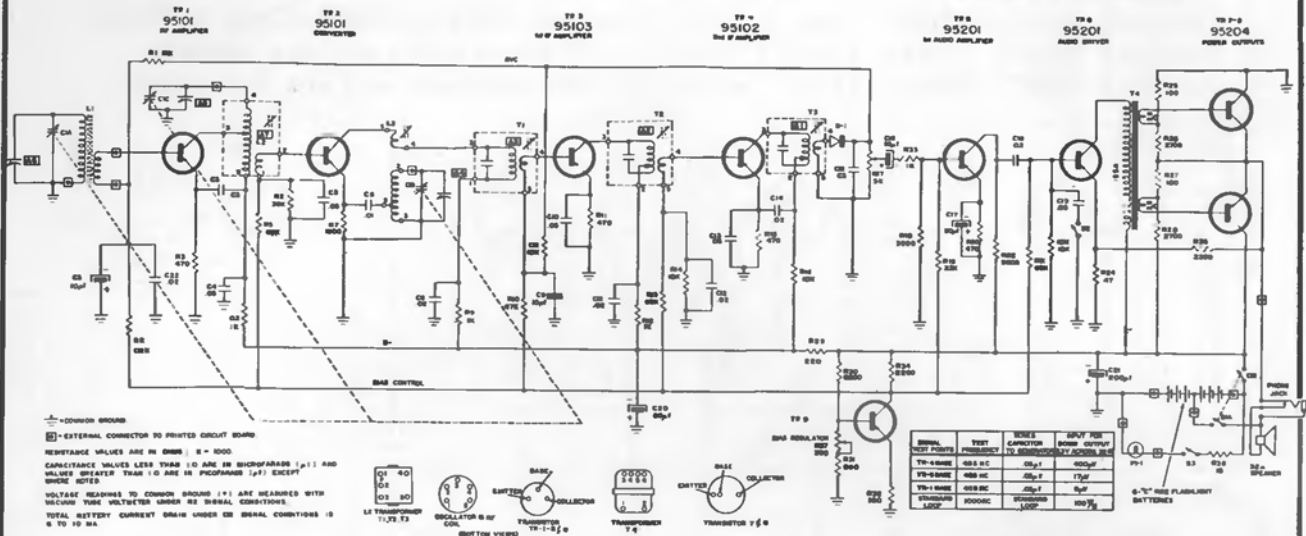


Alignment

Position of Variable	Generator Frequency	Trimmers Adj. in order shown for Max. Output	Function of Trimmer
Open	455 Kc	A1 (Top of T3) A2 (Top of T2) A3 (Top of T1)	I. F. I. F. I. F.
Open	1640 Kc	A4	Oscillator
1400 Kc	1400 Kc	A5	Converter
		A6	Antenna
600 Kc	600 Kc	Check Point	
		A7	Converter

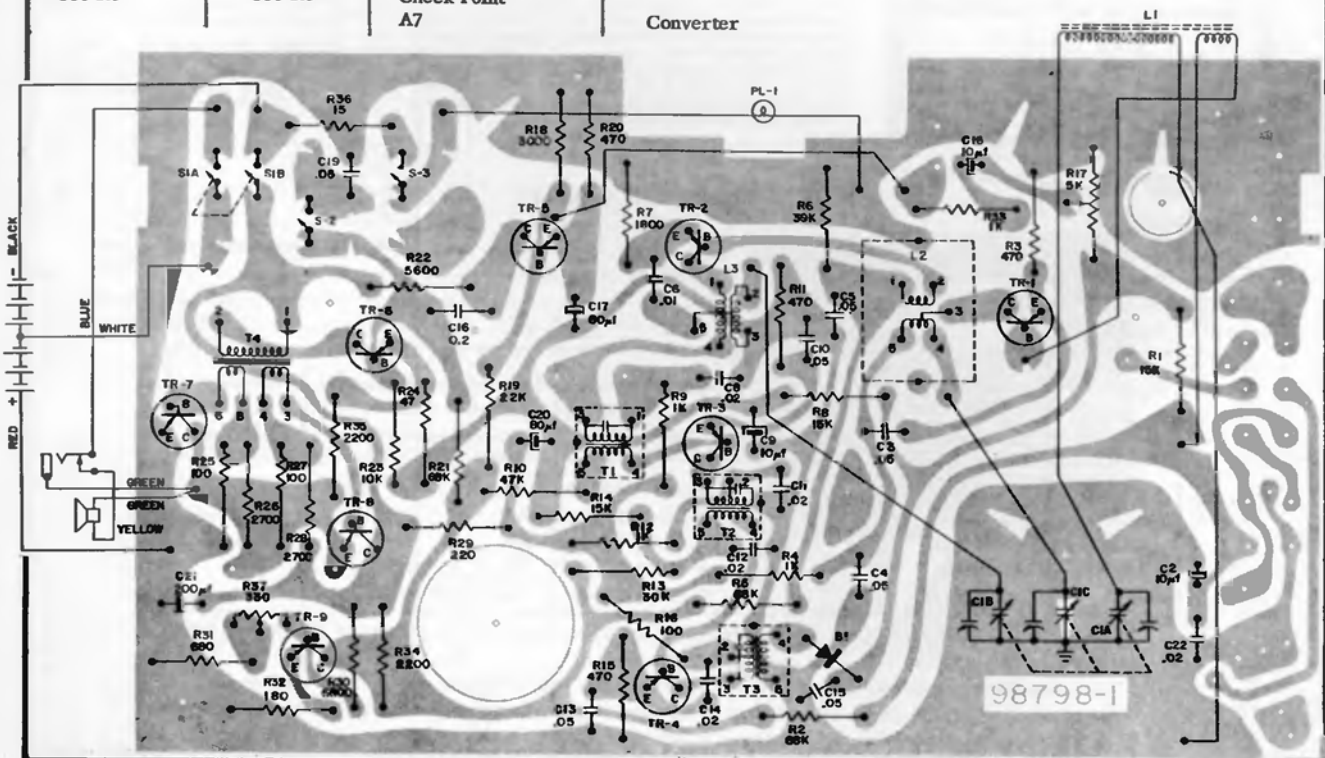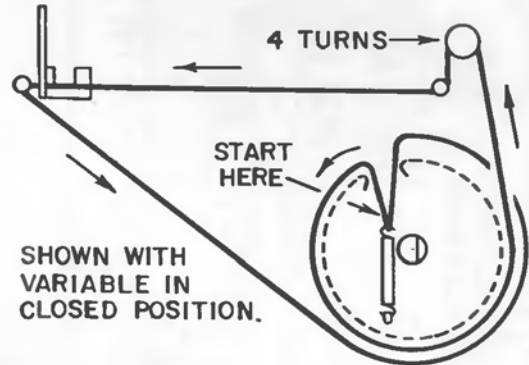

ARVIN Model 63R38, Code 1.75001

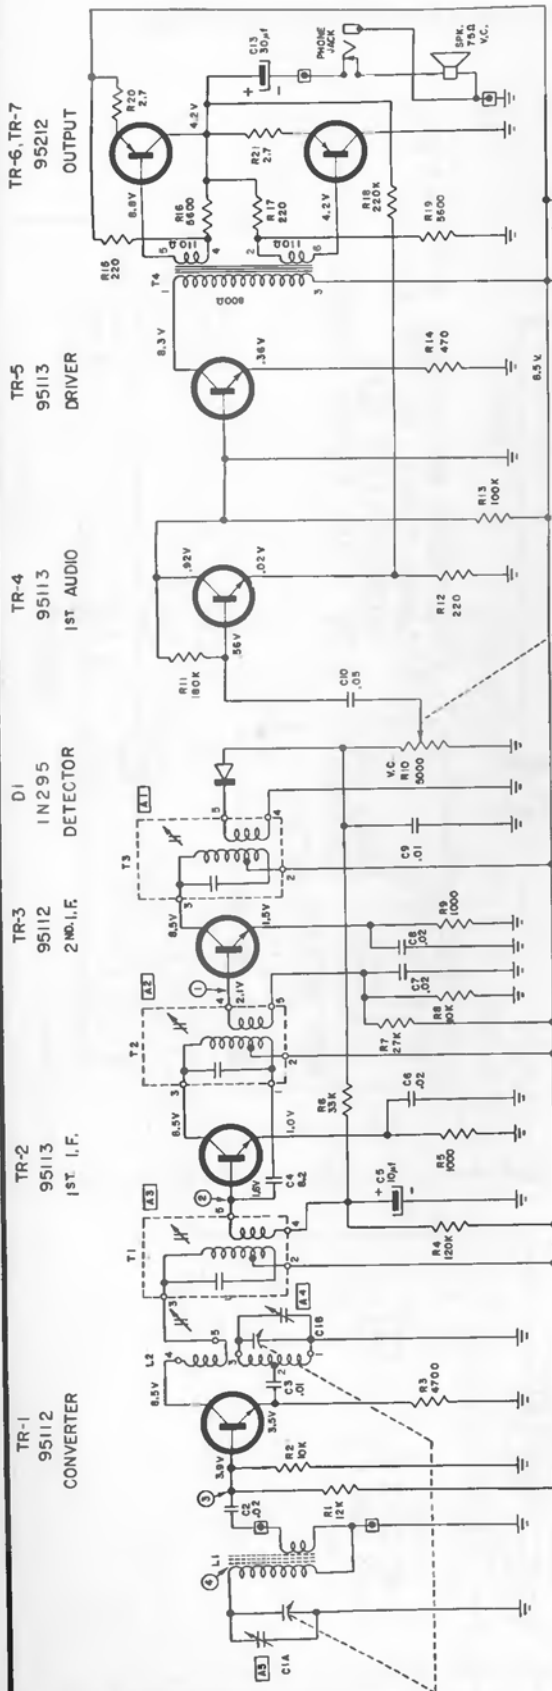

SIGNAL TEST POINTS	TEST FREQUENCY	SERIES CAPACITOR TO GENERATOR	INPUT FOR 5 M W OUTPUT (μV ACROSS 75Ω)
①	455 KC	.05 μf	500 μV
②	455 KC	.05 μf	12 μV
③	455 KC	.05 μf	2 μV
④	1000 KC	STANDARD LOOP	200 μV/M



CAPACITANCE VALUES LESS THAN 10 ARE IN MICROFARADS (μF), AND VALUES GREATER THAN 10 ARE IN MILLIFARADS (mF) EXCEPT WHERE NOTED.

VOLTAGE READINGS TO COMMON GROUND ARE UNDER NO SIGNAL CONDITIONS WITH TUNING GEAR/CLIP CLOSED AND VOLUME CONTROL AT MAXIMUM COUNTERCLOCKWISE ROTATION.

RESISTANCE VALUES ARE IN OHMS; K=1000, M=1,000,000.



⊕=COMMON GROUND SYMBOL.

⊞=EXTERNAL CONNECTION TO PRINTED CIRCUIT.

TOTAL BATTERY CURRENT DRAIN UNDER NO SIGNAL CONDITIONS, 8 TO 14 MA.




I. F. 455 KC.

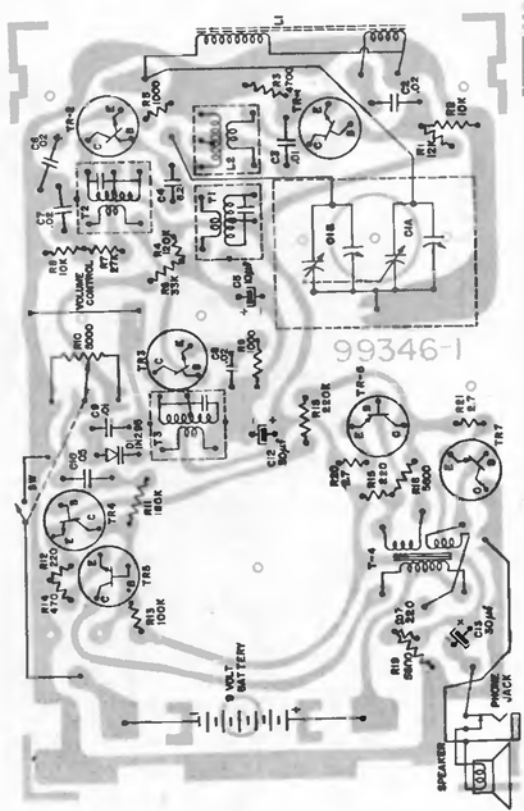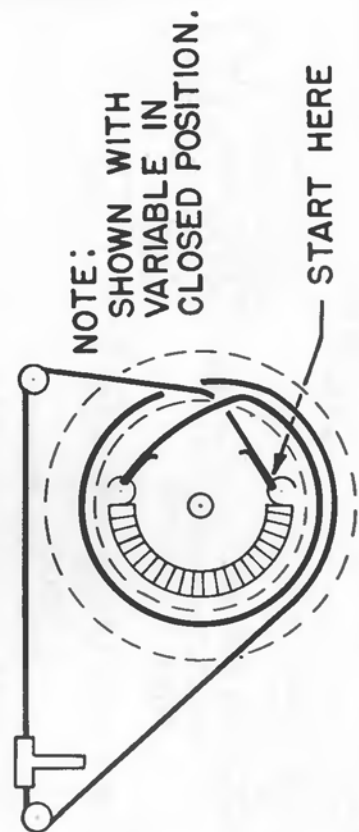


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

ARVIN Models 83P43, 83P53, 83P55, Code 1.77001, and Model 83P15, Code 1.67201, is very similar except for tone control and motor type.

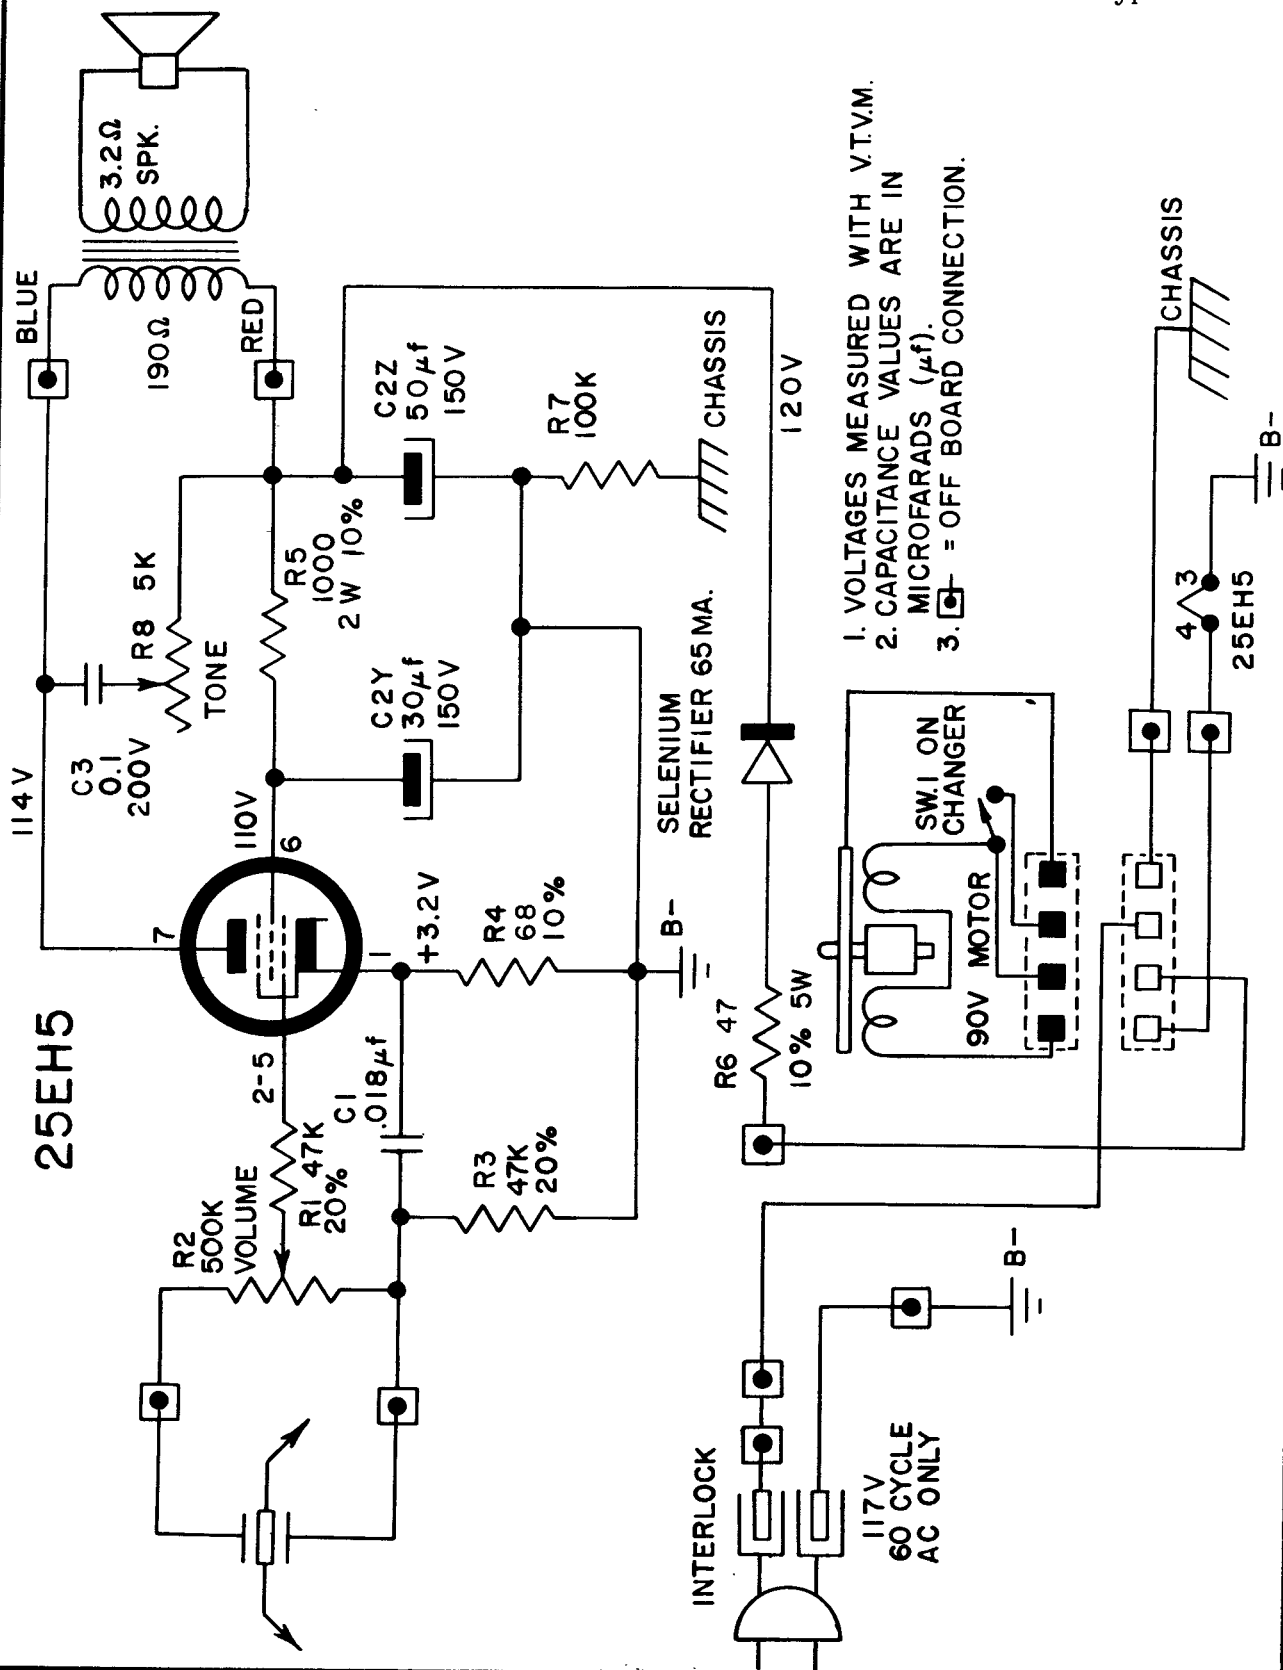


1. VOLTAGES MEASURED WITH V.T.M.
2. CAPACITANCE VALUES ARE IN MICROFARADS (μf).
3. = OFF BOARD CONNECTION.

ARVIN Models 33R28, 33R29, Code 1.74301, and Model 43R43, Code 1.78001, which is very similar but includes a tone control and clock timer.

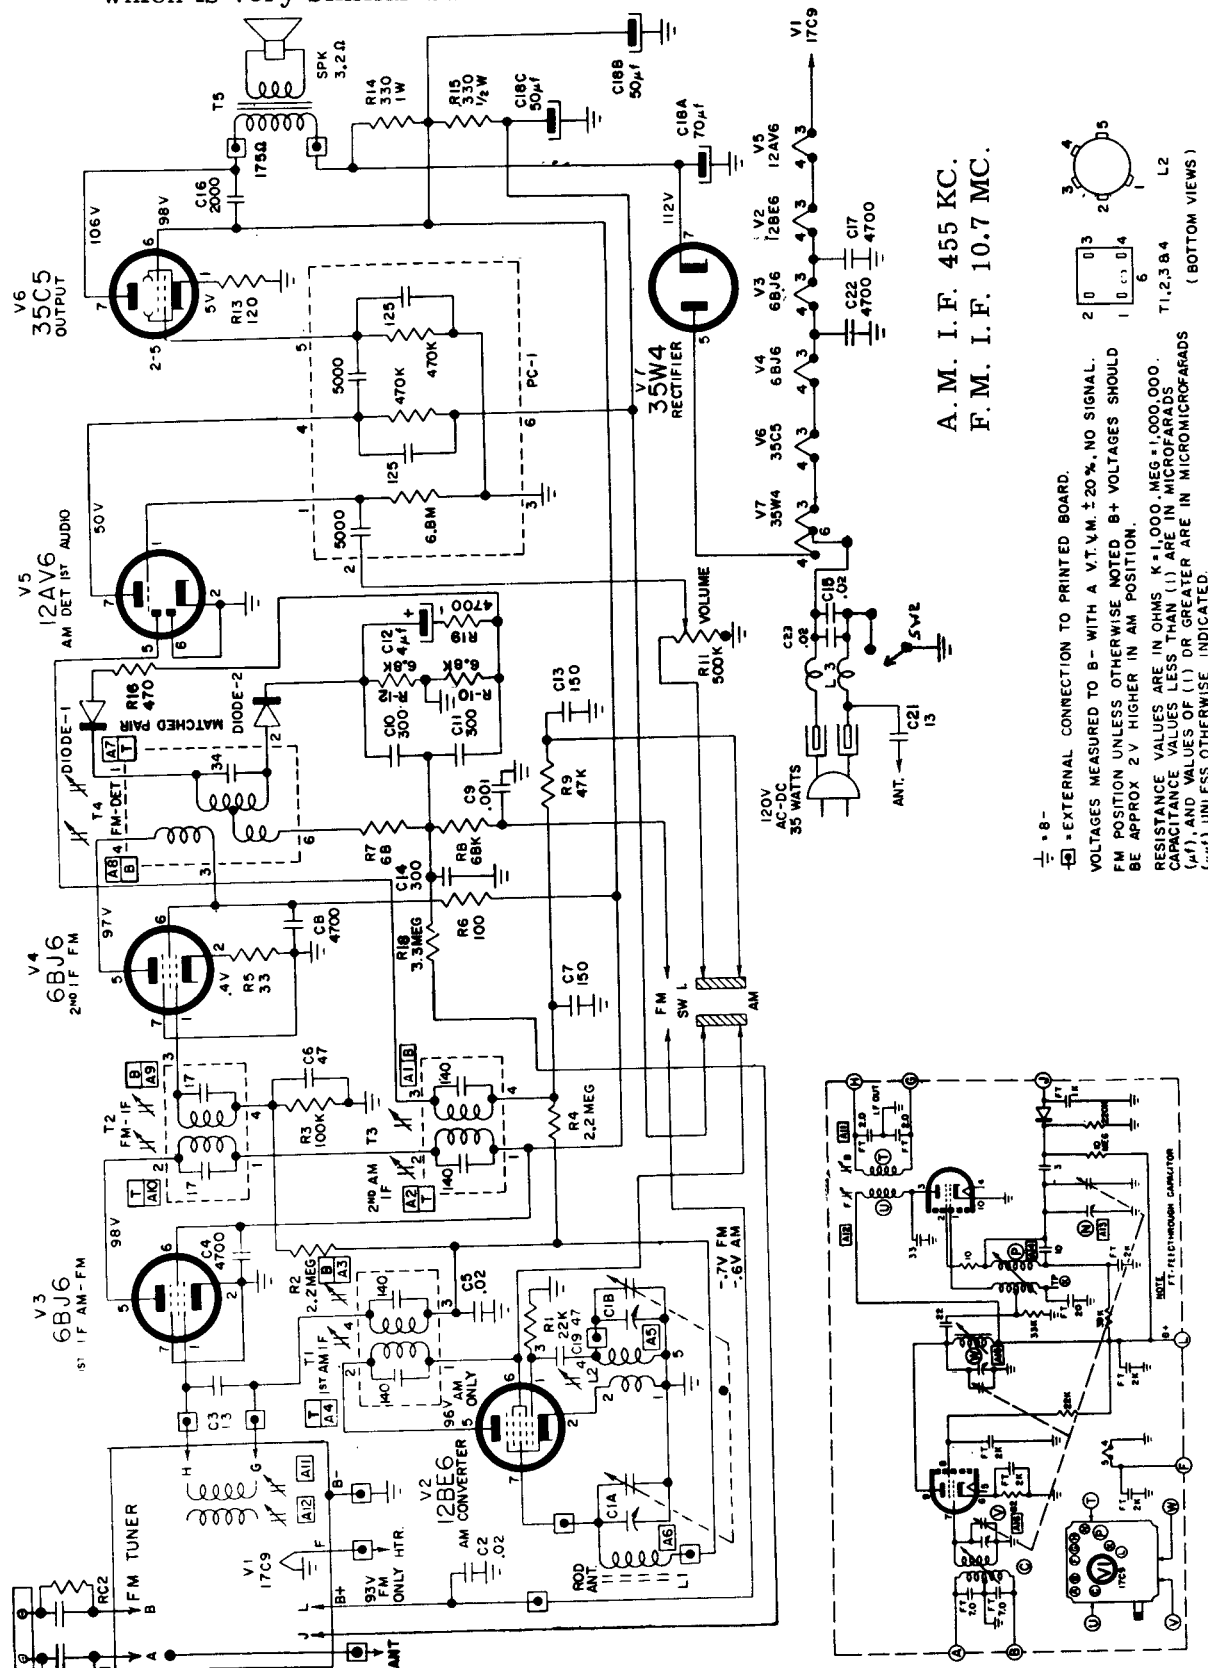

TUNER SCHEMATIC

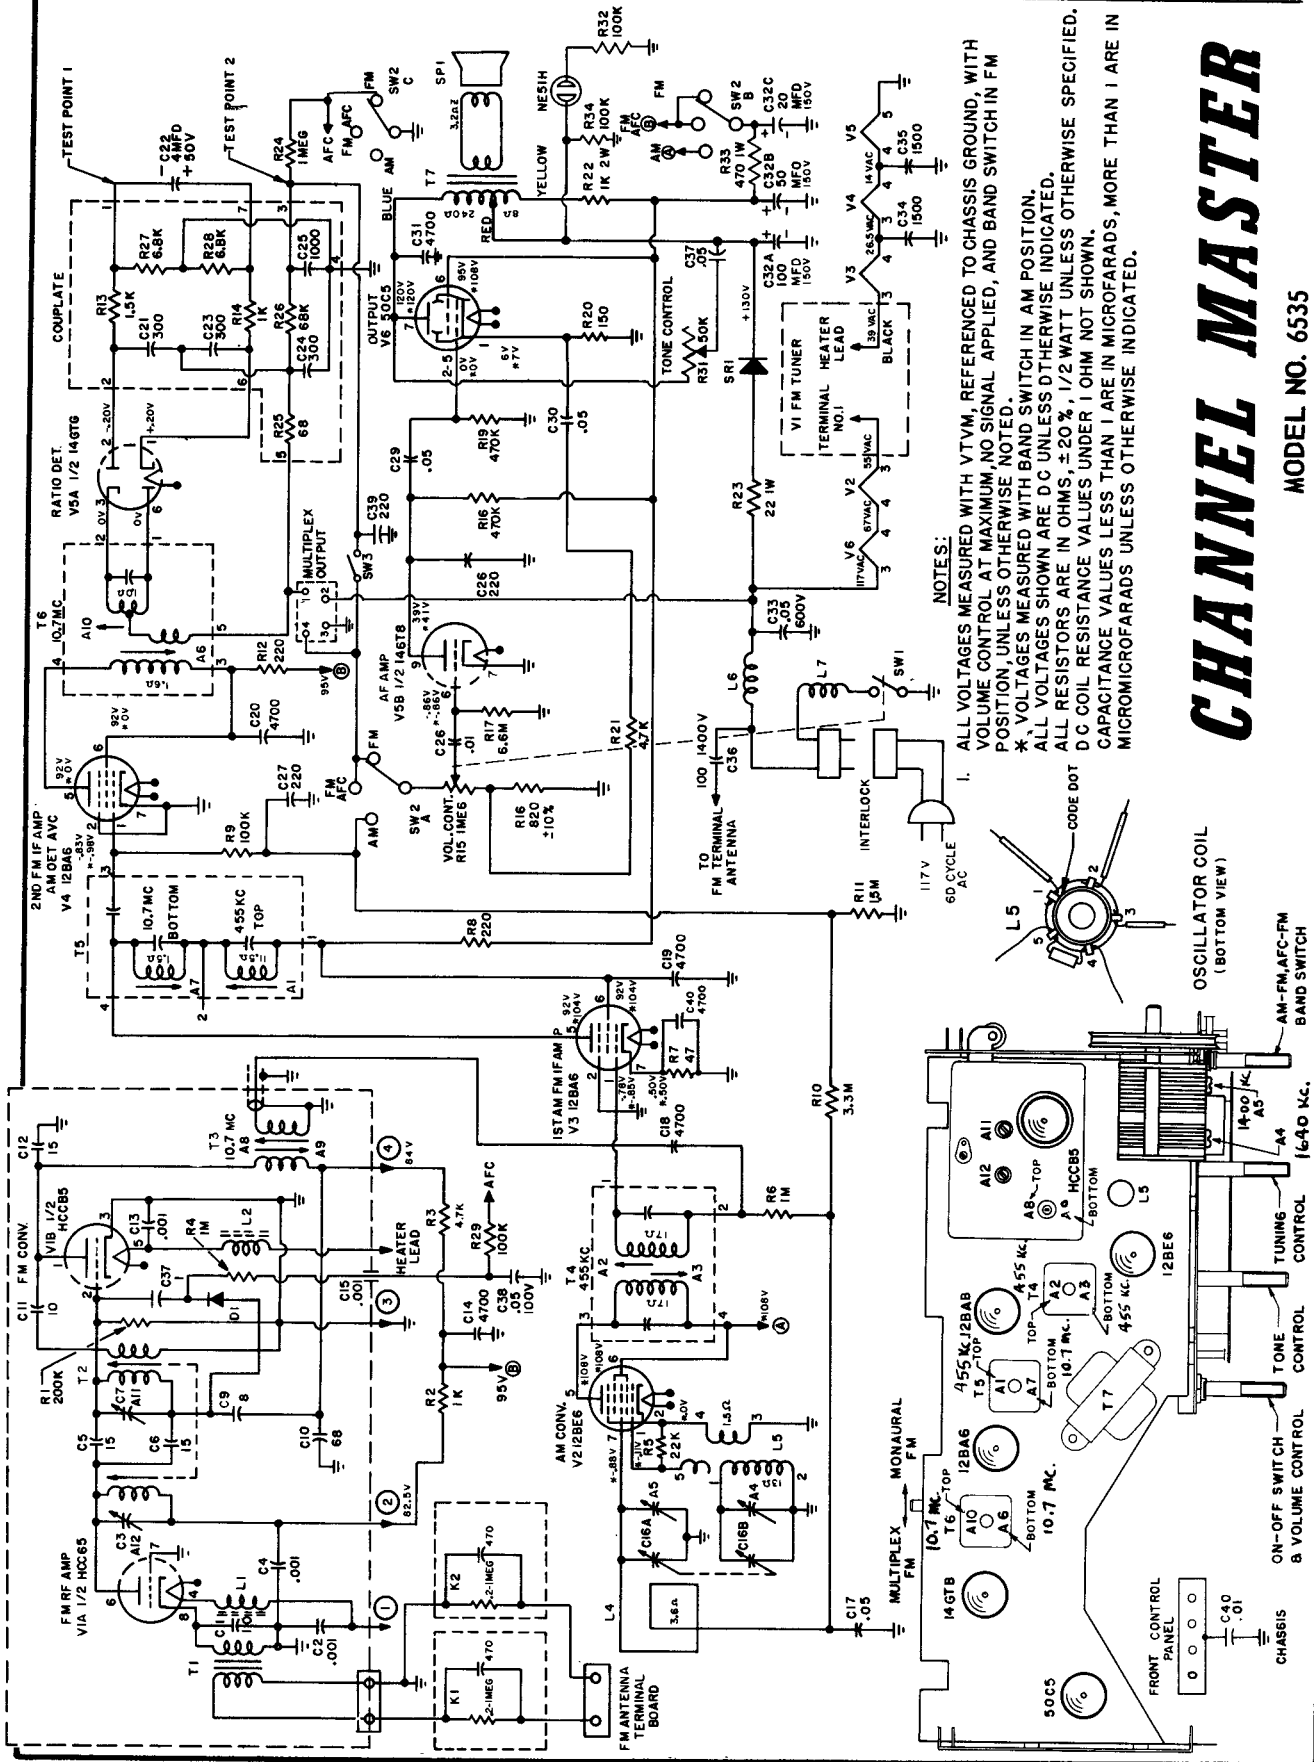


CHANNEL MASTER

MODEL NO. 6535

DELMONICO

MODEL 8B-2

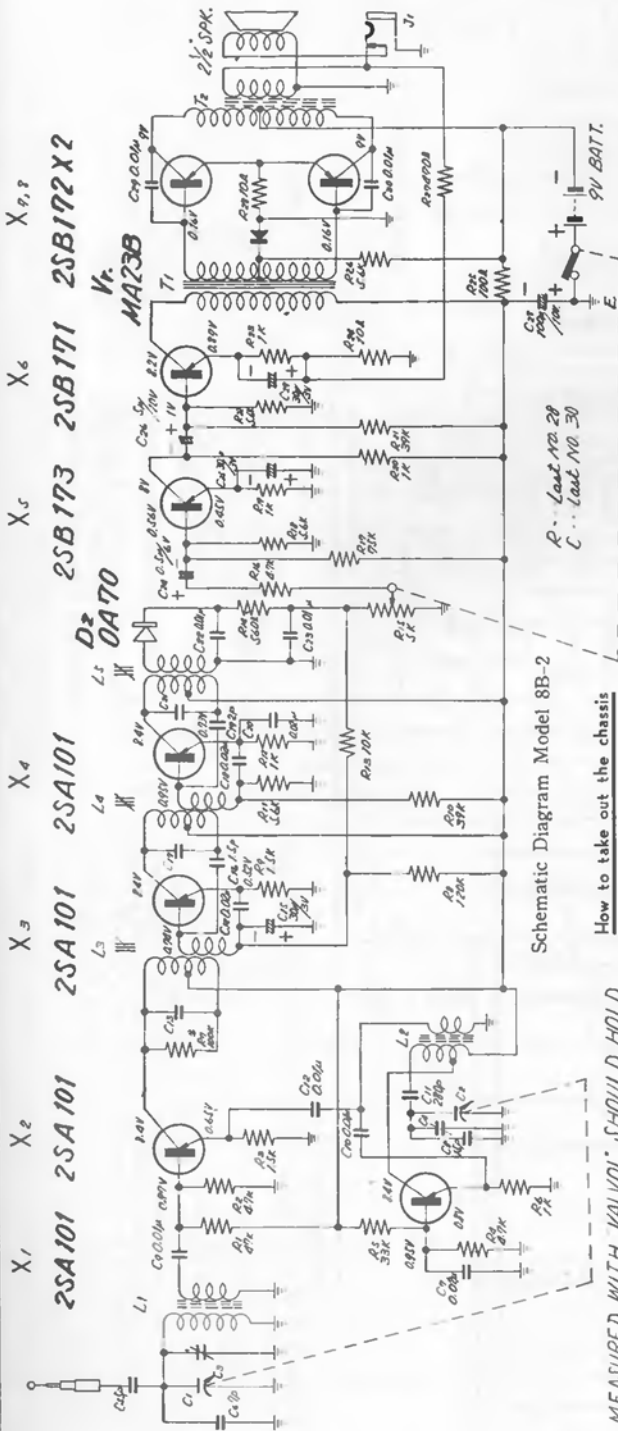


Schematic Diagram Model 8B-2

How to take out the chassis

1. Open the back cover of cabinet with coin or driver and remove the 3 screws A. B. C.

How to fit the dial rope

Set the variable Capacitor on maximum capacity, fix the dial drum as shown figure and fit the dial rope in accordance with arrow marks.

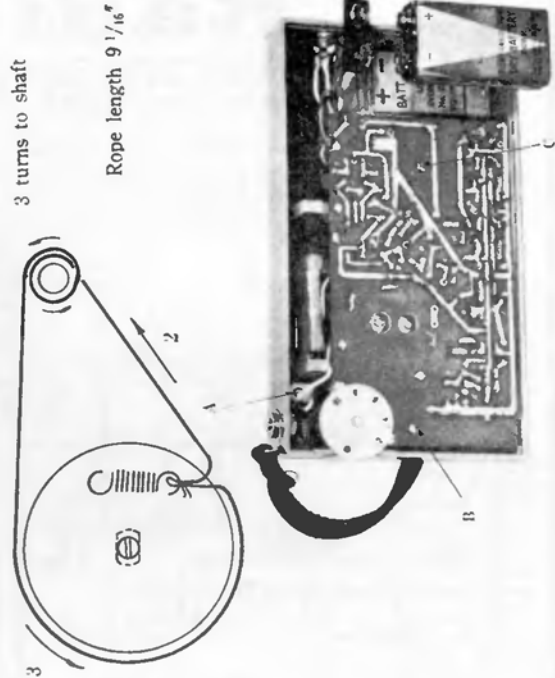

Step	Frequency Band	Input		Places to be Regulated	Dial Pointer Setting
		Frequency	Given to		
1	I F	455 KC	Base of X ₁ through 0.01 μF	L ₃ , L ₄ , L ₅	Fully Open
2		535 KC	Use the standard Loop	L ₂	Max.
3	M W	1680 KC	" "	C ₄	Fully Open
4		Repeat the step 2, 3			
5		620 KC	Use the standard Loop	L ₁	620kc Signal
6	M W	1400 KC	" "	C ₃	1400kc Signal
7		Repeat the step 5, 6			

Note: Output power (at the terminal of voice coil) is kept on always about 10mW.


Delco Radio

BUICK Model 980463
CADILLAC Model 7282315
CORVETTE Model 985396
OLDSMOBILE Model 982137

IF RADIO IS POWERED BY BATTERY ELIMINATOR, USE 16 VOLTS FOR PROPER SOLENOID ACTION.

(Continued on the next page adjacent at right)


NOTE: ILLUS. 74 IS FUSE RESISTOR. OPEN FUSE RESISTOR MAKES TRANSISTOR COLLECTOR VOLTAGE 0 VOLTS.

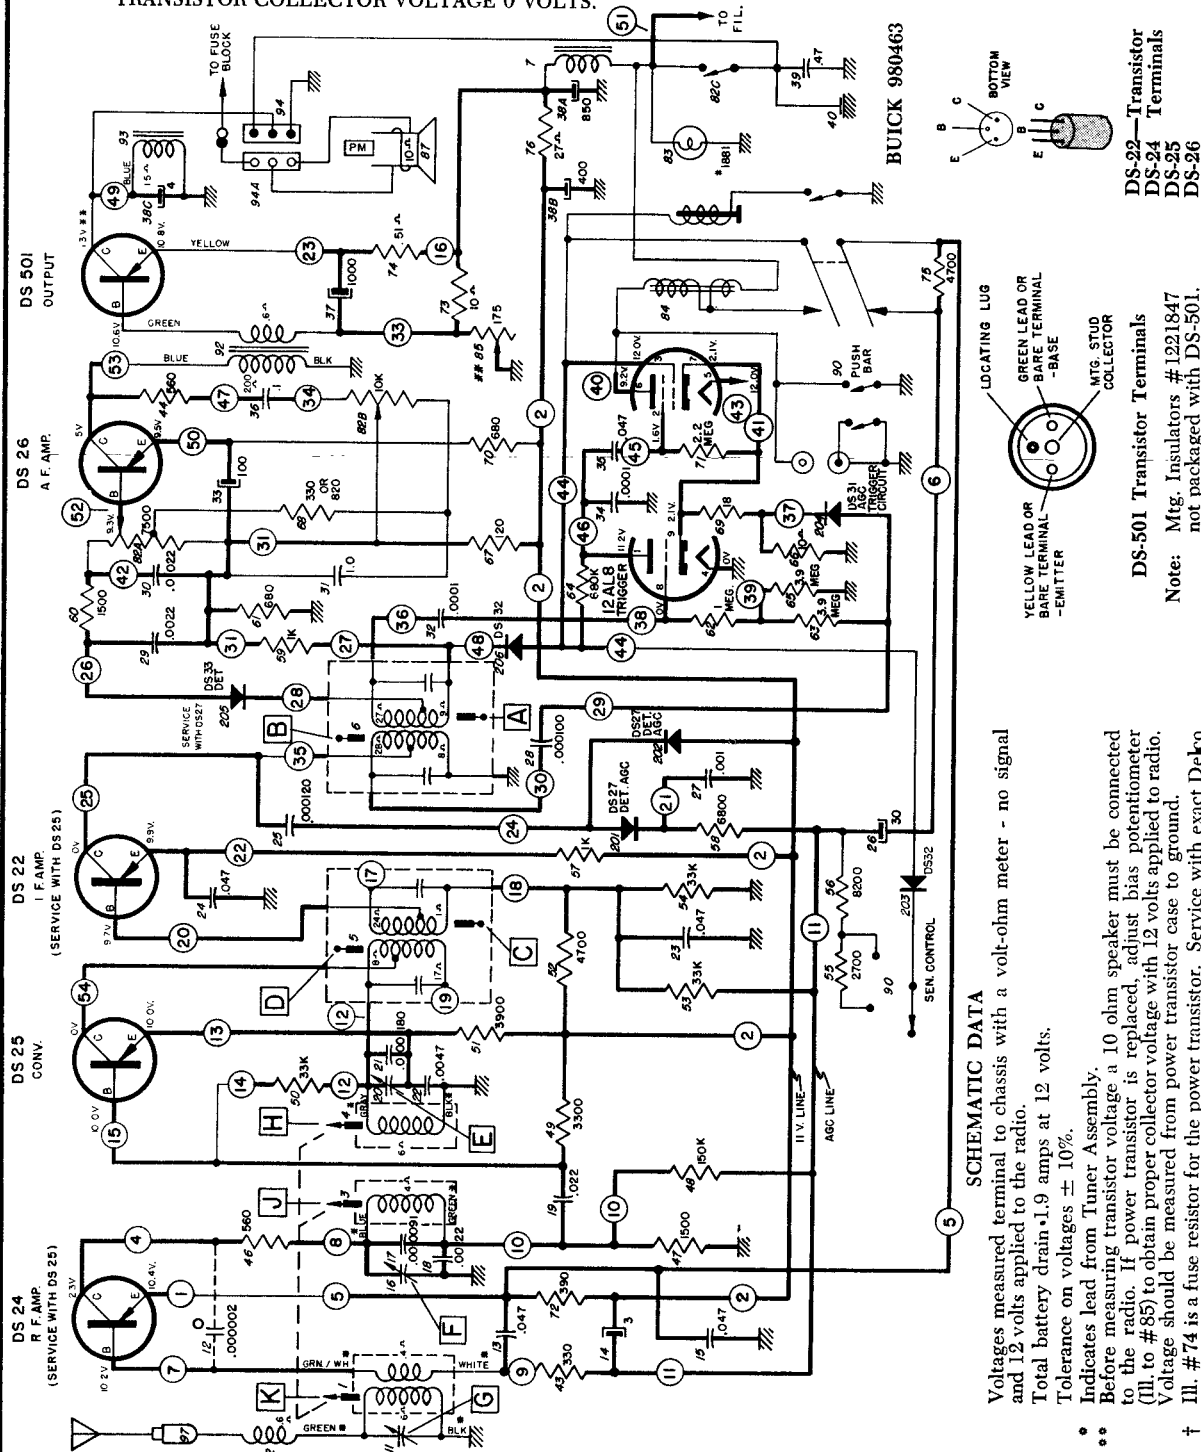

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

DELCO

BUICK 980463
CADILLAC 7282315
CORVETTE 985396
OLDSMOBILE 982137
(Continued)

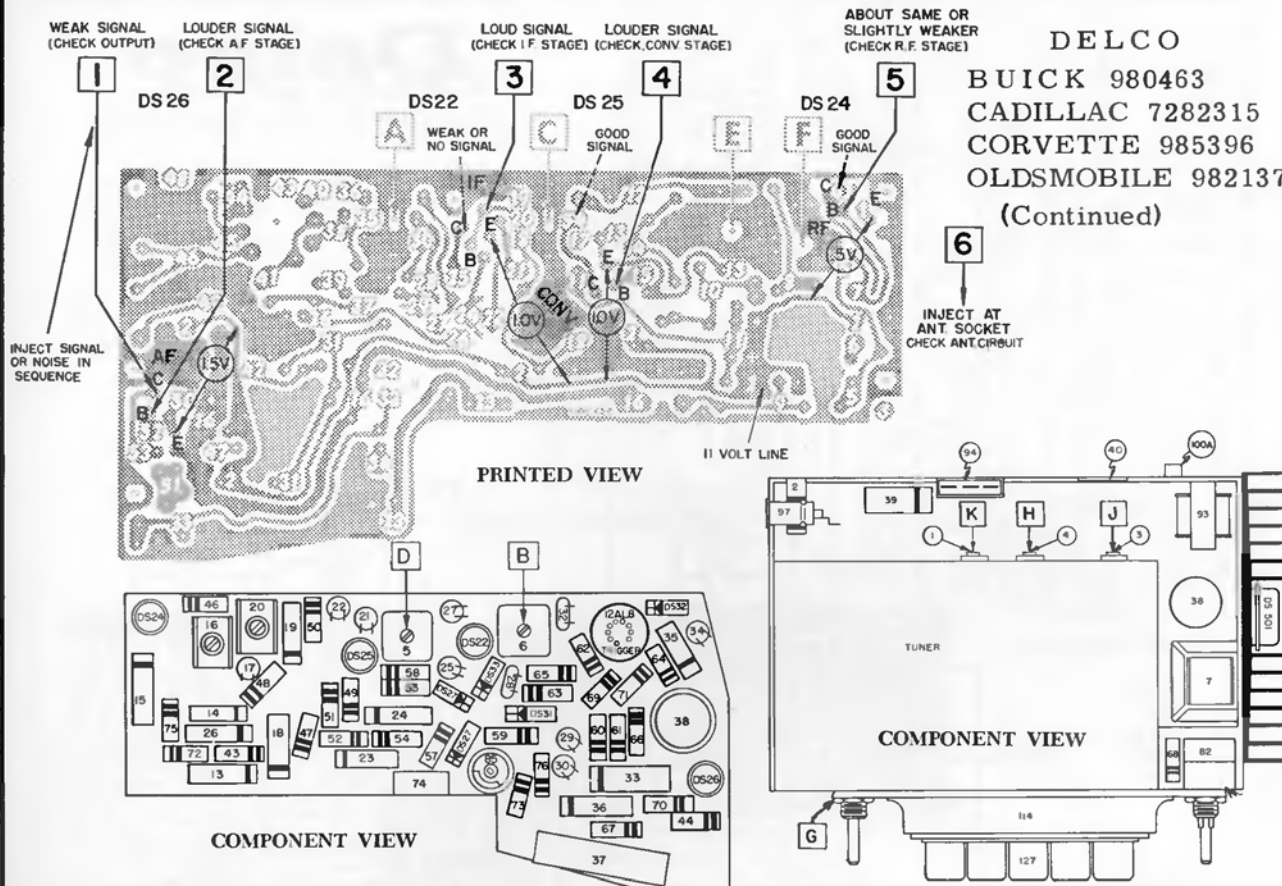

IMPORTANT: With the radio installed and the car antenna plugged in, adjust the antenna trimmer "G" for maximum volume with the radio tuned to a **WEAK** station between 600 KC and 1000 KC. (Prevents fading and station mixing). The antenna trimmer is located behind the dummy knob and can be adjusted from the front of the radio.

ALIGNMENT PROCEDURE

- A. Connections
 1. A. C. Voltmeter _____ Across speaker voice coil
 2. Signal Generator _____ Connect capacitor (see chart below for value) in series with generator lead and connect to antenna terminal. Connect generator ground lead to chassis.
- B. Preliminary Adjustments (in order)
 1. Volume control _____ Maximum volume
 2. Radio Tuning Pointer _____ Extreme right end of dial
 3. Radio tuner cores _____ Rear of core 1 1/2" from end of coil form. Adjustment is made using a plastic alignment tool marked 1 1/2" from end.
- C. Alignment Adjustments
 1. Generator Output _____ Readable A.C. voltage (1/2 to 1 volt) across speaker voice coil
 2. Proceed according to chart - - -

Step	Capacitor	Signal Generator Frequency	Tune Receiver to	Adjust in Sequence
a.	.1 mfd.	262 KC	Hi freq. stop	A, B, C, D
b.	82 mmfd.	1615 KC	Hi freq. stop	E, F, G
c.	82 mmfd.	600 KC	Sig. Gen. Freq.	J, K
d.	82 mmfd.	1615 KC	Sig. Gen. Freq.	F, G
e.	82 mmfd.	900 KC	Sig. Gen. Freq.	Pointer Adjustment

3. Pointer Adjustment _____ With incoming 900 KC signal, insert a screwdriver in the slot of the pointer calibration adjustment link (illustration #124) and twist until the pointer is in line with "9" on the radio dial.
4. Antenna Adjustment _____ See notice above

DELCO, for complete list of models and additional data see next page at right.

Voltages Measured to Chassis with a VOM - Antenna Disconnected and 12 Volts Applied to Radio.


Total Battery Drain 1.3 Amps at 12 Volts.

Illustration 100 is Fuse Resistor for DS-501. Open Fuse Resistor Causes 0 Volts on DS-501 collector. Service With Exact Delco Part.

When DS-501 is Replaced, Set Bias Pot (Illus. 97) for Reading of 1.3V. on Transistor Case with 12 Volts Applied to Radio and 10 Ohm Speaker Connected.

Delco


(Continued on the next page)

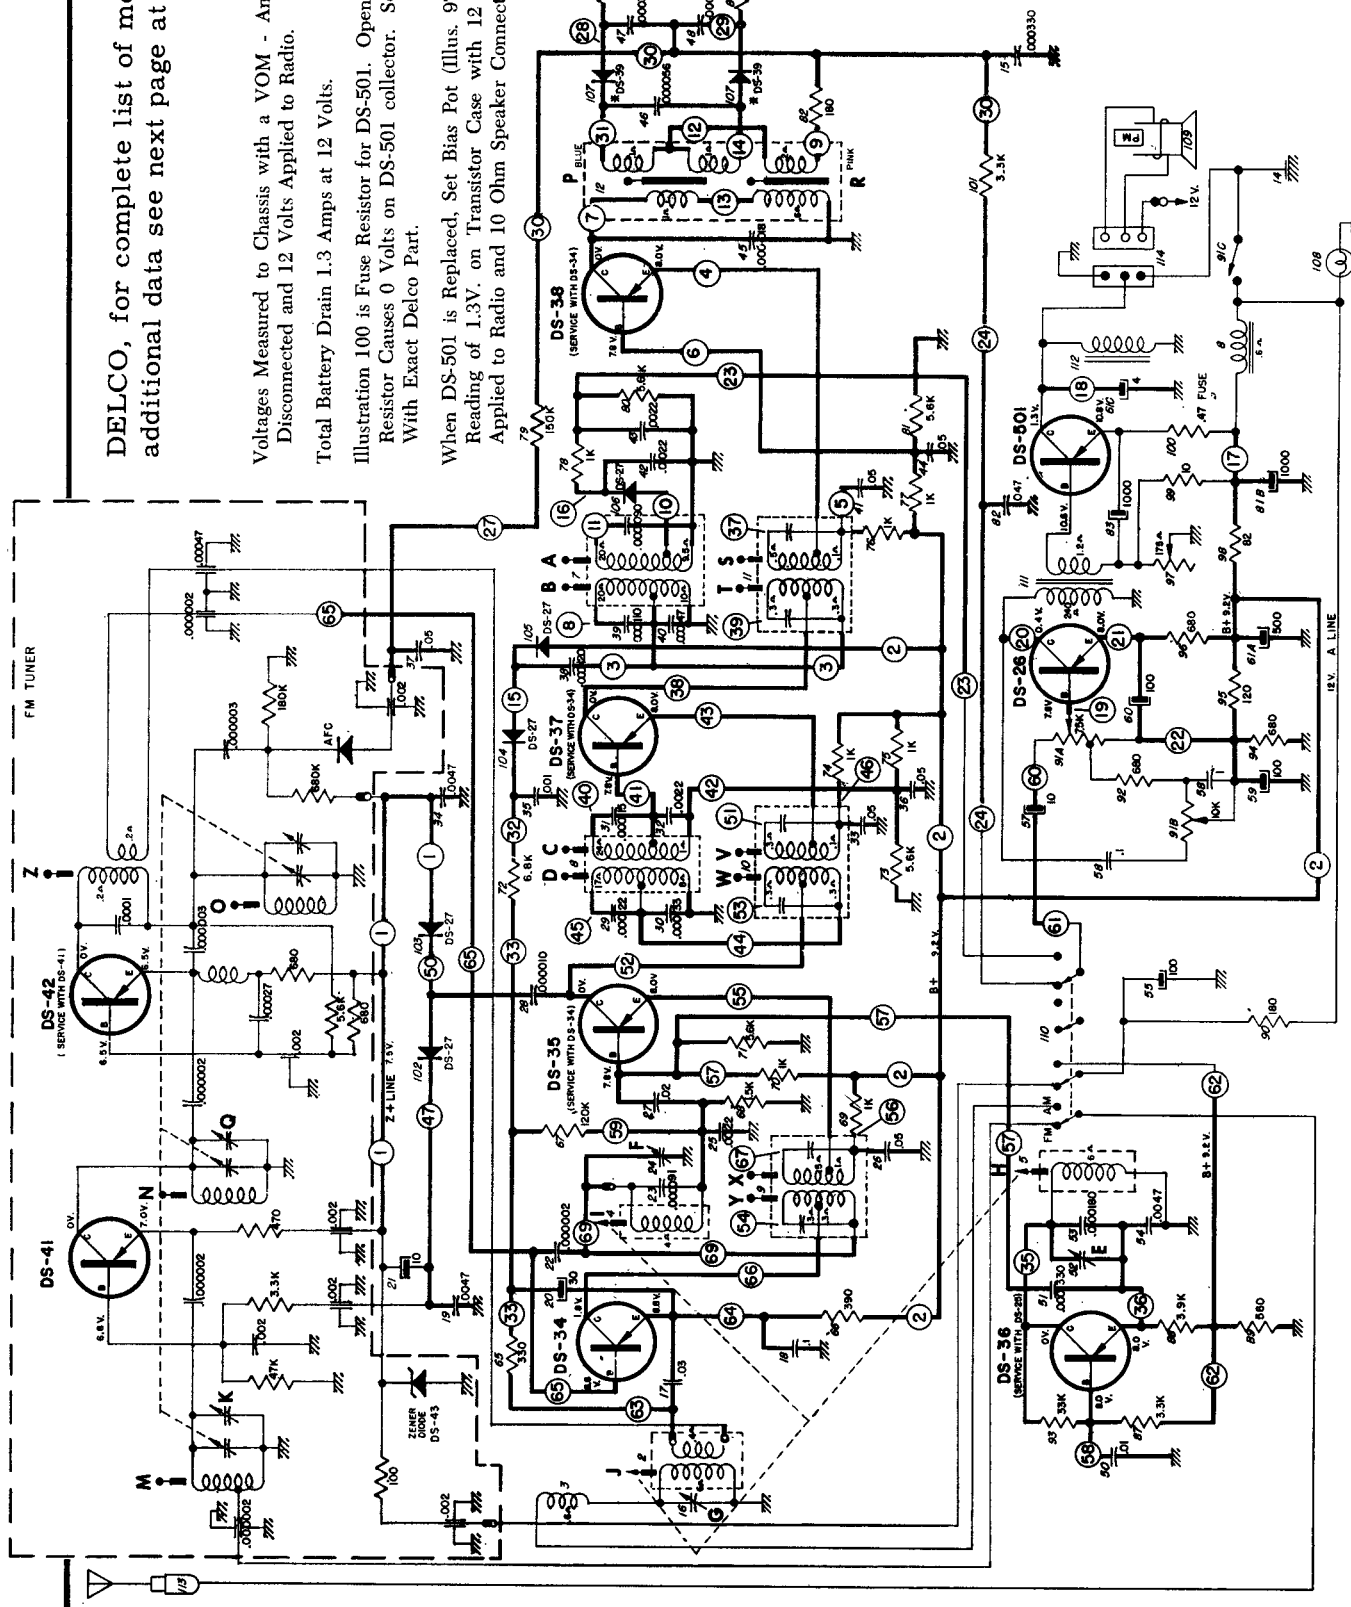


Delco

BUICK Models 980626, 980635
 CADILLAC Model 7283295
 CHRYSLER Model 333
 DODGE Models 331, 332
 PLYMOUTH Model 300
 CORVETTE Model 985686
 OLDSMOBILE Model 982212


(Continued from preceding
 page adjacent at left)

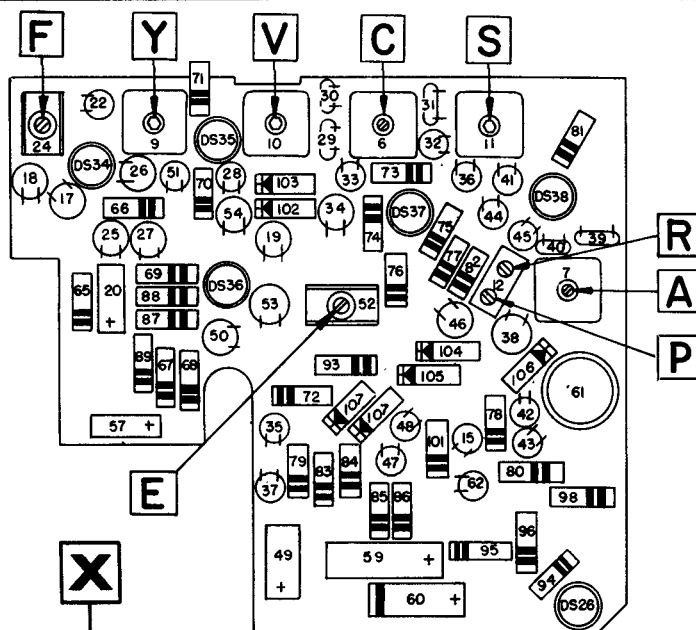

CIRCUIT BOARD
 (Parts View)

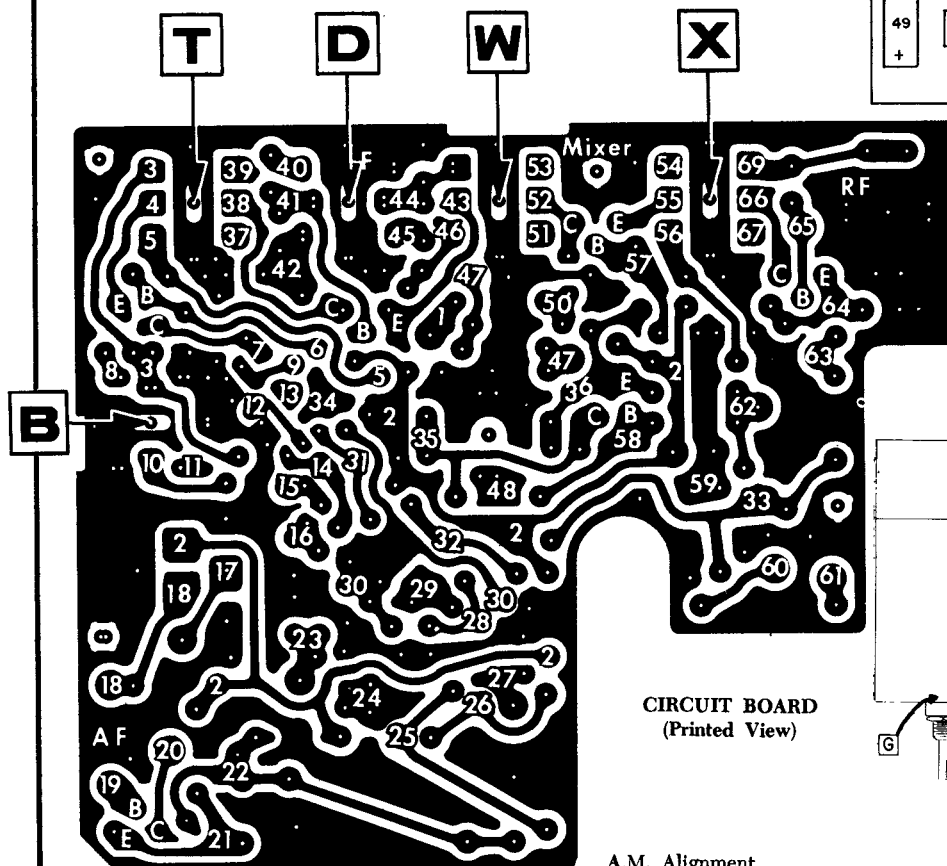

CIRCUIT BOARD
 (Printed View)

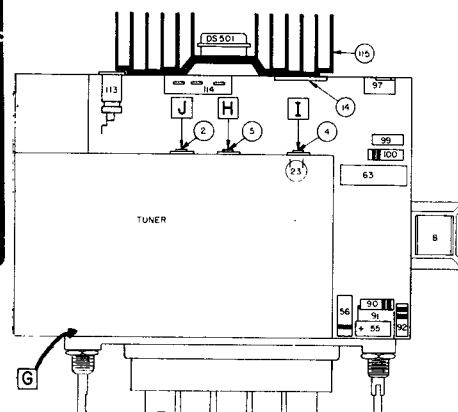

COMPONENT VIEW

A.M. Alignment

Step	Capacitor	Signal Generator Frequency	Tune Receiver to	Adjust for Maximum in Sequence
a.	.1 mfd.	262 KC	Hi freq. stop	A, B, C, D
b.	56 mmfd.	1615 KC	Hi freq. stop	E, F, G
c.	56 mmfd.	600 KC	Sig. Gen. Freq.	I, J
d.	56 mmfd.	1615 KC	Sig. Gen. Freq.	F, G
e.	56 mmfd.	900 KC	Sig. Gen. Freq.	Pointer Adjustment

F.M. Alignment

Connections

D.C. Voltmeter Positive lead to Orange wire (island #24)
 Negative lead to chassis. Use Lowest Scale.
 Generator Output (AM with no modulation or FM) set to 10.7 mc. Connect 56 mmfd. capacitor in series with generator lead and connect to antenna terminal. Connect generator ground lead to chassis.

Alignment Adjustments

1. Adjust in sequence for maximum voltage R, S, T, V, W, X, Y, Z
2. Ratio detector transformer Remove generator and adjust blue (P) slug for zero volts.
3. Tuner K, Q for maximum on a weak station near the top of the dial with antenna connected.

(Continued on the next page adjacent at right)



VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

DELCO, various models, continued from preceding page adjacent at left.

ALIGNMENT PROCEDURE

A. C. Voltmeter—Across speaker voice coil.

Signal Generator—Connect capacitor (see chart below for value) in series with generator lead and connect to antenna terminal. Connect generator ground lead to chassis.

Volume control—Maximum volume


Radio Tuning Pointer—Extreme right end of dial.

Radio tuner cores—Rear of core 1 1/2" from end of coil form. Adjustment is made using a plastic alignment tool marked 1 1/2" from end.



Generator Output—Readable A.C. voltage (1/2 to 1 volt) across speaker voice coil

Proceed according to chart—

STEP	CAPACITOR	SIGNAL GENERATOR FREQUENCY	TUNE RECEIVER TO	ADJUST IN SEQUENCE
a.	.1 mfd.	262 KC	Hi freq. stop	A, B, C, D
b.	68 mmfd.	1615 KC	Hi freq. stop	E, F, G
c.	68 mmfd.	600 KC	Sig. Gen. Freq.	J, K
d.	68 mmfd.	1615 KC	Sig. Gen. Freq.	F, G
e.	68 mmfd.	900 KC	Sig. Gen. Freq.	Pointer Adjustment

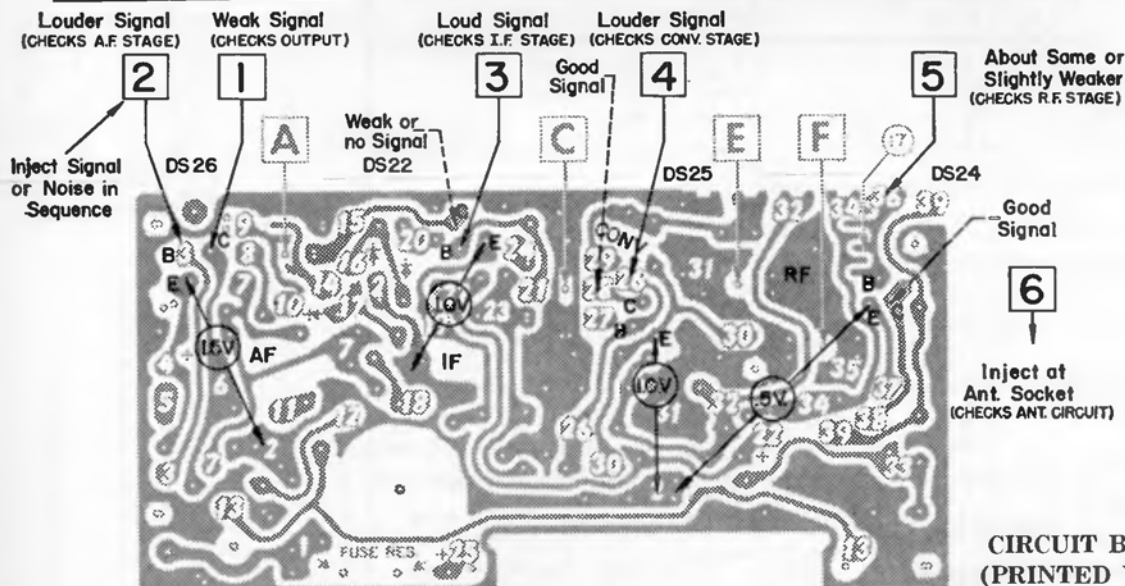

NUMBERS IN SQUARES ARE MAJOR TEST POINTS FOR STAGE ISOLATION—INJECT SIGNAL GENERATOR.

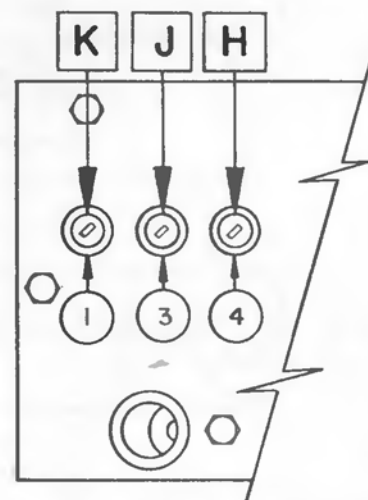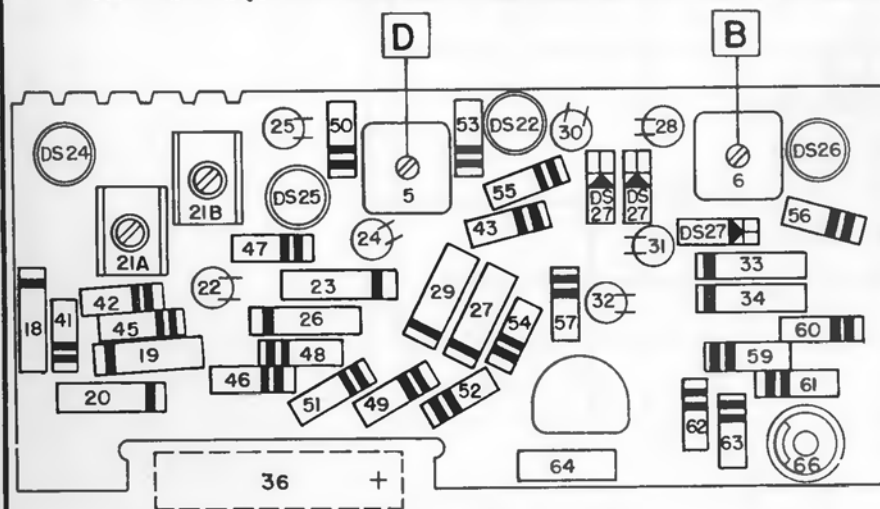


Delco

(Continued on the next page at right)

BUICK Models 980462, 980464
CHEVROLET 985432, 985455, 985471
CORVAIR 985449, GMC Truck 2234003
OLDSMOBILE Model 982136
PONTIAC Models 983873, 983875
STUDEBAKER AC-3352, AC-3354, AC-3377

CAUTION: COLLECTOR VOLTAGE OF DS-501 TRANSISTOR SHOULD BE MEASURED AT TRANSISTOR CASE (NOT AT THE HEAT RADIATOR).

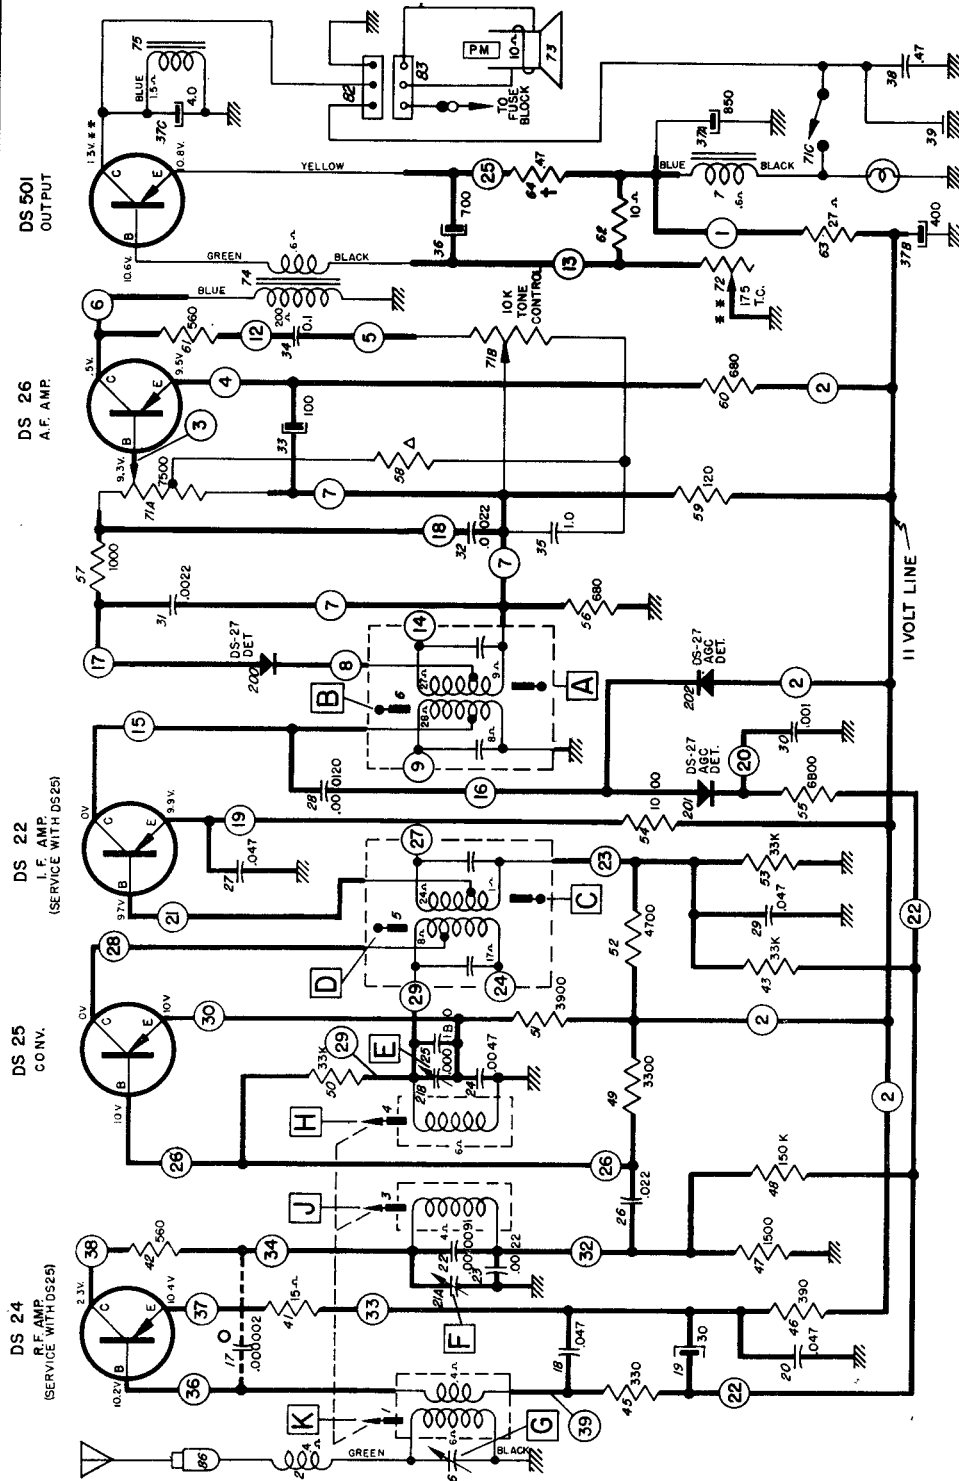

PRINTED CIRCUIT SHOWN IN HEAVY LINES.

Voltages measured terminal to chassis with a volt-ohm meter — no signal and 12 volts applied to radio.

Total battery drain 1.2 amps at 12 volts

Tolerance on voltage $\pm 10\%$.

Before measuring transistor voltages, a 10 ohm speaker must be connected to radio.


** Voltage should be measured from power transistor case to ground. If power transistor is replaced, adjust bias potentiometer (illus. #72) to obtain proper collector voltage with 12 volts applied to radio.

Resistor illus. #58 is 330 ohms.

† illus. #64 is a fuse resistor for the power transistor. Service with exact replacement.

○ Printed on circuit board.

CAUTION: Only a 10 ohm speaker should be used on this radio.

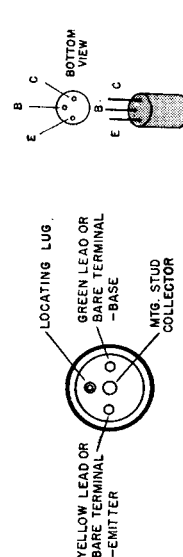

DS-22—Transistor
DS-24 Terminals
DS-25
DS-26

DS-501 Transistor Terminals

Note: Mfg. Insulators #1221807 not packaged with DS-501.

DELCO, Material on various models continued from preceding page at left

ALIGNMENT PROCEDURE

A. C. Voltmeter—Across speaker voice coil.

Signal Generator—Connect capacitor (see chart below for value) in series with generator lead and connect to antenna terminal. Connect generator ground lead to chassis.

Volume control—Maximum volume


Radio Tuning Pointer—Extreme right end of dial.

Radio tuner cores—Rear of core $1\frac{1}{8}$ " from end of coil form. Adjustment is made using a plastic alignment tool marked $1\frac{1}{8}$ " from end.


Generator Output—Readable A.C. voltage ($\frac{1}{2}$ to 1 volt) across speaker voice coil

Proceed according to chart—


STEP	CAPACITOR	SIGNAL GENERATOR FREQUENCY	TUNE RECEIVER TO	ADJUST IN SEQUENCE
a.	.1 mfd.	262 KC	Hi freq. stop	A, B, C, D
b.	82 mmfd.	1615 KC	Hi freq. stop	E, F, G
c.	82 mmfd.	600 KC	Sig. Gen. Freq.	J, K
d.	82 mmfd.	1615 KC	Sig. Gen. Freq.	F, G
e.	82 mmfd.	900 KC	Sig. Gen. Freq.	Pointer Adjustment

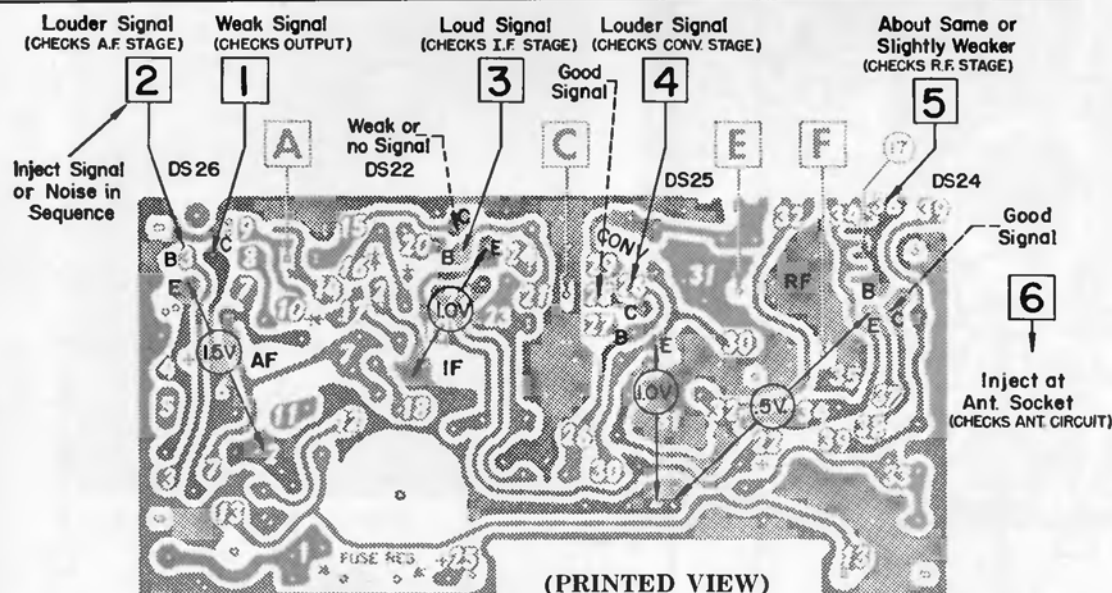

NUMBERS IN SQUARES ARE MAJOR TEST POINTS FOR STAGE ISOLATION—INJECT SIGNAL GENERATOR.

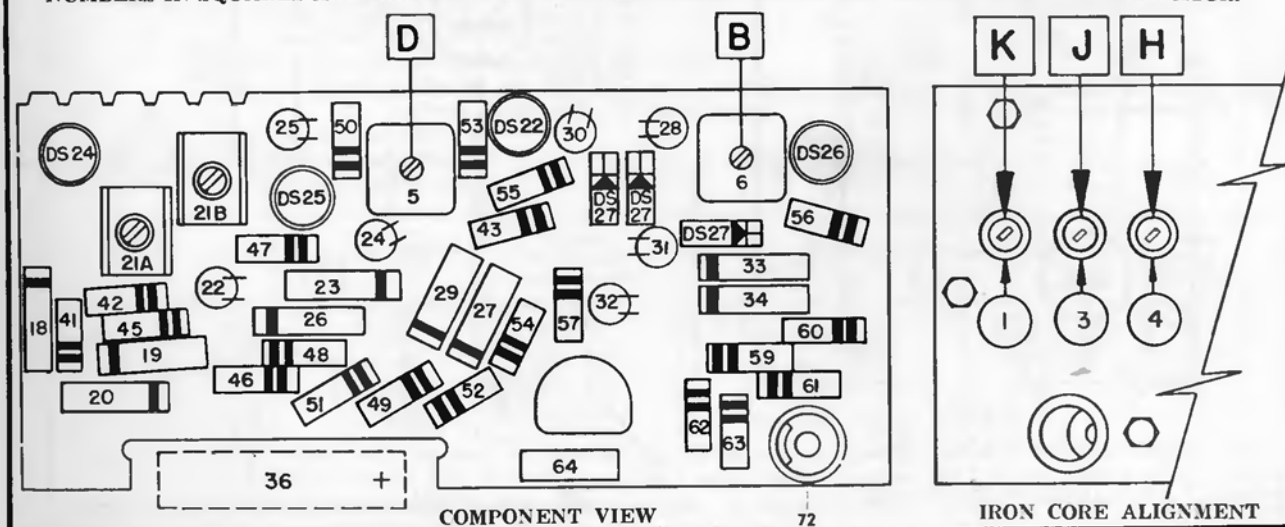

DELCO Buick Model 980655 Diagram, Continued on next page at right

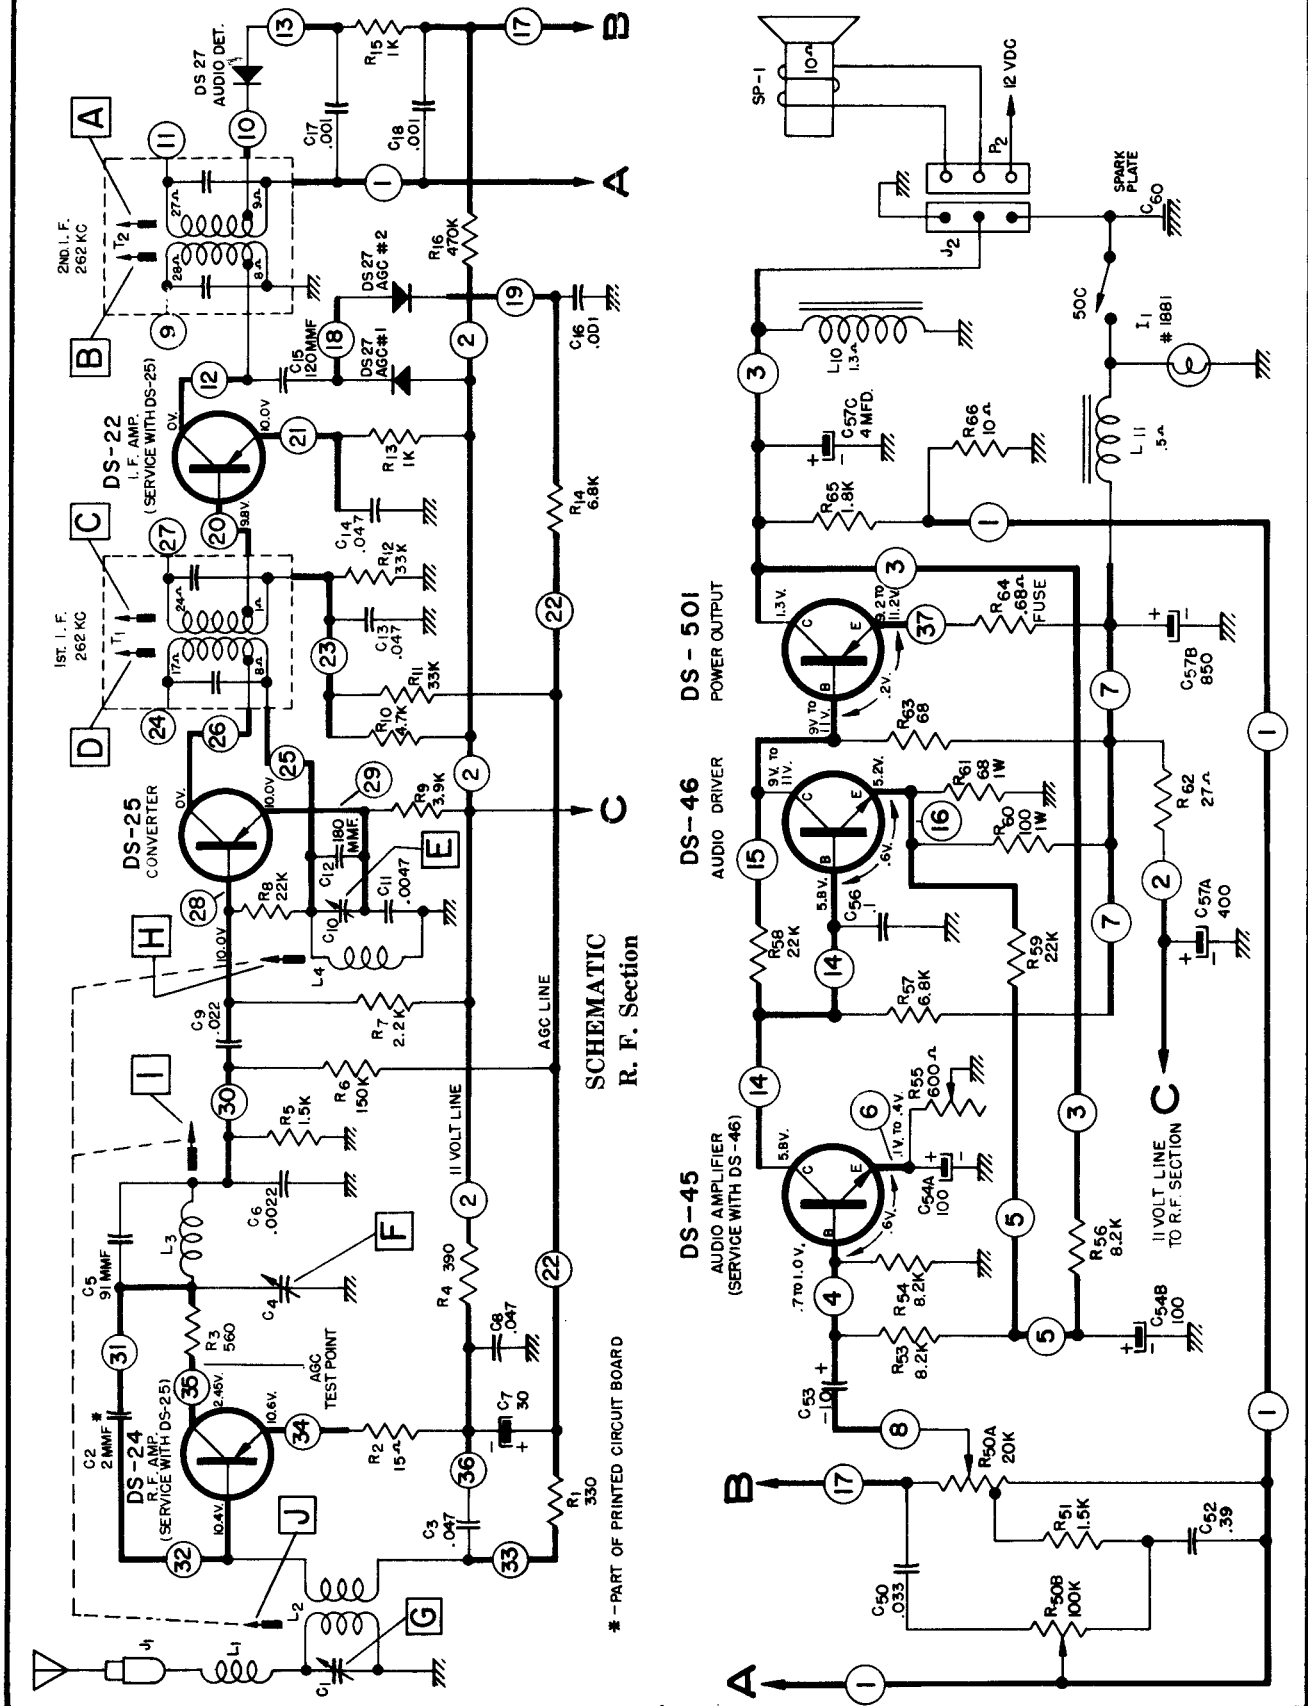

DELCO Buick Model 980655 Service Material, Continued from preceding page

Tolerance on voltage $\pm 10\%$, Capacitors in mfd., Resistors in ohms.
Before measuring transistor voltages, a 10 ohm speaker must be connected to radio.
Voltage should be measured from power transistor case to ground. If power transistor is replaced, adjust bias potentiometer (Illus. R-55) to obtain proper collector voltage with 12 volts applied to radio.

CAUTION: Only a 10 ohm speaker should be used on this radio.
Illus. R-64 is a fuse resistor for the power transistor. Service with exact replacement.
Voltages measured terminal to chassis with a volt-ohm meter — no signal and 12 volts applied to radio.
Total battery drain 1.2 amps at 12 volts



ALIGNMENT PROCEDURE

A. Connections

1. A. C. Voltmeter—Across speaker coil.
2. Signal Generator—Connect capacitor (see chart below for value) in series with generator lead and connect to antenna terminal. Connect generator ground lead to chassis.

B. Preliminary Adjustments (in order)


1. Volume control—Maximum volume
2. Radio Tuning Pointer—Extreme right end of dial.
3. Radio tuner cores—Rear of core $1\frac{1}{2}''$ from end of coil form. Adjustment is made using a plastic alignment tool marked $1\frac{1}{2}''$ from end.


C. Alignment Adjustments

1. Generator Output—Readable A.C. voltage ($\frac{1}{2}$ to 1 volt) across speaker voice coil
2. Proceed according to chart—


STEP	CAPACITOR	SIGNAL GENERATOR FREQUENCY	TUNE RECEIVER TO	ADJUST IN SEQUENCE
a.	.1 mfd.	262 KC	Hi freq. stop	A, B, C, D
b.	82 mmfd.	1615 KC	Hi freq. stop	E, F, <u>G</u>
c.	82 mmfd.	600 KC	Sig. Gen. Freq.	I, J
d.	82 mmfd.	1615 KC	Sig. Gen. Freq.	F, G

IMPORTANT: With the radio installed and the car antenna plugged in, adjust the antenna trimmer "G" for maximum volume with the radio tuned to a weak station between 600 KC and 1000 KC. (Prevents fading and station mixing). The antenna trimmer is located behind the dummy knob and can be adjusted from the front of the radio.

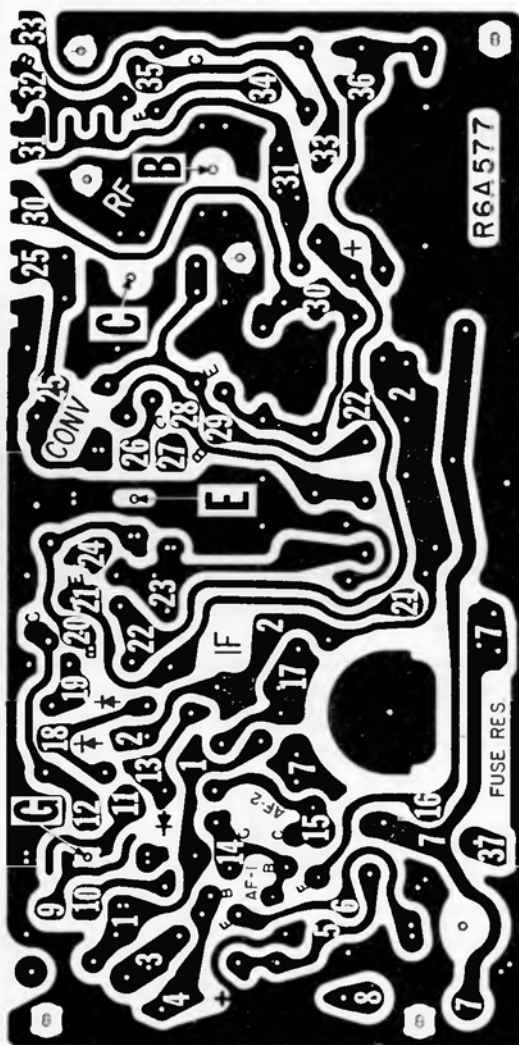


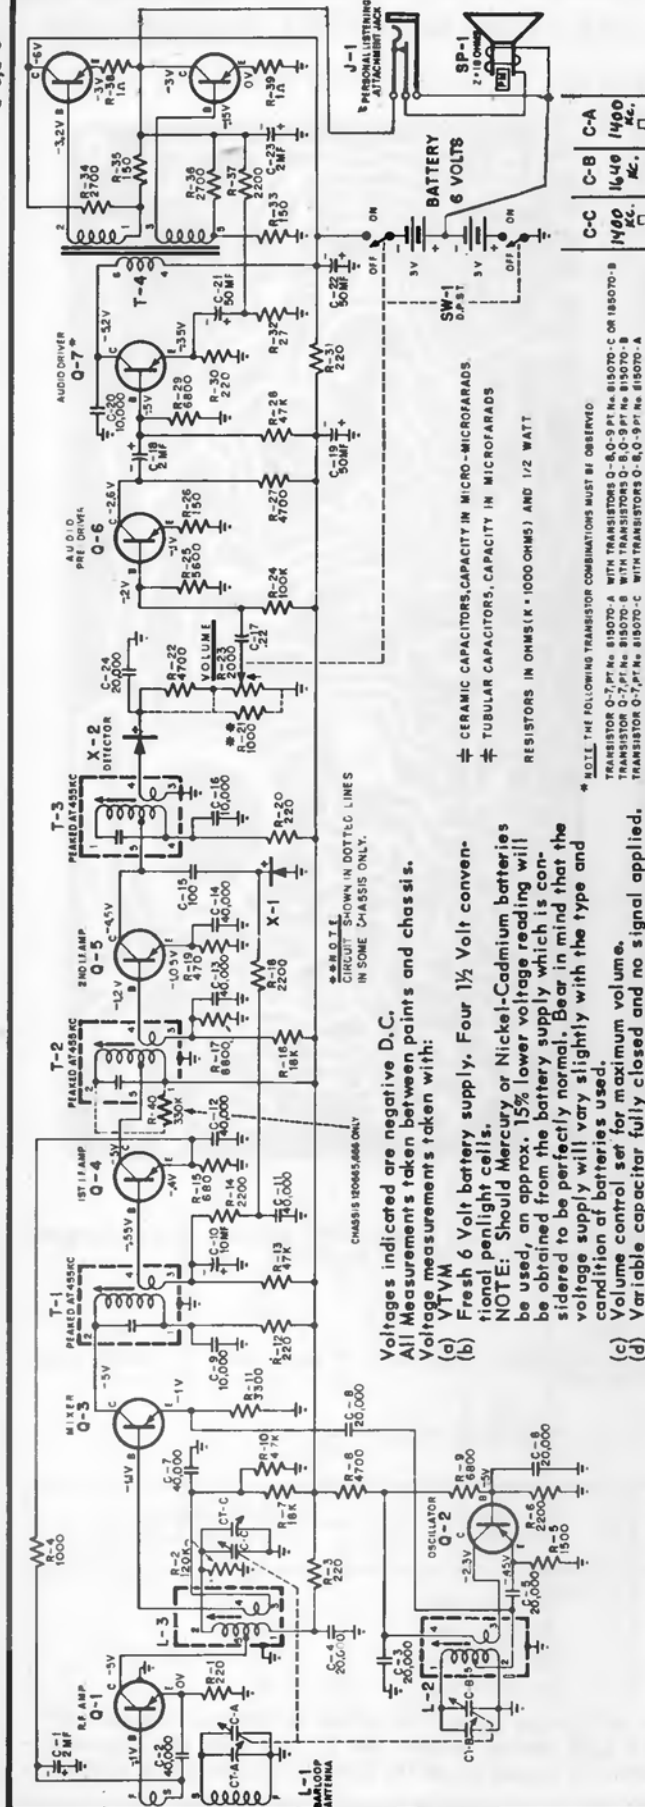PUSH-PULL
AUDIO OUTPUT
Q-8, Q-9


28

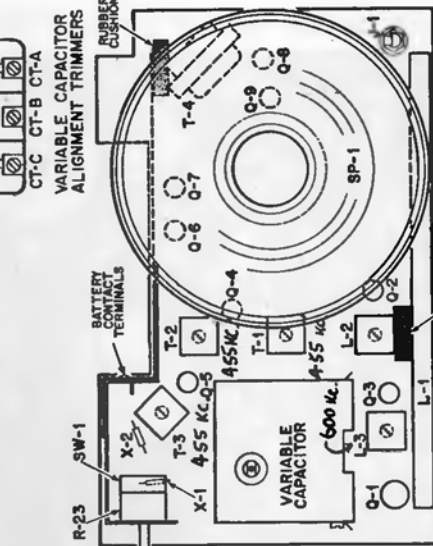


Emerson

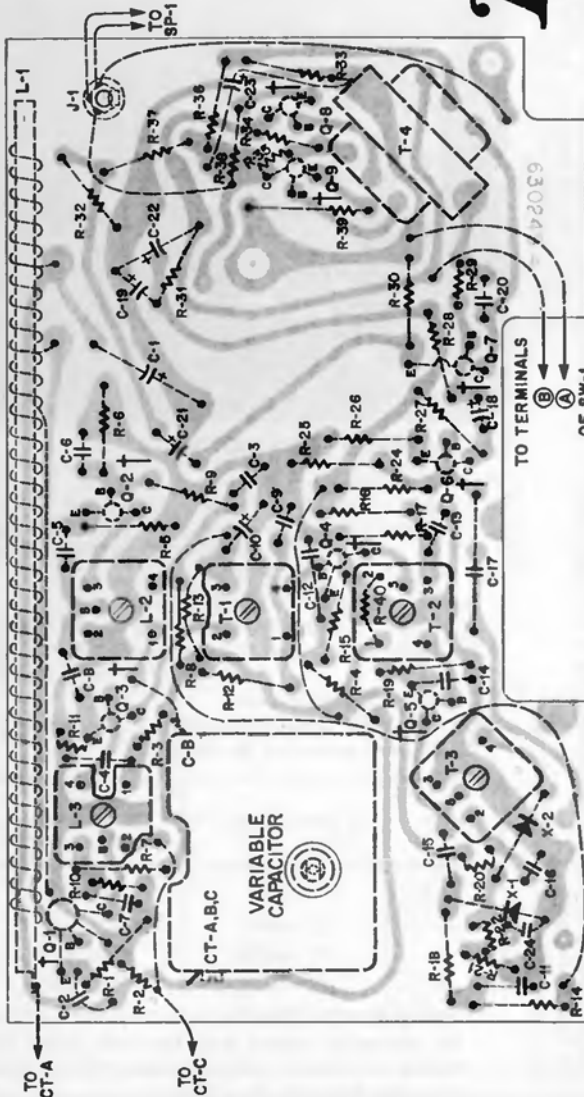

ETCHED PRINTED CIRCUIT BOARD (BOTTOM VIEW)

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


EMERSON Models G-1700, G-1709, using Chassis 120685,
and Model G-1713 using Chassis 120700

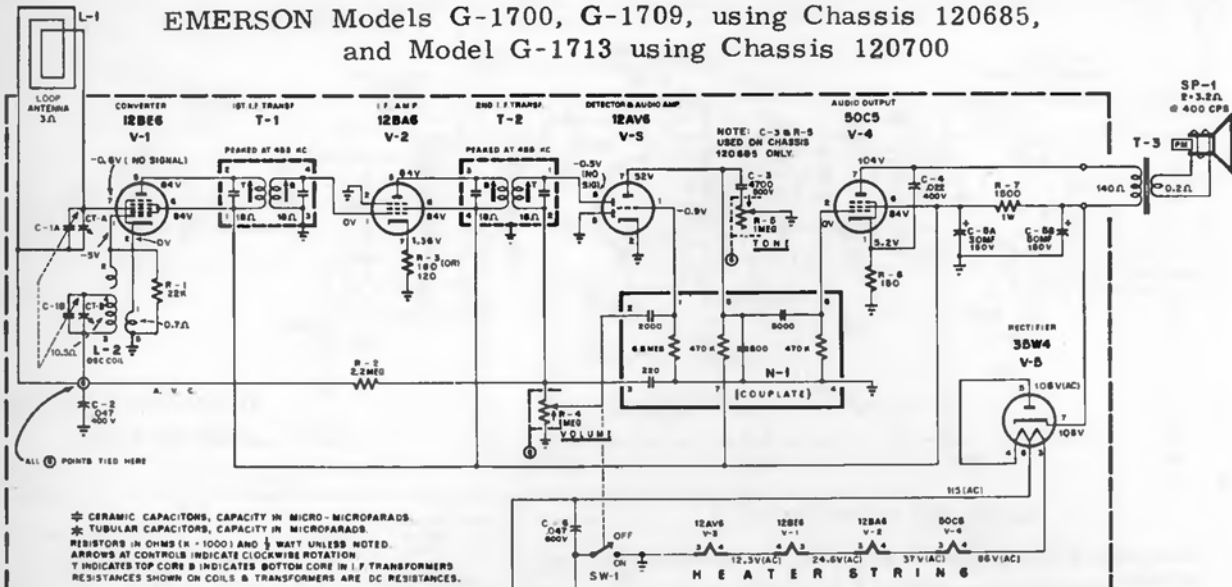


CONDITIONS FOR VOLTAGE AND RESISTANCE READINGS

1. Voltages indicated are positive D.C., resistances in ohms unless otherwise indicated.
2. Measurements taken with Valtomyst or equivalent VTVM.

3. All measurement taken between points indicated and B minus (low side of volume control), unless otherwise indicated.
4. Voltage readings indicated on schematic were taken with:
 - (A) Line voltage set at 115 volts AC,
 - (B) Volume control set for minimum volume,
 - (C) Tuning capacitor fully closed and no signal applied.

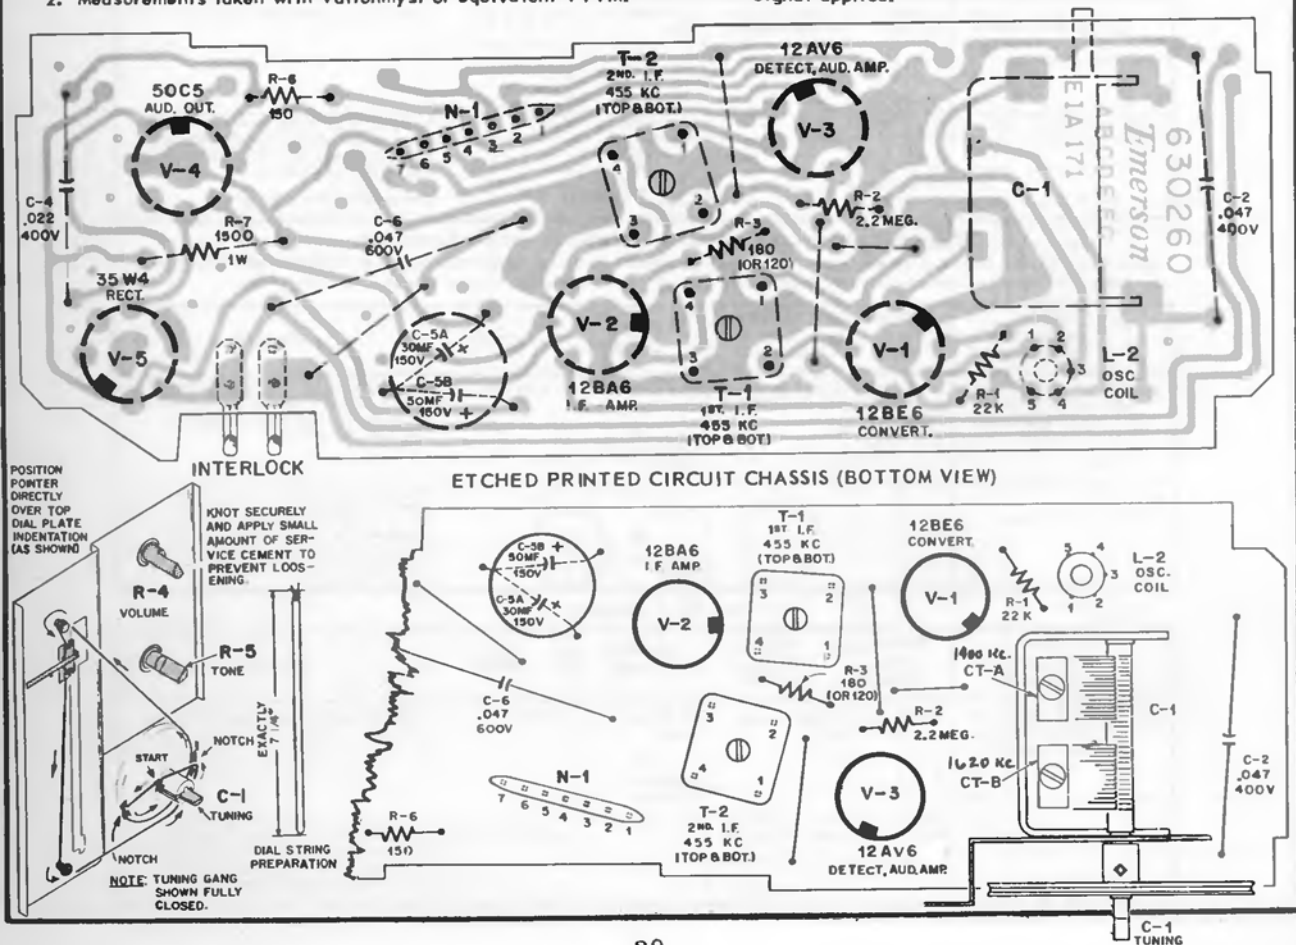

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

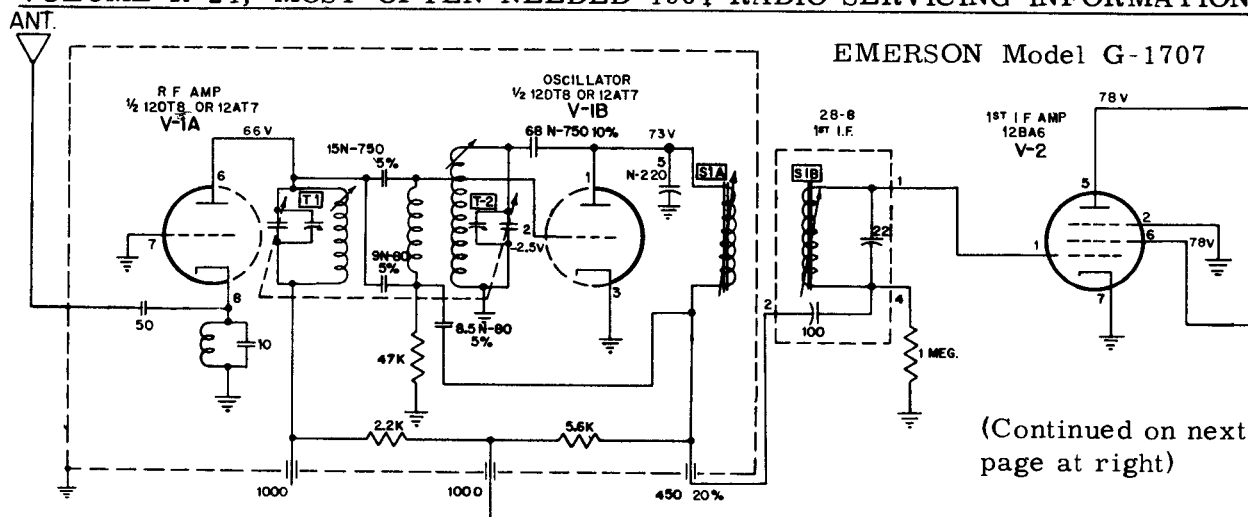

ALIGNMENT INSTRUCTIONS

- 1) Allow chassis and equipment to be used at least 15 minutes for warm-up.
- 2) Maintain output of signal generator at a point no higher than required to produce a usable reading and use only insulated alignment tools for adjusting.
- 3) Use an isolation transformer between the chassis and the AC line, if available. If no isolation transformer is to be used, insert a .1 mfd. capacitor in series with the signal generator output cable to prevent shock and to protect the equipment.

FM I.F. PASSBAND 10.7MC

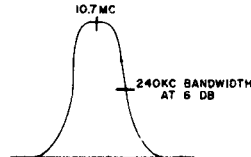


FIG. 1

F.M. DETECTOR CURVE

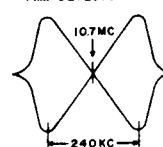


FIG. 2

FM IF ALIGNMENT USING AM SIGNAL GENERATOR AND VTVM

	SIGNAL GENERATOR COUPLING	SIGNAL GEN. FREQ.	RADIO DIAL SETTING	CONNECT VTVM	ADJUST	REMARKS
1.	TO PIN 8 (CATHODE) OF 12DT8 THROUGH A 50 MMF (REMOTE ANT. HANK)	10.7MC (UNMOD.)	POINT OF NON-INTERFERENCE	DC PROBE TO POINT COMMON TO CHASSIS	T3, S2 S1B S1A.	ADJUST FOR MAXIMUM DEFLECTION.
2.	"	"	"	DC PROBE TO POINT COMMON TO POINT	T4	ADJUST FOR ZERO READING. A POSITIVE AND NEGATIVE READING WILL BE OBTAINED ON EITHER SIDE OF THE CORRECT SETTING. PROCEED WITH STEP 5.

FM IF ALIGNMENT USING FM SIGNAL GENERATOR AND OSCILLOSCOPE

FREQUENCY MODULATE THE IF SIGNAL WITH A 60 CYCLE SINE WAVE TO A TOTAL DEVIATION OF 450 KC. ADJUST THE OSCILLOSCOPE INTERNAL HORIZONTAL DEFLECTION VOLTAGE TO 120 CYCLES, AND SYNCHRONIZE IT WITH THE 60 CYCLE SINE WAVE.



	SIGNAL GENERATOR COUPLING	SIGNAL GEN. FREQ.	RADIO DIAL SETTING	CONNECT SCOPE	ADJUST	REMARKS
3.	TO PIN 8 (CATHODE) OF 12DT8 THROUGH A 50 MMF (REMOTE ANT. HANK)	10.7MC (450 KC TOTAL DEV.)	POINT OF NON-INTERFERENCE	VERT AMP TO POINT LOW SIDE TO CHASSIS	T3, S2 S1B, S1A.	DISCONNECT STABILIZING CAPACITOR 2MFD. ADJUST FOR CURVE OF MAXIMUM AMPLITUDE AND SYMMETRY SIMILAR TO FIG. 1.
4.	"	"	"	VERT. AMP TO POINT LOW SIDE TO POINT	T4	RECONNECT STABILIZING CAPACITOR 2MFD. ADJUST SO THAT 10.7MC OCCURS AT CENTER OF CROSSOVER LINES SIMILAR TO FIG. 2. SLIGHTLY RE-TOUCH T3 FOR MAX. AMPLITUDE AND STRAIGHTNESS OF CROSSOVER LINES, PROCEED WITH STEP 5.

FM RF ALIGNMENT

	SIGNAL GENERATOR COUPLING	SIGNAL GEN. FREQ.	RADIO DIAL SETTING	CONNECT VTVM	ADJUST	REMARKS
5.	TO PIN 8 (CATHODE) OF 12DT8 THROUGH A 50 MMF (REMOTE ANT. HANK)	108MC	108MC (SLUGS OUT)	DC PROBE TO POINT COMMON TO CHASSIS	T1, T2	ADJUST FOR MAXIMUM DEFLECTION.
6.	"	88MC	88MC (SLUGS IN)	"	PADDER FLAPS	MOVE PADDER FLAPS CLOSER OR FURTHER FROM OSC. & RF COILS FOR MAX. DEFLECTION. REPEAT STEPS 5 & 6. FOR HIGHEST READING.

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


EMERSON RADIO Model G-1707, Continued from preceding page, at left.

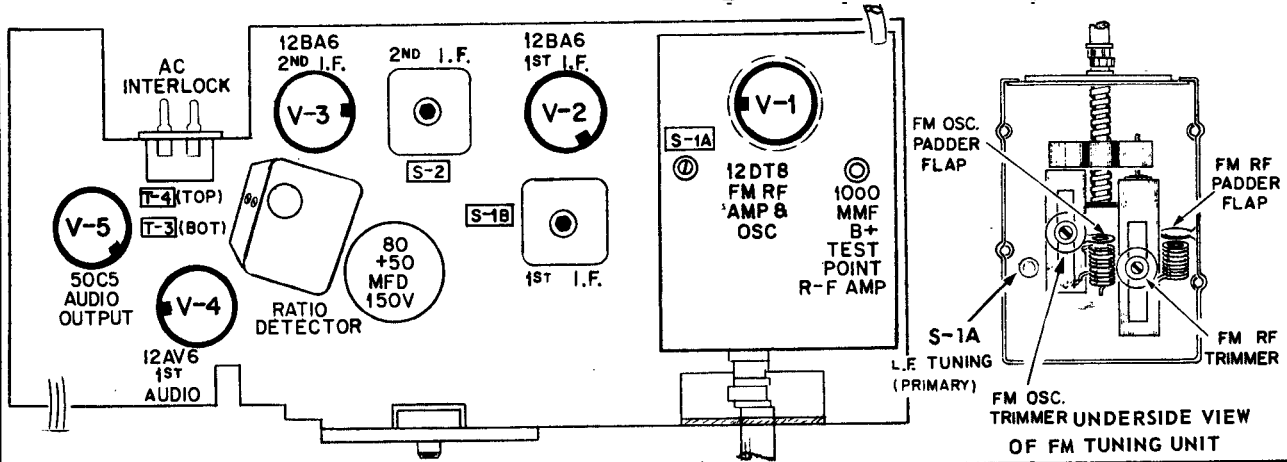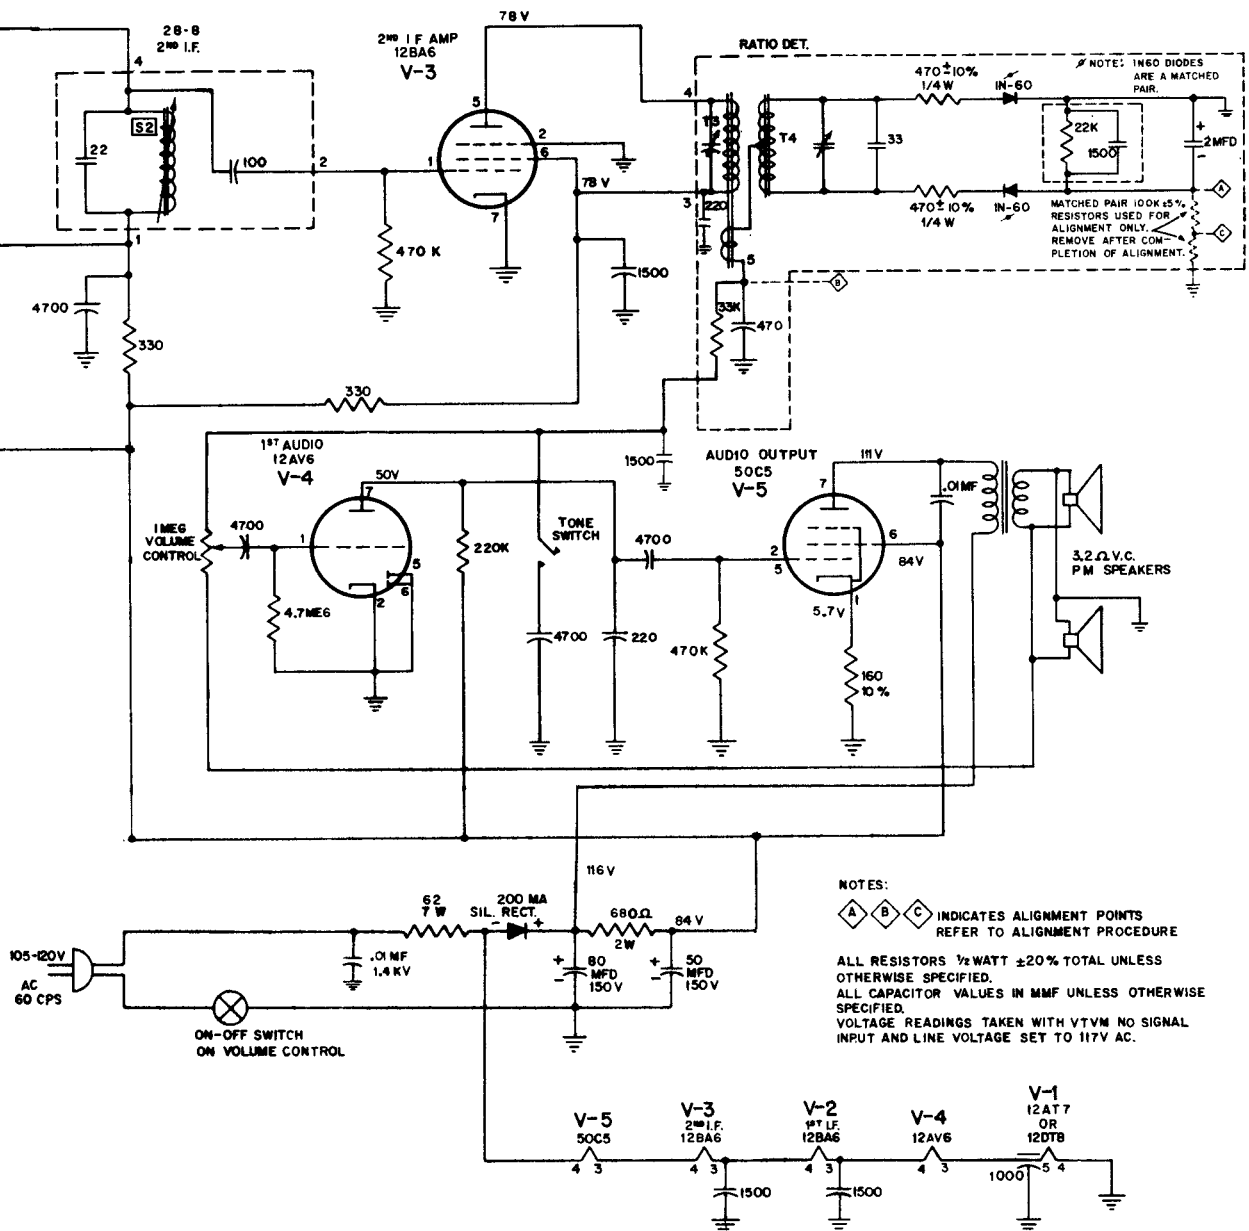




VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

EMERSON RADIO Model G-1708, Continued from the preceding page at left.

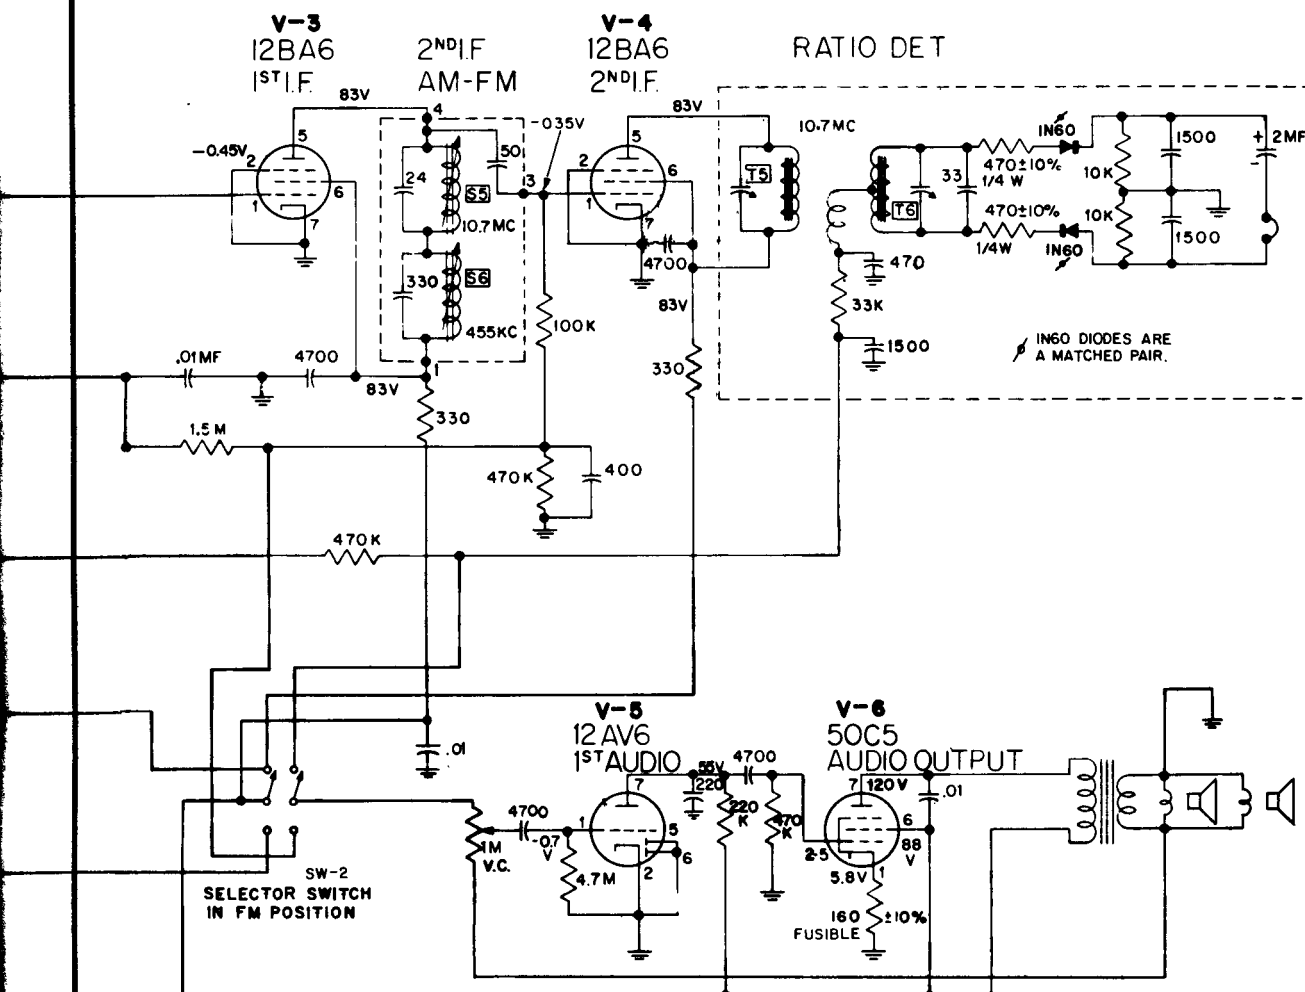

NOTES:

C1, C2, C3, C4 GANGED
UNLESS OTHERWISE SPECIFIED
ALL RESISTOR VALUES IN OHMS, 1/2W $\pm 20\%$
K=1000 Ω M=MEG Ω
ALL CAPACITOR VALUES IN MMF
USE V.T.V.M. FOR VOLTAGE MEASUREMENTS
BAND SWITCH ON FM. POSITION, NO SIGNAL,
LINE VOLTAGE 117 VOLTS RMS 60~
ALL VOLTAGES MEASURED WITH RESPECT
TO CHASSIS GROUND
*INDICATES READINGS TAKEN IN A M POSITION

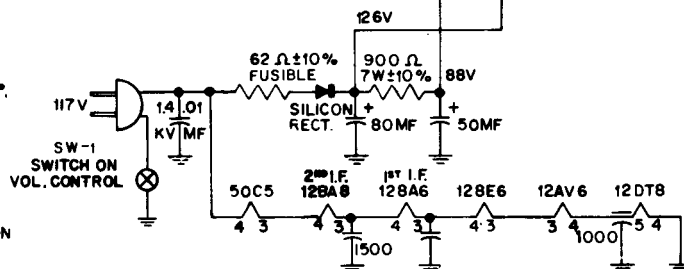


RESISTANCE READINGS CHART, MODEL G-1708

Symbol No.	Tube Type	SW-2 Position	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7	PIN 8	PIN 9
V-1	12DT8	FM	* 16K	33K	0	0	10	* 3.1K	0	0	N. C.
V-2	12BE6	AM	22K	0.4	20	32	*910	*900	1	—	—
V-3	12BA6	AM or FM	1.6M	0	32	44	* 1.2K	* 1.2K	0	—	—
V-4	12BA6	FM	470K	0	44	56	* 1.2K	* 1.2K	0	—	—
V-5	12AV6	AM or FM	4.7M	0	20	10	0	0	* 220K	—	—
V-6	50C5	AM or FM	160	470K	56	100	470K	* 900	* 150	—	—

EMERSON Model P-1913, Tuner Chassis 120640


(See next page, adjacent at right, for data on amplifier unit used.)

Emerson Model P-1913 is a combined radio and phonograph combination designed for playing of both stereo-phonically and monophonically recorded discs, as well as reception of standard AM radio programs and FM programs broadcast either monophonically or in the stereo mode. It is equipped with a high-fidelity, dual-channel 20 watt stereo amplifier and a separate FM/AM tuning chassis with built-in stereo multiplex circuits and FM stereo indicator lamp. The separate phono pre-amplifier chassis used in this model, in conjunction with the four-speed stereo record changer employed, provides high-quality reproduction of all types of records, including the older 78 RPM variety. Model P-1913 is equipped with a total of six self-contained loudspeakers, one wide-range speaker and two high-frequency tweeters for each of the stereo channels.

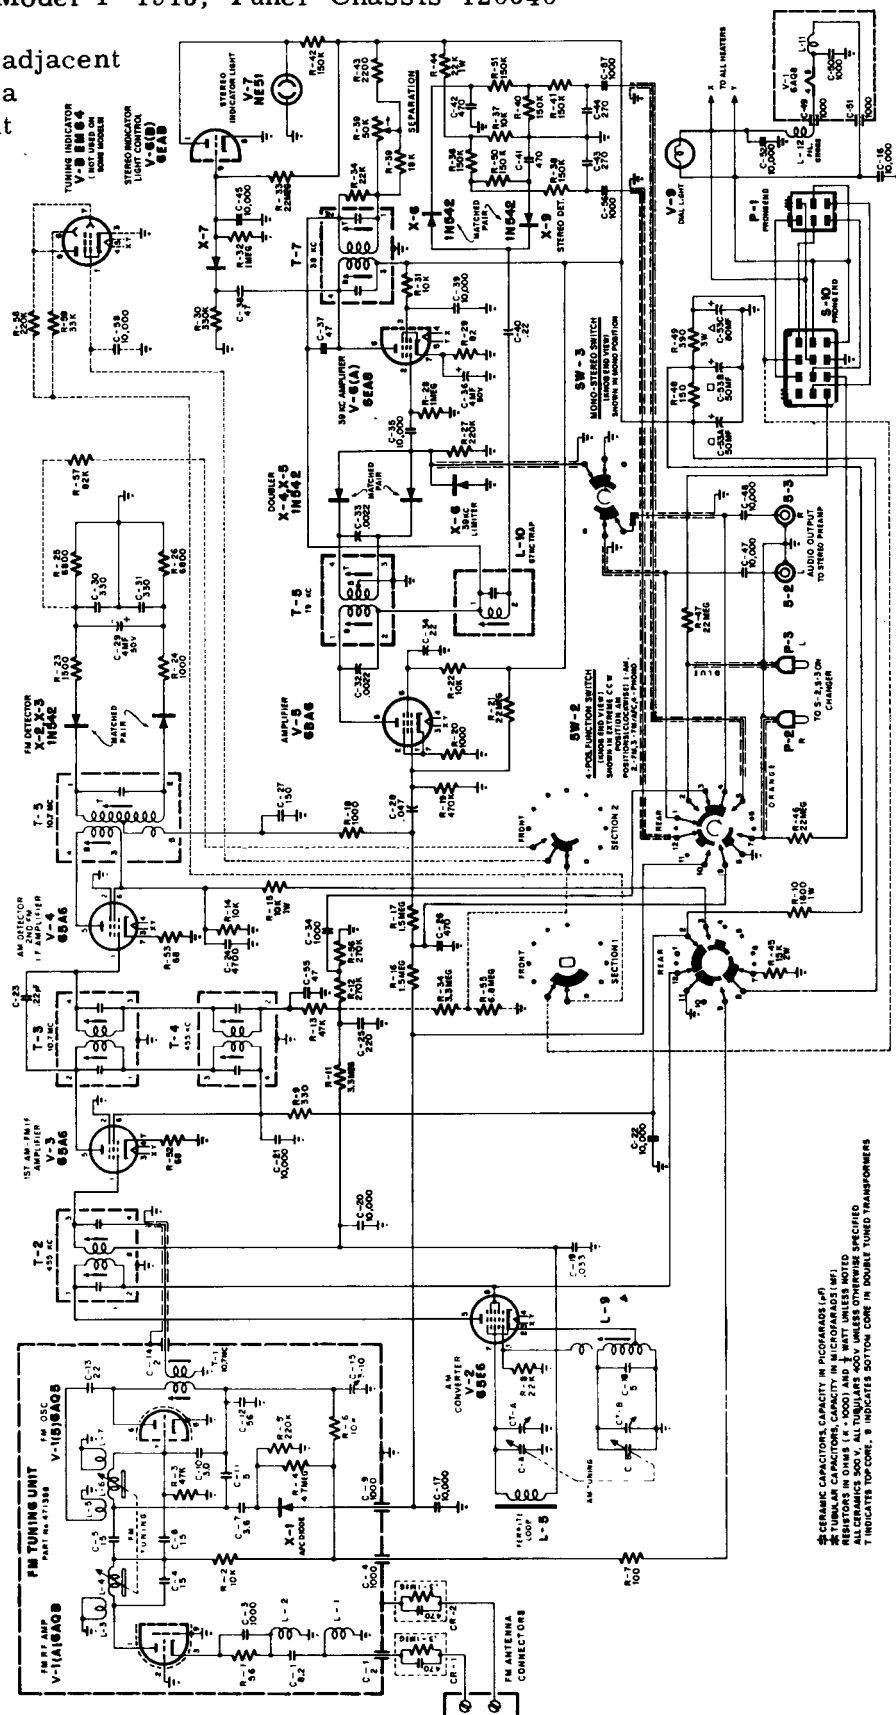

AM-FM STEREO TUNER CHASSIS No. 120640


EMERSON Model P-1913, Amplifier Chassis 120639 and 120647
(Continued from preceding page)

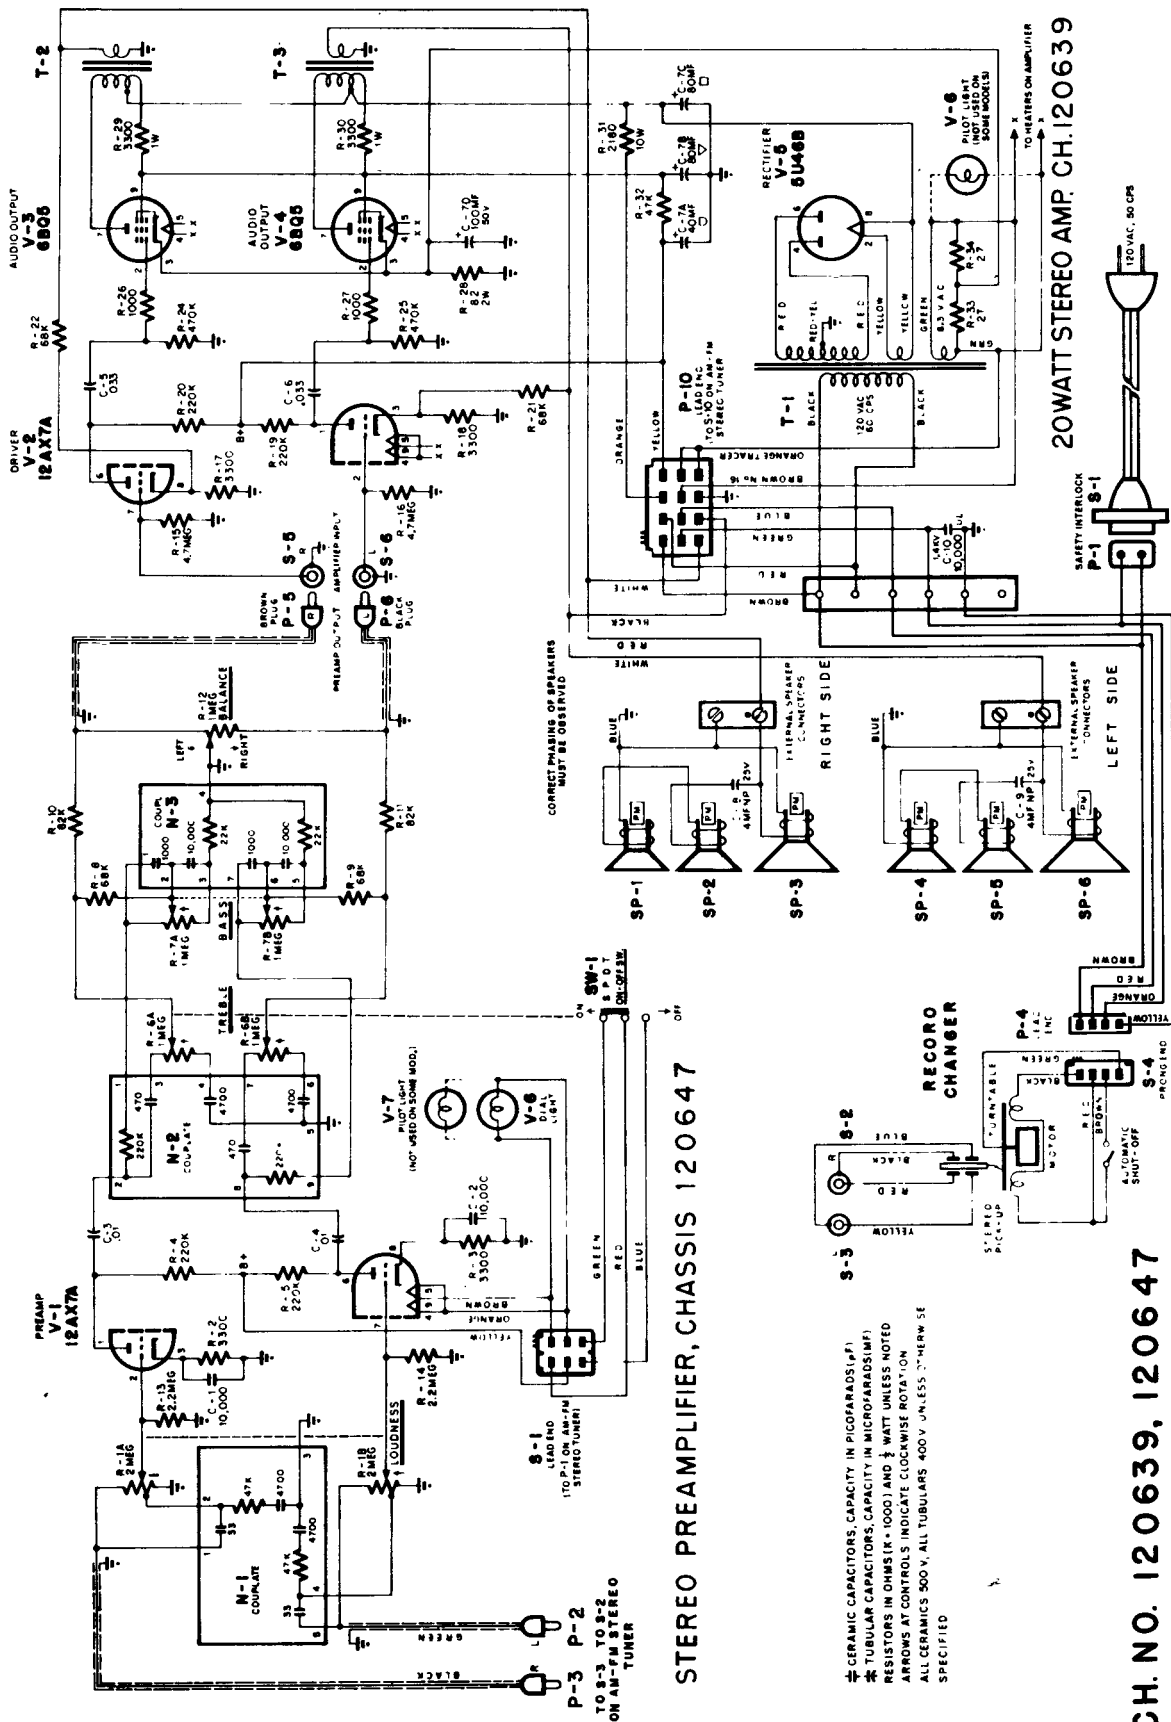

* CERAMIC CAPACITORS, CAPACITY IN PICOFARADS (pF)
 * TUBULAR CAPACITORS, CAPACITY IN MICROFARADS (μF)
 RESISTORS IN OHMS (R), 1000 (K) AND 10,000 (M) UNLESS NOTED
 ARROWS AT CONTROLS INDICATE COUNTERCLOCKWISE ROTATION
 ALL CERAMICS 500 V, ALL TUBULARS 400 V UNLESS OTHERWISE SPECIFIED

EMERSON Model P-1914
Chassis 120649
(Continued on next page)

MONAURAL AND STEREO AMPLIFIER BOARD

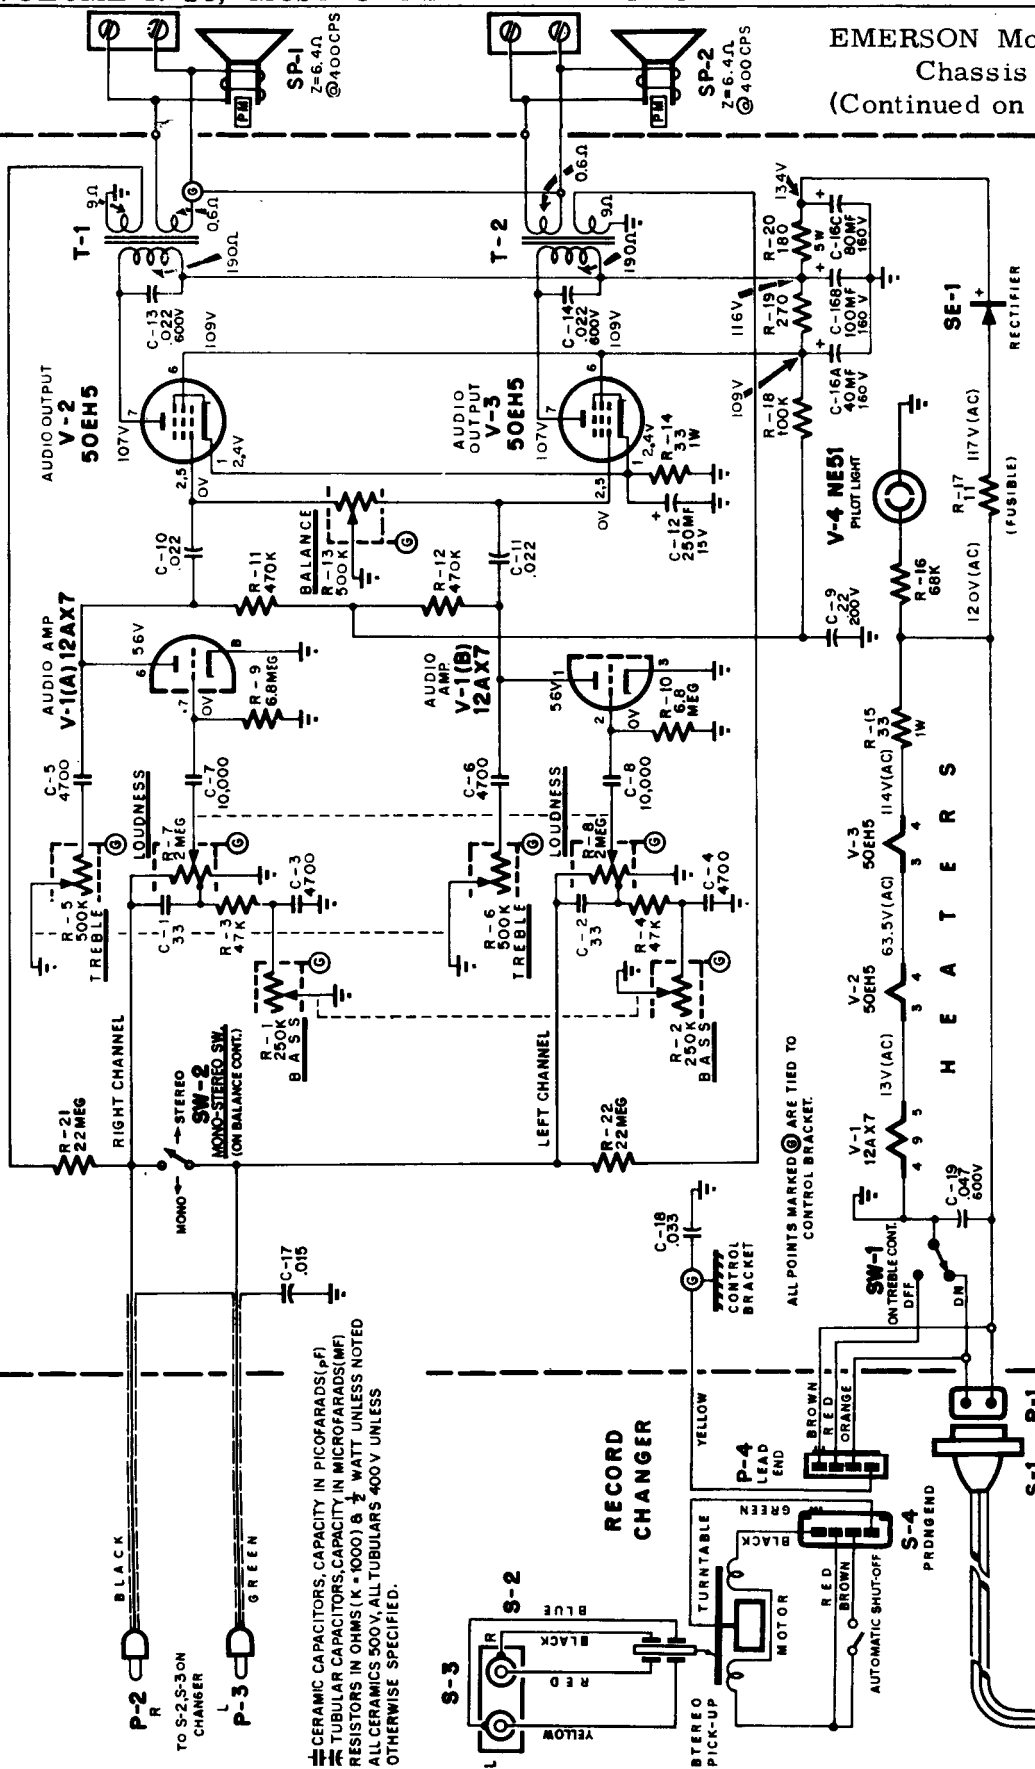

RESISTANCE MEASUREMENTS were made under the following conditions, using an RCA "Voltohmmyst" or equivalent VTVM:


- 1) ON-OFF switch (SW-1) in OFF position and line cord disconnected from AC outlet.
- 2) AC connector for record changer (P-4) disengaged from motor socket (S-4).
- 3) All resistance measurements made between points indicated and B-neutral (negative side of electrolytic capacitor C-16) unless otherwise noted.

CONDITIONS FOR VOLTAGE AND RESISTANCE MEASUREMENTS, STEREO AMPLIFIER CHASSIS 120649

- VOLTAGE MEASUREMENTS were taken under the following conditions, using an RCA "Voltohmmyst" or equivalent VTVM:
- 1) Line voltage maintained at 120 volts AC.
 - 2) Volume control set for minimum volume.
 - 3) All voltage measurements made between points indicated and B-neutral (negative side of electrolytic capacitor C-16) unless otherwise noted.

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

EMERSON Model P-1914, Chassis 120649, Continued from preceding page

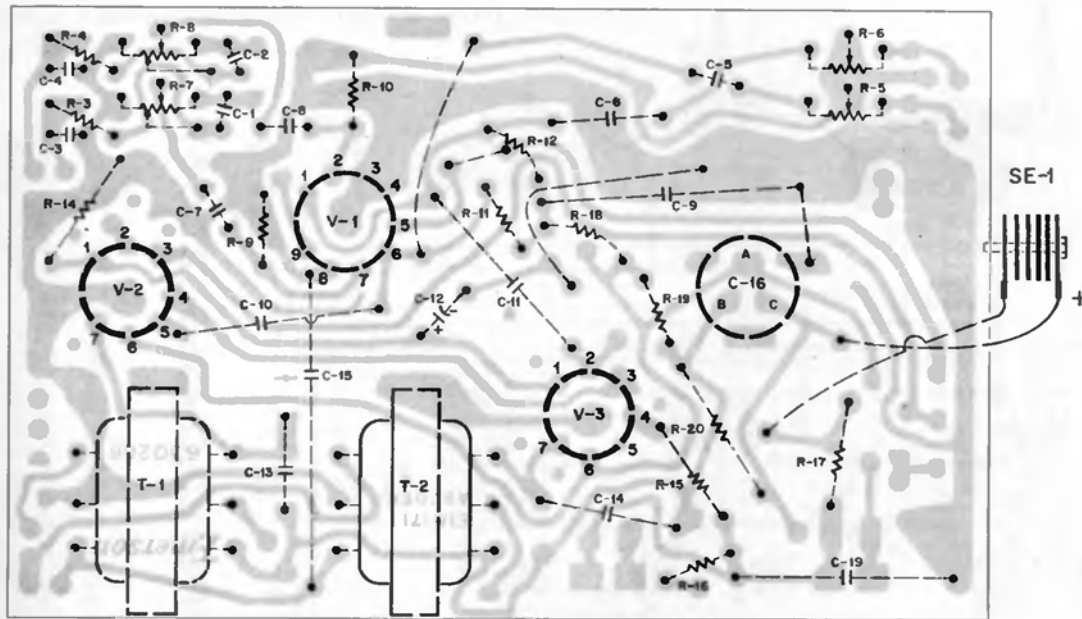


ETCHED PRINTED CIRCUIT CHASSIS (Bottom View)

RESISTANCE READINGS, STEREO AMPLIFIER CHASSIS 120649


SYM.	TUBE TYPE	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7	PIN 8	PIN 9
V-1	12AX7	*570K	6.8 M	0	0	18	*570K	6.8 M	0	9
V-2	50EH5	33	30 to .5 M	18	64	30 to .5 M	*450	*370	-	-
V-3	50EH5	33	30 to .5 M	64	112	30 to .5 M	*450	*370	-	-

* MEASURED WITH COMMON LEAD OF METER CONNECTED TO POSITIVE SIDE OF SELENIUM RECTIFIER SE-1.

EMERSON Model P-1926, Chassis 120693

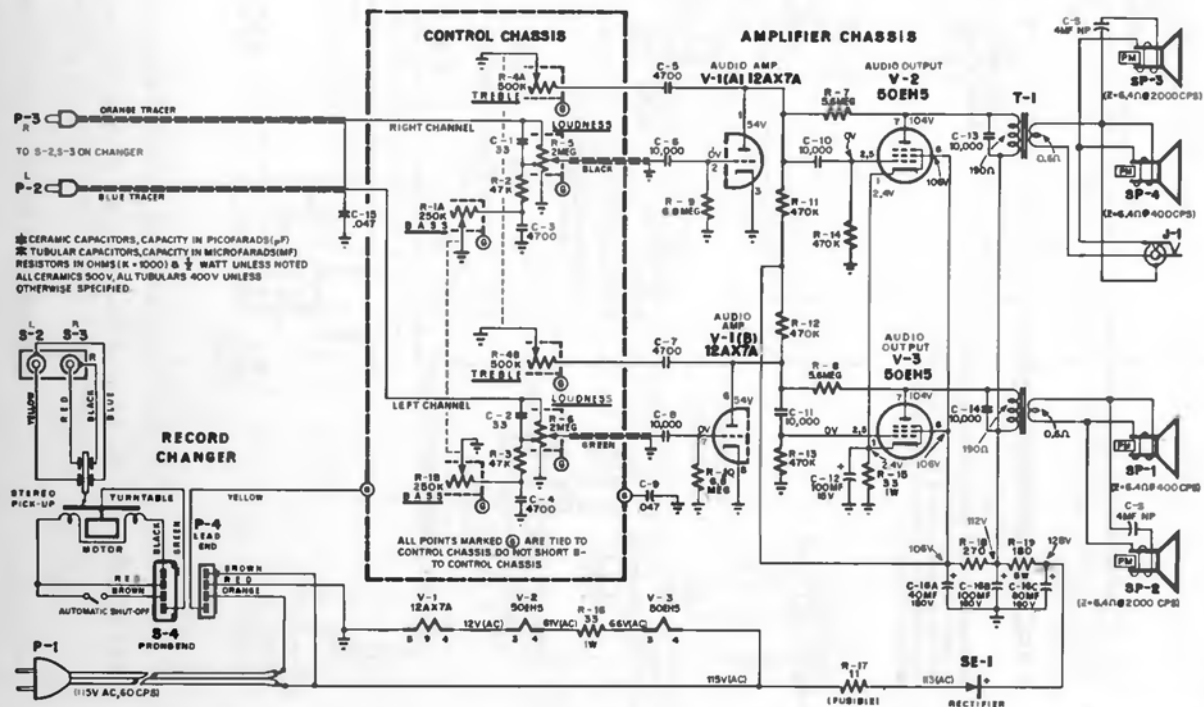

EMERSON Tuner Chassis 120638
used in Models P-1915,
P-1936, and P-1937.

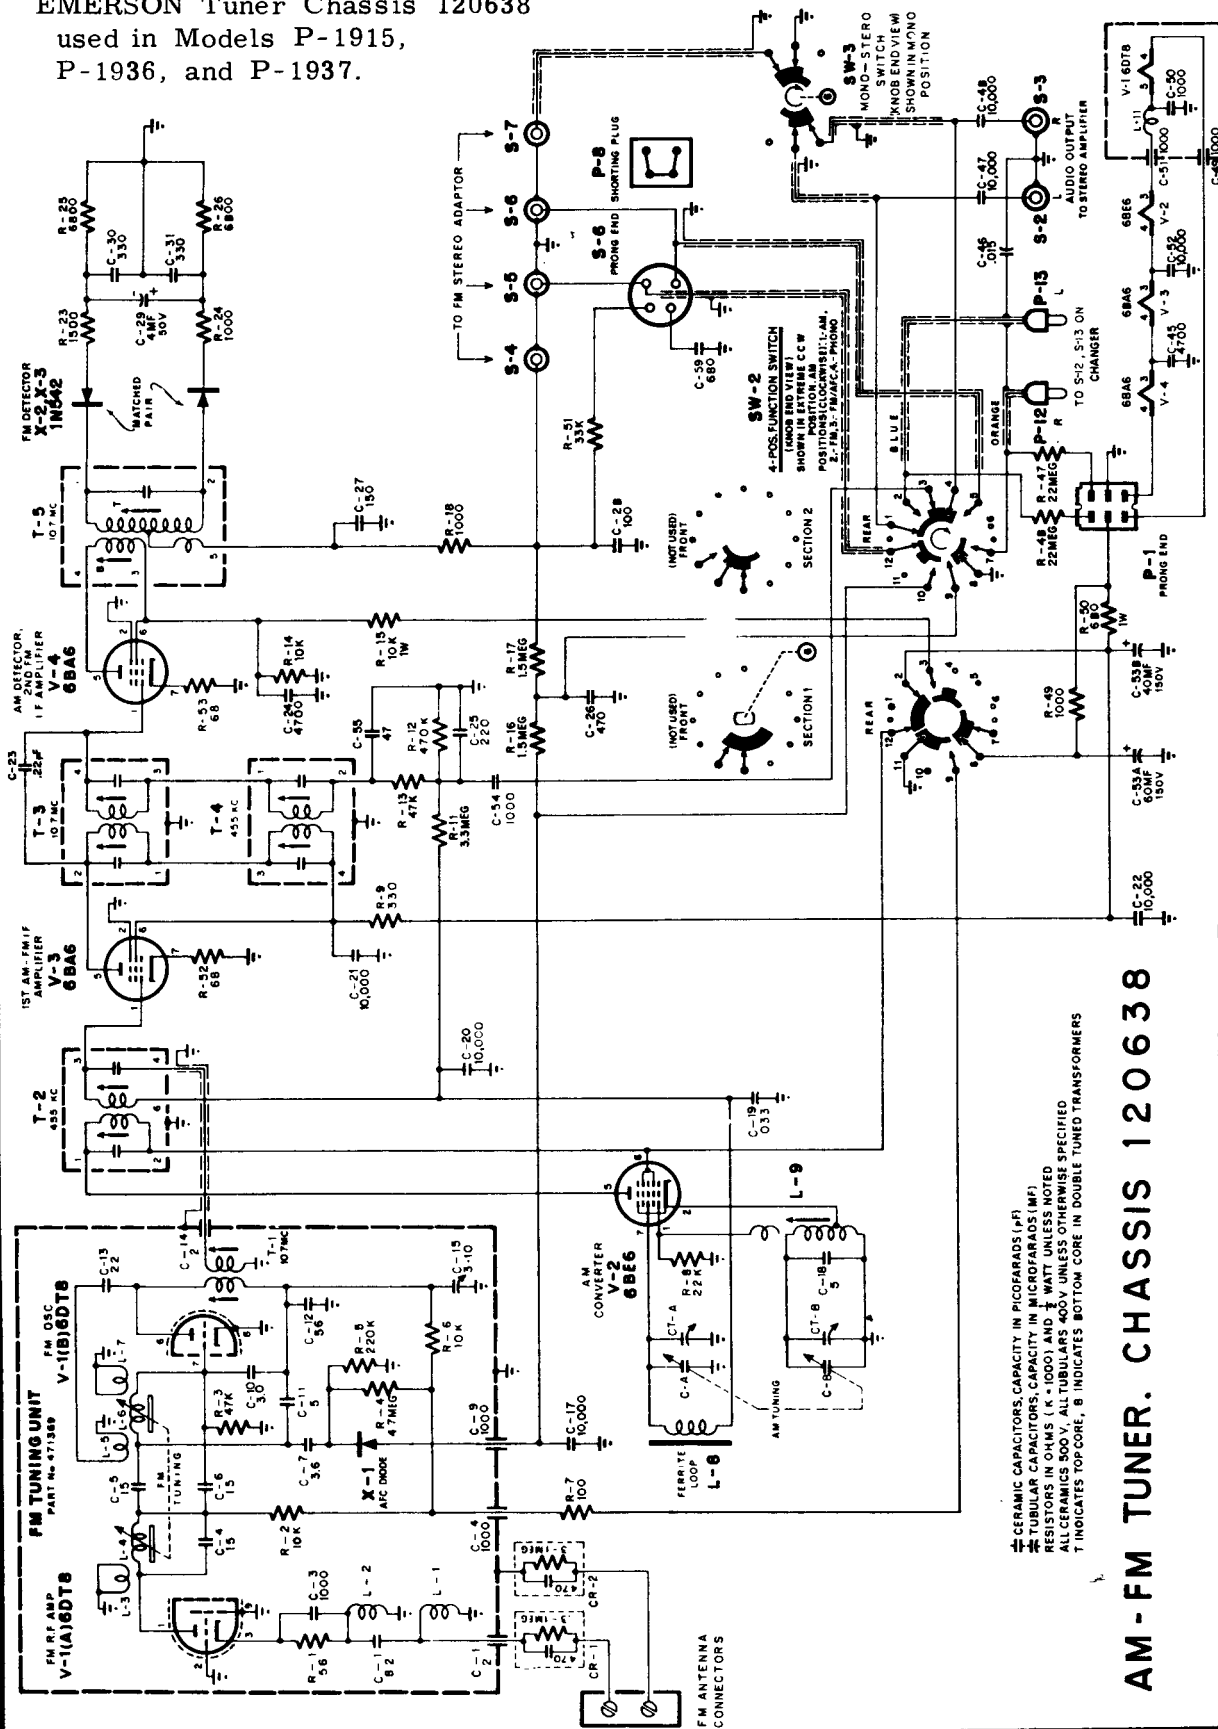


EMERSON Tuner Chassis 120638, used in Models P-1915, P-1936, P-1937

EMERSON Amplifier Chassis 120646
used in Model P-1915


(For Tuner Chassis 120638 used in
this model, see preceding page.)

CHASSIS No. 120646

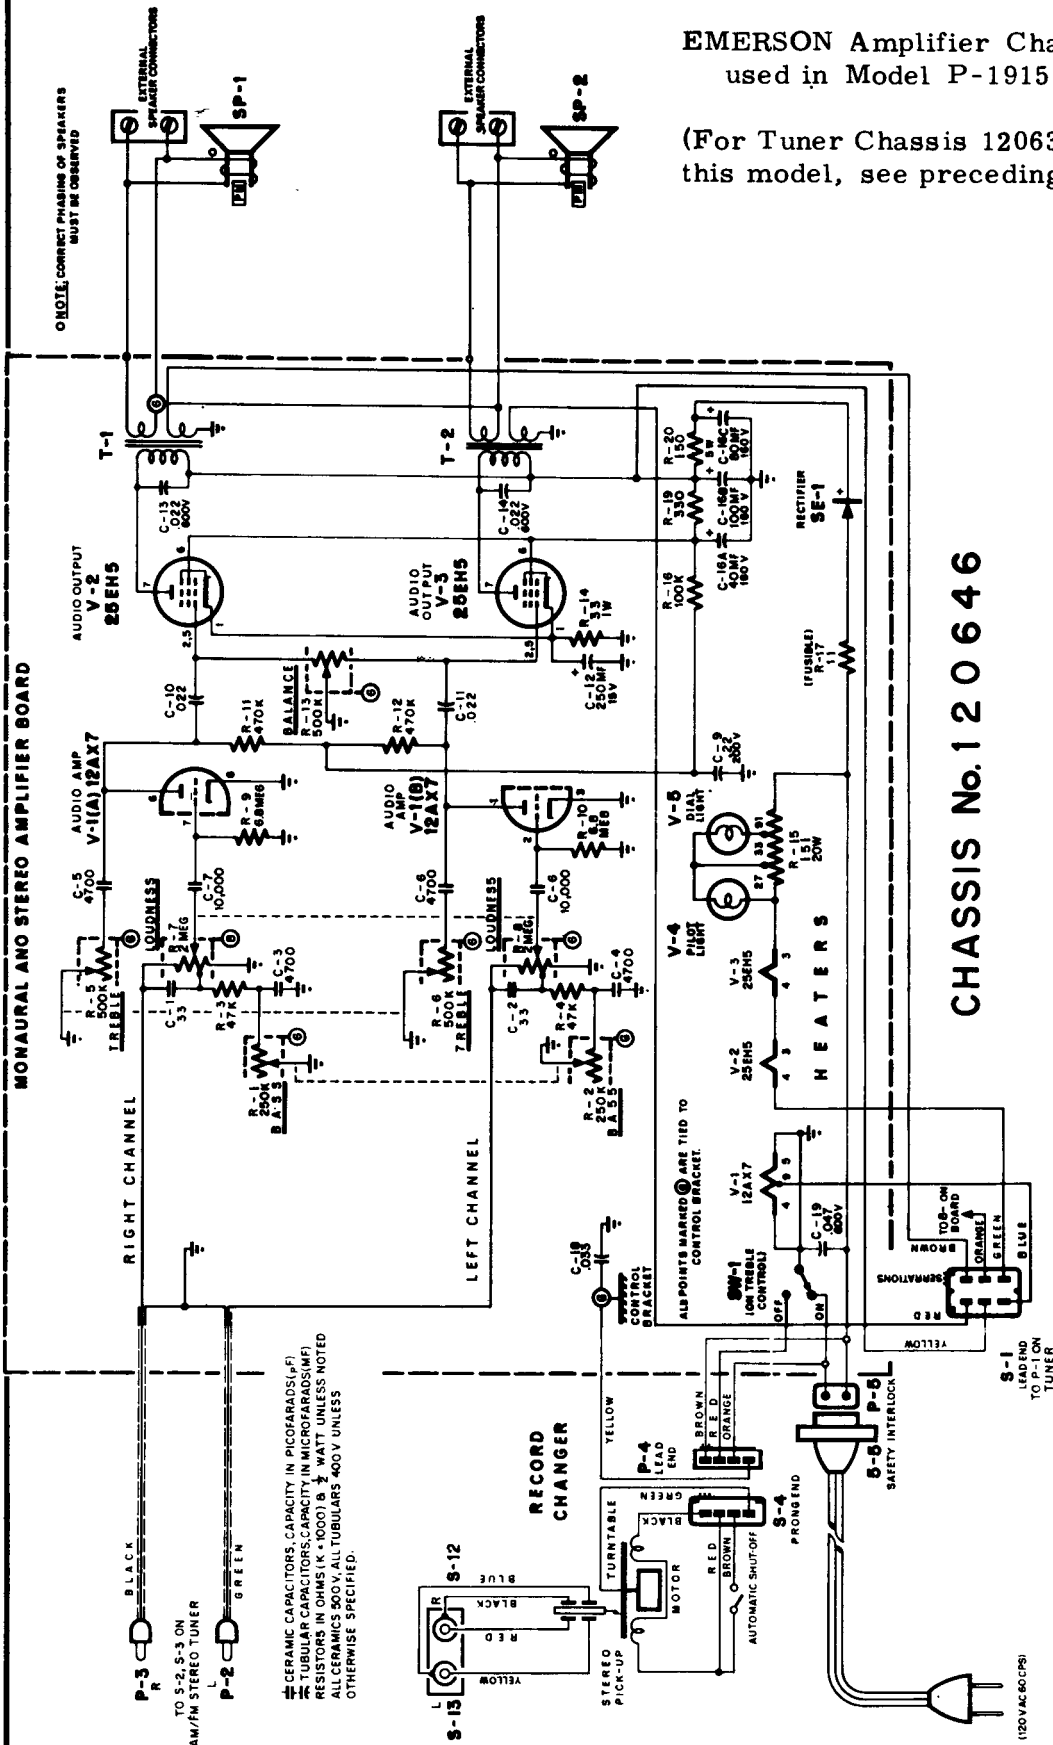

Emerson Model P-1915 is a combination FM-AM radio and stereophonic phonograph equipped with a four-speed automatic intermix record changer, complete with an automatic 45 RPM spindle adaptor. Two chassis are utilized; one for audio amplification and the other for reception of both AM and FM programs transmitted in the standard broadcast bands. Model P-1915 incorporates the Emerson "Power-Monitor" feature which, if desired, may be set to turn off both the stereo amplifier and the record changer after the last record has been played, thereby turning the unit completely off.

EMERSON Models G-1710,,G-1711, Chassis 120686, 120701

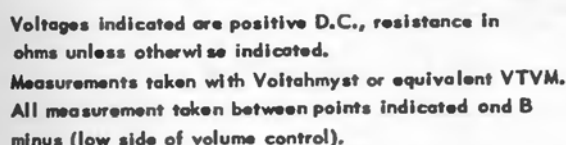


(A) Line voltage set at 115 volts AC,
(B) Volume control set for minimum volume,
(C) Tuning capacitor fully closed.




VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

EMERSON Models P-1919, P-1920, Chassis 120668; Model P-1920A, Chassis 120693

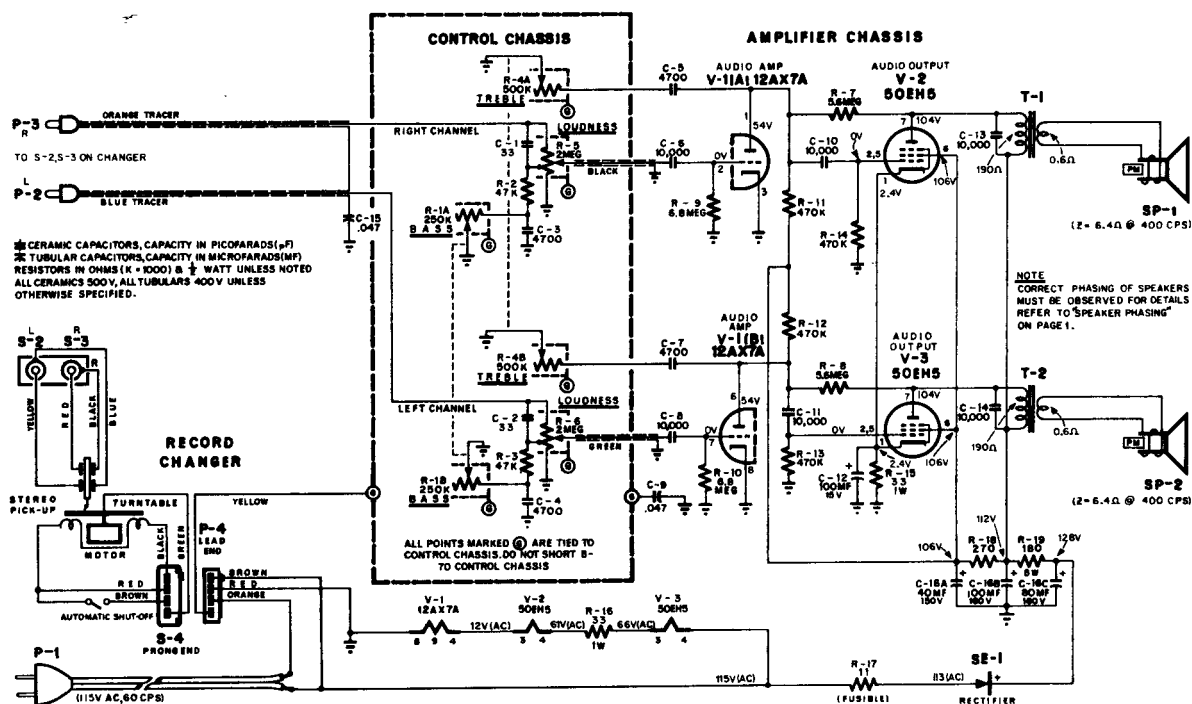

EMERSON Models P-1921, -A, Chassis 120567B

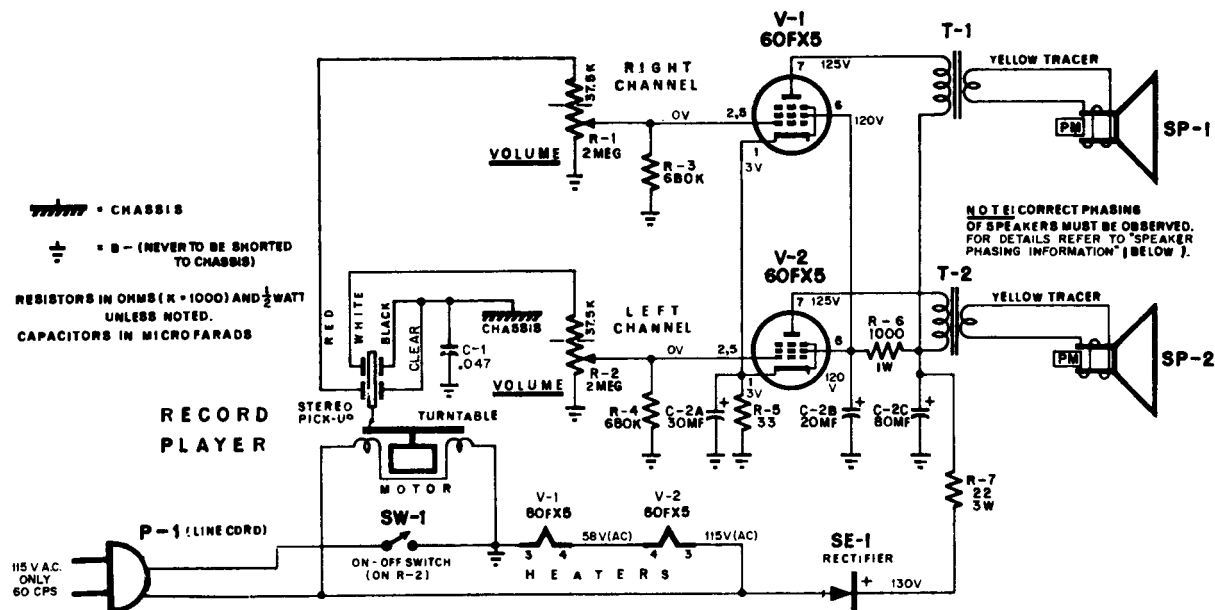

CONDITIONS FOR VOLTAGE AND RESISTANCE MEASUREMENTS

1. All voltages measured with VTVM, negative lead to B- (common lead of C-2), volume control set at minimum.
2. All resistance readings taken with AC cord disconnected, negative lead to B- (common lead of C-2), motor switch in "OFF" position.
3. (*) Indicates varying resistance - allow 30 seconds for meter to settle.
4. (**) Reading given varies with setting of volume control.
5. (N.C.) Denotes no connection.

SYMBOL	TUBE TYPE	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7
V-1	60 FX5	33	10 Ω to 510k **	0	85	10 Ω to 510k **	*1 MEG	*1 MEG
V-2	60 FX5	33	10 Ω to 510k **	170	85	10 Ω to 510k **	*1 MEG	*1 MEG

Gamble-Skogmo, Inc.

Coronado Model RA60-9921A

2SA101AA


2SA101AA

2SA101AA

MA-80


2SB170

2SB172

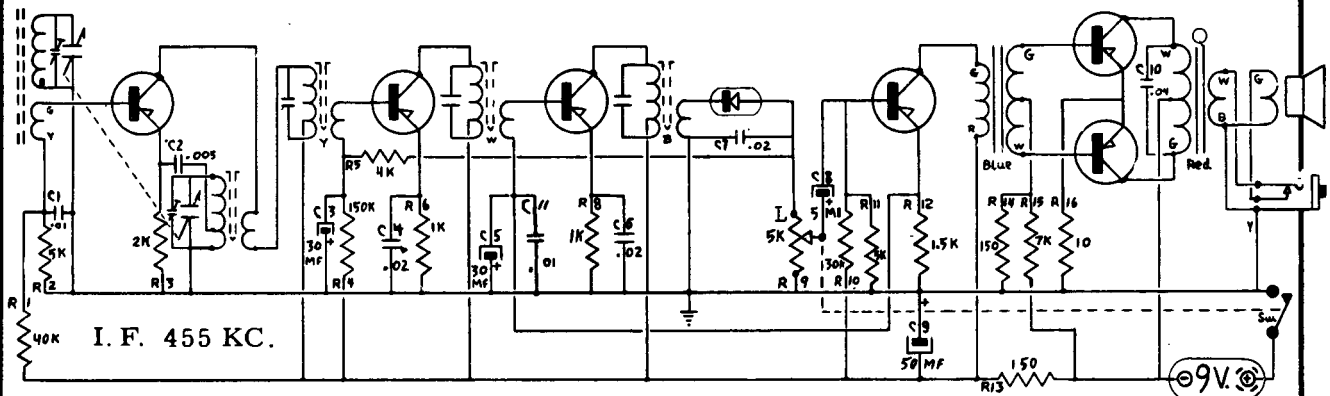


Gamble-Skogmo Coronado Model RA60-9922A

I. F. 455 KC.

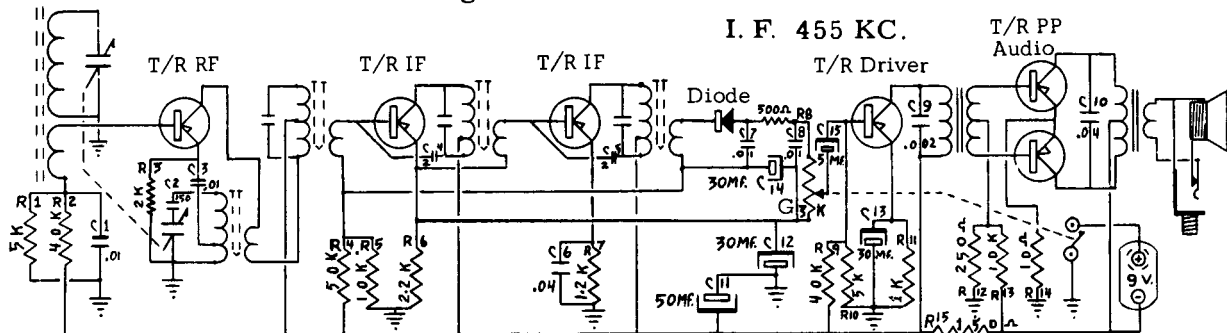


Gamble-Skogmo Coronado Model RA60-9924A

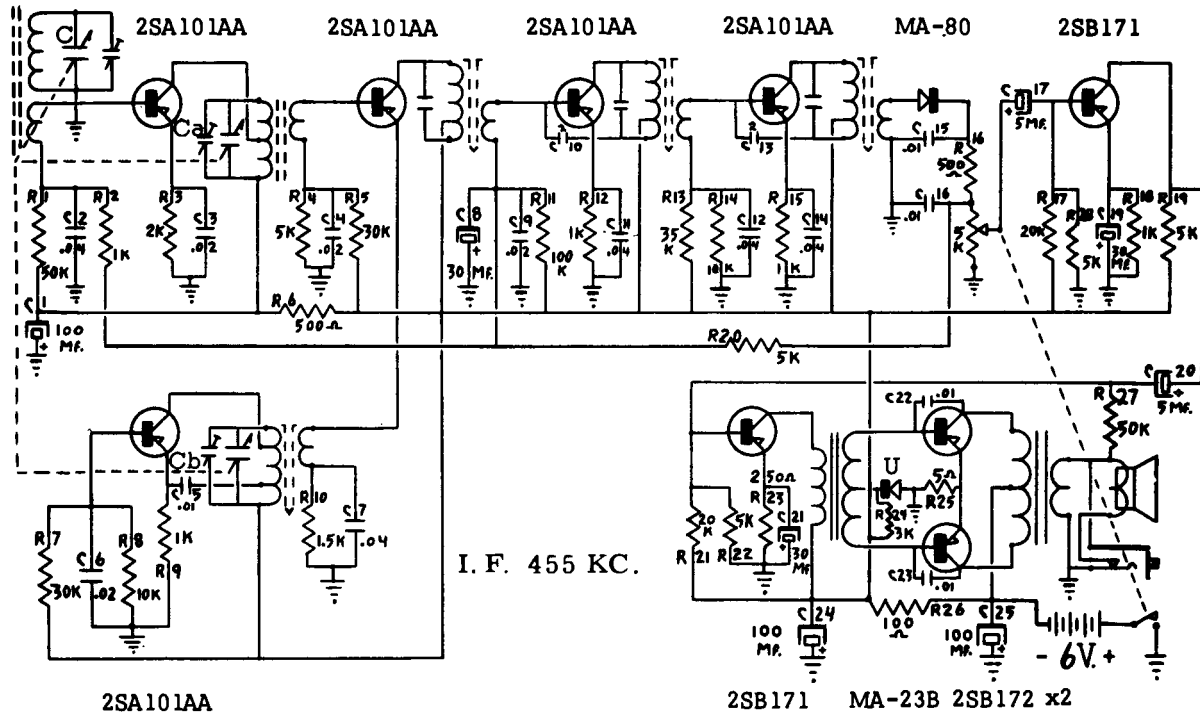

GENERAL ELECTRIC

MODELS
H220A
H221A

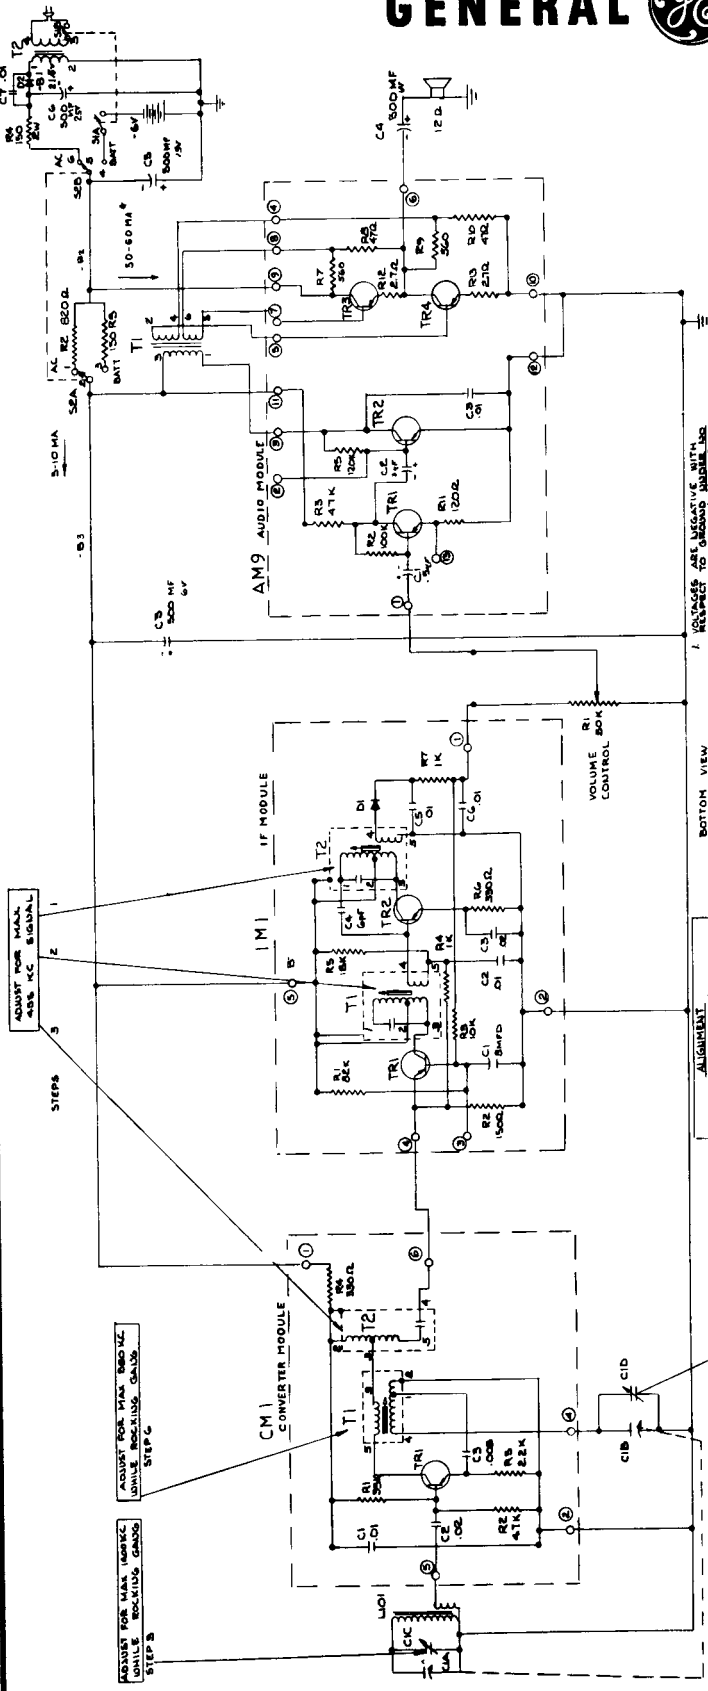


1. VOLTAGES ARE MEASURED WITH
RELATIVE TO GROUND UNDER NO
LOAD CONDITIONS & VOLUME
CONTROLS ARE IN CENTER POSITION
UNLESS OTHERWISE NOTED.
2. CAPACITORS MORE THAN 1 MF
RESISTORS ARE 1/2 WATT, 1% TOL.

MODULES


This radio uses three high-reliability modules in its construction. The modules are self-contained circuit stages, each grouped on a miniature circuit board, which themselves are mounted on and soldered into the main circuit board just like any other component (transistor, capacitor, etc.).

This method of manufacture provides high reliability at an optimum cost. In fact, it allows the cost of the module to fall into the same range as tubes or transistors. This means that defects in the circuits involved in the modules need only be replaced with a good unit.

Almost always this will result in an easier, quicker, and more economical repair than would be possible if the serviceman were to try to locate and replace a defective component within a module. This radio uses such modules in the converter, I. F. and Audio stages.

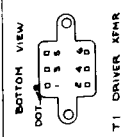

TRANSISTOR MOUNTING PATTERN

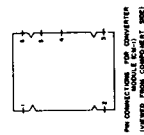


CHASSIS REMOVAL

1. Remove volume and tuning knobs.
2. Remove two Phillips-head screws from cabinet back.
3. Remove two hex-head screws inside battery compartment.
4. Remove 5 screws fastening circuit board to cabinet.
5. Carefully lift circuit board from cabinet.

VOLTAGES

TEST POINT	DC VOLTAGE	AC VOLTAGE	DC VOLTAGE	AC VOLTAGE
TP1	0	0	0	0
TP2	0	0	0	0
TP3	0	0	0	0
TP4	0	0	0	0
TP5	0	0	0	0
TP6	0	0	0	0
TP7	0	0	0	0
TP8	0	0	0	0
TP9	0	0	0	0
TP10	0	0	0	0
TP11	0	0	0	0
TP12	0	0	0	0
TP13	0	0	0	0
TP14	0	0	0	0
TP15	0	0	0	0
TP16	0	0	0	0
TP17	0	0	0	0
TP18	0	0	0	0
TP19	0	0	0	0
TP20	0	0	0	0
TP21	0	0	0	0
TP22	0	0	0	0
TP23	0	0	0	0
TP24	0	0	0	0
TP25	0	0	0	0
TP26	0	0	0	0
TP27	0	0	0	0
TP28	0	0	0	0
TP29	0	0	0	0
TP30	0	0	0	0
TP31	0	0	0	0
TP32	0	0	0	0
TP33	0	0	0	0
TP34	0	0	0	0
TP35	0	0	0	0
TP36	0	0	0	0
TP37	0	0	0	0
TP38	0	0	0	0
TP39	0	0	0	0
TP40	0	0	0	0
TP41	0	0	0	0
TP42	0	0	0	0
TP43	0	0	0	0
TP44	0	0	0	0
TP45	0	0	0	0
TP46	0	0	0	0
TP47	0	0	0	0
TP48	0	0	0	0
TP49	0	0	0	0
TP50	0	0	0	0
TP51	0	0	0	0
TP52	0	0	0	0
TP53	0	0	0	0
TP54	0	0	0	0
TP55	0	0	0	0
TP56	0	0	0	0
TP57	0	0	0	0
TP58	0	0	0	0
TP59	0	0	0	0
TP60	0	0	0	0
TP61	0	0	0	0
TP62	0	0	0	0
TP63	0	0	0	0
TP64	0	0	0	0
TP65	0	0	0	0
TP66	0	0	0	0
TP67	0	0	0	0
TP68	0	0	0	0
TP69	0	0	0	0
TP70	0	0	0	0
TP71	0	0	0	0
TP72	0	0	0	0
TP73	0	0	0	0
TP74	0	0	0	0
TP75	0	0	0	0
TP76	0	0	0	0
TP77	0	0	0	0
TP78	0	0	0	0
TP79	0	0	0	0
TP80	0	0	0	0
TP81	0	0	0	0
TP82	0	0	0	0
TP83	0	0	0	0
TP84	0	0	0	0
TP85	0	0	0	0
TP86	0	0	0	0
TP87	0	0	0	0
TP88	0	0	0	0
TP89	0	0	0	0
TP90	0	0	0	0
TP91	0	0	0	0
TP92	0	0	0	0
TP93	0	0	0	0
TP94	0	0	0	0
TP95	0	0	0	0
TP96	0	0	0	0
TP97	0	0	0	0
TP98	0	0	0	0
TP99	0	0	0	0
TP100	0	0	0	0

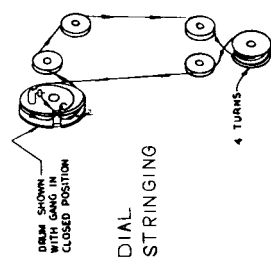

GENERAL ELECTRIC

Models P895A-M, P910A-M, P911A-M, P912A-M, P913A-M

(Continued on next page at right)


	EMITTER	BASE	COLLECTOR
TR1	8	.65	2.5
TR2	.19 TO .29	.34 TO .4	2.6
TR3	.18 TO .3	.35 TO .43	2.6
TR4	.0	.2	2.6
TR5	.04	.2	3
TR6	.04	.2	3

ALIGNMENT
SET VOLUME CONTROL AT MAX.
CONNECT VOLT METER OR SCOPE
ACROSS SPKR. COIL.
INDUCTIVELY COUPLE SIGNAL
GENERATOR TO RECEIVER

TRANSISTOR MTG PATTERN
C o o E

BOTTOM VIEWS

SCHEMATIC DIAGRAM - MODELS P910 AND P895 F, G, J, L, M

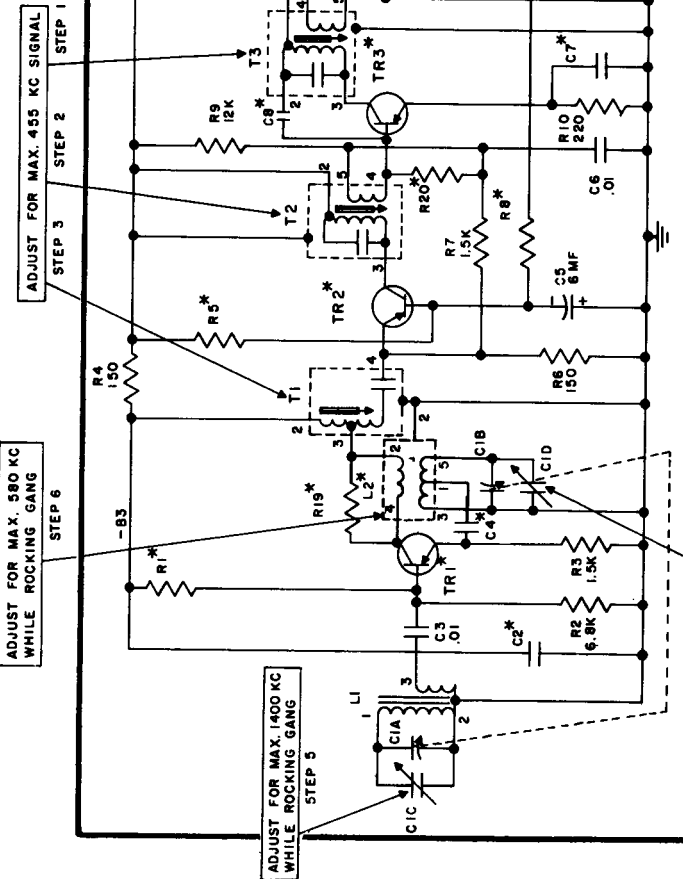

NOTES:

1. UNLESS OTHERWISE NOTED
CAP. MORE THAN 1 = MMF
CAP. LESS THAN 1 = MF
RE3. ARE 1/2 WATT K = 1000

OSC COIL-L2
5 9 9 3

4.* SEE TABLE 2.

I. F. TRANSFORMER

OSC COIL-L2
5 9 9 3


BOTTOM VIEWS

OSC COIL-L2

1 2 3 4 5 6

RS-4323

BOTTOM VIEW

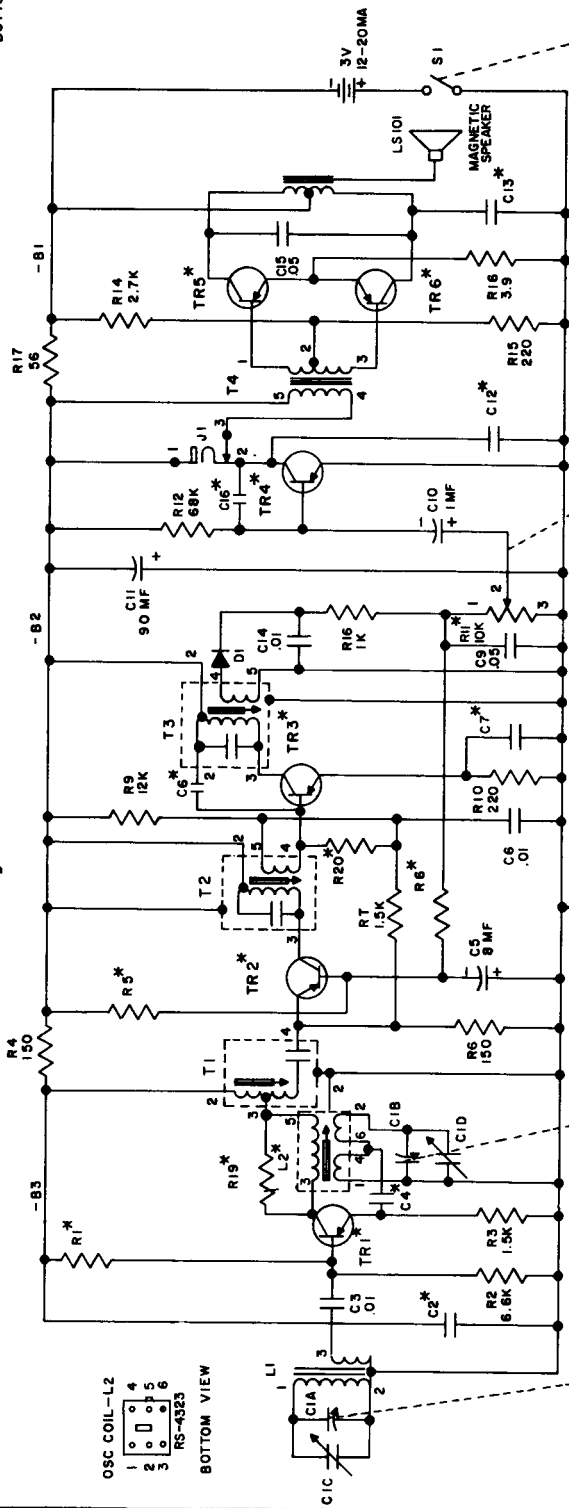

SCHEMATIC DIAGRAM - MODELS P91D AND P895 A, B C, D, E, H, K

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

GENERAL ELECTRIC

Models P895A-M, P910A-M, P911A-M, P912A-M, P913A-M


(Continued from preceding page at left)

* TABLE 2 - The following components may vary in value or physical characteristics in different set versions of models P910 or P895. The proper component values or part catalog numbers for all component variables are listed under the appropriate columns.

Set Version	TRANSISTORS					RESISTORS						CAPACITORS			
	TR1	TR2	TR3	TR4	TR5 & TR6	R1	R19	R5	R20	R8	R11 (VC)	C2	C4	C7	C8
A ₁	RS-3857	RS-3862	RS-3863	RS-5504	RS-5704 or RS-5710	12K	8.2K	27K	3.3K	8.2K	RS-4326	.01	.005 or .01	.05	None
A ₂	RS-3868	RS-3862	RS-3863	RS-5504		18K	5.6K	27K	3.3K	8.2K	RS-4326	.01 or .005	.005 or .01	.05	None
B ₁	RS-3868	RS-3862	RS-3863	RS-5504		18K	5.6K	27K	3.3K	8.2K	RS-4707			.05	None
B ₂	RS-3857	RS-3862	RS-3863	RS-5504		12K	8.2K	27K	3.3K	8.2K	RS-4707	.01		.05	None
C ₁	RS-3857	RS-3862	RS-3863	RS-5504		18K	5.6K	27K	3.3K	8.2K	RS-4326	.01 or .005		.05	None
C ₂	RS-3868	RS-3862	RS-3863	RS-5504		18K	5.6K	27K	3.3K	8.2K	RS-4326			.05	None
D ₁	RS-3868	RS-3862	RS-3863	RS-5504		18K	5.6K	27K	3.3K	8.2K	RS-4326			.05	None
D ₂	RS-3857	RS-3862	RS-3863	RS-5504		12K	8.2K	27K	3.3K	8.2K	RS-4326			.05	None
E ₁	RS-3857	RS-3862	RS-3863	RS-5504		12K	8.2K	27K	3.3K	8.2K	RS-4326			.05	None
E ₂	RS-3868	RS-3862	RS-3863	RS-5504		18K	5.6K	27K	3.3K	8.2K	RS-4326			.05	None
E ₃	RS-5104	RS-3862	RS-3863	RS-5504		22K	Omit	27K	3.3K	8.2K	RS-4326	.01	.01	.05	None
E ₄	RS-5104	RS-5201	RS-5301 or RS-5303	RS-5504		22K	Omit	39K	Omit	12K	RS-4326	.01	.01	.05	7.5mmf
F	RS-5104	RS-5201		RS-5504		22K	Omit	39K	Omit	12K	RS-4707	.01	.01	.05	7.5mmf
G	RS-3868	RS-5201		RS-5504		18K	Omit	39K	Omit	12K	RS-4707	.05	.005	.05	7.5mmf
H	RS-3868	RS-5201		RS-5504		18K	Omit	39K	Omit	12K	RS-4707	.05	.005	.05	7.5mmf
J	RS-3868	RS-3862	RS-3863	RS-5504		18K	8.2K	27K	Omit	8.2K	RS-4707	.005	.005	.01	Omit
K	RS-5104	RS-5201	RS-5301	RS-5504		22K	Omit	39K	Omit	12K	RS-4707	.01	.01	.05	7.5mmf
		or RS-5202	or RS-5303												
		or RS-5203	RS-5310												
L	RS-3868		RS-5304	RS-5504		18K	Omit	39K	Omit	12K	RS-4707	.005	.005	.05	6.8mmf
M	RS-3868		RS-5309	RS-5504		18K	Omit	39K	Omit	12K	RS-4707	.005	.005	.05	6.8mmf


① BOTH TR5 and TR6 must be the same type transistor.

COMPONENT WIRING DIAGRAM—MODELS P910 AND P895 F, G, J, L, M

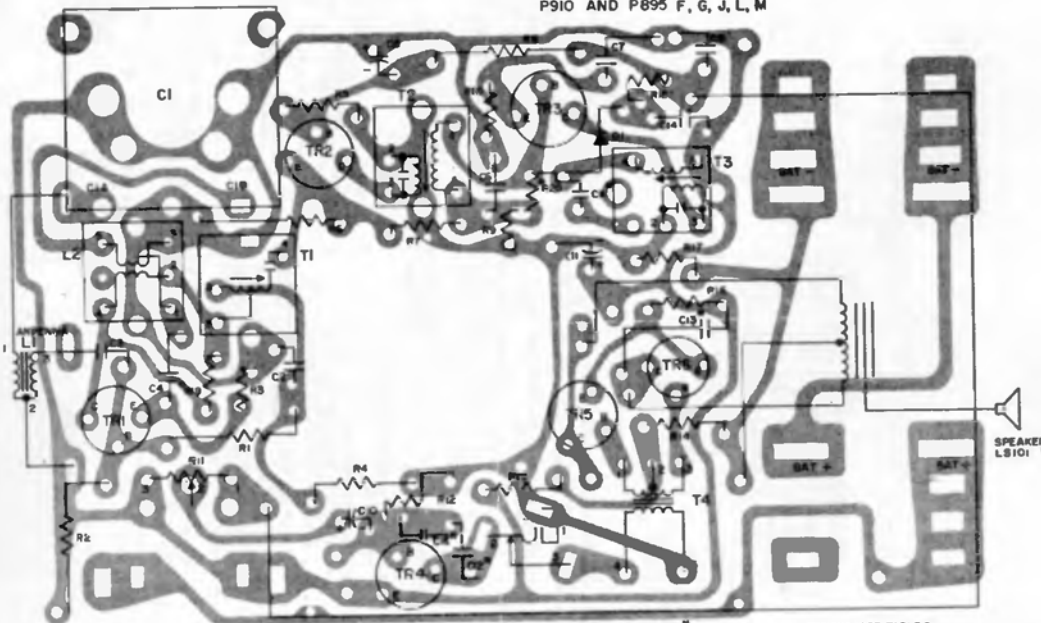

GENERAL ELECTRIC

Models P915A,B, P916A,B, P917A,B, P9151A,B, P9161A,B, P9171A,B

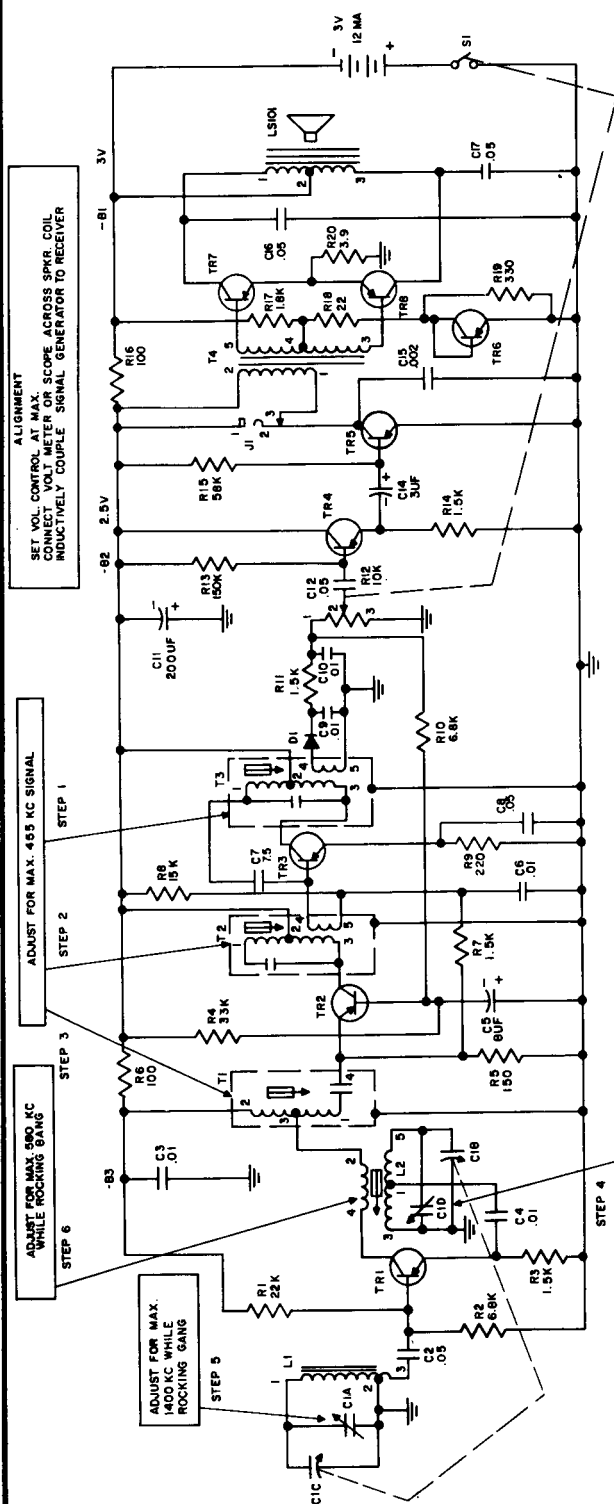

TROUBLESHOOTING (CONT'D)

If an excessive total quiescent current drain is recorded, the individual collector currents of each transistor should be checked. An excessive current reading may mean a shorted transistor; no current will indicate that a transistor or associated circuit component is defective.

NO RECEPTION:

1. Check battery voltage and battery contacts.
2. Check on-off switch.
3. Check all antenna lead connections.
4. Check coil L2.

WEAK AUDIO:

1. Check battery voltage for 3 volts.
2. Check battery current.
3. Check transistor collector currents.
4. Check alignment.

INTERMITTENT:

1. Check battery contacts for corrosion.
2. Check solder connections on dip-soldered side of circuit board.

Intermittent audio, motorboating, and poor reception is frequently caused by poor battery contact.

CHASSIS REMOVAL

1. Remove the dial knob screw with a small Phillips screw driver and lift off the dial knob.
2. Remove cabinet back by inserting a coin in the slot on the bottom of the set, giving it a slight twist.
3. Remove two 1/8" Phillips-head screws located underneath the batteries.
4. Remove 1/8" Phillips-head screw located next to the tuning capacitor.
5. Slide out the circuit board in the direction of the cabinet bottom and lift out.

TROUBLESHOOTING

A check of battery condition and total current drain of the receiver should be made first. All current measurements are made at quiescence with the receiver tuned on, volume control at minimum, tuning gang closed, and with no-signal conditions.

The total quiescent receiver current drain is 12 to 14 mls. This is measured by inserting a milliammeter in series with the batteries.

NOTES

1. UNLESS OTHERWISE NOTED: CAP. MORE THAN 1-UP CAP. LESS THAN 1-UP
2. VOLTAGES ARE NEGATIVE WITH RESPECT TO GRD. UNDER NO SIGNAL CONDITIONS AND VOL. CONTROL MIN.
3. REPLACE TRANSISTORS WITH TYPES SHOWN

OSC COIL AND
LF TRANSFORMER

P.N.P. TRANSISTOR

COLLECTOR

BASE

EMITTER

TRANSISTOR MFG. PATTERN

C O O E

B

BOTTOM VIEWS

TABLE OF TRANSISTOR VOLTAGES					
	EMITTER	BASE	COLLECTOR	FUNCTION	
	TR1	0.7	0.8	2.4	CONVERTER
	TR2	0.15	0.3	2.5	2ND I.F. AMP.
	TR3	0.2	0.35	2.5	3RD I.F. AMP.
	TR4	0.75	0.8	2.5	1ST AUDIO
	TR5	0	0.3	2.2	AUDIO DRIVER
	TR6	0	0.15	0.15	CURRENT REGULATOR
	TR7	0.04	0.15	3.0	PUSH PULL
	TR8	0.04	0.15	3.0	AUDIO OUTPUT

TABLE OF VOLTAGES*


	E	B	C
TR1	0.7	0.8	4.5
TR2	1.1	1.3	4.5
1M-1	PIN 1 0.08	PIN 2 0	PIN 4 0.18 4.7
AM-4	PIN 1 0.08	PIN 3 4.0	PIN 4 0.2 0.18
	PIN 6 3.0	PIN 7 3.1	PIN 8 3.1 6.0
	PIN 10 0	PIN 11 4.7	PIN 12 0.18 0.08
	PIN 13 0	PIN 14 0.18	PIN 15 0.08

*R7 SET AT MID-POSITION

MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


GENERAL ELECTRIC

RADIO MODEL P925A

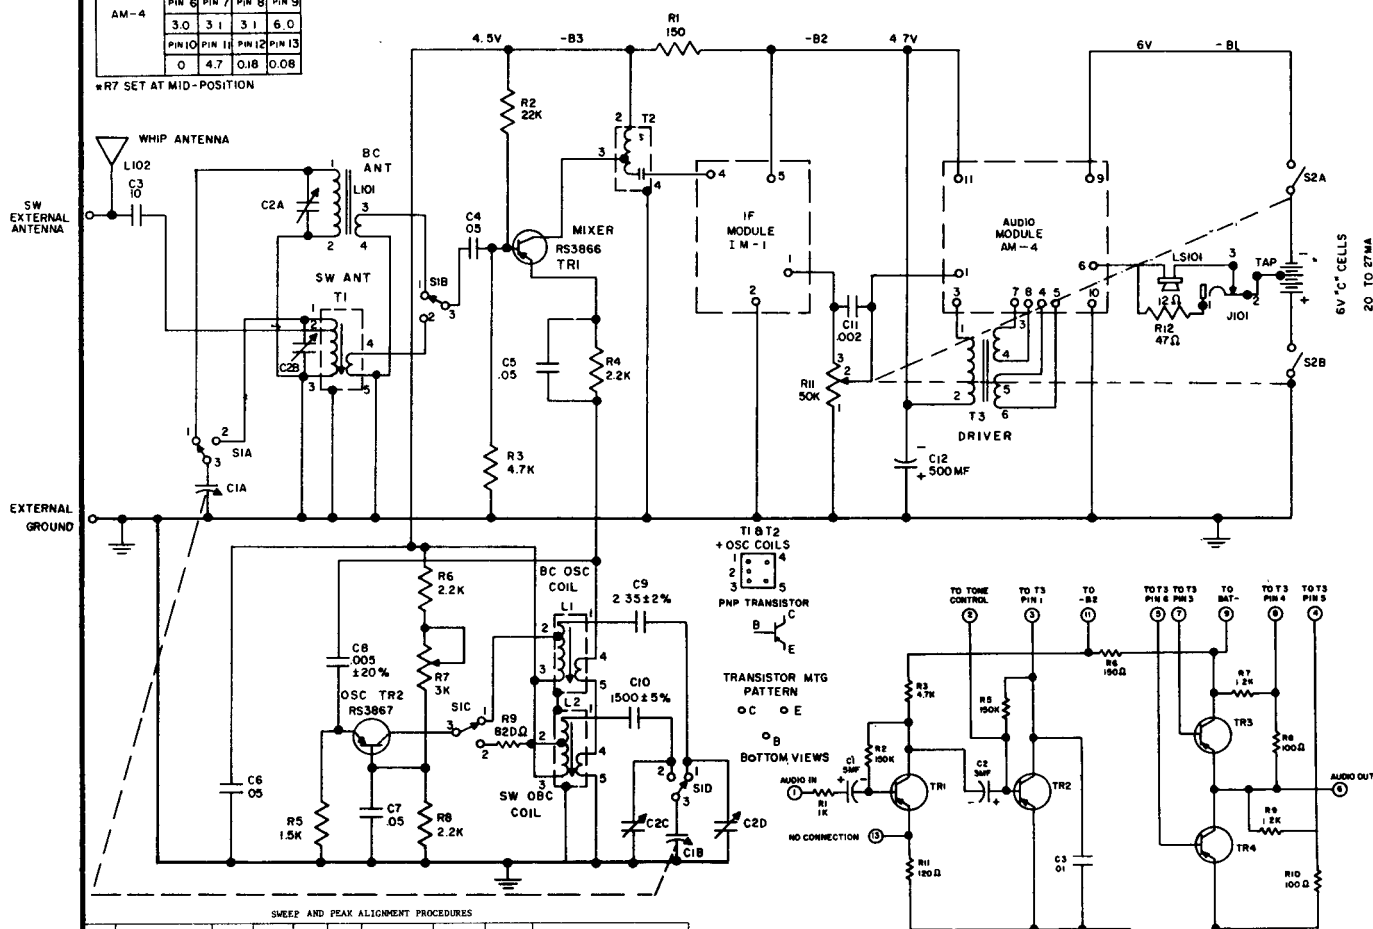

STEP	SIGNAL GEN. INPUT	BAND SWITCH	TUNING GANG	AM GEN.	SWEEP GEN.	ADJUST THE FOLLOWING:	CONNECT VTVM ACROSS	CONNECT SCOPE ACROSS	REMARKS
1	Inductively Couple to AM Antenna Loop (LI01)	BC	Open	455KC		T2, T1 of IF Module (IM-1), T2 of the circuit board.	Voice Coil	Voice Coil	
2	High side to External SW Ant. terminal, A Low side to External Ground terminal.	**SW	12MC	12MC		C2C for Maximum Amplitude	Voice Coil	Voice Coil	Adjust Signal Generator to 910 KC above wanted frequency to observe image frequency response.
3	High side to External SW Ant. terminal, Low side to External Ground terminal.	SW	4MC	4MC		L2 for Maximum Amplitude	Voice Coil	Voice Coil	Adjust Signal Generator to 910 KC above wanted frequency to observe image frequency response.
4	Repeat steps 1 and 2 until no further adjustment is required.								
5	High side to External SW Ant. terminal, Low side to External Ground terminal.	SW	12MC	12MC	*12MC	C2B for Maximum Amplitude	Voice Coil	*Across pin 1 of IF Module (IM-1) and Ground	*Adjust Sweep width control or center frequency to observe image response.
6	High side to External SW Ant. terminal, Low side to External Ground terminal.	SW	4MC	4MC	*4MC	T1 for Maximum Amplitude	Voice Coil	*Across pin 1 of IF Module (IM-1) and Ground	*Adjust Sweep width control or center frequency to observe image response.
7	Repeat steps 4 and 5 until no further adjustment is required.								
8	Inductively Couple to AM Antenna Loop	BC	Open	1630 KC		C2D for Maximum Amplitude	Voice Coil	Voice Coil	
9	Inductively Couple to AM Antenna Loop	BC	1400 KC	1400 KC	*1400 KC	C2A for Maximum Amplitude	Voice Coil	*Across pin 1 of IF Module (IM-1) and Ground	Rock Geng during Peak Alignment
10	Inductively Couple to AM Antenna Loop	BC	580 KC	580 KC	*580 KC	L1 for Maximum Amplitude	Voice Coil	*Across pin 1 of IF Module (IM-1) and Ground	Rock Geng during Peak Alignment
11	Repeat steps 7, 8 and 9 until no further adjustment is required.								

* SWEEP ALIGNMENT ONLY

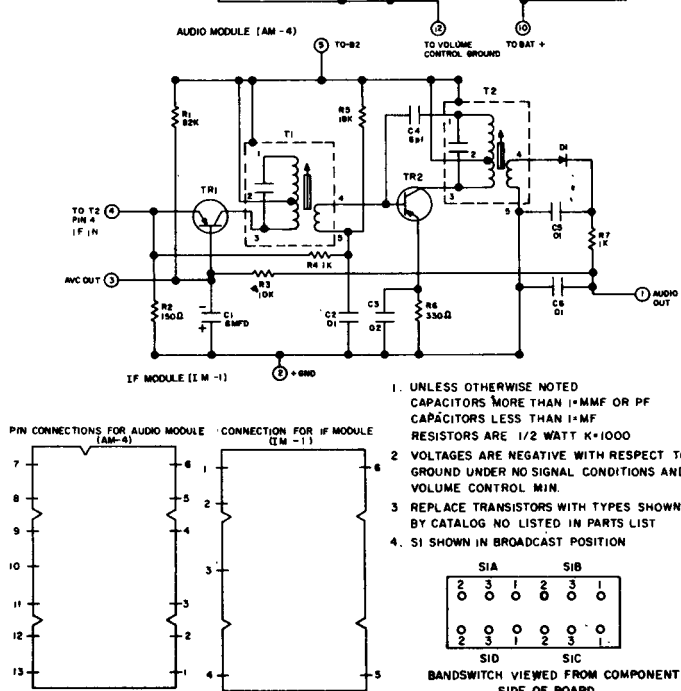

1. UNLESS OTHERWISE NOTED CAPACITORS MORE THAN 1.0MMF OR PF CAPACITORS LESS THAN 1.0MF RESISTORS ARE 1/2 WATT K=1000
2. VOLTAGES ARE NEGATIVE WITH RESPECT TO GROUND UNDER NO SIGNAL CONDITIONS AND VOLUME CONTROL MIN.
3. REPLACE TRANSISTORS WITH TYPES SHOWN BY CATALOG NO LISTED IN PARTS LIST
4. S1 SHOWN IN BROADCAST POSITION

S1A	S1B
2 3 1 2 3 1	0 0 0 0 0 0
0 0 0 0 0 0	2 3 1 2 3 1

S10 S1C
BANDSWITCH VIEWED FROM COMPONENT SIDE OF BOARD

GENERAL ELECTRIC

MODEL P955A

MODULES

This radio uses three high-reliability modules in its construction. The modules are self-contained circuit stages, each grouped on a miniature circuit board, which themselves are mounted on and soldered into the main circuit board just like any other component (transistor, capacitor, etc.).

This method of manufacture provides high reliability at an optimum cost. In fact, it allows the cost of the module to fall into the same range as tubes or transistors. This means that defects in the circuits involved in the modules need only be replaced with a good unit.

Almost always this will result in an easier, quicker, and more economical repair than would be possible if the serviceman were to try to locate and replace a defective component within a module. This radio uses such modules in the converter, I. F. and Audio stages.


CHASSIS REMOVAL

1. Remove volume and tuning knobs.
2. Remove two Phillips-head screws from cabinet back.
3. Remove seven hex-head screws from circuit board.
4. Label and unsolder wires going to speaker and battery terminals.
5. Carefully lift circuit board from cabinet.

TROUBLESHOOTING


IMPORTANT: The audio output terminals of the radio must be D. C. isolated from ground during servicing procedures. This is to prevent the audio output transistors from becoming damaged by excess voltages in the audio circuit. Therefore, care must be exercised in using test equipment that may cause a D. C. path to ground.

The total battery current drain should always be ascertained before proceeding with the servicing. These current readings should be taken with the receiver in the "OFF" position. Total current is measured by placing a jumper across S1A and measuring the current across the switch terminals of S1B. This current reading should fall between 20-27 MA. After noting this current, remove the jumper across S1A and place it across the terminals of S1B. Measure the current drain across the switch terminals of S1A. This current reading should be approximately the same as the previous reading. Should any significant difference in current readings occur when making this check, a defective audio output stage is indicated.

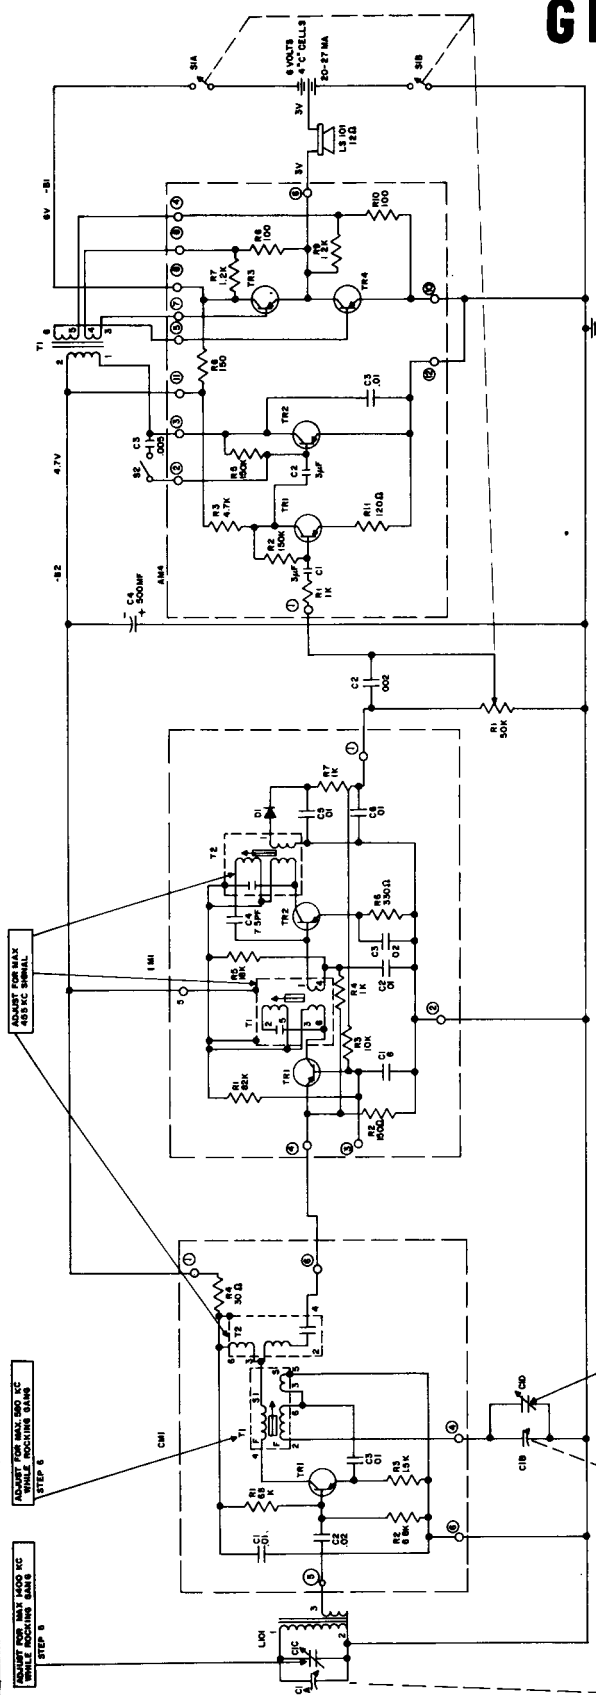


GENERAL ELECTRIC

MODEL RP-1590A, C

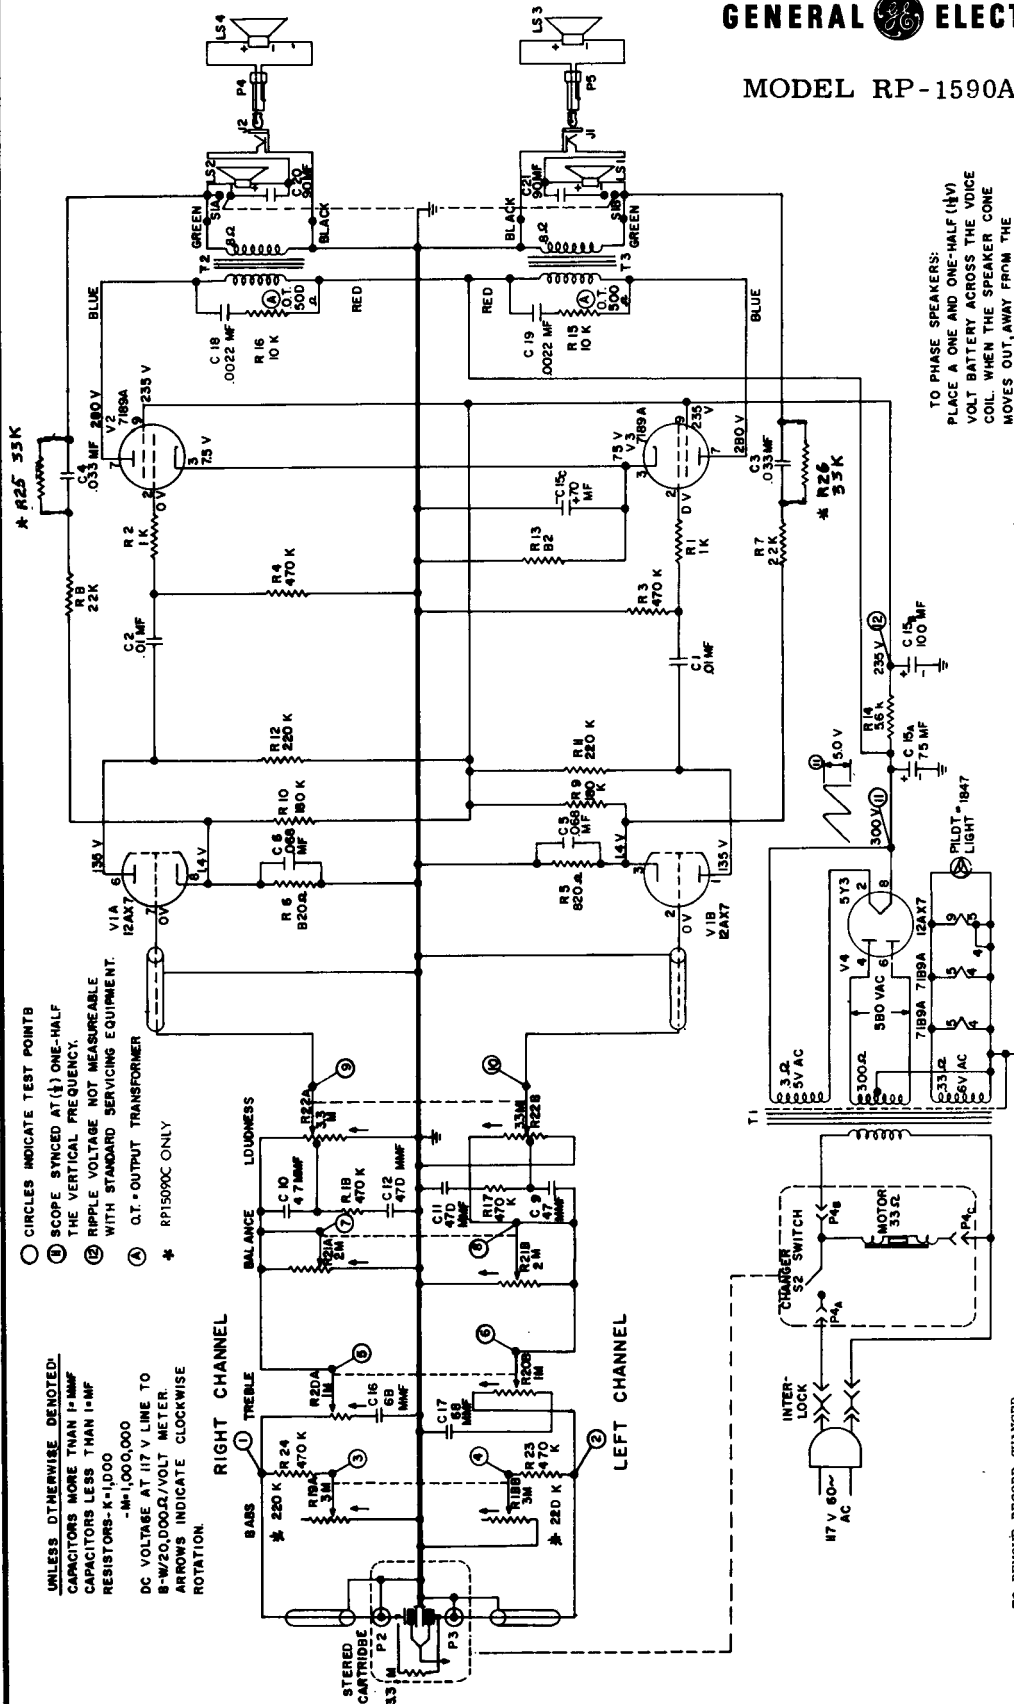


TO PHASE SPEAKERS:
PLACE A ONE AND ONE-HALF (1½) VOLT BATTERY ACROSS THE VOICE COIL. WHEN THE SPEAKER CONE MOVES OUT, AWAY FROM THE MAGNET, THE POSITIVE TERMINAL ON THE BATTERY IS THE PLUS SIDE OF VOICE COIL AS INDICATED ON SCHEMATIC.

- Remove the three screws on the tube re- placement cover and remove the cover.
- Remove the two screws on the metal am- plifier cover and remove the cover by pulling up on the tab provided on the back side and lift the cover out.
- Reach under the motor board and flip the right side shipping screw clip to a vertical position. Lift the right side of the changer to clear the shipping screw clip and slip the left shipping screw through the slotted hole in the motor board to clear the changer. Rest the changer on its back edge in the compartment.
- Remove the three screws located at both ends and front center of the control panel mounting board and remove the board.
- Remove the two 5/16 inch nuts holding the control panel to the mounting board.
- Unsolder the four (4) leads on the ex- panded stereo switch.
- Remove the screws holding the lead dresser and electrolytic.
- Remove the three 5/16 inch nuts holding the amplifier chassis.
- Remove the two 5/16 inch nuts holding the left and right channel output jacks at the rear of the compartment.
- Remove the screws holding the interlock.
- Remove the pilot light socket from the clip, (pull up).
- Unsolder the correct speaker phasing when reassembling the set.
- Remove the chassis from the cabinet.

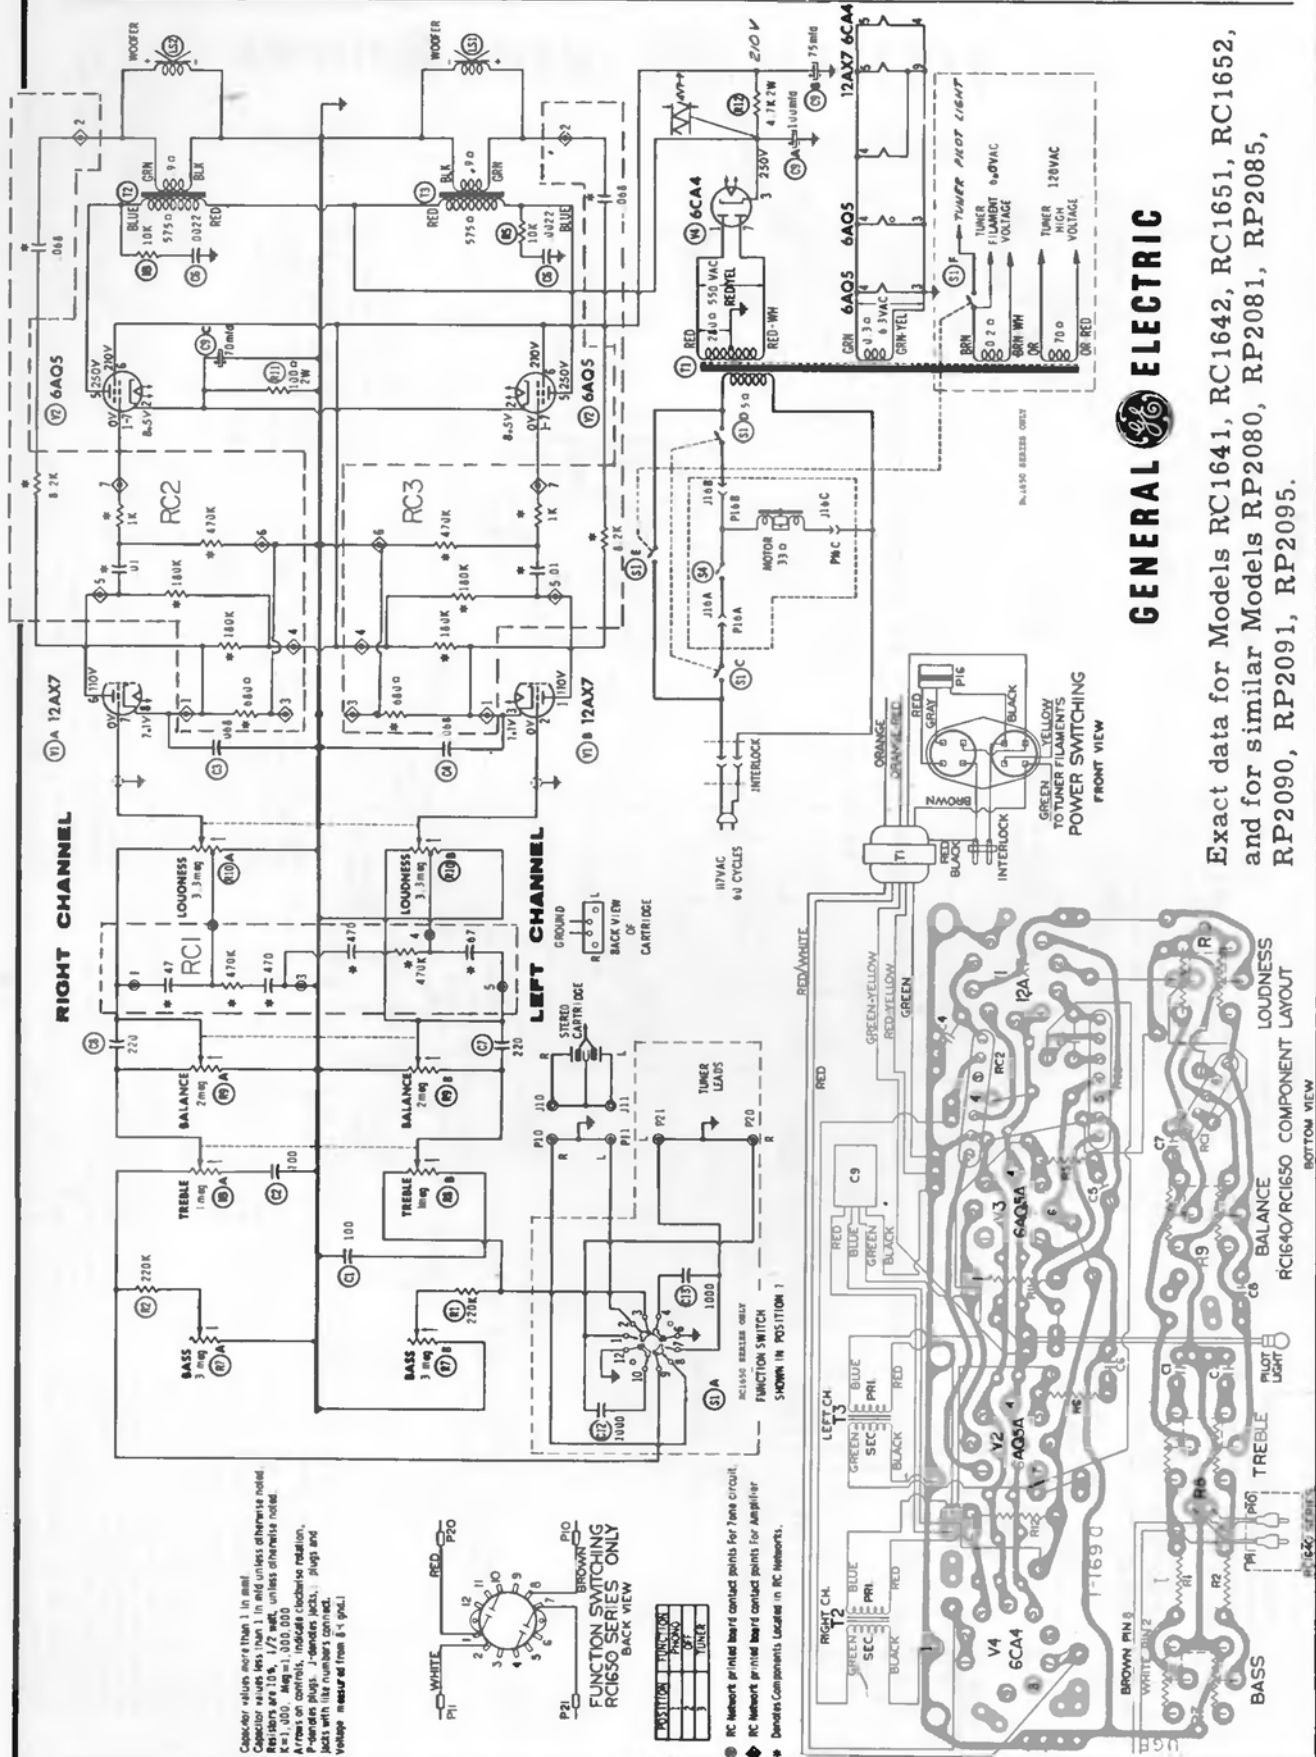

GENERAL ELECTRIC

Exact data for Models RC1641, RC1642, RC1651, RC1652, and for similar Models RP2080, RP2081, RP2085, RP2090, RP2091, RP2095.


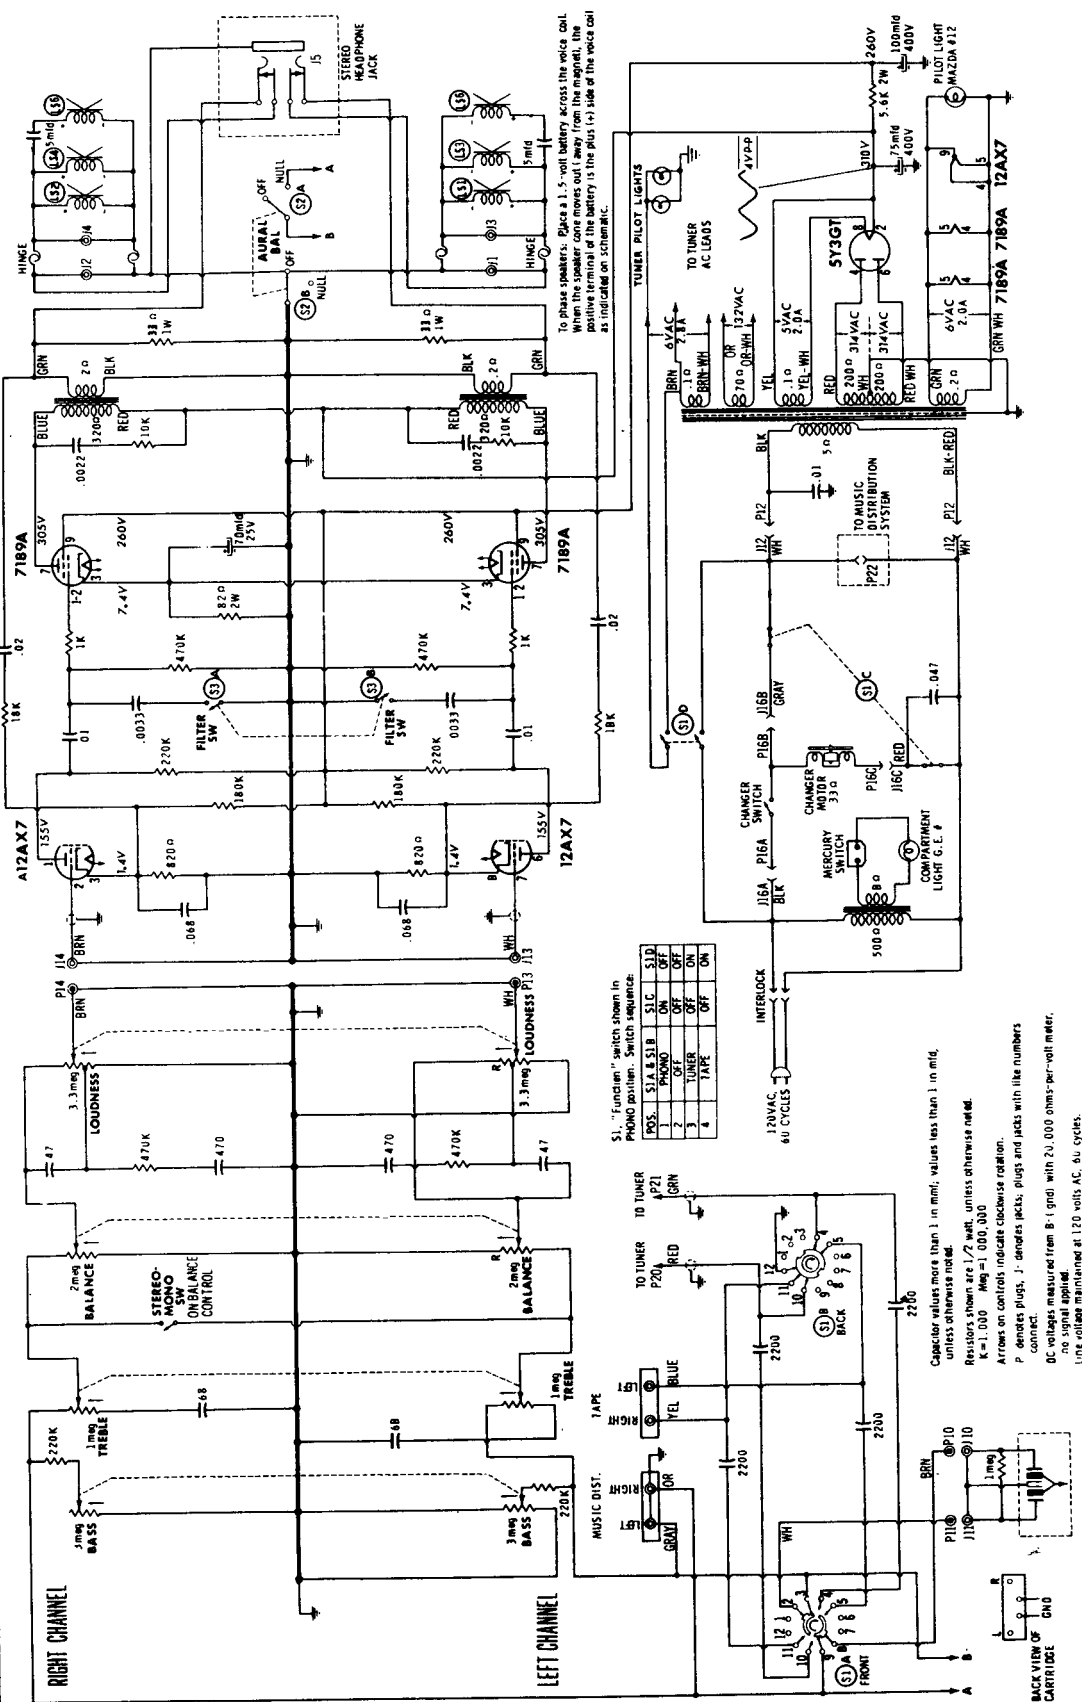


RC1660 Series, Models RC1661, RC1662, RC1663, RC1664;
RC1670 Series, Models RC1671, RC1672, RC1673, RC1674;
RC4670 Series, Models RC4671, RC4672, RC4675, RC4679.

GENERAL ELECTRIC






RP2130 Series, Models RP2131A, RP2138A,
RP2110 Series, Models RP2111 & RP2113,
Models of the RP1530 Series are very similar.

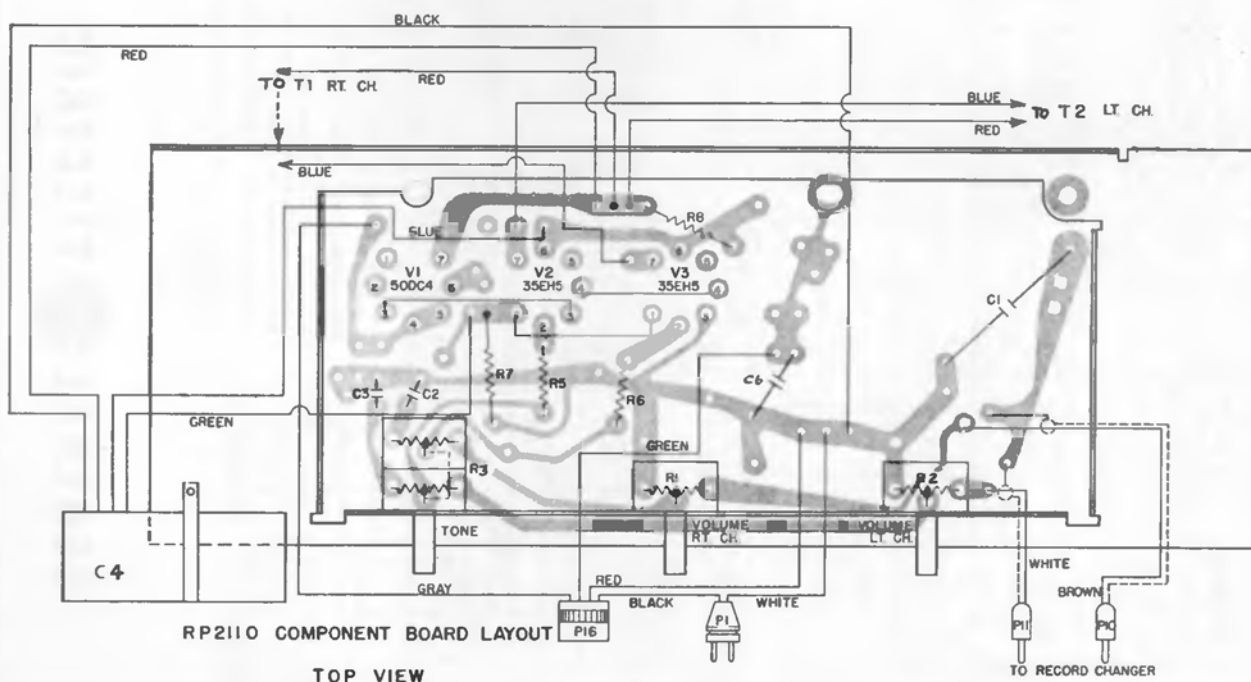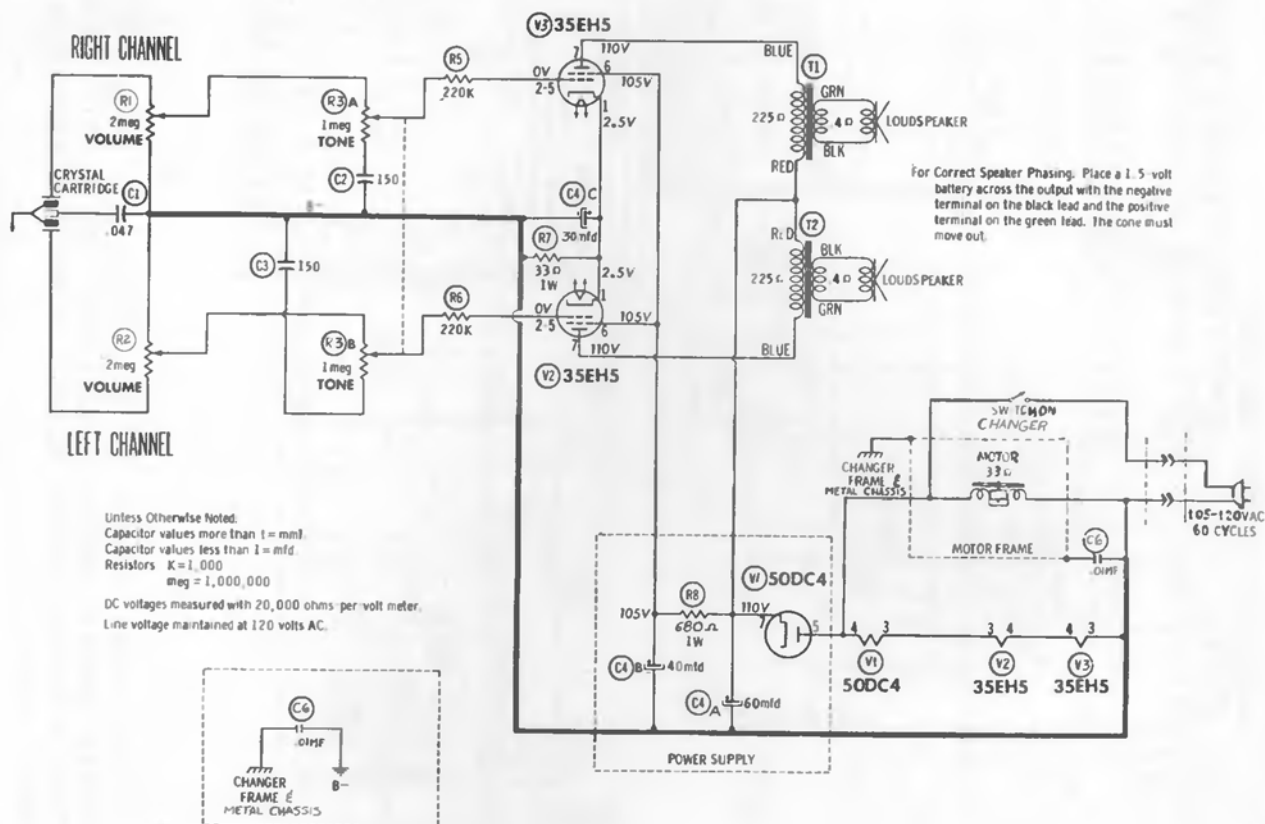

Hitachi, Ltd.

MODEL TH-650


CIRCUIT SYSTEM 6-transistor superheterodyne
 TUNING RANGE 535 kc~1,605 kc
 INTERMEDIATE FREQUENCY 455 kc

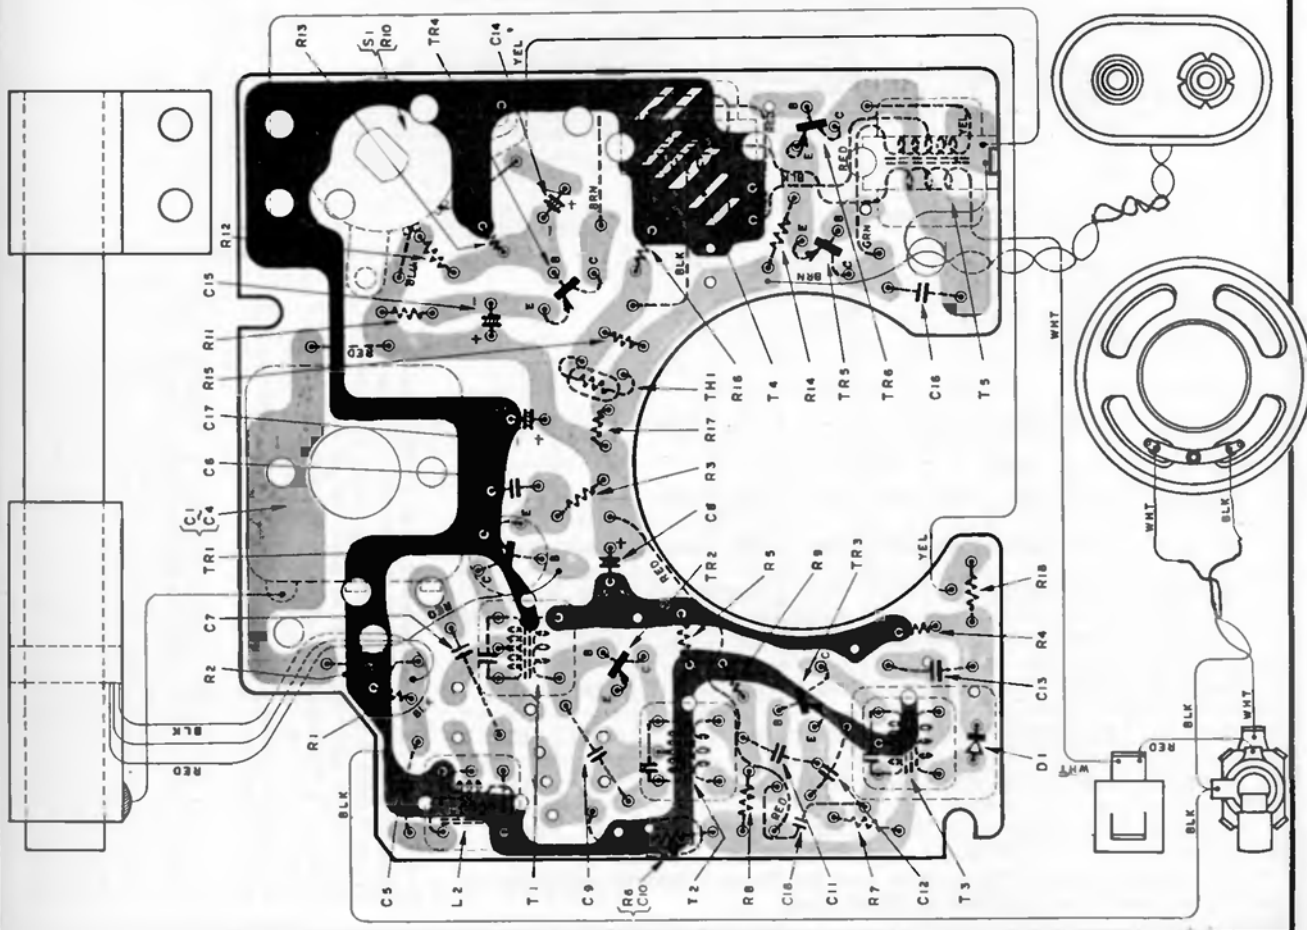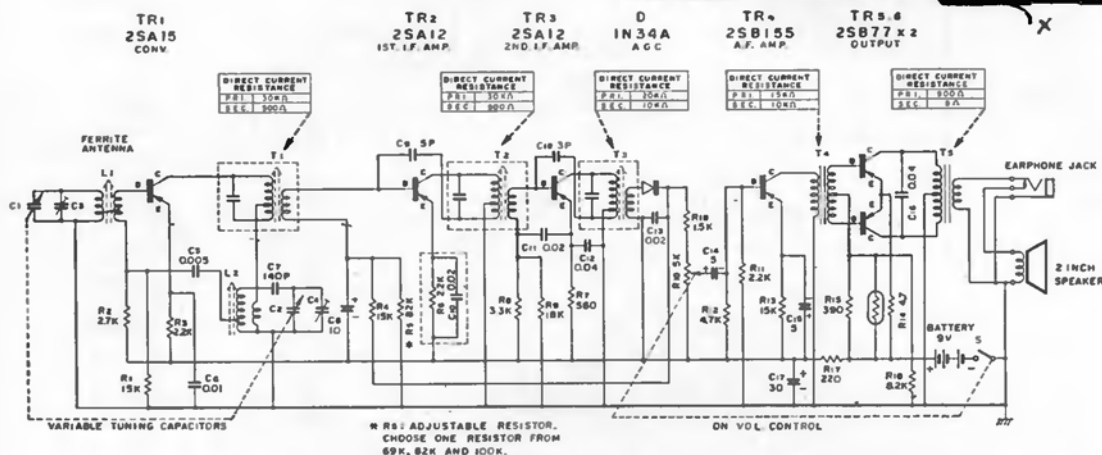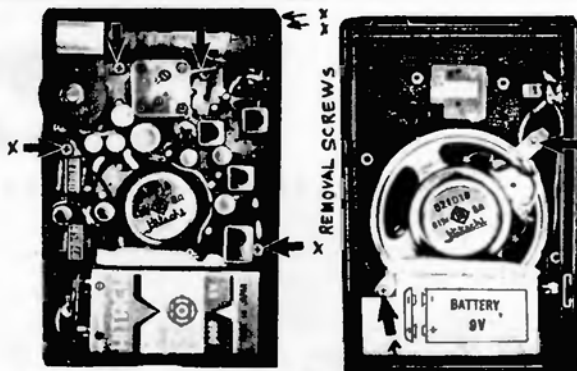

Magnavox

93 SERIES AMPLIFIER CHASSIS

(93-01, 93-02, 93-03, 93-04, & 93-05)

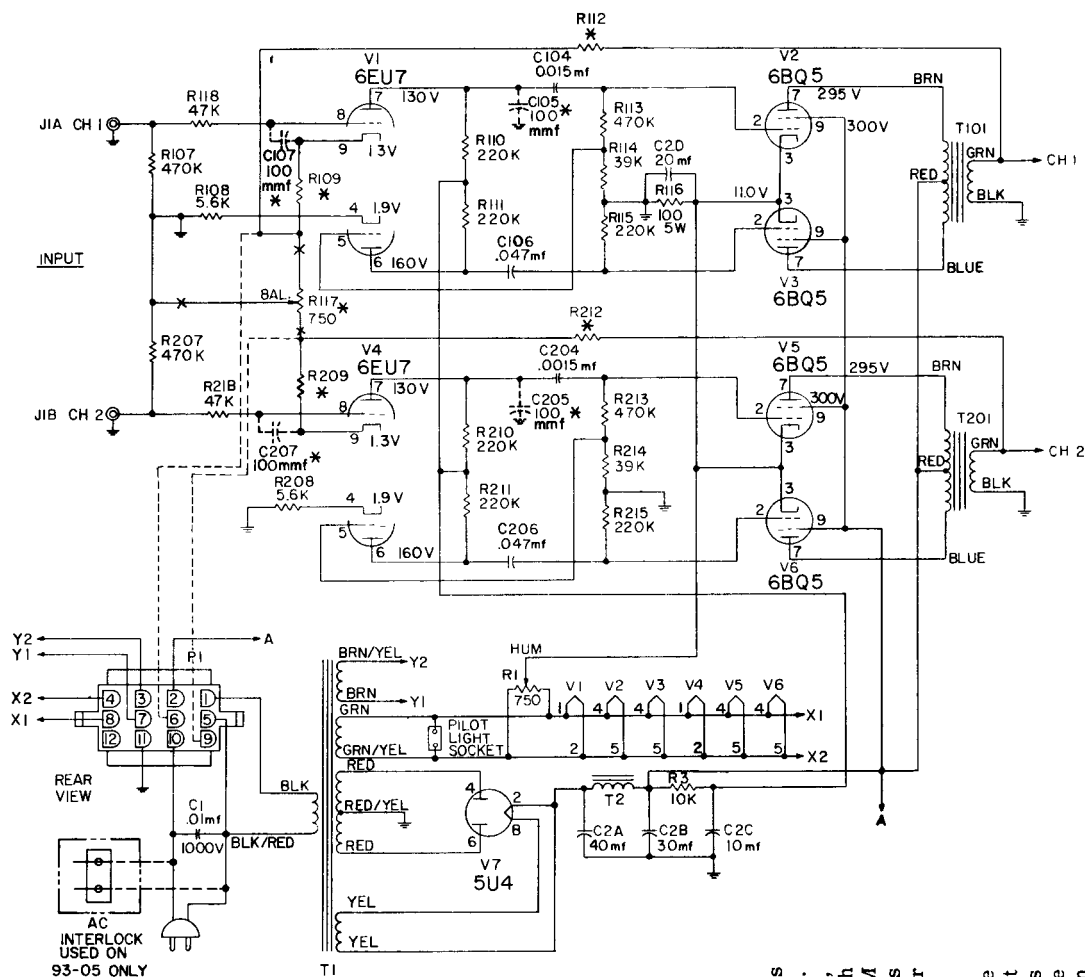

CHASSIS	R109	R209	R112	R212	R117	C105	C205	C107	C207
93-01-00	4700	4700	2200	2200	USE	USE	USE	OMIT	OMIT
93-02-00	2200	2200	3900	3900	USE	USE	USE	OMIT	OMIT
93-02-10	2200	2200	3900	3900	USE	OMIT	OMIT	USE	USE
93-03-00	4700	4700	2200	2200	OMIT	USE	USE	OMIT	OMIT
93-03-10	4700	4700	2200	2200	OMIT	OMIT	OMIT	USE	USE
93-04-00	2200	2200	3900	3900	OMIT	USE	USE	OMIT	OMIT
93-04-10	2200	2200	3900	3900	OMIT	OMIT	OMIT	USE	USE
93-05-00	4700	4700	2200	2200	OMIT	OMIT	OMIT	USE	USE



* When Balance Control (R117) is not used the Power Connector will have two additional connections as shown in dotted lines.

The 93 Series Amplifiers are Stereo Amplifiers designed to work in conjunction with an AM-FM Tuner. These chassis contain seven tubes, including rectifier, and provide approximately 15 watts output for each channel. All voltages, including those for the AM-FM Tuner are obtained from these amplifiers. This necessitates using a 5U4 as a rectifier and a heavier power transformer than is normally used.

The 93-01 and 93-02 Amplifiers contain a "Balance Control". This control is located in the cathode circuit of (1/2) of the 6EU7 used as the Audio Amplifier. This control will vary the output of each channel to assure proper balance when reproducing stereo records. On all others this control has been eliminated since these amplifiers are used with AM-FM Tuners which have the Balance Control as part of the tuner.


Magnavox

(59-11, & 59-14 & 59-27)

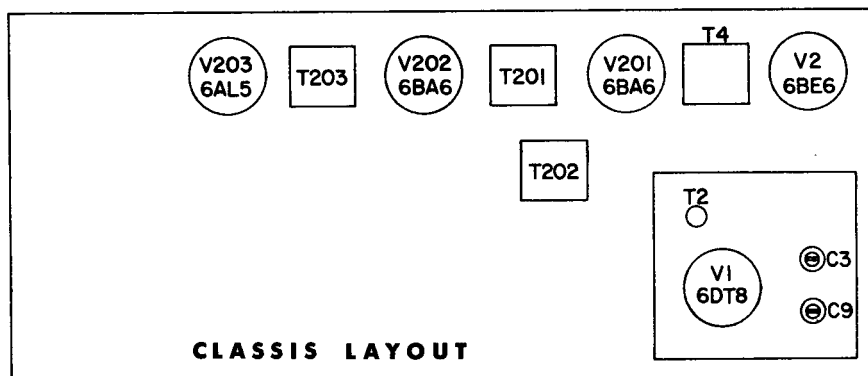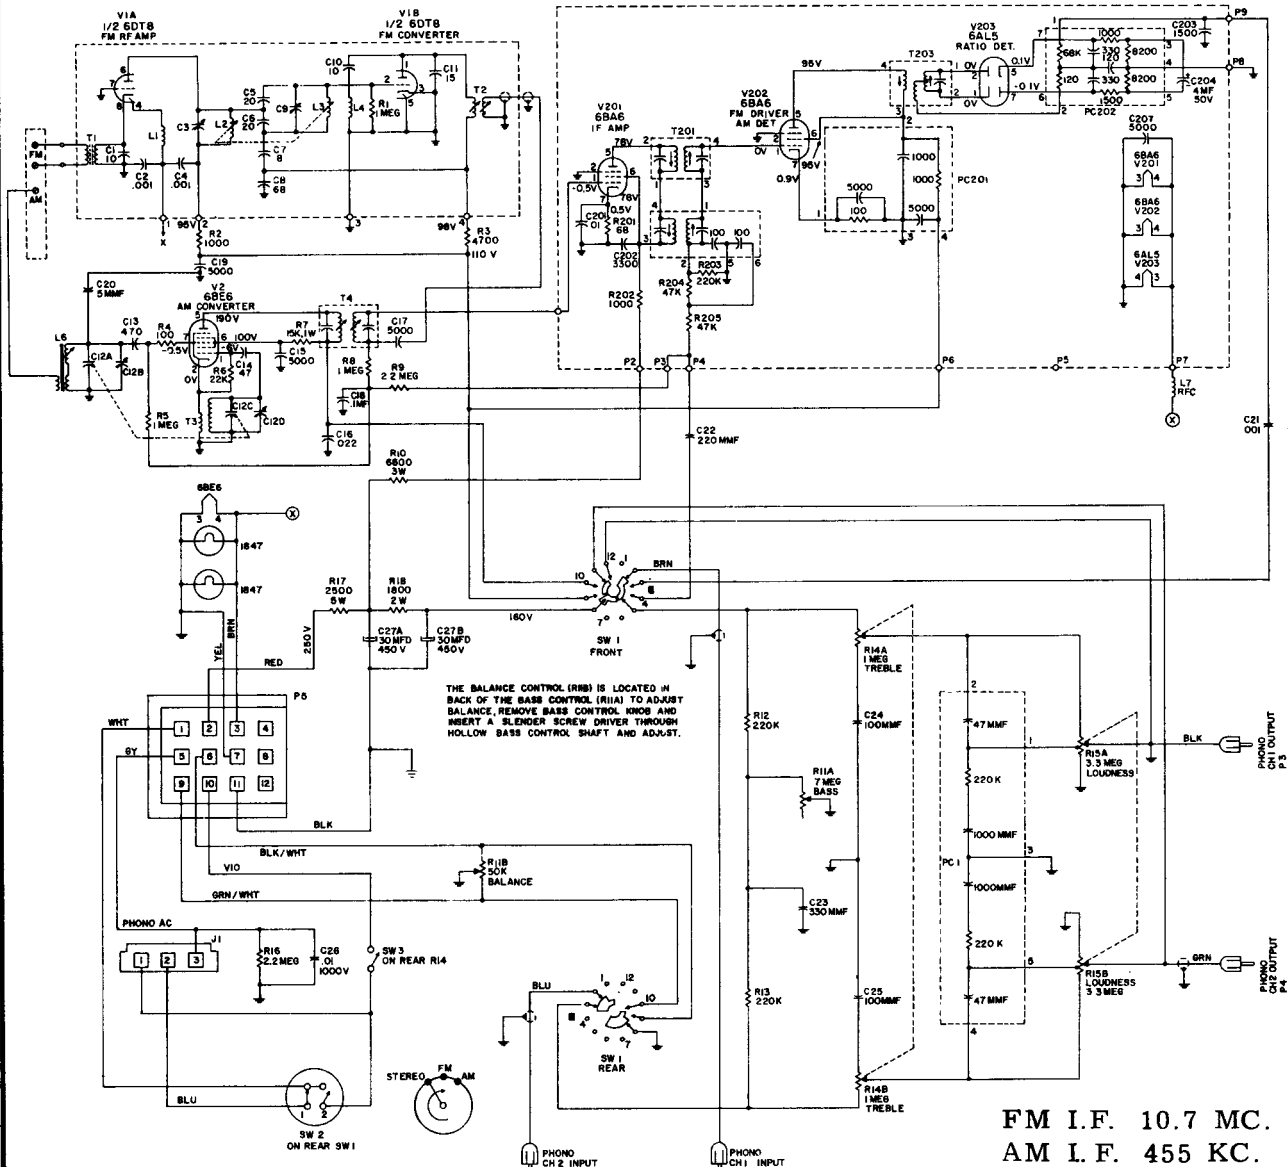


MONTGOMERY WARD

MODELS JWR-953A and JWR-1033B

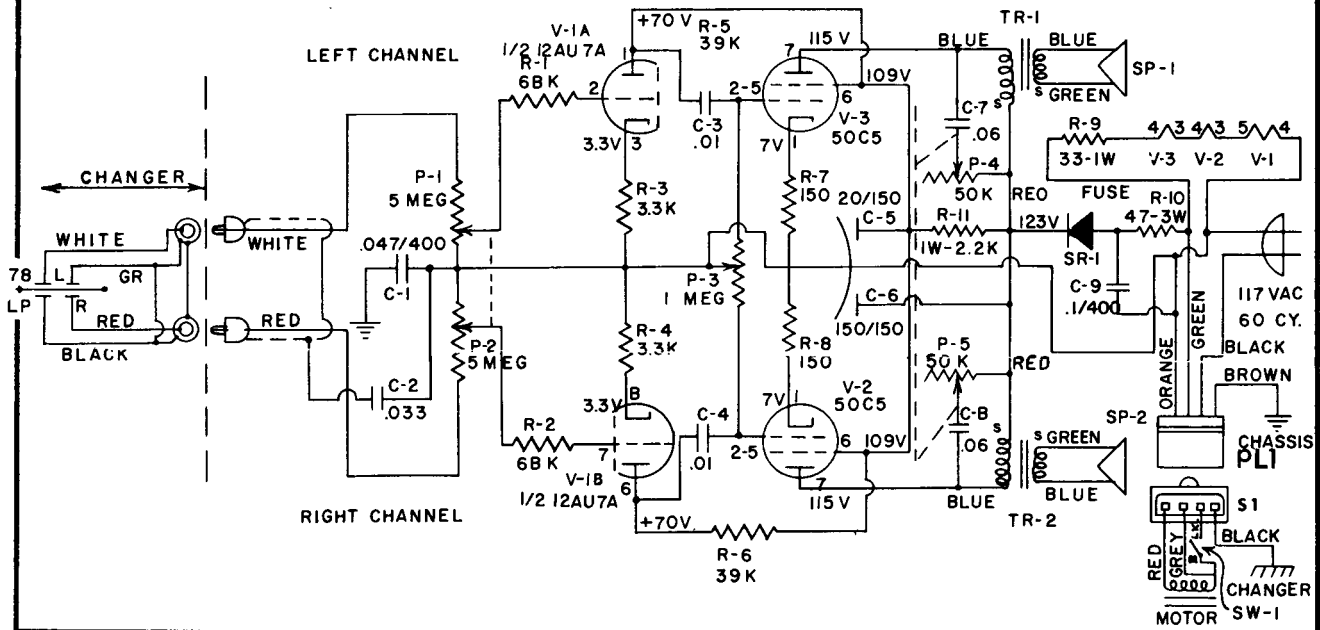


MONTGOMERY WARD Models JWR-956A and JWR-1035B

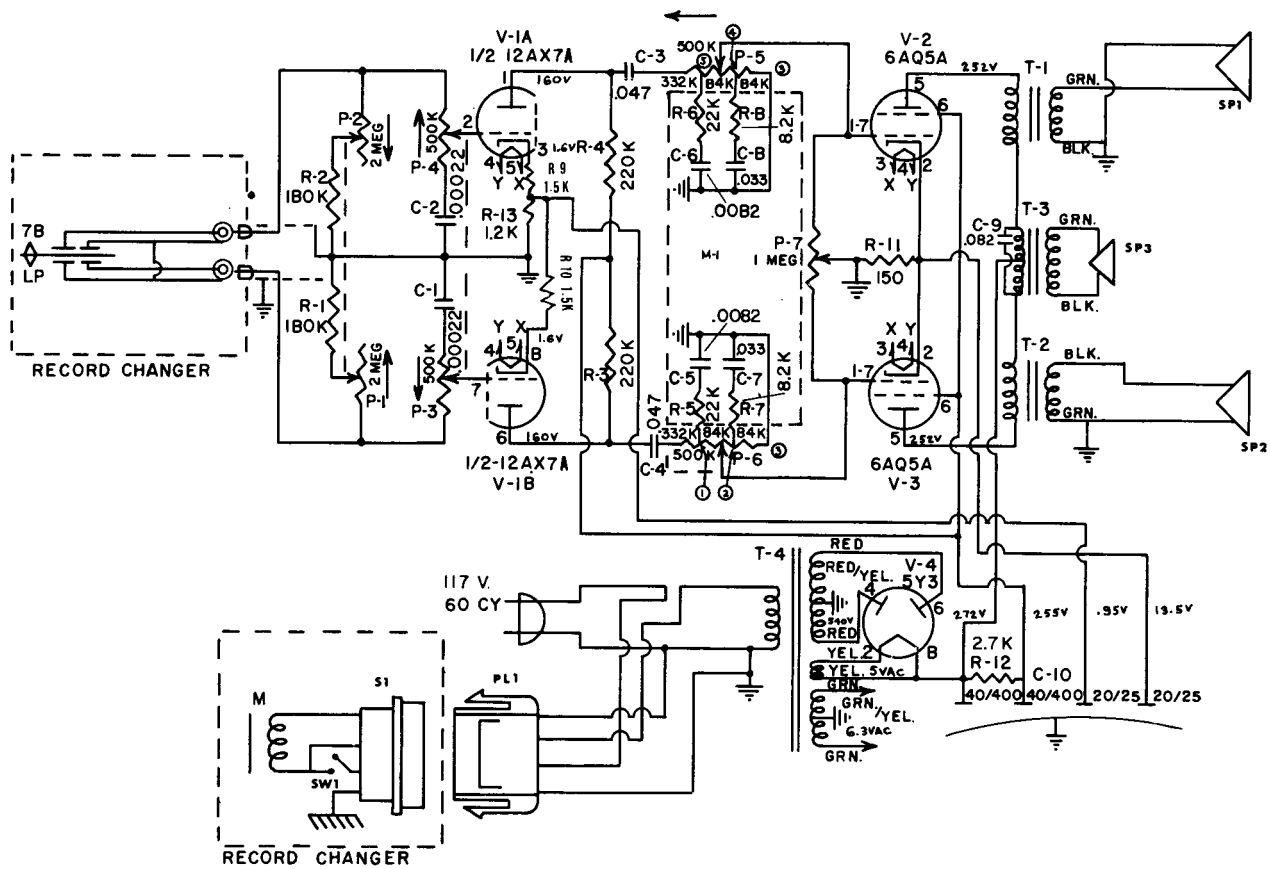

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


MONTGOMERY WARD

Model GEN-951A exact material. Model GEN-769A same less tone control.
Models GEN-1730A, GEN-1731A, are also the same but less phono circuit.

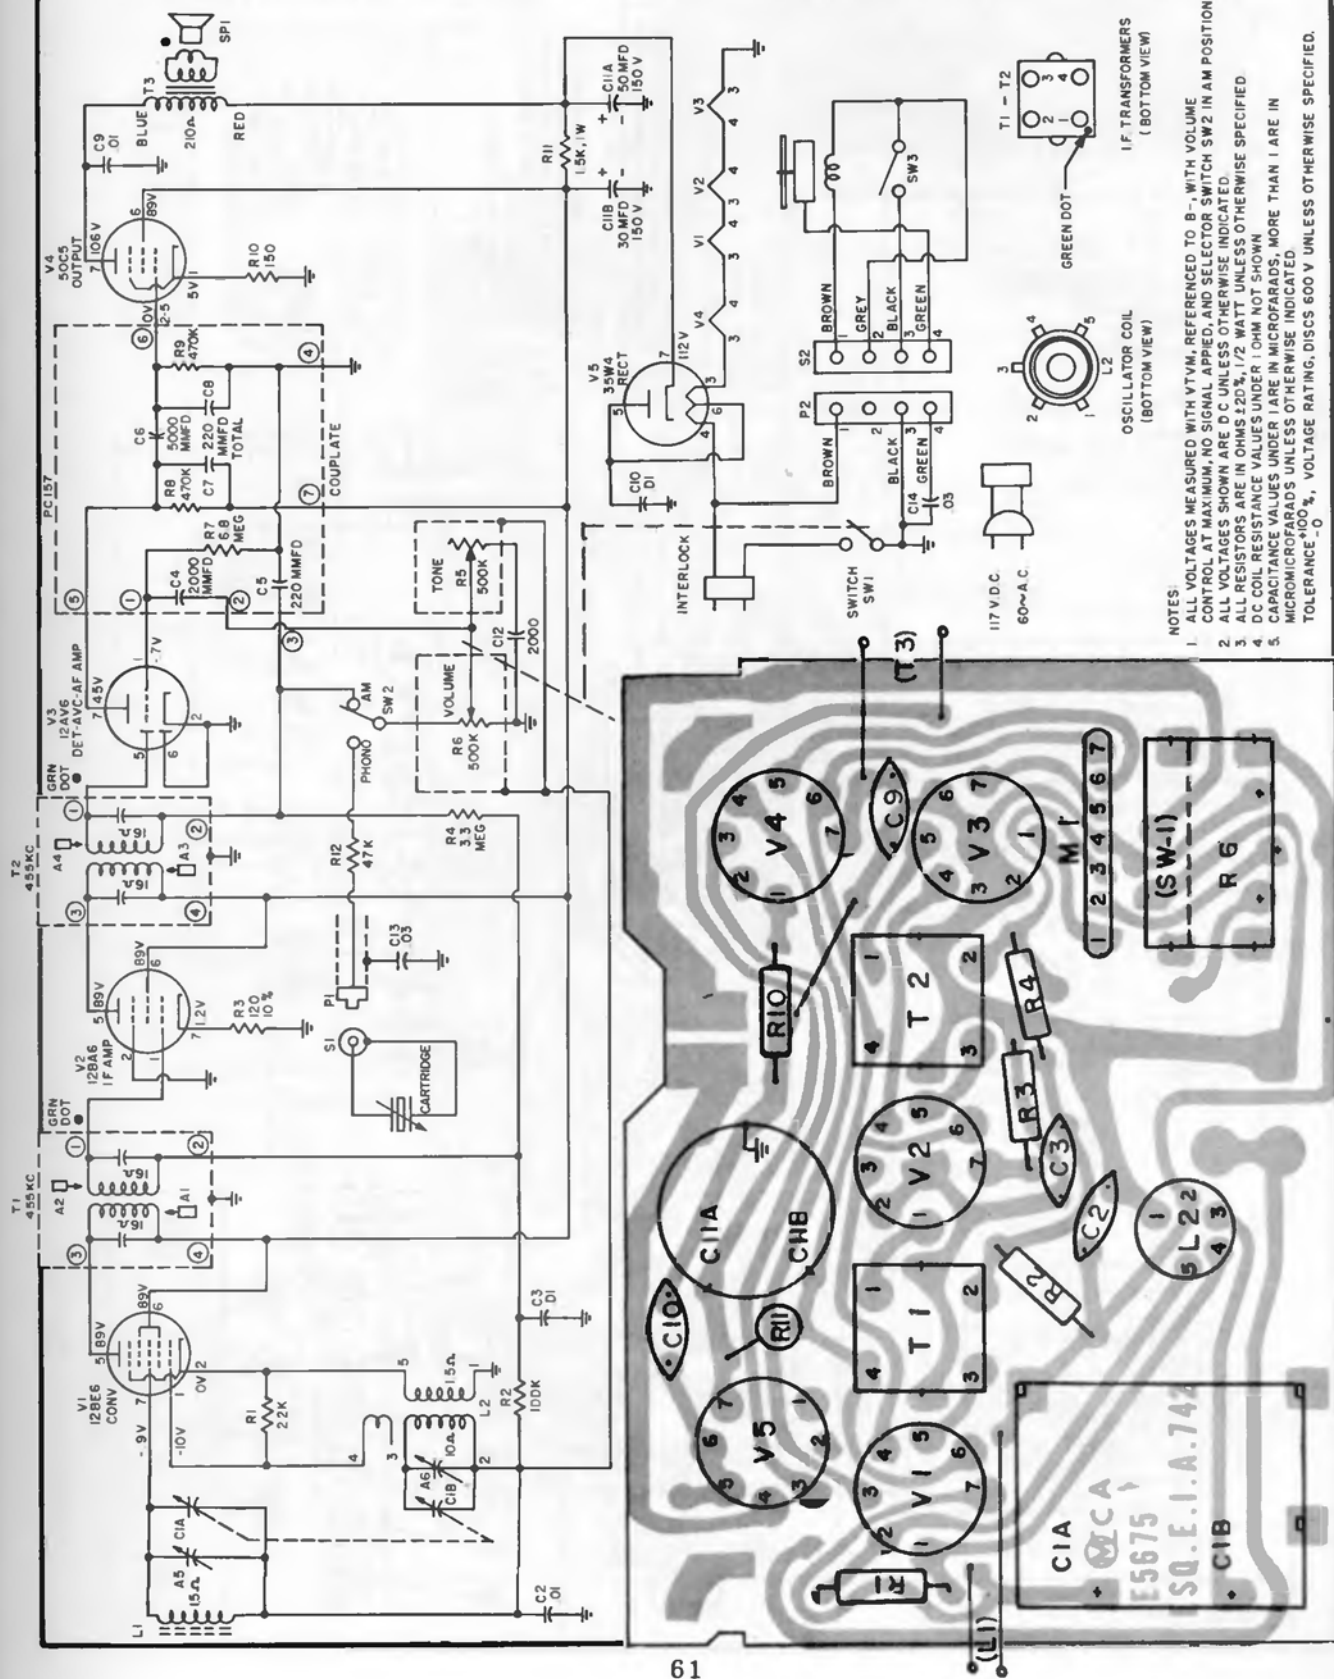

MOTOROLA


Models 3AT and 3MT (Continued on the next page)
Models BKA63, CTA63, CTM63, and PCA63,
are very similar.

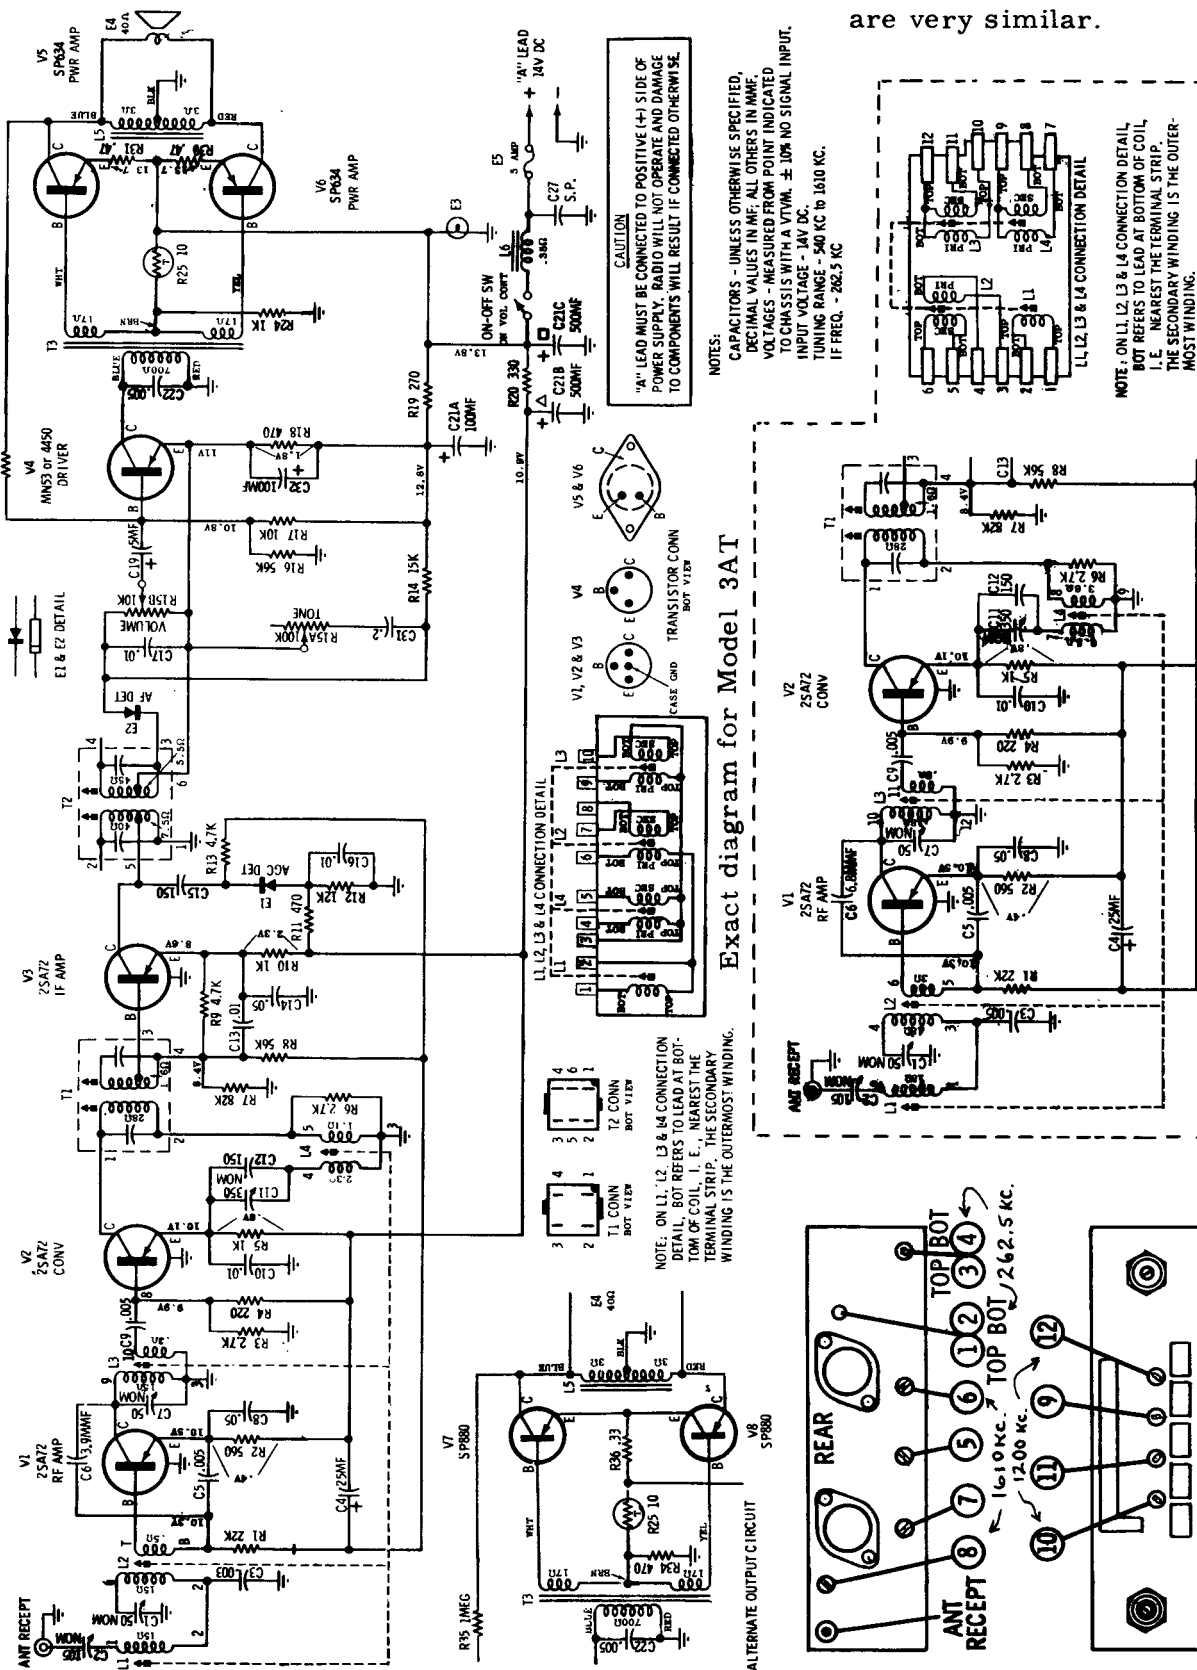

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


MOTOROLA Model 3AT

Continued from preceding page,
at left, other models listed on
that page are very similar.

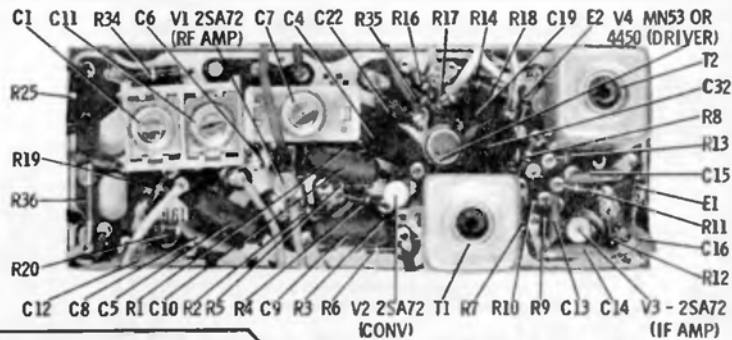

PARTS LOCATION FOR SETS USING
ALTERNATE OUTPUT CIRCUIT

NOTES:
-----PLATING ON COMPONENT SIDE
* COMPONENT VALUES USED IN
ALTERNATE OUTPUT CIRCUIT ONLY.
POINT CONNECTS TO GND THRU
COMPONENT SIDE PLATING.

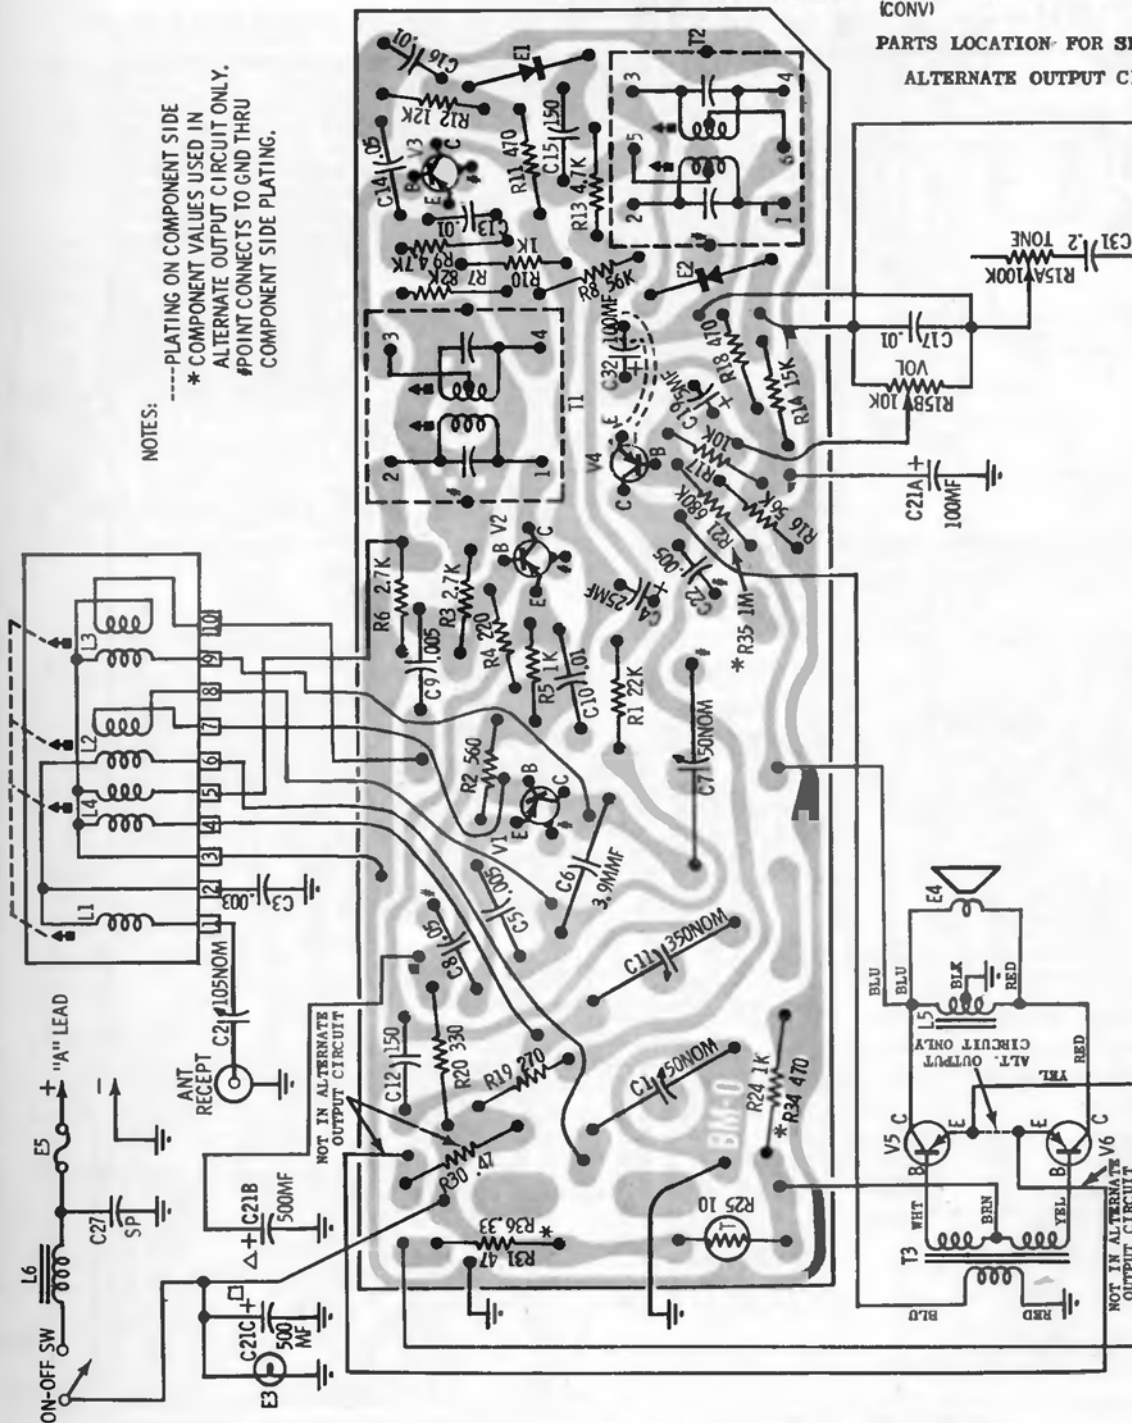

PLATED CHASSIS BOARD WIRING DIAGRAM

COMPONENTS SHOWN ARE ACTUALLY LOCATED ON OPPOSITE SIDE -
COMPONENT SIDE PLATING CONTAINS GROUND CONNECTIONS ONLY

MOTOROLA

MOTOROLA

FORD



3TME.....C3GA-18806

3TMF.....C3AA-18806

3TMY.....C3YA-18806

(Service material continued on the next page at right)

PLATED CHASSIS BOARD DESCRIPTION - Motorola's PLAcir chassis has plating on both sides of the chassis board. The exposed side contains the actual circuit connections while the plating on the component side of the chassis board provides a convenient chassis B-return for components and circuit wiring. Plating on the component side also provides shielding between the top and bottom of the unit.

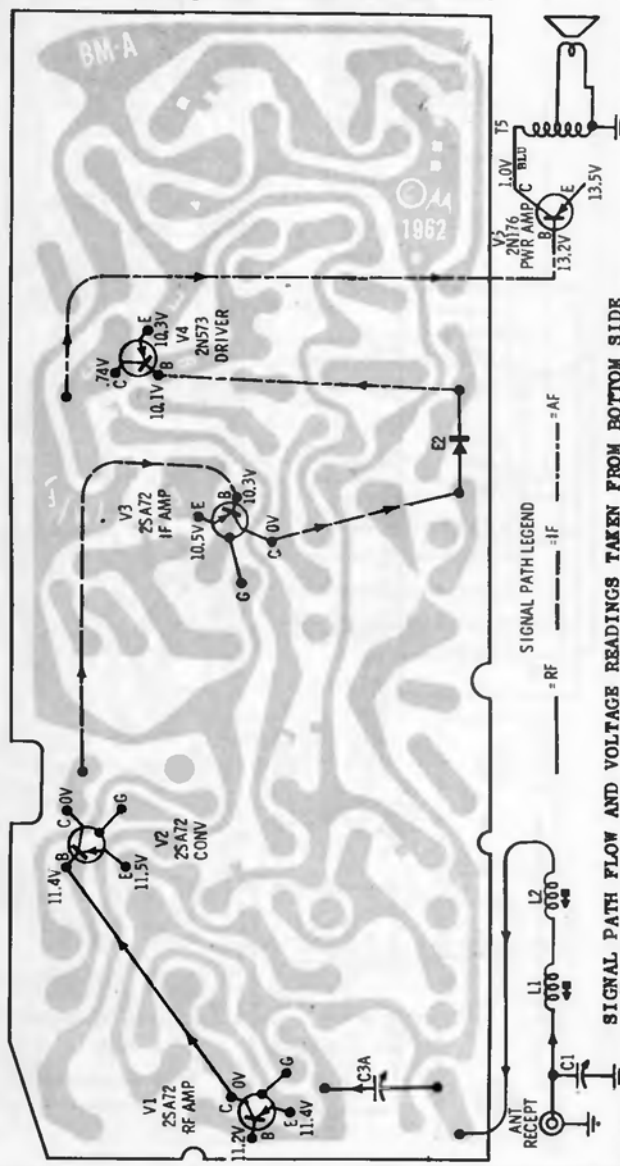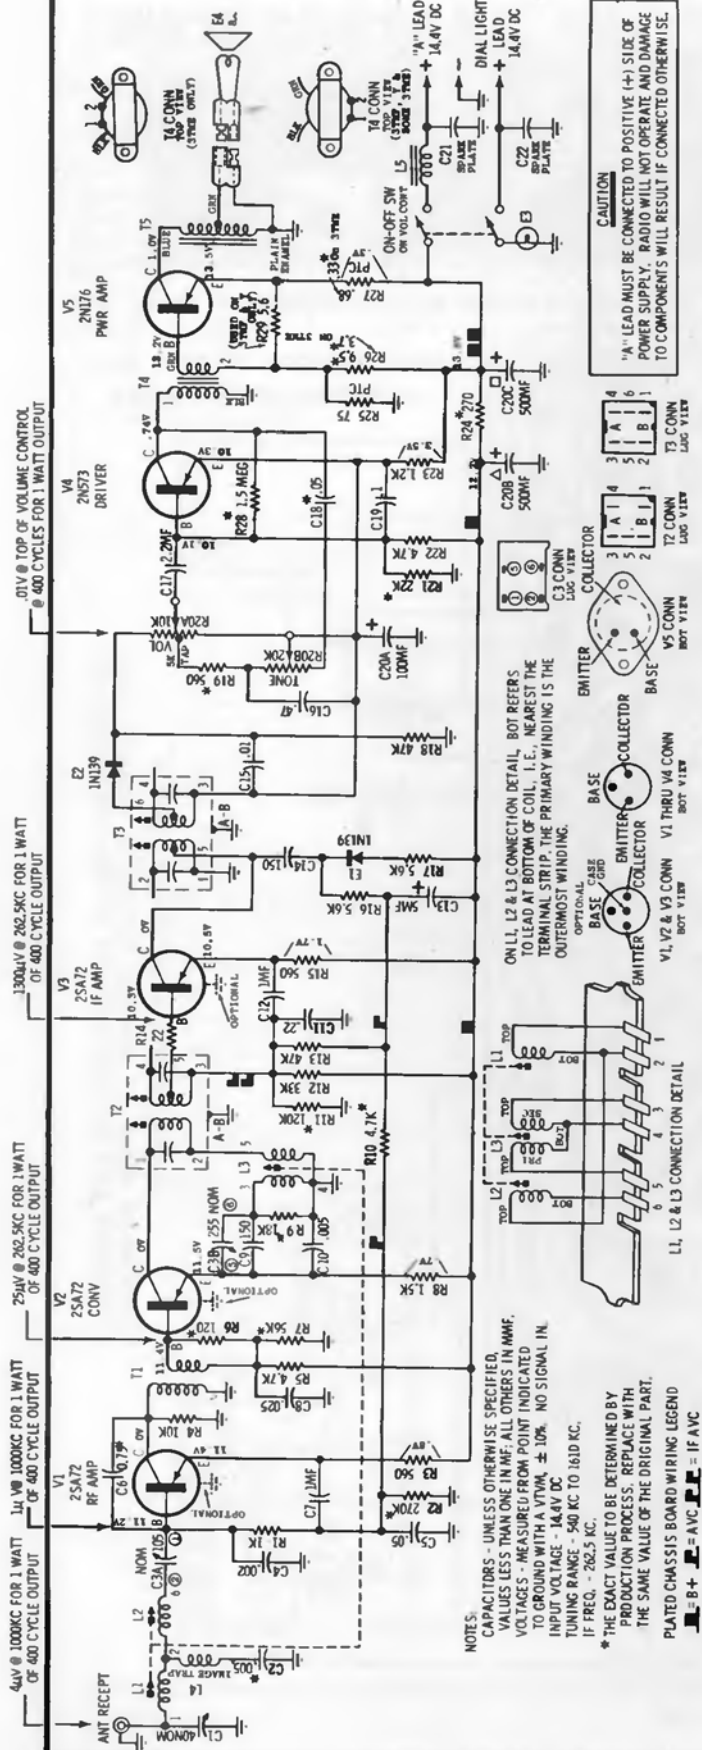

MOTOROLA 3TME, 3TMF, 3TMY, Continued from preceding page, at left



DUMMY ANTENNA

MOTOROLA	FORD
3TME.....	C3GA-18806
3TMF.....	C3AA-18806
3TMY.....	C3YA-18806



MODELS 3TME, 3TMF & 3TMY PLATED BOARD WIRING



65

MOTOROLA


MOTOROLA 3TMR

AMERICAN MOTORS 8991142

(Continued on the next page at right)

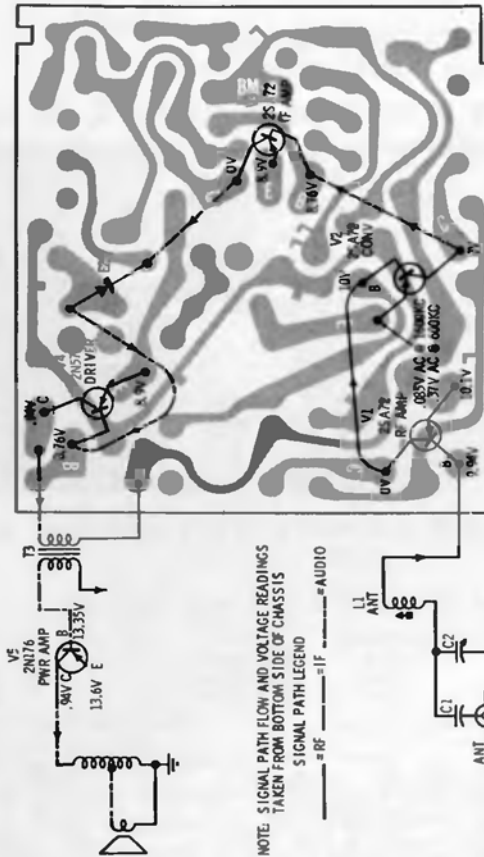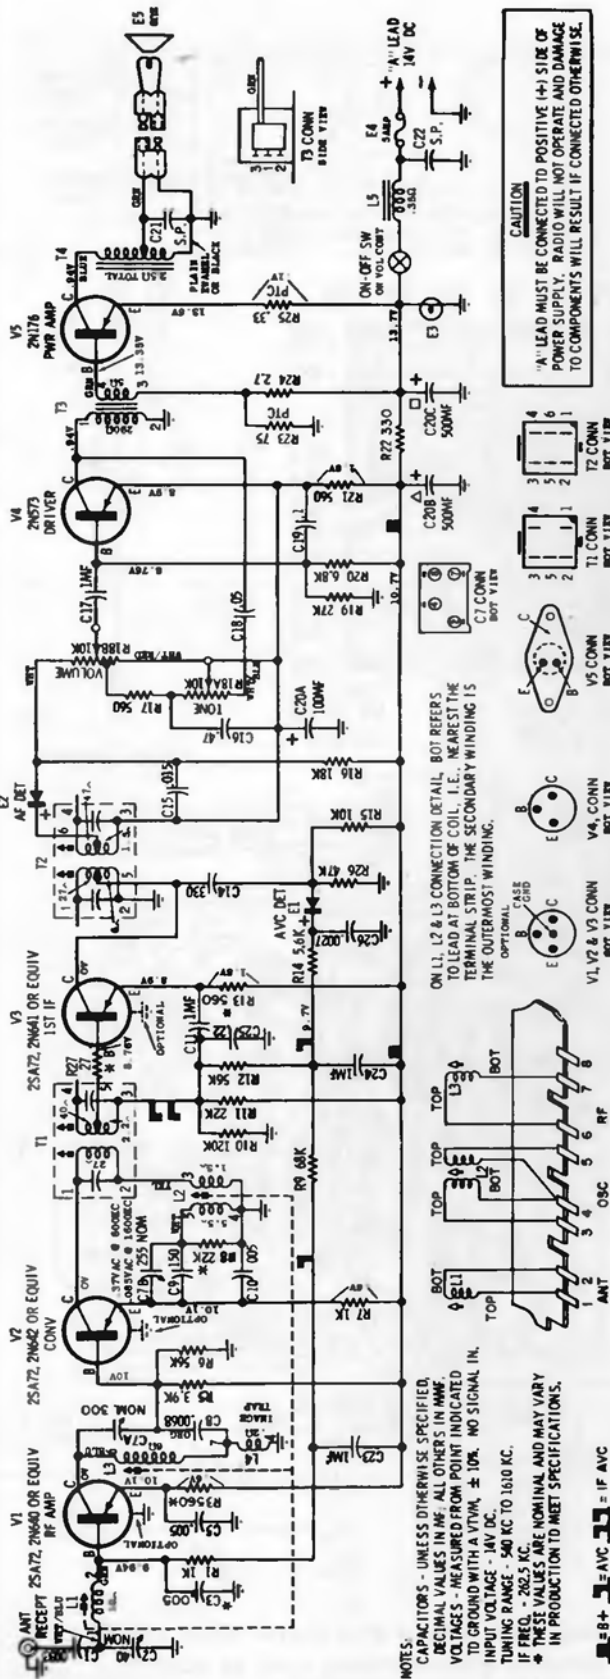

SIGNAL PATH & VOLTAGE
DETAIL

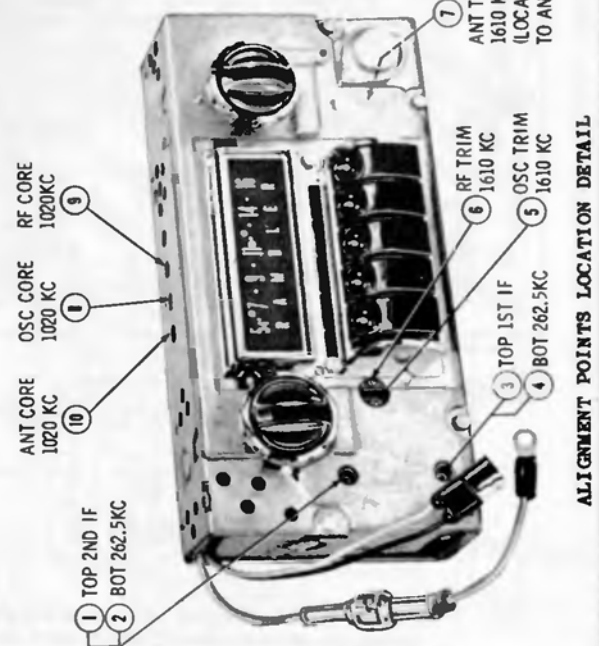

MOTOROLA

MOTOROLA 3TMR AMERICAN MOTORS 8991142

(Continued from preceding page, at left)

retaining brackets and locked in position with the chassis board locking spring. Re-solder ground lead.

TRANSISTOR REPLACEMENT
When replacing a transistor (other than the power transistor), grasp the transistor leads (between transistor body and plated chassis board) with a pair of long nose pliers to prevent excessive heating of transistor body during soldering operation.

TO SET PUSHBUTTONS


Allow receiver to warm up for fifteen minutes. Pull up on push buttons to unlock. Push down firmly on pushbuttons to lock after station has been selected.

wire from chassis housing. Release the chassis board locking spring and carefully lift chassis board out of housing. Position the chassis board vertically with respect to radio housing for servicing.

After servicing is performed, re-install plated chassis board. Make certain chassis board is properly placed in the grooves of the chassis housing for servicing.

All B-connections are carried through the placir chassis in multiple paths to the B- side. This insures a good low resistance return path. Two separate and independent paths are provided to ground.

TO SERVICE PLATED CHASSIS BOARD - To remove the plated chassis from the radio housing, unsolder the plated chassis ground



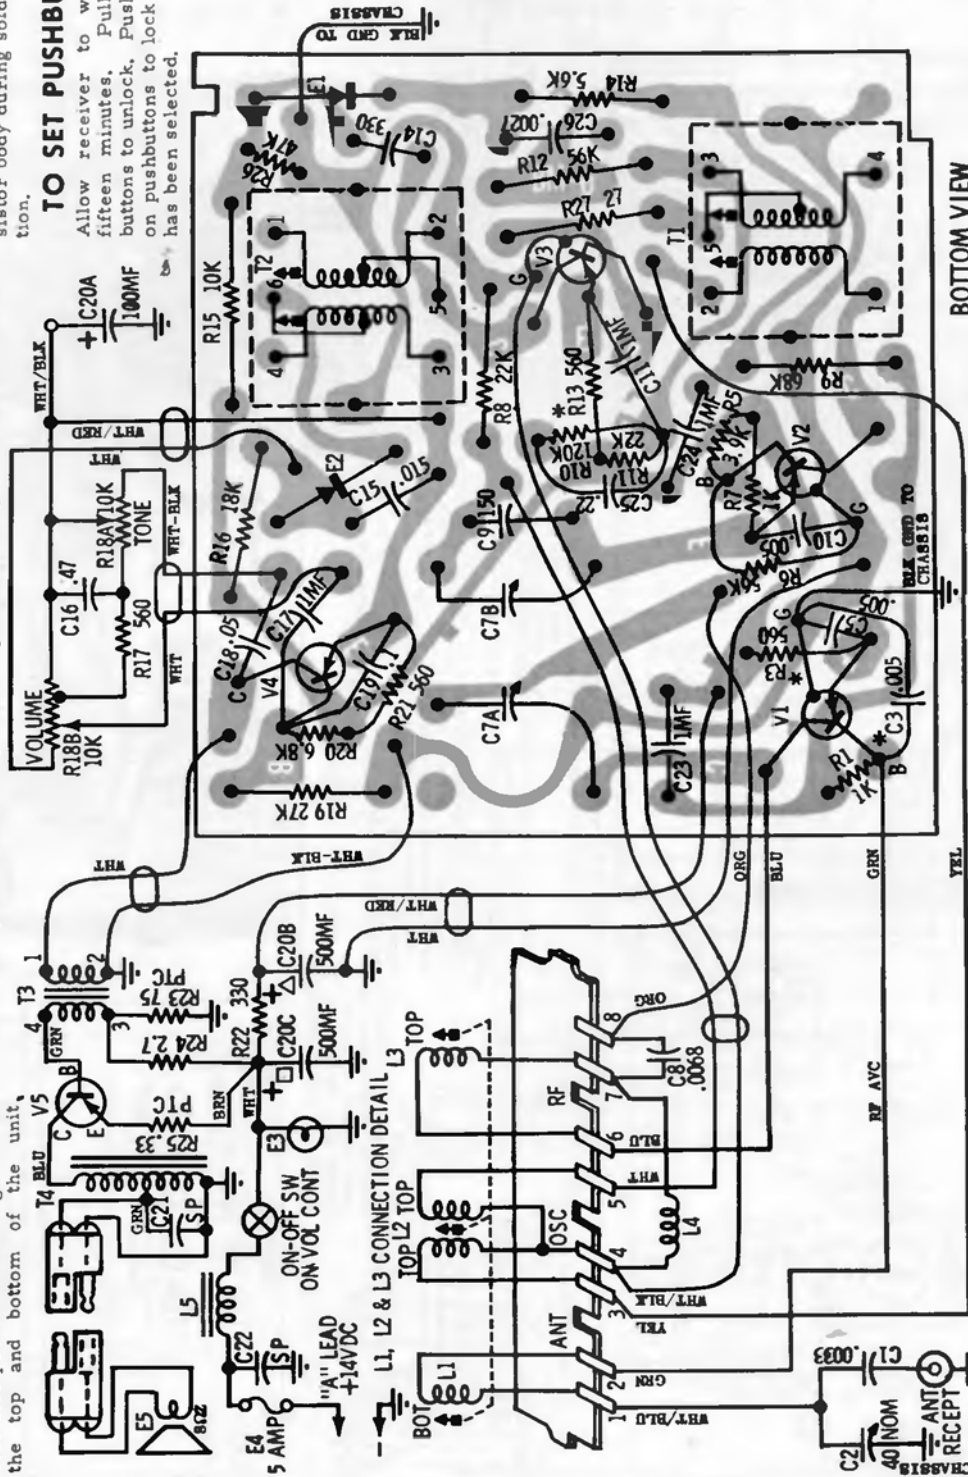


COMPONENTS SHOWN ARE ACTUALLY LOCATED ON OPPOSITE SIDE - COMPONENT SIDE OF PLATING CONTAINS GROUND CONNECTIONS ONLY - SEE PLATED CHASSIS BOARD DESCRIPTION

MOTOROLA


Models CA63 and CRA63

This material is also applicable to Models CYA63 and OEA63 which are practically identical.

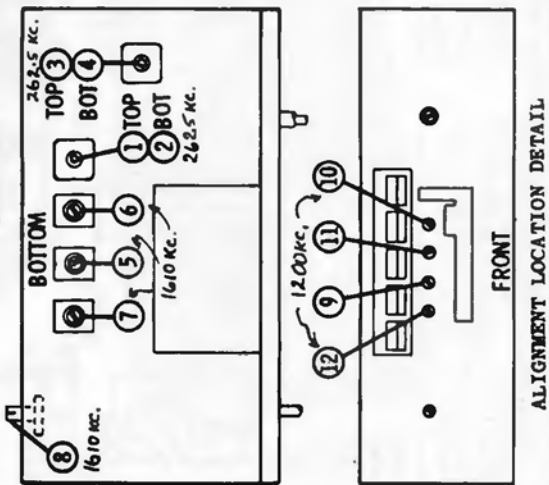
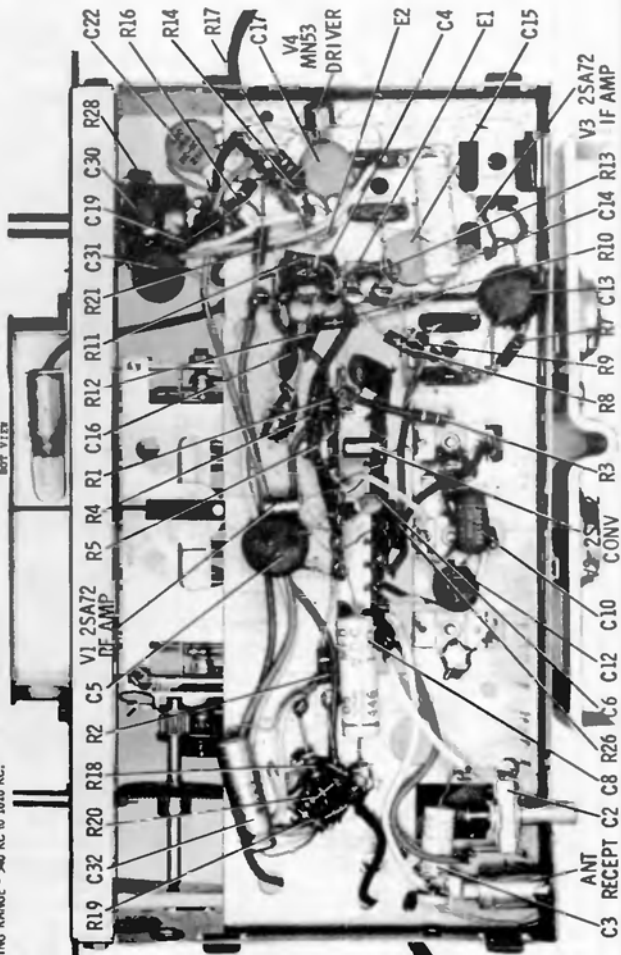
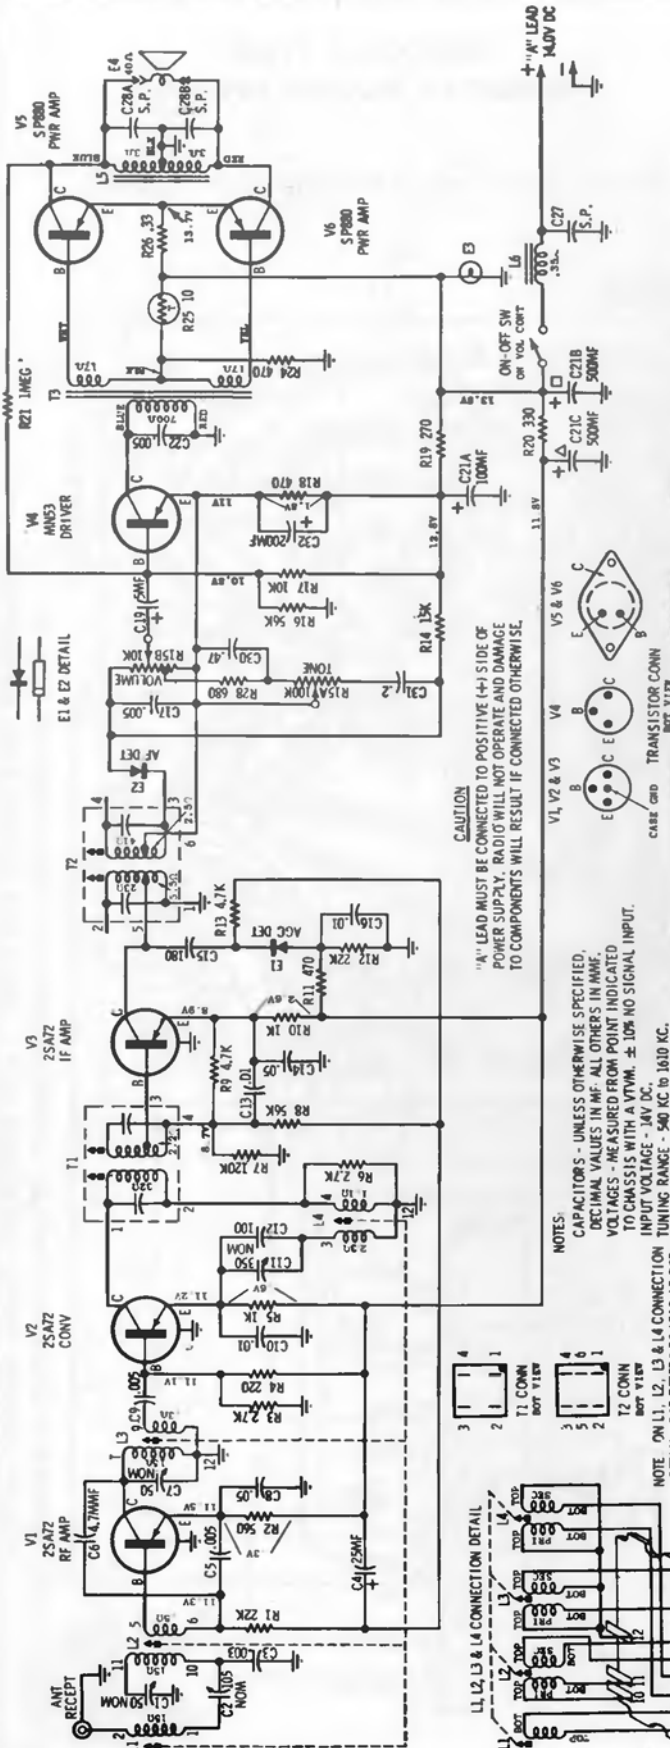


MOTOROLA

auto radio CRM63, CYM63

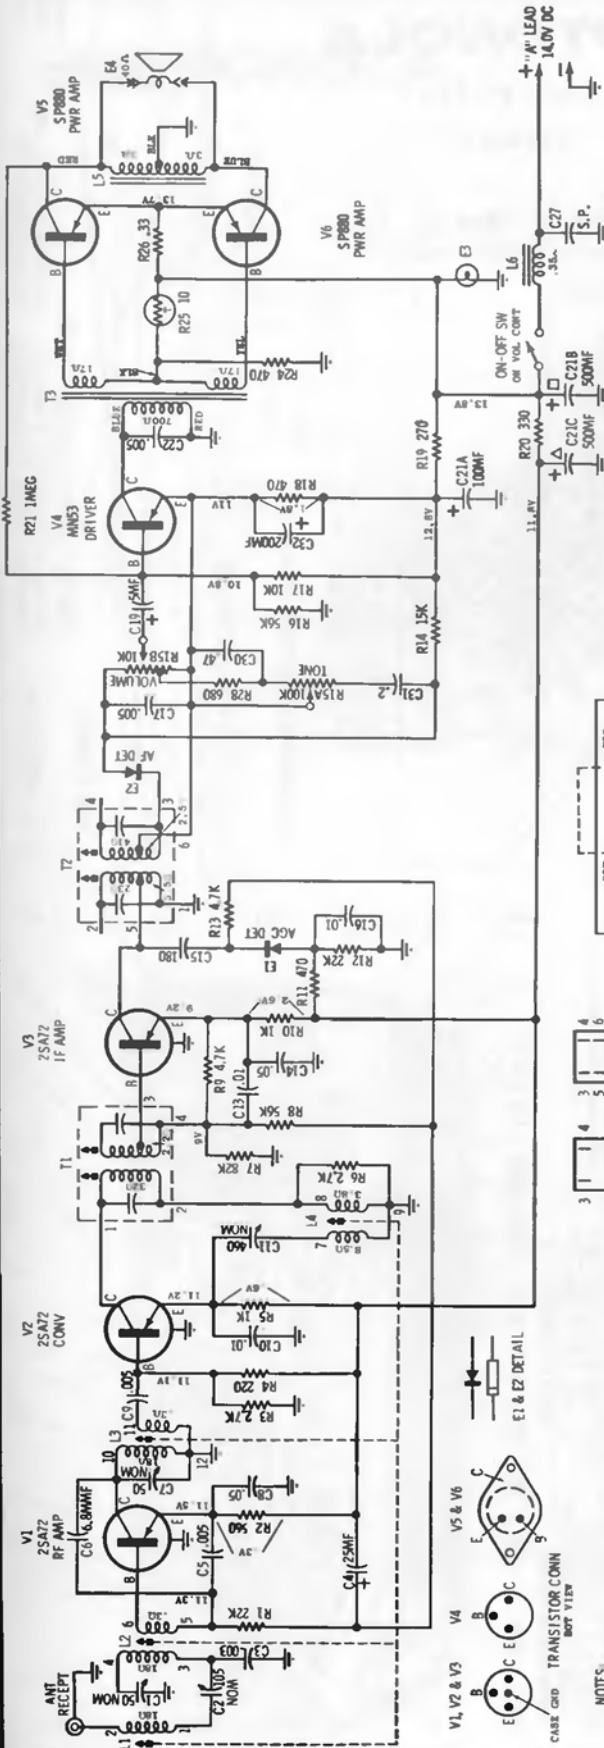

CAUTION
"A" LEAD MUST BE CONNECTED TO POSITIVE (+) SIDE OF POWER SUPPLY. RADIO WILL NOT OPERATE AND DAMAGE TO COMPONENTS WILL RESULT IF CONNECTED OTHERWISE.

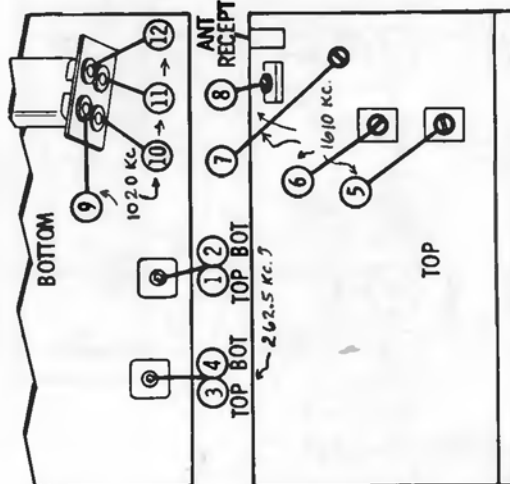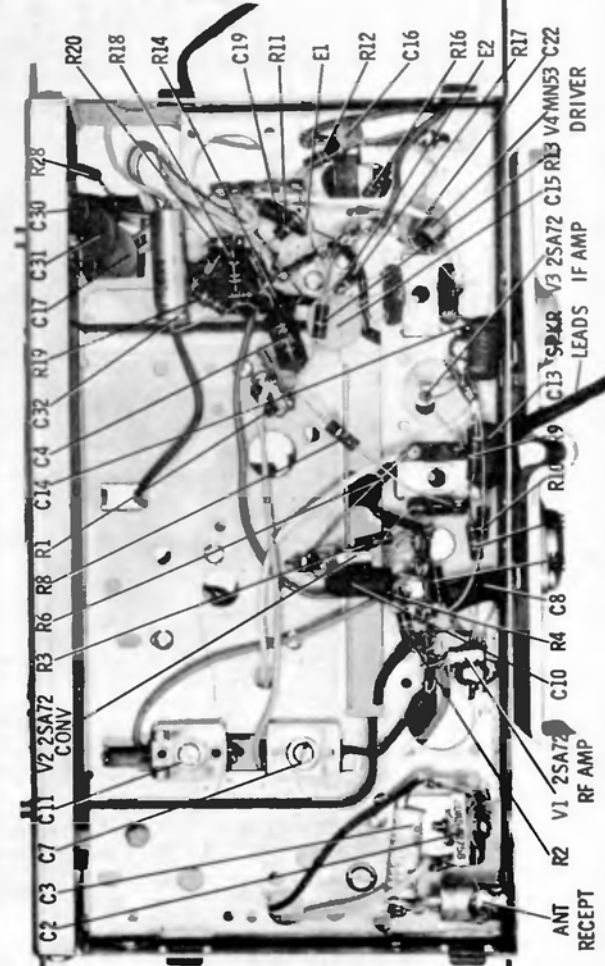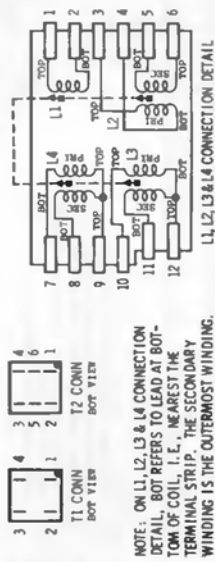




ALIGNMENT LOCATION DETAIL

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF, ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED TO CHASSIS WITH A VTVM, $\pm 10\%$ NO SIGNAL INPUT.
INPUT VOLTAGE - 14V DC.
TUNING RANGE - 540 KC TO 1610 KC.
IF FREQ. - 262.5 KC


MOTOROLA

auto radio

VWM63

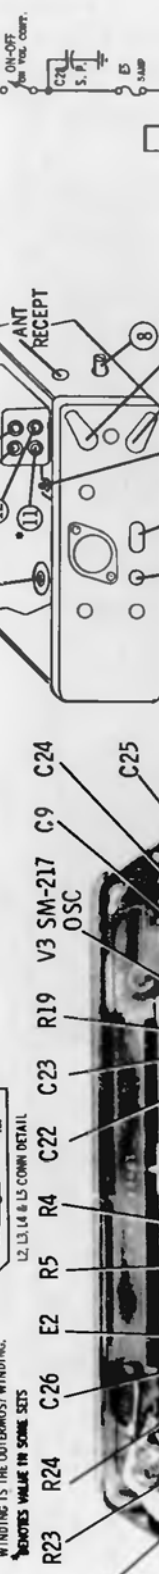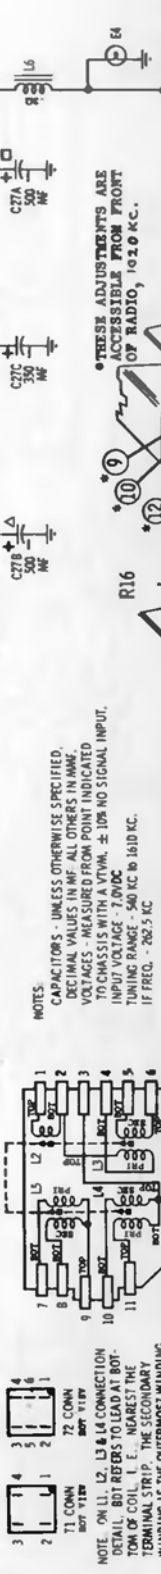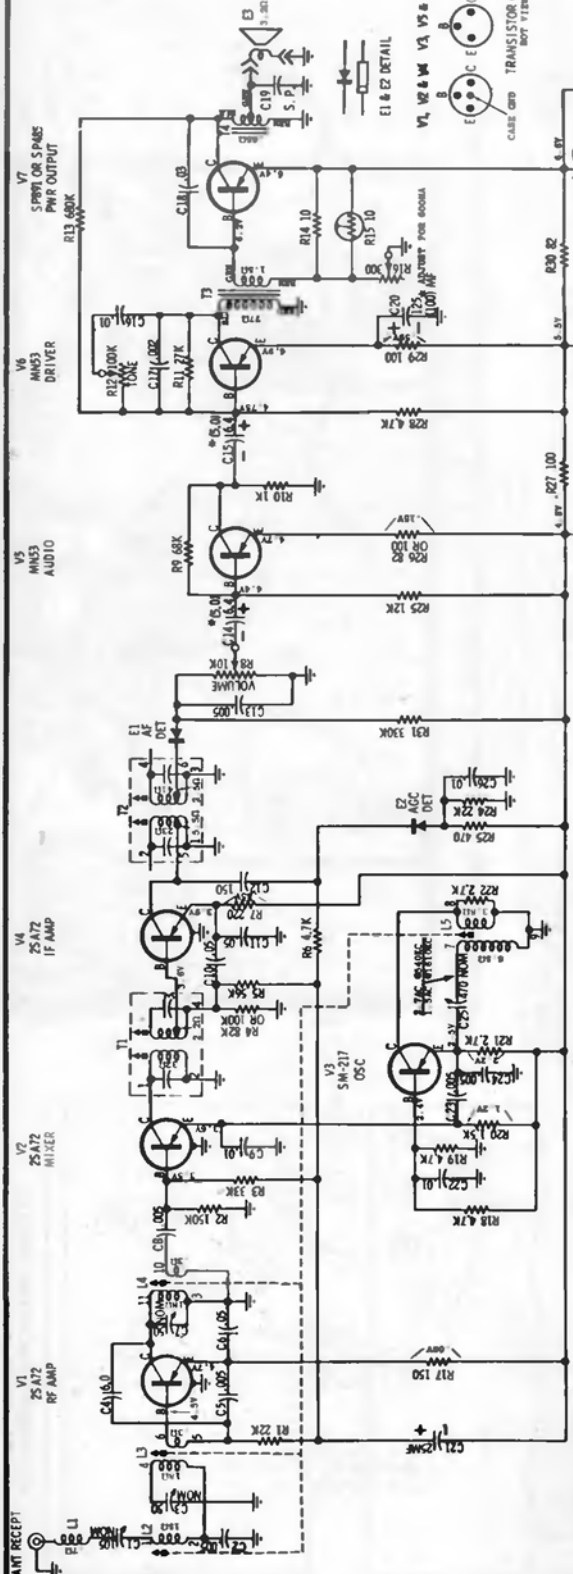

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED,
DECIMAL VALUES IN MF, ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED
TO CHASSIS WITH A VTVM, $\pm 10\%$ NO SIGNAL INPUT.
INPUT VOLTAGE - 7.5VDC
TUNING RANGE - 540 KC TO 1610 KC.
IF FREQ. - 262.5 KC



NOTE: ON L1, L2, L3 & L4 CONNECTION
DETAIL, BUT REFER TO LEAD AT BOT-
TOM OF COIL, I. E., NEAREST THE
TERMINAL STRIP. THE SECONDARY
WINDING IS THE OUTERMOST WINDING.
*INDICATES VALUE IN SOME SETS

ALIGNMENT LOCATION DETAIL


DIAL SCALE BACKGROUND

KNOT & CEMENT

DIAL STRINGING


POINTER - WITH TUNER SET TO
1610 KC, SET POINTER TO MARK
SHOWN AND CEMENT TO DIAL STRING.

SET-TUNER SO CORES ARE
OUT OF COILS (1610 KC)



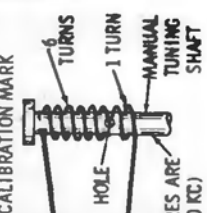


MOTOROLA

**auto radio
VWA63**

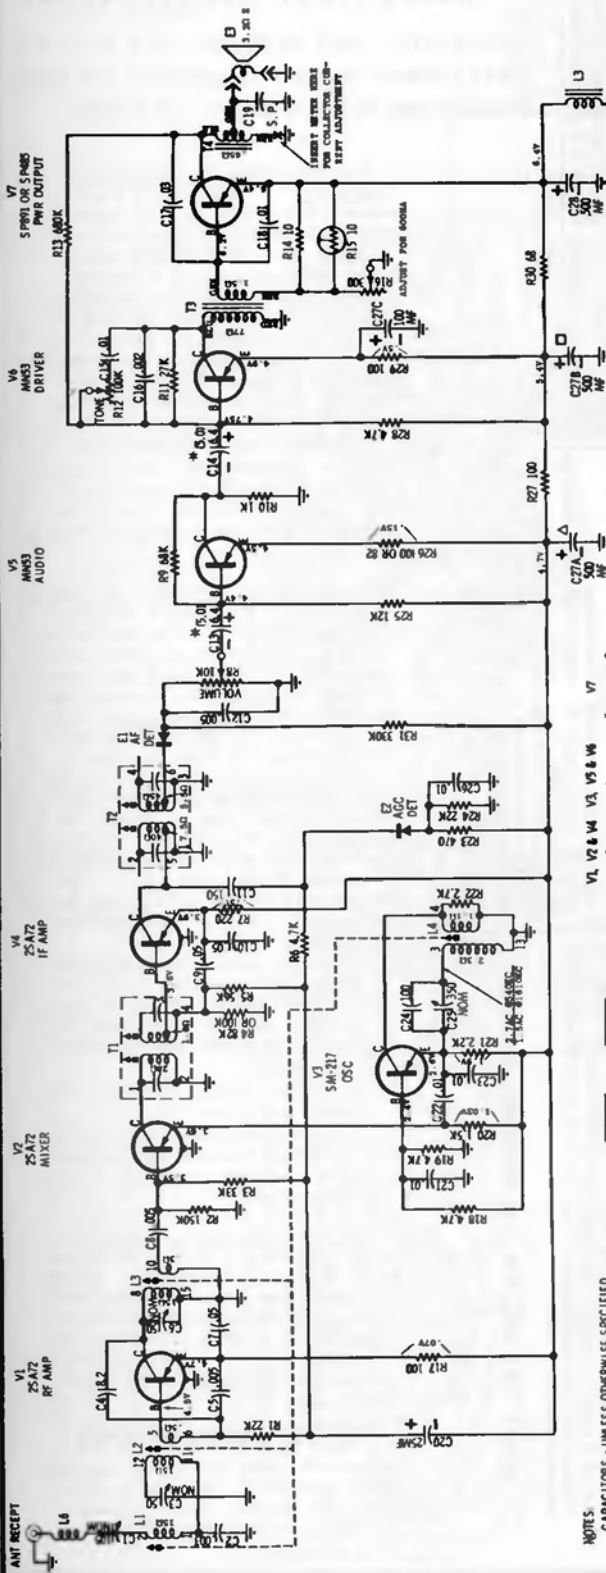

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED,
DECIMAL VALUES IN MF, ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED
TO CHASSIS WITH A VTVM, ± 10% NO SIGNAL INPUT.
INPUT VOLTAGE - 1.0VDC
TUNING RANGE - 540 KC TO 1610 KC.
IF FREQ. - 262.5 KC

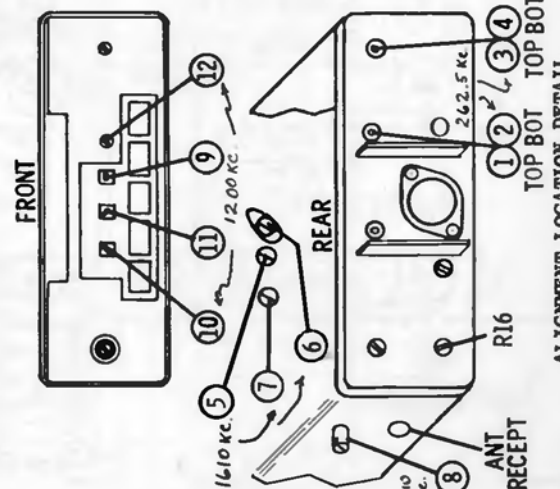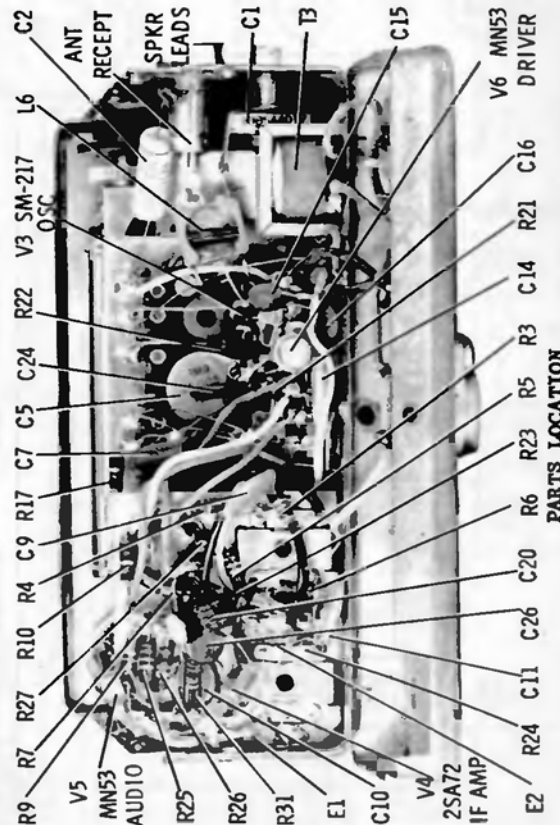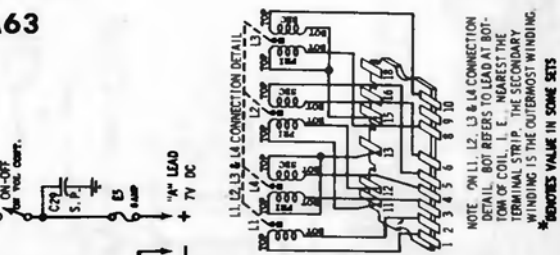

MOTOROLA

auto radio

MOPAR 216,217,337,339,344,345

(Diagrams and service data on the next three pages, alignment on page following; total 4 pages of data)

PLATED CHASSIS BOARD DESCRIPTION

Motorola's PLAcir chassis has plating on both sides of the chassis board. The exposed side contains the actual circuit connections while the plating on the component side of the chassis board provides a convenient chassis B-return for components and circuit wiring. Plating on the component side also provides shielding between the top and bottom of the unit similar to a metal chassis which incorporates hand wiring.

All B-connections are carried through the PLAcir chassis in multiple paths to the B-side. This insures a good low resistance return path.

PLATED CHASSIS BOARD REMOVAL

To remove the plated chassis completely from the radio housing, unsolder the plated chassis mounting bracket, bend the ears straight and carefully remove the bracket from chassis board. Lift plated board until its tabs are free; carefully remove from housing.

After servicing is performed, re-install plated chassis board, engaging 4 board tabs into slots in housing; then attach plated chassis mounting bracket into place. It is important, at this point, that the following leads are dressed correctly.

A. Make certain the pilot light leads and transistor leads are dressed above the pilot light socket; do not allow them to lie between the pilot light and light shield.

B. Dress volume control leads away from filter choke.

C. Dress antenna lead along edge of plated chassis as far away from oscillator and RF trimmer as possible.

TRANSISTOR REPLACEMENT

When replacing a transistor (other than a power transistor), grasp the transistor leads (between transistor body and plated chassis board) with a pair of long nose pliers to prevent excessive heating of transistor body during soldering operation.

TO SET PUSHBUTTONS


Allow receiver to warm up for fifteen minutes. Pull out on pushbutton to unlock. Push pushbutton in firmly to lock after station has been selected.

CAUTION
"A" LEAD MUST BE CONNECTED TO POSITIVE (+) SIDE OF POWER SUPPLY. RADIO WILL NOT OPERATE AND DAMAGE TO COMPONENTS WILL RESULT IF CONNECTED OTHERWISE.

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF; ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED TO GROUND WITH A VTVM, $\pm 10\%$ NO SIGNAL IN.
MEET SPECIFICATIONS.


PLATED CHASSIS BOARD WIRING LEGEND

■ = B + ■ = RF AVC ■ = MIXER AVC



ON L1, L2 & L3 CONNECTION DETAIL, BUT REFERS TO LEAD AT BOTTOM OF COIL, I.E. NEAREST THE TERMINAL STRIP. THE PRIMARY WINDING IS THE OUTERMOST WINDING.

MODELS 337, 339, 344, 345 SCHEMATIC DIAGRAM

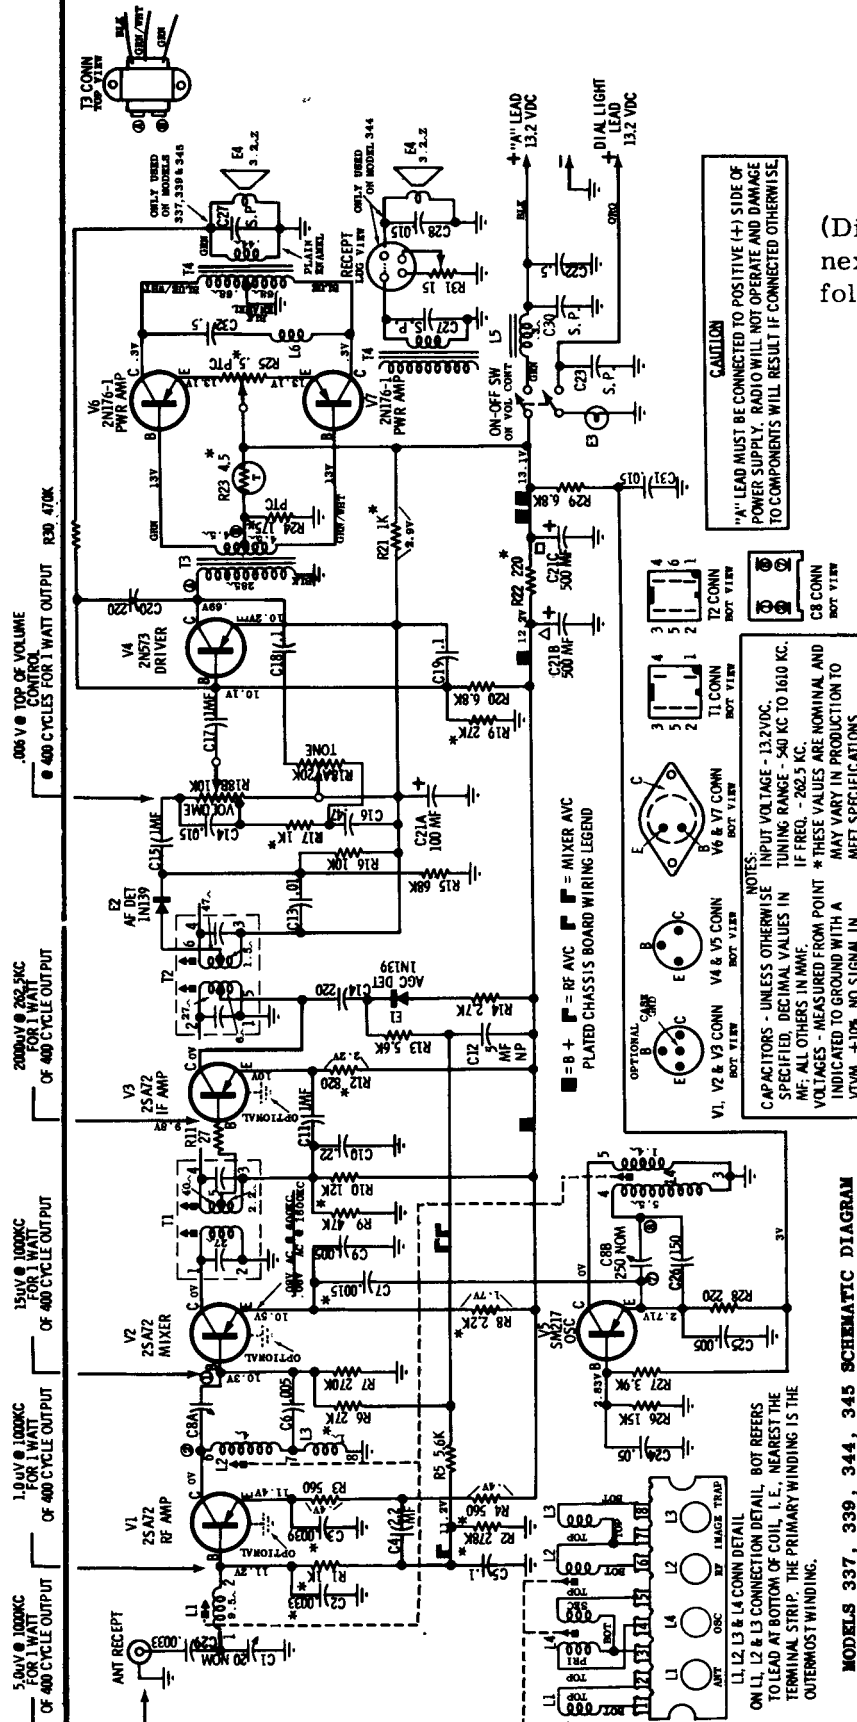


MOTOROLA Models 216, 217, 337, 339, 344, 345

(Continued from preceding page, other service data and alignment on the next two pages)

BOTTOM VIEW
MODELS 216, 217 PLATED CHASSIS
BOARD WIRING FOR SETS USING
84D41609A06 BOARD

COMPONENTS SHOWN ARE ACTUALLY
LOCATED ON OPPOSITE SIDE -
COMPONENT SIDE PLATING CONTAINS
GROUND CONNECTIONS ONLY - SEE
PLATED CHASSIS BOARD DESCRIPTION

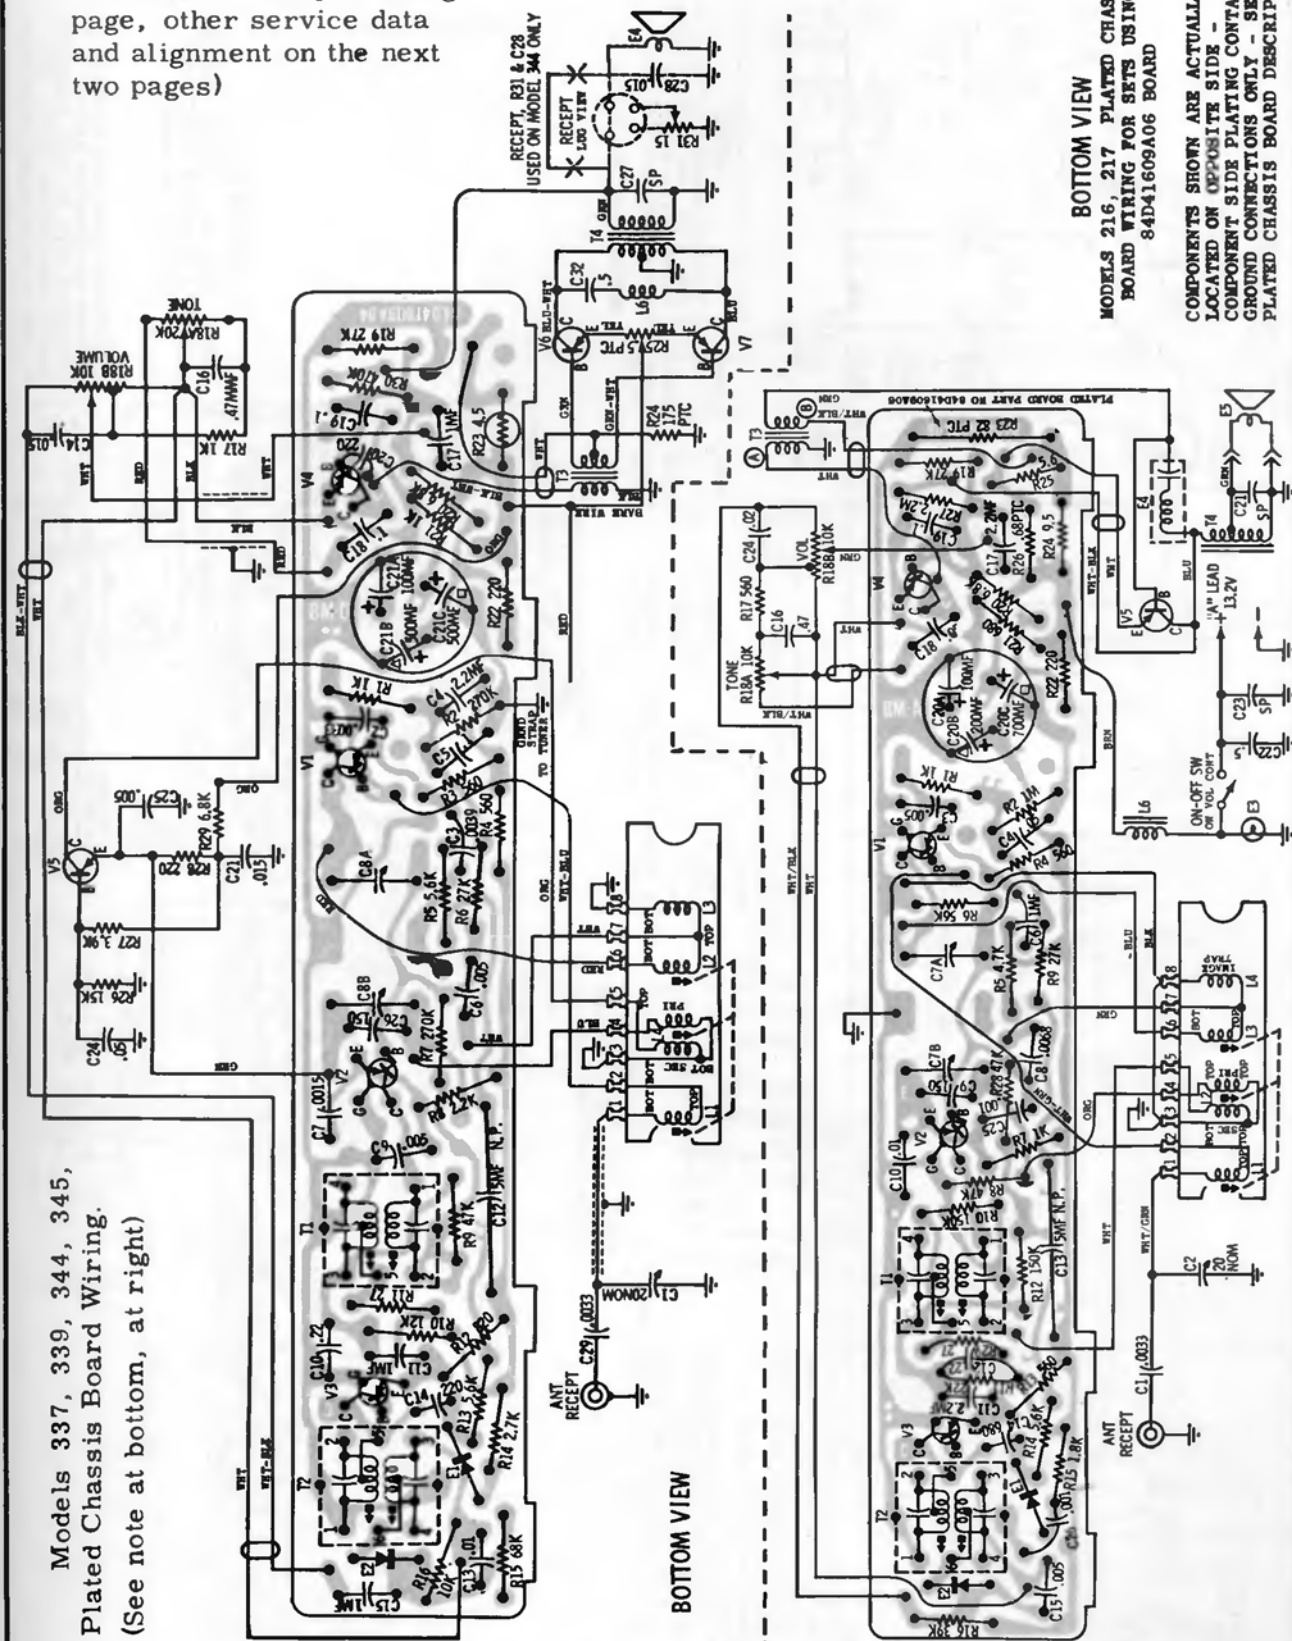

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

MOTOROLA Models 216, 217,
337, 339, 344, 345

(Continued)

BOTTOM VIEW
MODELS 216, 217 PLATED CHASSIS
BOARD WIRING FOR SETS USING
84D41609A05 BOARD


COMPONENTS SHOWN ARE ACTUALLY
LOCATED ON OPPOSITE SIDE -
COMPONENT SIDE PLATING CONTAINS
GROUND CONNECTIONS ONLY - SEE
PLATED CHASSIS BOARD DESCRIPTION

MODELS 216, 217 SCHEMATIC DIAGRAM


CAUTION
"A" LEAD MUST BE CONNECTED TO POSITIVE (+) SIDE OF
POWER SUPPLY. RADIO WILL NOT OPERATE AND DAMAGE
TO COMPONENTS WILL RESULT IF CONNECTED OTHERWISE.

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED,
DECIMAL VALUES IN μ F, ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED
TO GROUND WITH A VTVM, $\pm 10\%$, NO SIGNAL IN.
INPUT VOLTAGE - 115VAC.
TUNING RANGE - 540 KC TO 1610 KC.
* THESE VALUES ARE NOMINAL AND MAY VARY
IN PRODUCTION TO MEET SPECIFICATIONS.
** SEE REPLACEMENT PARTS LIST
PLATED CHASSIS BOARD WIRING LEGEND
B+ = AVC RF = RF IF = IF AVC = IF

ON L1, L2 & L3 CONNECTION DETAIL, BOT REFERS
TO LEAD AT BOTTOM OF COIL, I.E., NEAREST THE
TERMINAL STRIP. THE SECONDARY WINDING IS
THE OUTERMOST WINDING.

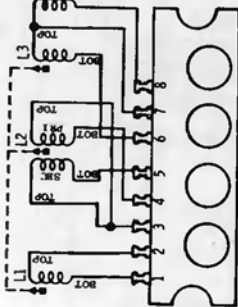

L1, L2 & L3 CONNECTION DETAIL

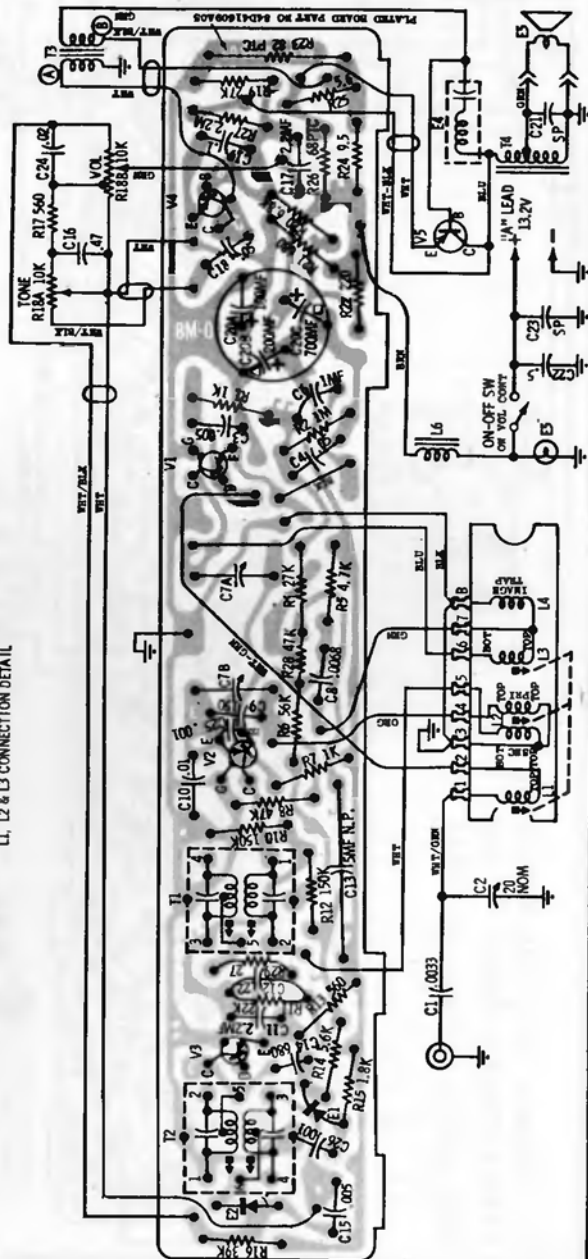


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

MOTOROLA Models 216, 217, 337, 339, 344, 345, Alignment Data, Continued


ALIGNMENT

Connect an output meter across the speaker voice coil. Set volume to maximum and tone to high. Attenuate signal generator output to maintain 1.79 volts on output meter at all times to prevent overloading the receiver.


STEP	GENERATOR CONNECTION	GENERATOR FREQUENCY (400 cycle mod)	TUNER SET TO	ADJUST	REMARKS
IF ALIGNMENT					
1.	Ant recept thru .1 mf capacitor & ground	262.5 Kc	Hi end stop	1, 2, 3 & 4	Adjust for maximum.
RF ALIGNMENT					
2.	Ant recept thru dummy antenna (see Figure)	1610 Kc	Hi end stop	5, 6 & 7	Adjust for maximum.
NOTE: Do not perform steps 3, 4, 5 & 6 unless the tuner has been tampered with or components have been replaced. Before proceeding with step 3, back tuning cores (of ant, RF & osc only) out of coils to eliminate their effect on the trimmer adjustments.					
3.	Ant recept thru dummy antenna (see Figure)	1610 Kc	Hi end stop	5, 6 & 7	Adjust for maximum.
4.	"	1020 Kc	Tuner carriage 9/16" in from hi end stop	8, 9 & 10	Adjust for maximum, using alignment tool Motorola Part No. 66A76278.
5.	"	1610 Kc	Hi end stop	5, 6 & 7	Adjust for maximum.
6.	Repeat steps 4 & 5 until no further increase, then cement cores in place.				Step 5 should be last step.
ANTENNA TRIMMER					
7.			Weak station around 1400 Kc	7	With radio installed in car and antenna fully extended, peak antenna trimmer for maximum.

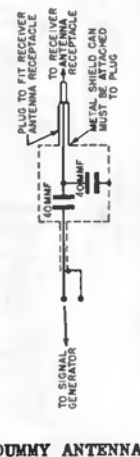


DUMMY ANTENNA

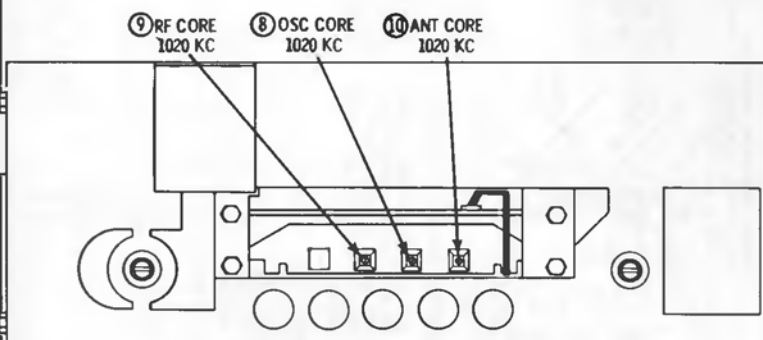

FRONT VIEW WITH DIAL SCALE REMOVED

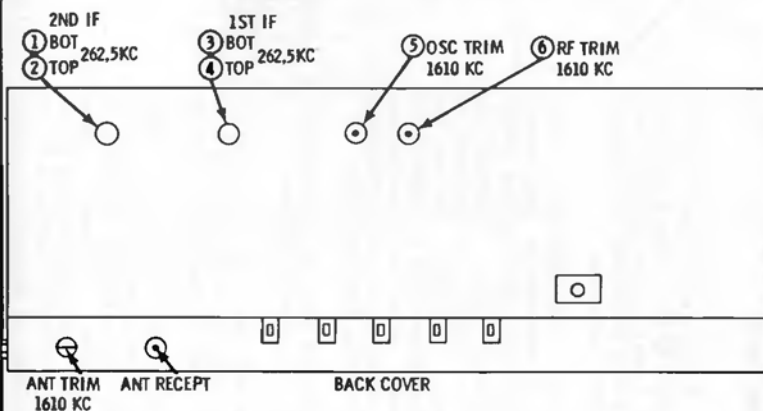

ALIGNMENT LOCATION DETAIL

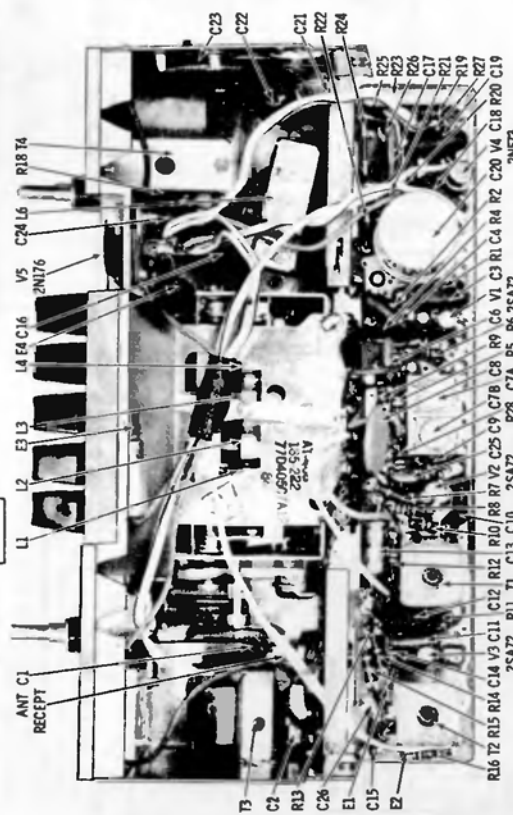


MODELS 216, 217 PARTS LOCATION

MOTOROLA


Auto Radio Model 290T

(Continued on the next page, at right)

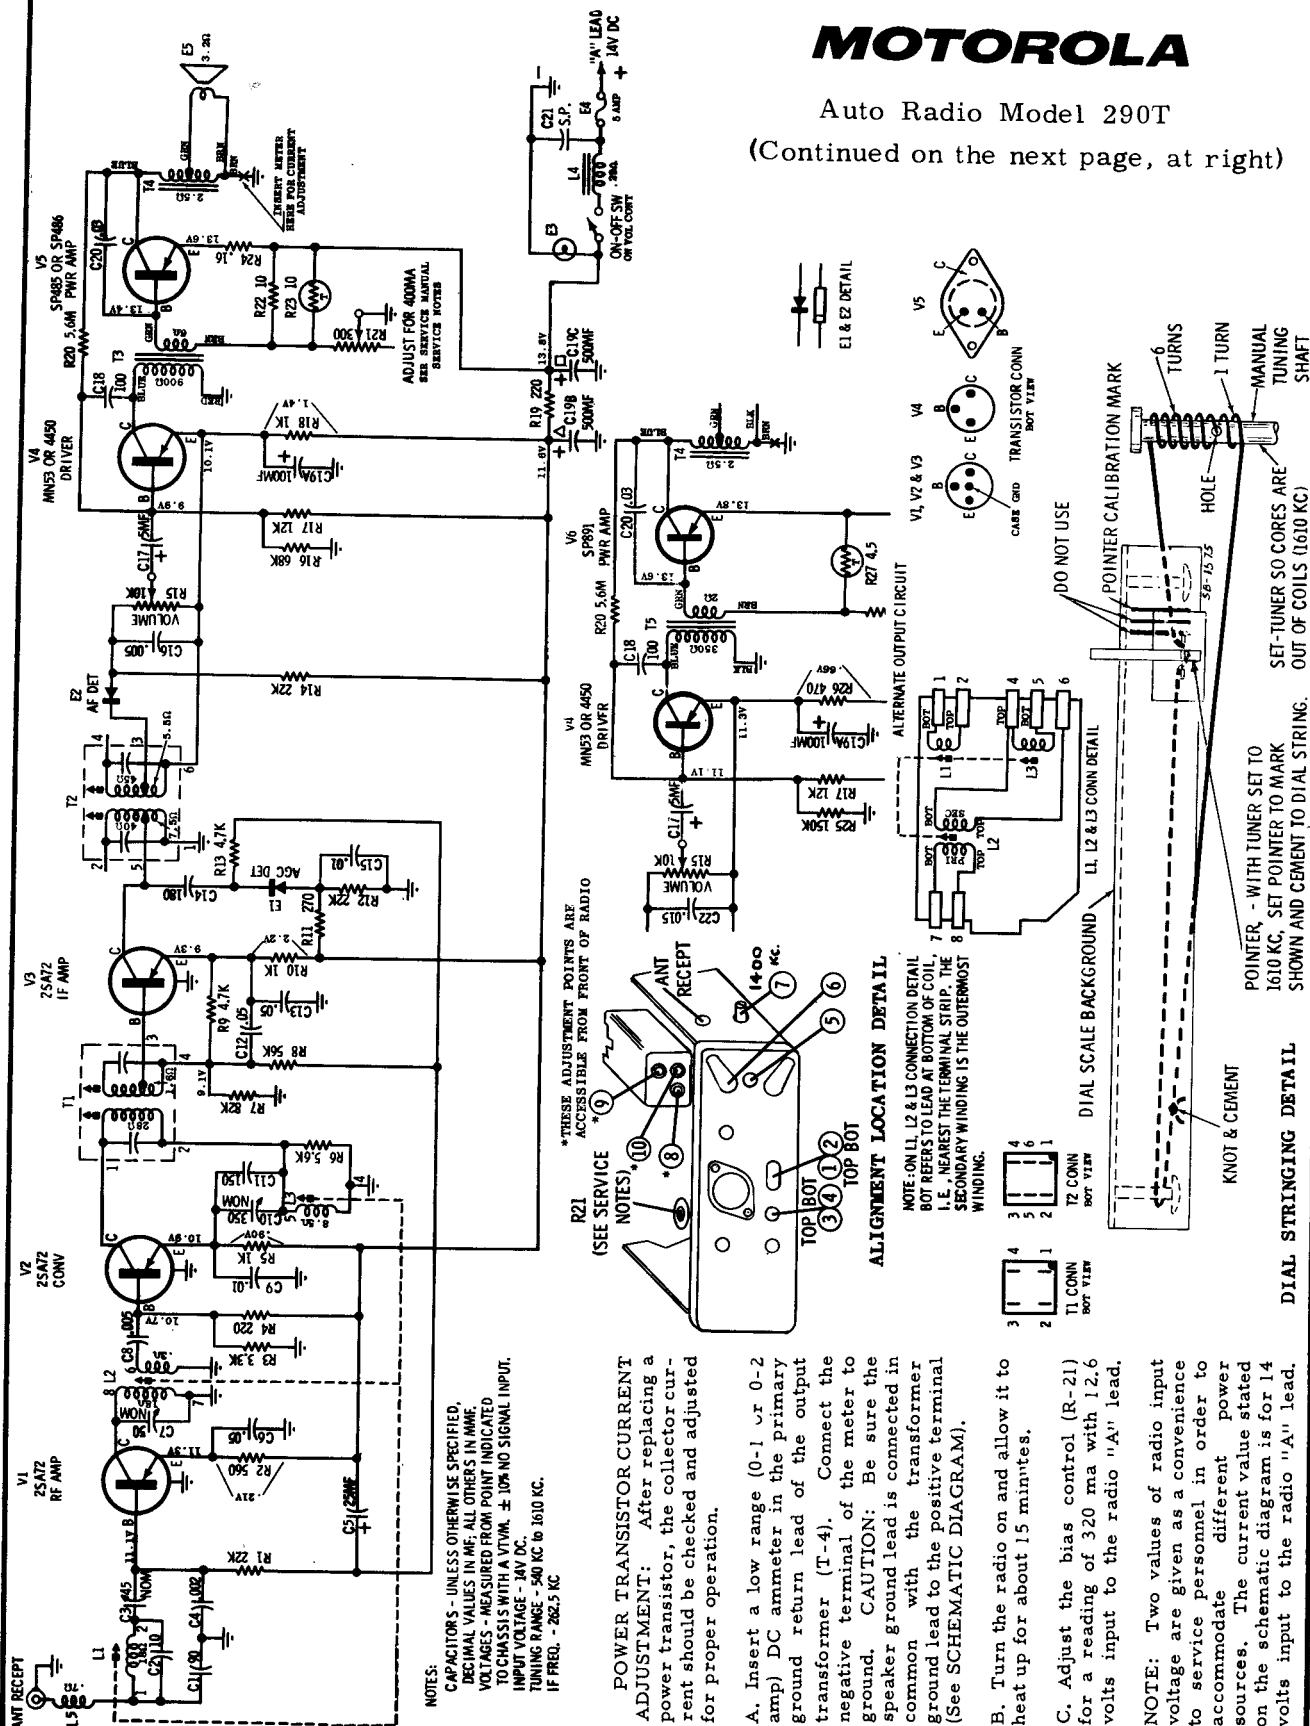

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

MOTOROLA Auto Radio Model 290T (Continued from preceding page)

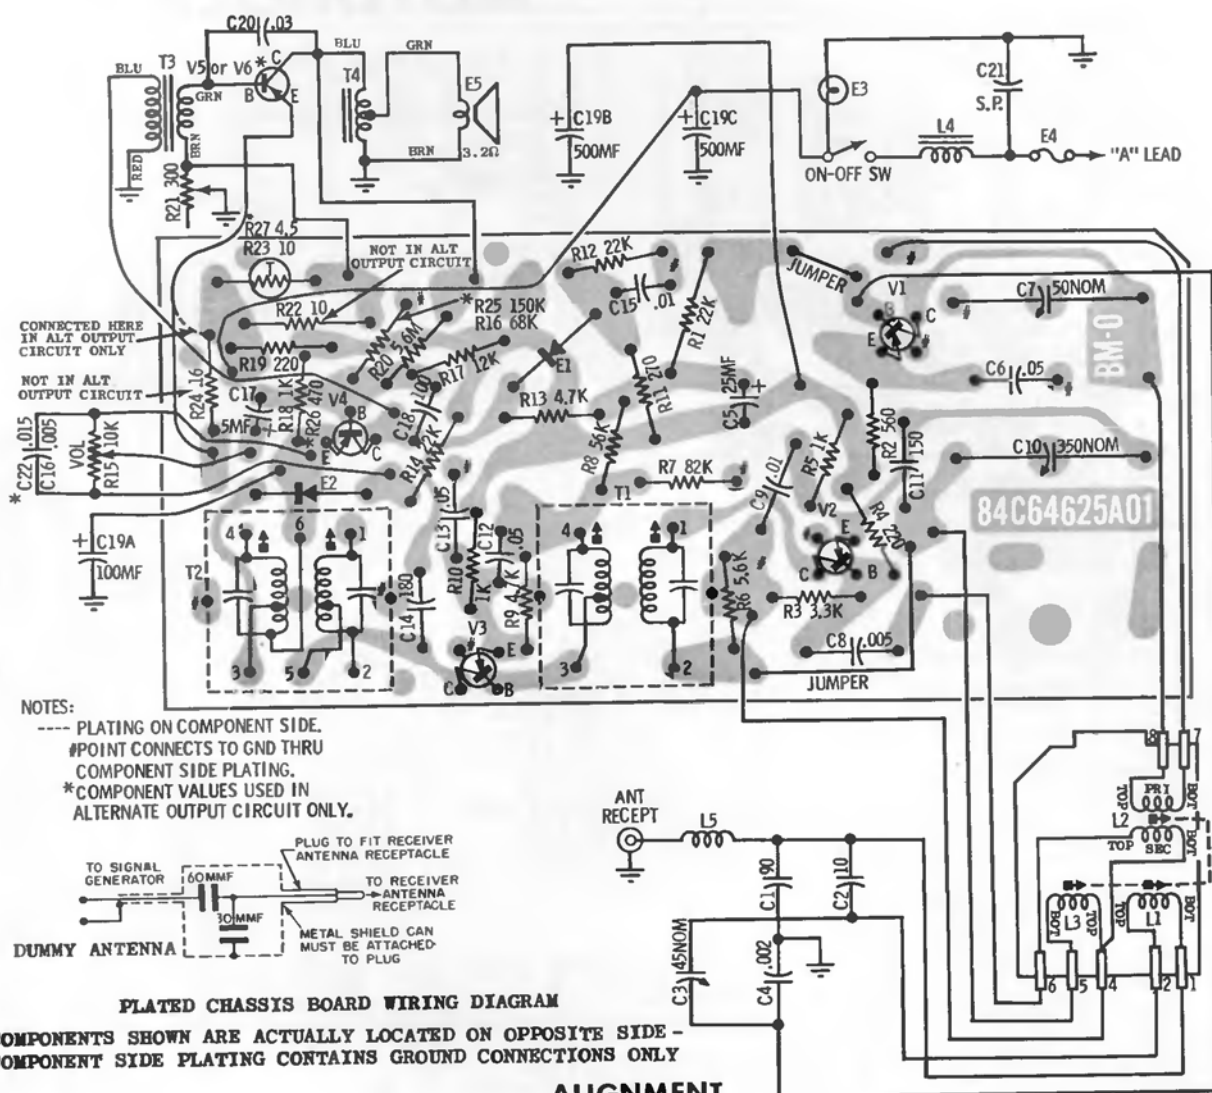

ALIGNMENT


Connect an output meter across the speaker voice coil. Set volume to maximum. Attenuate signal generator output to maintain 1 watt (1.79 volts across a 3.2 ohm load) on output meter at all times.

STEP	GENERATOR CONNECTION	GEN FREQ (400 cycle 30% mod)	TUNER SET TO	ADJUST	REMARKS
1.	To collector of RF amp thru .1mf & chassis	262.5Kc	Hi end stop	1, 2, 3 & 4	Adjust for maximum
2.	Ant recept thru dummy (see figure)	1610Kc	Hi end stop	5, 6 & 7	Adjust for maximum
3.	Ant recept thru dummy (see figure)	1610Kc	Hi end stop	5, 6 & 7	Adjust for maximum
4.	"	1020Kc	Tuner carriage .298" from Hi end stop	8, 9 & 10	Adjust for maximum
5.	"	1610Kc	Hi end stop	5, 6 & 7	Adjust for maximum
6.	Repeat steps 4 and 5 until no further increase; step 5 should be last step. Then, cement core screws in place.				

MOTOROLA

Auto Radio Model 323T

(Continued on next page, at right)

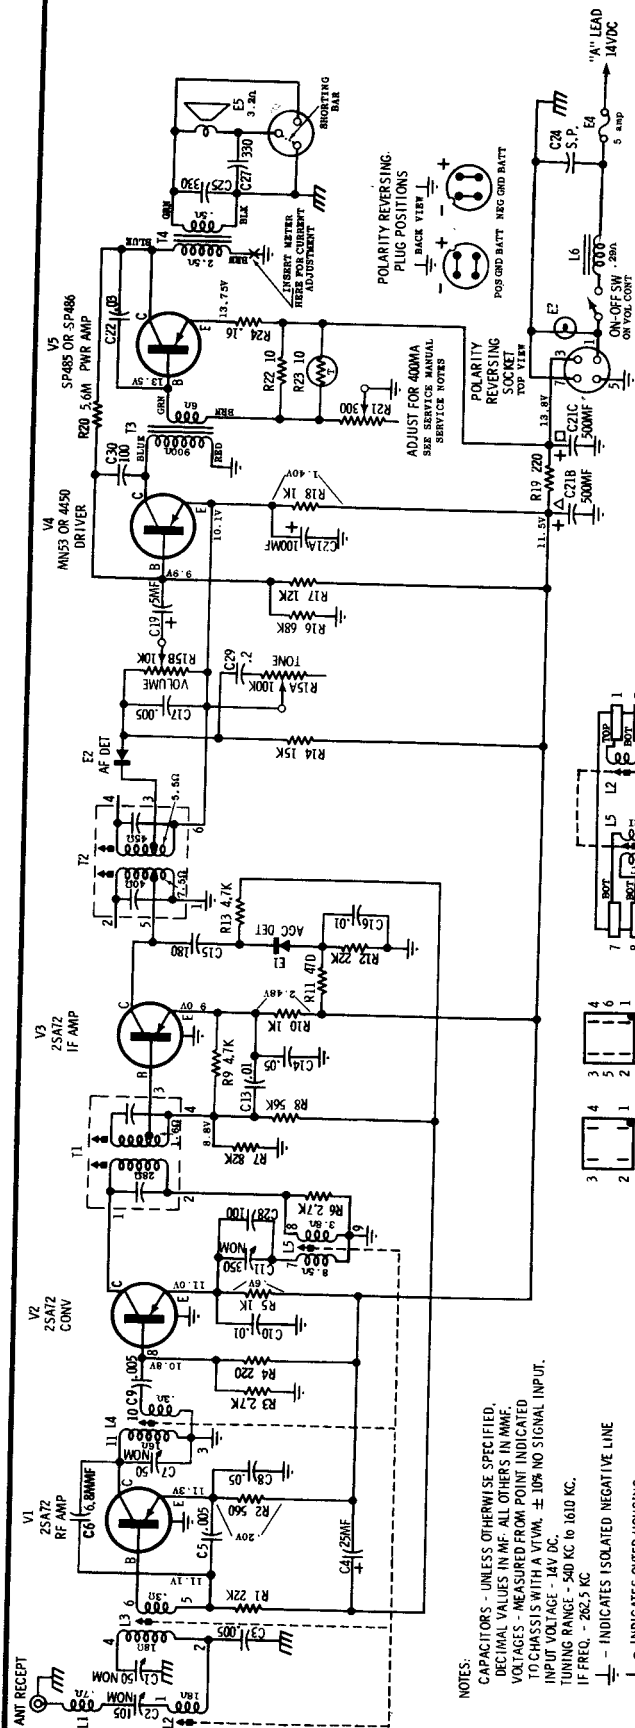

POWER TRANSISTOR CURRENT ADJUSTMENT: After replacing a power transistor, the collector current should be checked and adjusted for proper operation.



A. Insert a low range (0-1 or 0-2 amp) DC ammeter in the primary ground return lead of the output transformer. Connect the negative terminal of the meter to isolated negative line on polarity reversing socket.

B. Turn the radio on and allow it to heat up for about 15 minutes.


C. Adjust the bias control (R-21) for a reading of 320 ma with 12.6 volts input to the radio "A" lead.

NOTE: Two values of radio input voltage are given as a convenience to service personnel in order to accommodate different power sources. The current value stated on the schematic diagram is for 14 volts input to the radio "A" lead.


NOTE: ON L2, L3, L4 & L5 CONNECTION DETAIL, BOT REFERS TO LEAD AT BOTTOM OF COIL, I.E. NEAREST THE TERMINAL STRIP. THE SECONDARY WINDING IS THE OUTERMOST WINDING.

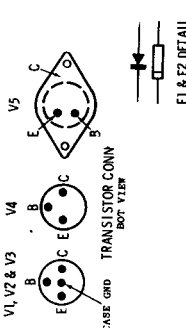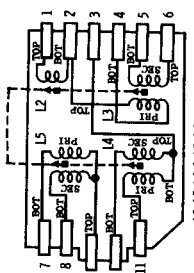


CAUTION
BEFORE CONNECTING "A" LEAD, BATTERY POLARITY SHOULD BE CHECKED AND POLARITY REVERSING PLUG SHOULD BE CHANGED CORRESPONDINGLY, OTHERWISE SET WILL NOT OPERATE AND DAMAGE TO COMPONENTS WILL RESULT.

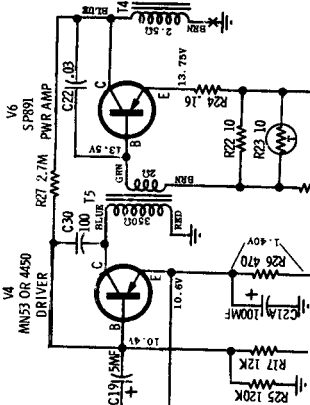

ALTERNATE OUTPUT CIRCUIT

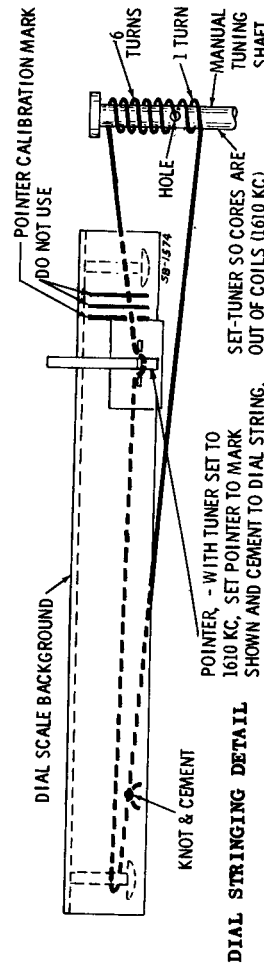

MOTOROLA Auto Radio Model 323T (Continued from preceding page)

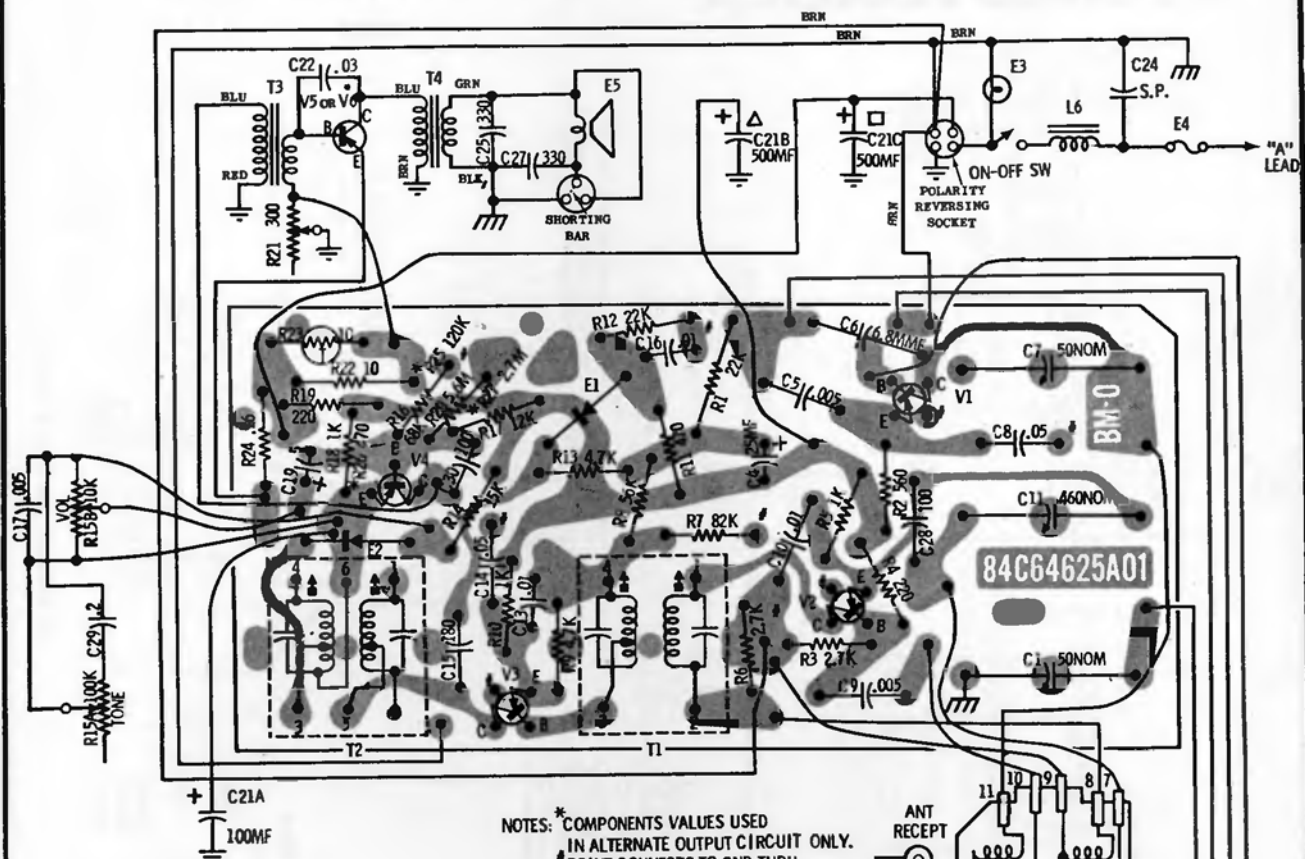

auto radio

323T


PLATED CHASSIS BOARD WIRING DIAGRAM

COMPONENTS SHOWN ARE ACTUALLY LOCATED ON OPPOSITE SIDE - COMPONENT SIDE PLATING CONTAINS GROUND CONNECTIONS ONLY

Make certain the "A" lead is connected properly to power source i. e., check position of polarity reversing plug, otherwise, damage to receiver may result.

When replacing a power output transistor, remember to use the transistor specified in the parts list; coat both sides of the transistor insulator with DC-4 grease (Motorola Part No. 11M490487) and securely tighten the transistor mounting screws. When replacing all other transistors, use long-nose pliers as a heat sink, i. e., grasp transistor leads close to transistor base with the pliers to dissipate heat while soldering.

The plated chassis used in this receiver has plating on both sides; the exposed side (opposite components) contains the actual circuitry while the plating on the component side contains B- points only.

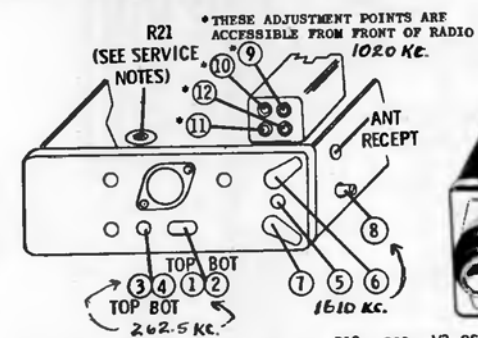

ALIGNMENT LOCATION DETAIL





* SEE ALTERNATE OUTPUT CIRCUIT ON SCHEMATIC DIAGRAM


MOTOROLA

auto radio

413T

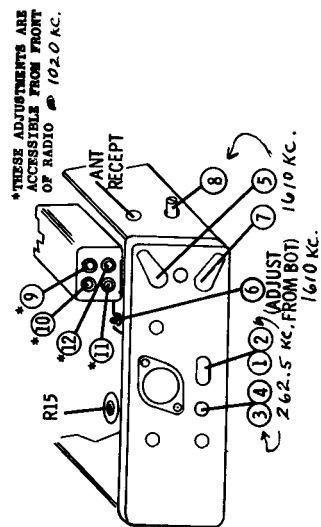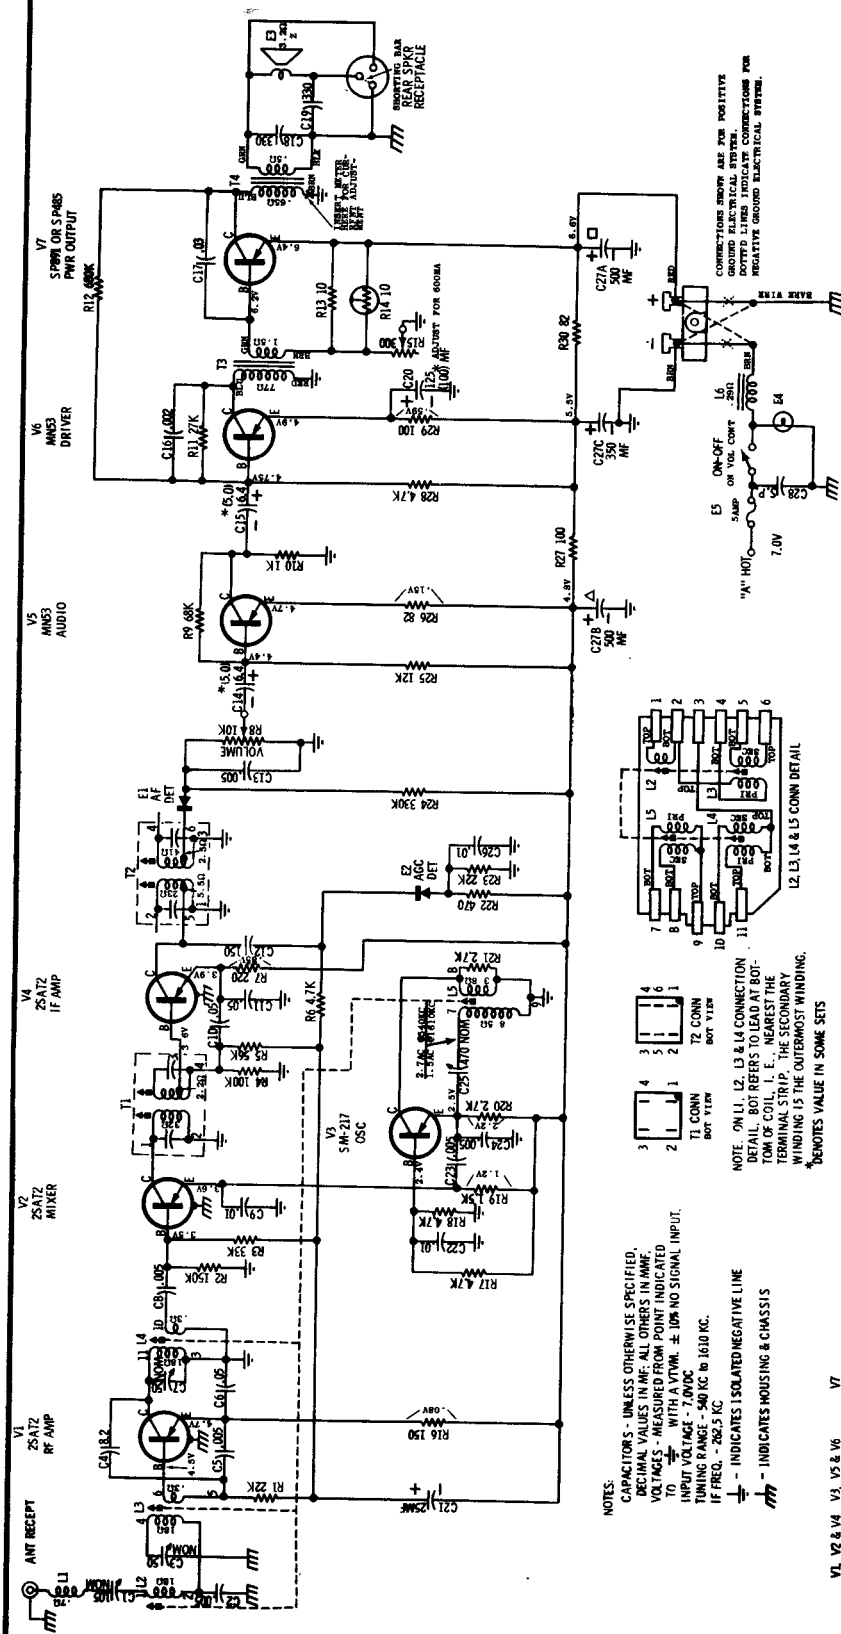


ALIGNMENT LOCATION DETAIL

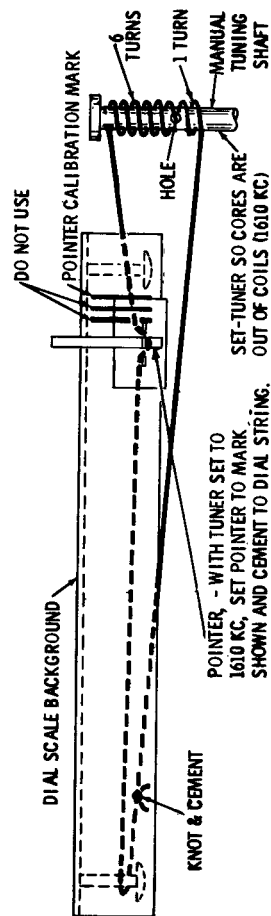


DIAL STRINGING DETAIL

MOTOROLA

**MODEL CX2
CHASSIS HS-6110**

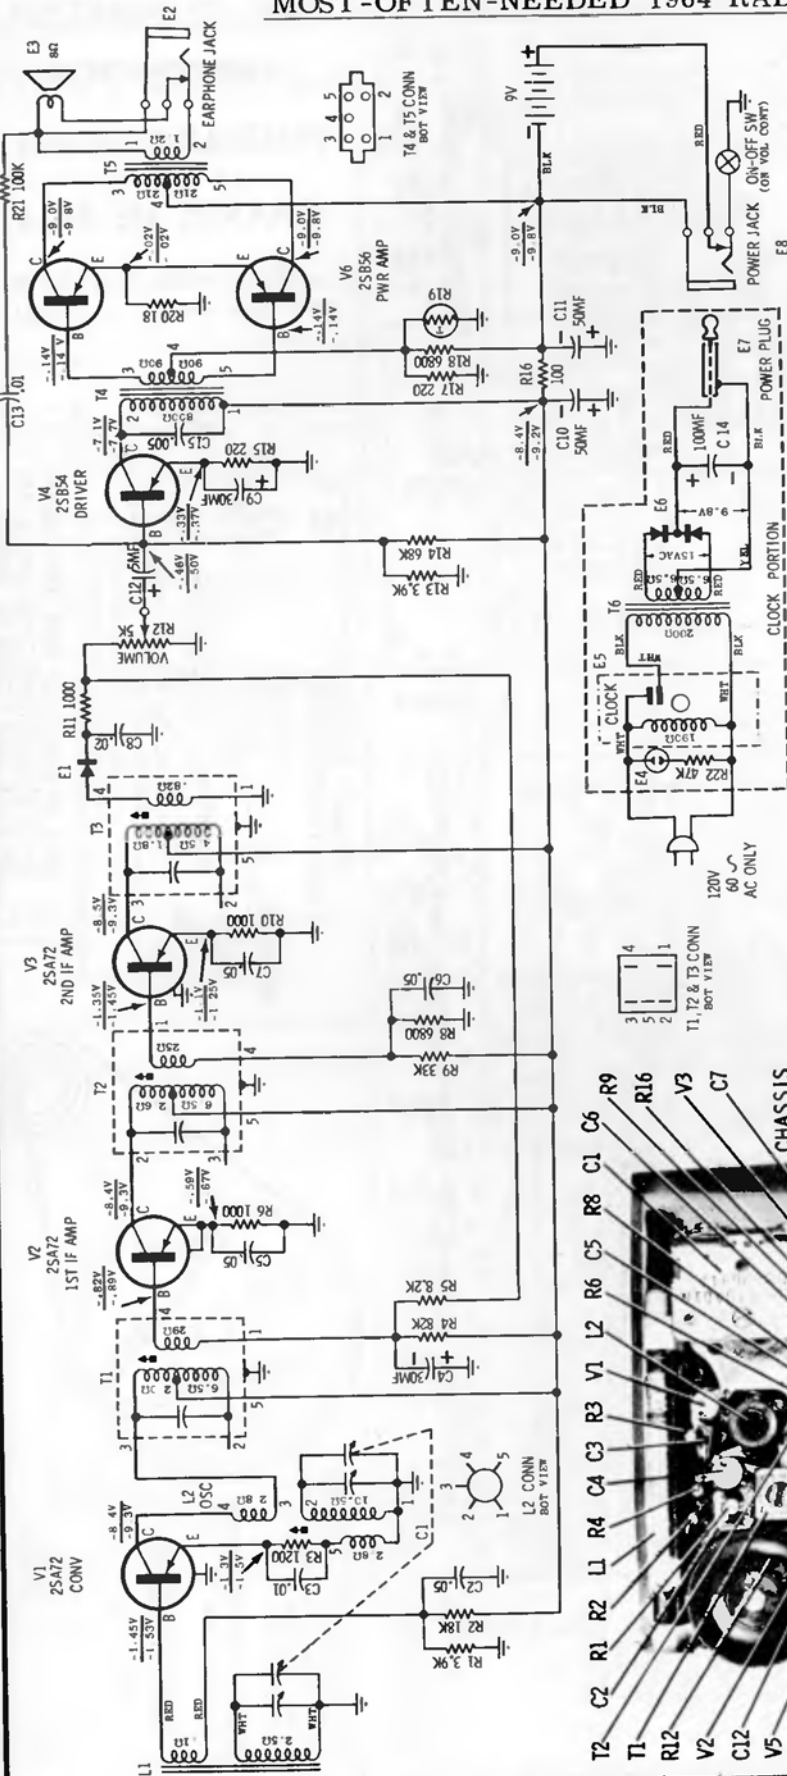


NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED,
DECIMAL VALUES IN MF, ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED
TO GROUND WITH A VTVM. $\pm 10\%$ NO SIGNAL IN,
VOL AT MIN.
TUNING RANGE - 535KC TO 1620KC
IF - 455KC
ZERO SIGNAL CURRENT - APPROX 7.2MA (MIN VOL)
V VOLTAGES TAKEN WITH 120V AC POWER SOURCE

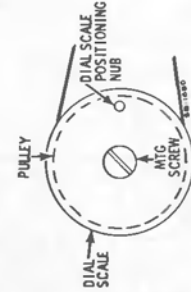


UPON COMPLETION OF
DIAL STRINGING, INSTALL
DIAL SCALE AS SHOWN.

DIAL STRINGING DETAIL

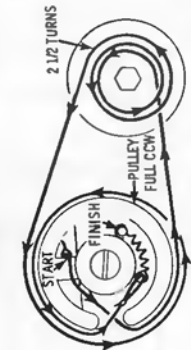

BEFORE STRINGING, ROTATE GANG
SHAFT & PULLEY FULLY COUNTER-
CLOCKWISE, THEY SHOULD BE IN
POSITION AS SHOWN.

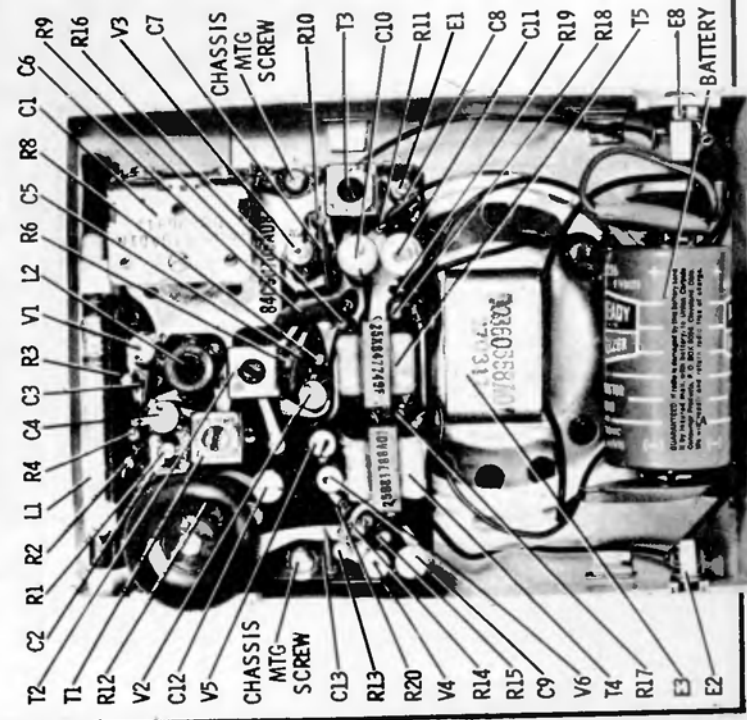


NOTE. C15 R5 R21 ARE LOCATED ON BOTTOM OF CHASSIS

MOTOROLA

MODELS BC2,BC3

CHASSIS HS-4124

(For additional data see next page, at right)

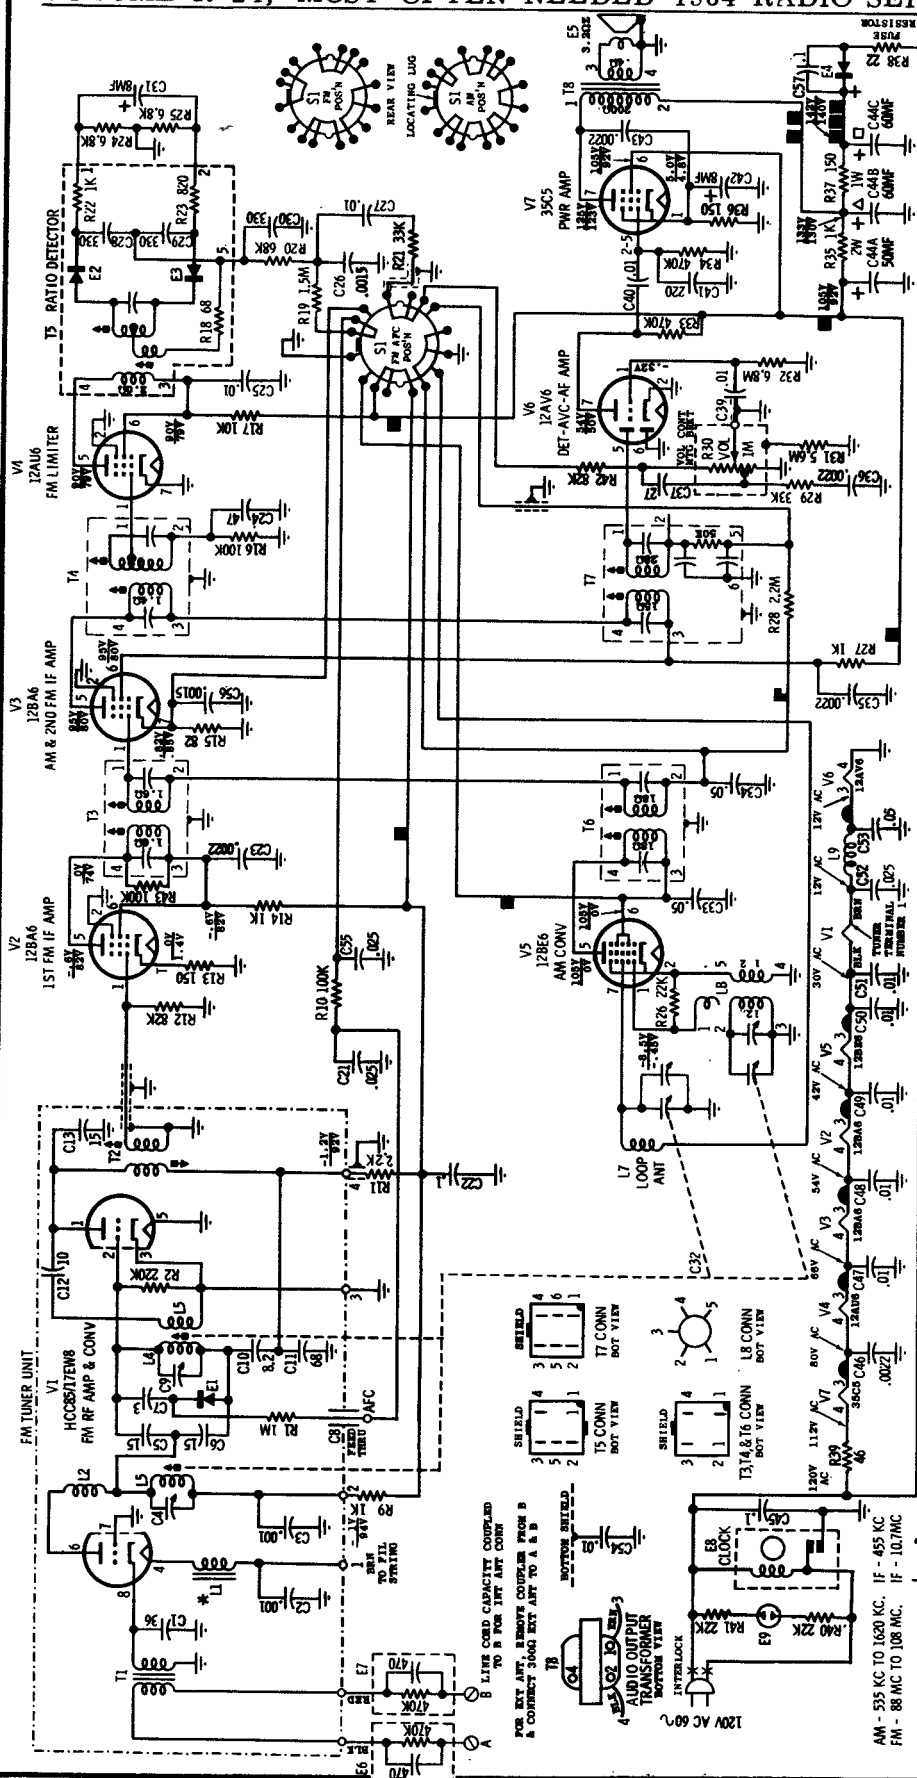


MOTOROLA

Models BC2, BC3,
Chassis HS-4124
(Continued)


TO REMOVE CHASSIS FROM CABINET

1. Remove control knobs - pull straight off.
2. Remove 4 clutch head screws holding cabinet back to cabinet.
3. Unsolder leads to cabinet back.
4. Remove two screws holding chassis support channel.
5. Remove two screws that mount the AM gang bracket to cabinet.
6. Remove dial crystal from cabinet - reach in back of set and push down plastic tabs with fingers. Crystal should slip forward at top. Bottom of crystal has tabs which fit into cabinet slots. Care should be taken to avoid damage to tabs.
7. Remove dial pointer - pull straight out.
8. Remove 2 chassis mounting palnuts from front of radio.
9. Unsolder speaker leads.
10. Unsolder lead of bottom shield.
11. Slide AM loop out of slots inside cabinet.
12. Slide chassis out of cabinet. (Clock leads need not be disconnected to work on chassis.)

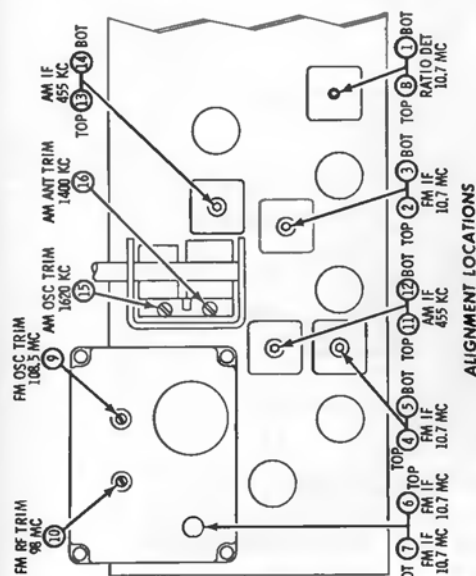

BOTTOM VIEW

PLATED CHASSIS BOARD WIRING AS VIEWED FROM BOTTOM
(COMPONENTS SHOWN ARE LOCATED ON OPPOSITE SIDE)

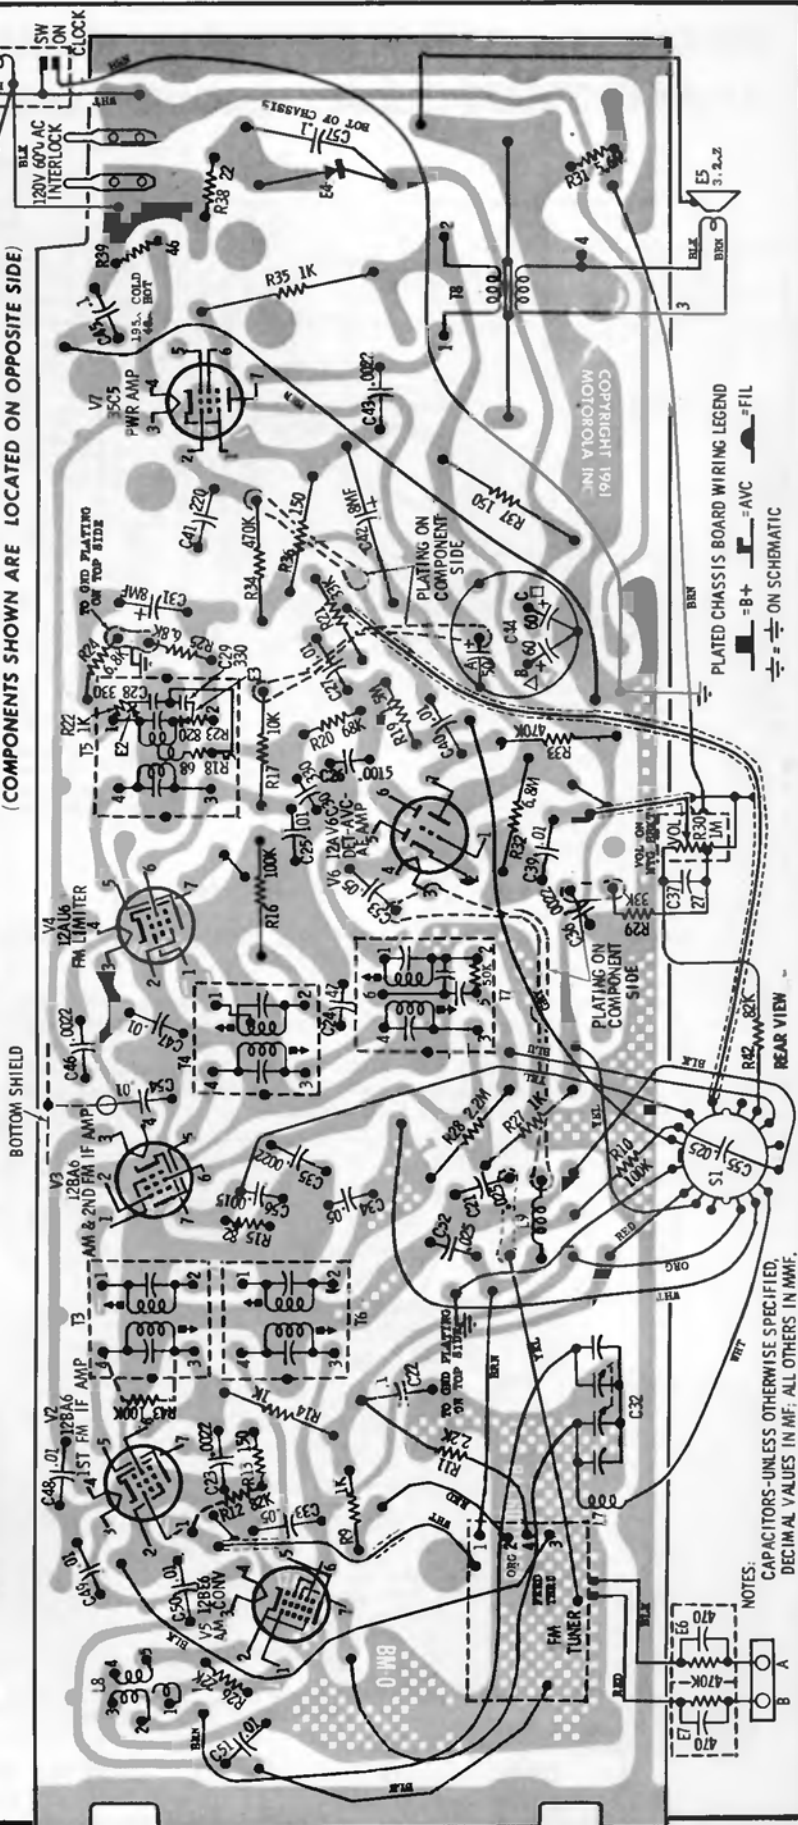


PLATED CHASSIS BOARD WIRING LEGEND
 — B+ — AVC — FIL
 — ON SCHEMATIC

NOTES:
 CAPACITORS—UNLESS OTHERWISE SPECIFIED,
 DECIMAL VALUES IN MF; ALL OTHERS IN MMF.

MOTOROLA

MODEL A24

CHASSIS HS-4136

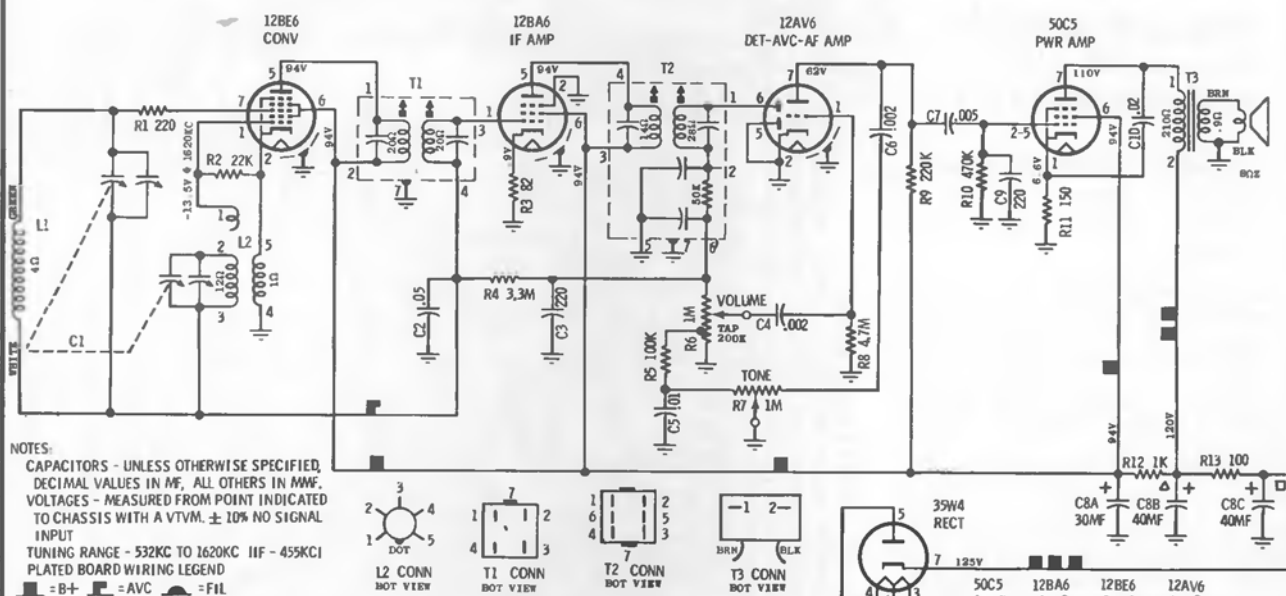


CHASSIS REMOVAL


1. Remove volume and tone knobs; do not attempt to remove captivated tuning knob.
2. Remove cabinet back - 4 screws hold it in place.
3. From rear, remove chassis mounting screw at base of chassis, if necessary, also remove two gang mounting screws.
4. Unsolder speaker leads (and gang leads, if gang was not removed in Step 3).
5. Slide chassis and antenna out of cabinet.

TUNING KNOB REMOVAL

1. Remove cabinet back - 4 screws hold it in place.
2. From rear, remove two gang mounting screws and pull back gang.
3. To remove tuning knob, remove speed clip from knob shank from rear of knob.

ALIGNMENT LOCATIONS

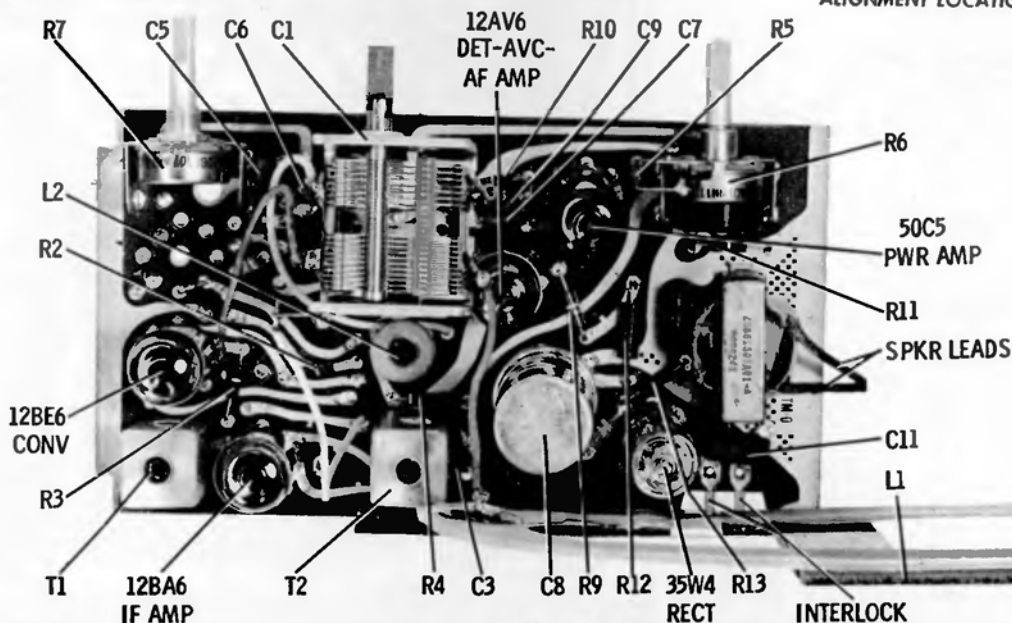

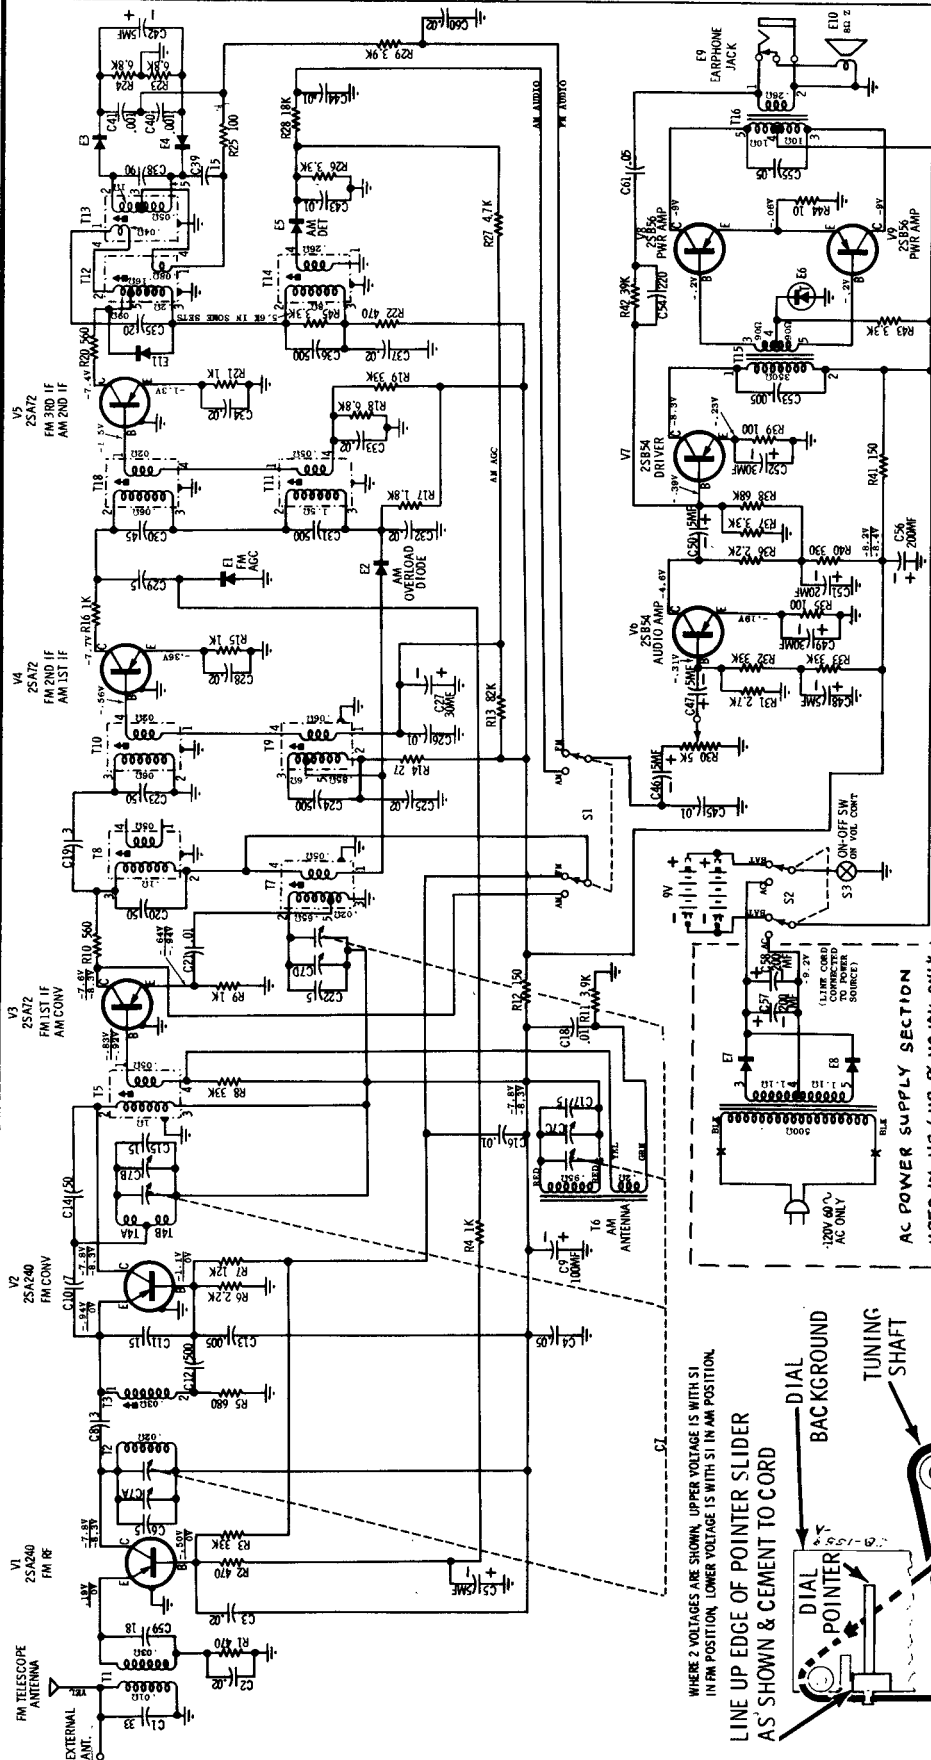

MOTOROLA



MODEL X70 CHASSIS HS-6117

MODEL X42-1 CHASSIS HS-6118

This material is also applicable to


MODEL X42 CHASSIS HS-1011

which is almost identical to X42-1

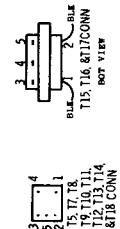


NOTES:
CAPACITORS-UNLESS OTHERWISE SPECIFIED,
DECIMAL VALUES IN MF, ALL OTHERS IN MMF.
VOLTAGES-MEASURED FROM POINT INDICATED
TO GROUND WITH A VTVM. $\pm 10\%$ NO SIGNAL IN
VOL AT MIN.
FM RANGE 88MC TO 102.0MC
AM IF 455KC
FM IF 10.7MC
ZERO SIGNAL CURRENT-APPROX 16MA (MIN VOL)
VOLTAGES TAKEN WITH 9V BATTERY

WHERE 2 VOLTAGES ARE SHOWN, UPPER VOLTAGE IS WITH S1
IN FM POSITION, LOWER VOLTAGE IS WITH S1 IN AM POSITION.
LINE UP EDGE OF POINTER SLIDER
AS SHOWN & CEMENT TO CORD

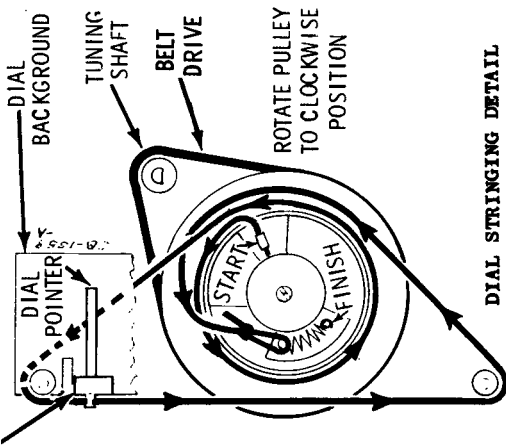


MOTOROLA MODEL X47

CHASSIS HS-6108

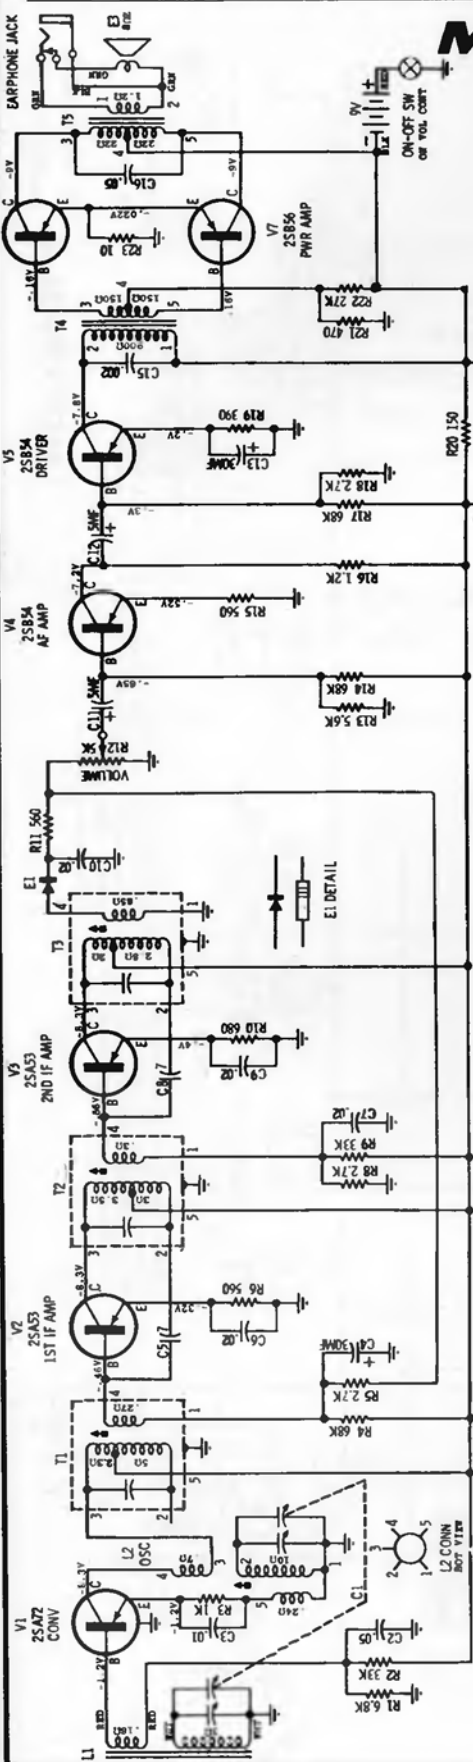


NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED,
DECIMAL VALUES IN μ F, ALL OTHERS IN MME
VOLTAGES - MEASURED FROM POINT INDICATED
TO GROUND WITH A VTVM $\pm 10\%$ NO SIGNAL IN,
VOL AT MIN.
ZERO SIGNAL CURRENT - APPROX 7.5 MA (MIN VOL)
TUNING RANGE - 532 TO 1620 KC
IF - 455 KC



PARTS LOCATION

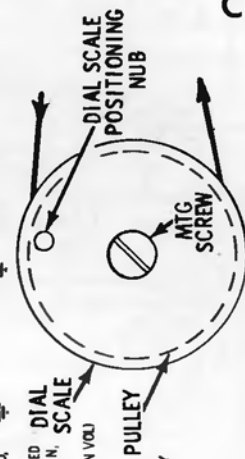


BEFORE INSTALLING DIAL
SCALE, REMOVE MTG SCREW
BUT HOLD ONTO PULLEY.



BEFORE STARTING STRINGING, ROTATE GANG
SHAFT & PULLEY FULLY COUNTERCLOCKWISE;
THEY SHOULD BE IN POSITION AS SHOWN.

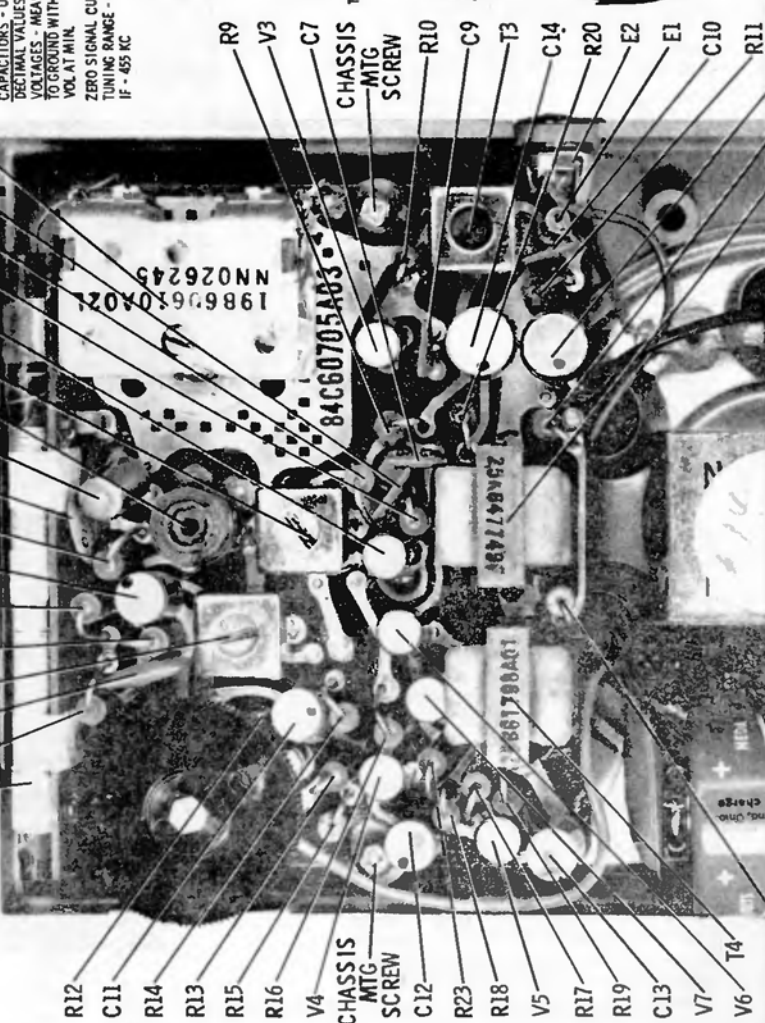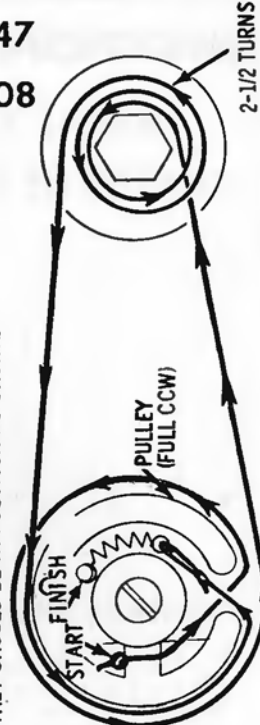


R21 NOTE: C5, C8, C15, C16 & R5 ARE LOCATED ON BOTTOM OF CHASSIS T5 R22 C17

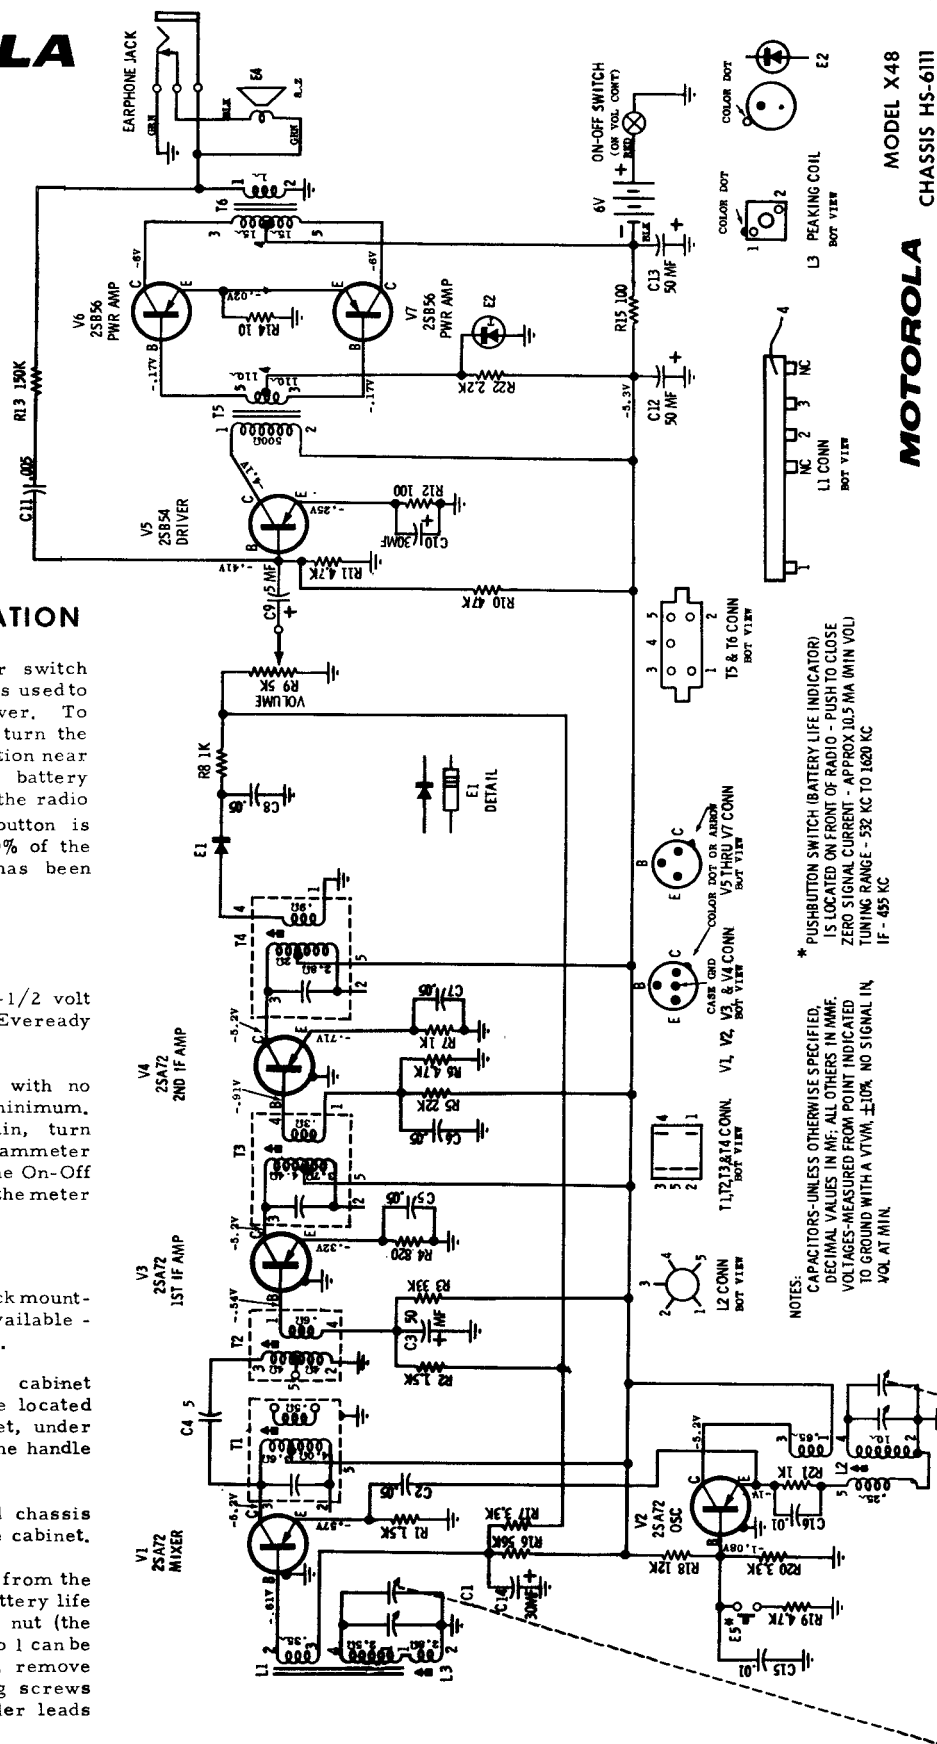MOTOROLA**MODEL X48****CHASSIS HS-6111**

MOTOROLA

MODEL X49, X50

CHASSIS HS-6112

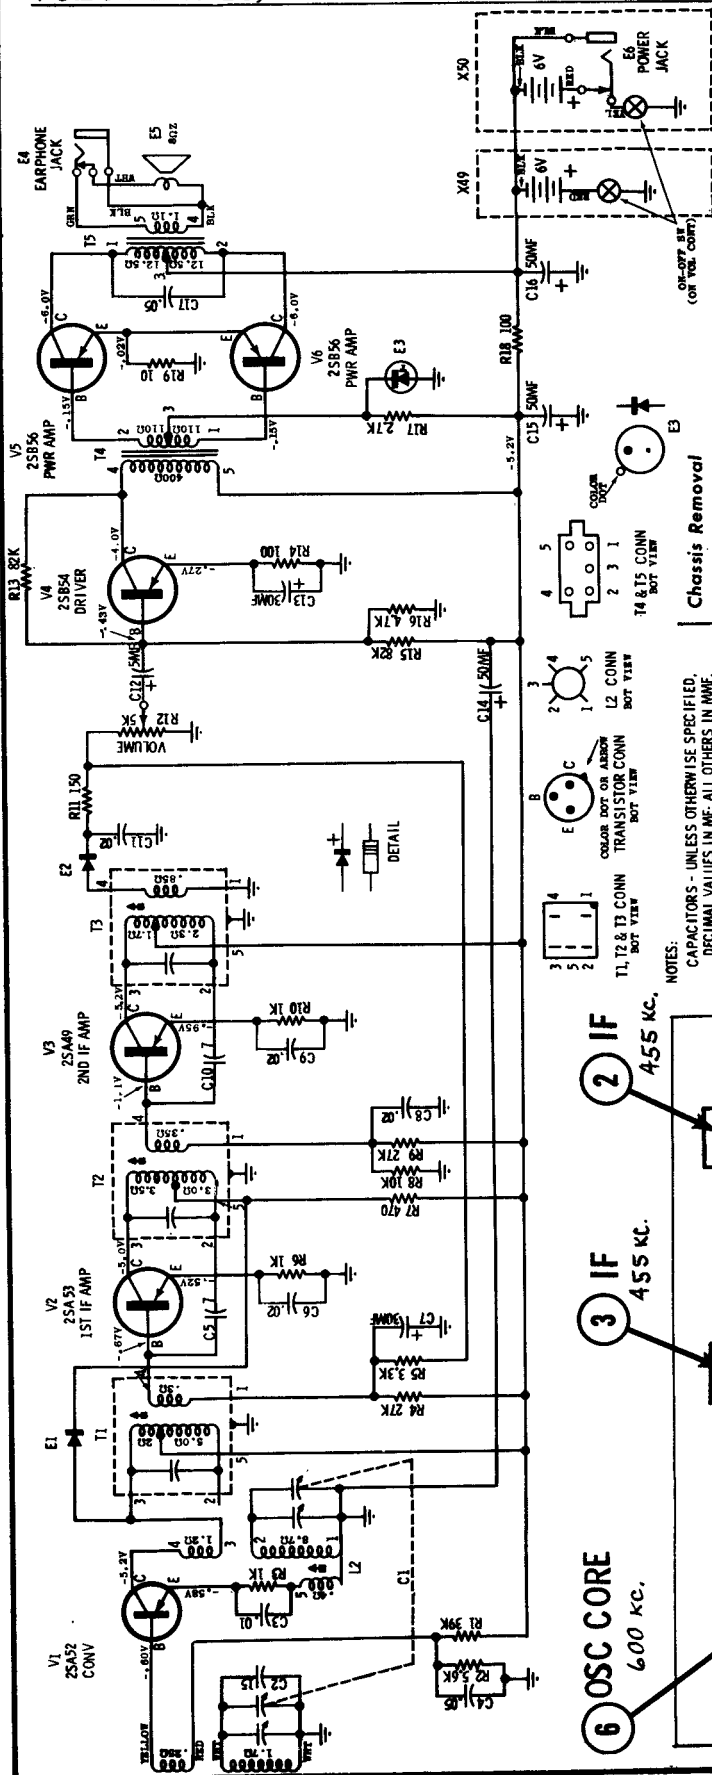

Chassis Removal


1. From front of radio, remove two (2) control knobs and the screw located under the tuning knob.
2. From rear of radio, open back panel by unsnapping the three (3) tabs at bottom of panel; then, lift battery retainer and AC power supply (X50 only) out of their compartment at rear of cabinet.
3. Lift armite insulator to gain access to chassis.
4. Remove three (3) chassis mounting screws and unsnap antenna from its mounting clamps. If necessary, unsolder leads connected to chassis before removing chassis from the cabinet.
5. If it becomes necessary to remove the earphone jack or the power jack (X50), a special inexpensive tool is available



NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF; ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED TO GROUND WITH A VTVM, $\pm 10\%$ NO SIGNAL IN, VOL AT MIN.
TUNING RANGE - 532 KC TO 1620 KC
IF - 455 KC
ZERO SIGNAL CURRENT - APPROX 9.5 MA (MIN VOL)

Power Supply

These radios operate from four (4) 1-1/2 volt batteries; use four (4) Eveready #1015 or equivalent. Model X50, in addition, can be powered from a 120 volt, 60 cycle AC power outlet by using the AC power supply included with the radio.

Battery Drain - 9.5 ma with no input signal and volume at minimum. To measure battery drain, turn radio off and connect a milliammeter across the terminals of the On-Off switch (observe polarity); the meter should read 9.5 ma.

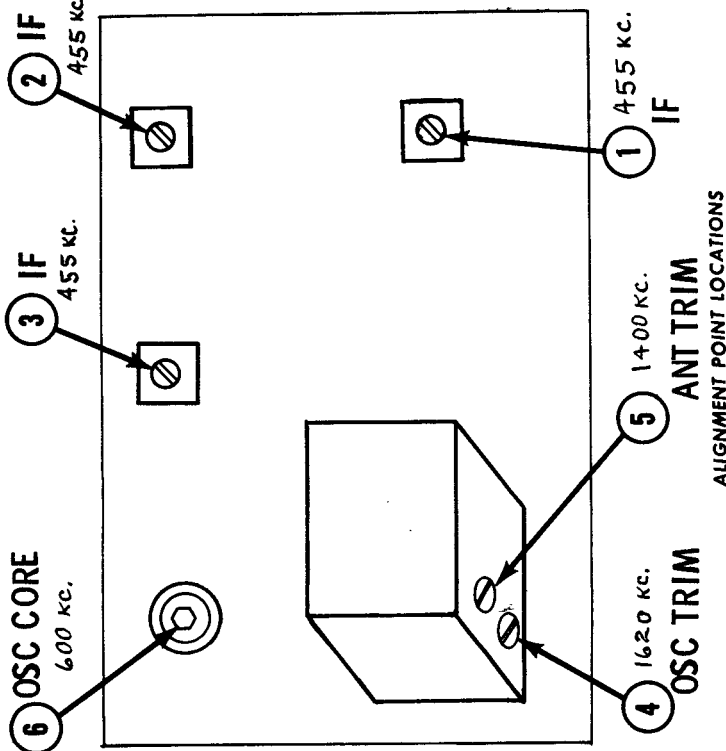

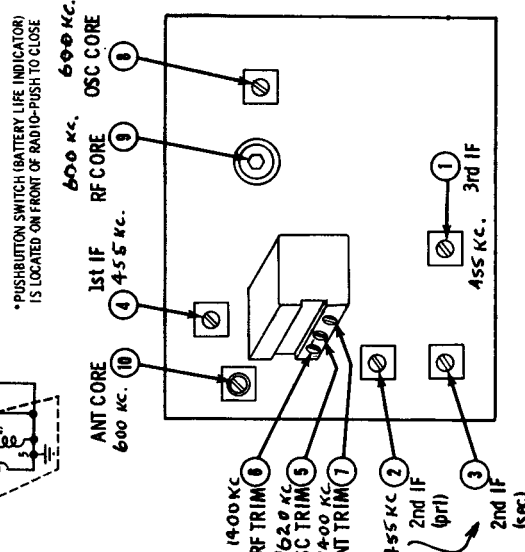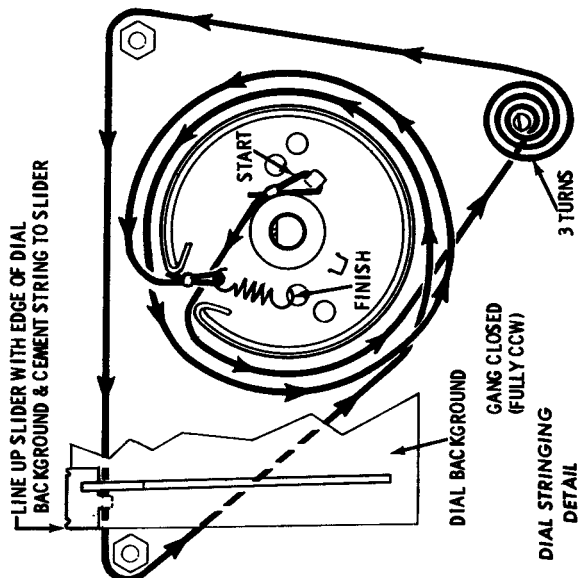


Chassis Service and Removal


1. From front of radio, remove two (2) control knobs and nuts that mount the earphone jack and the external power supply jack (a special tool is available - order Part No. 66A646211).
2. Remove three (3) cabinet back mounting screws (two (2) are located under the carrying handle; the other is located on the bottom of the cabinet).
3. Lift out escutcheon and chassis from cabinet back.
4. Remove two (2) antenna mounting screws.
5. Remove five (5) chassis mounting screws and lift up chassis and antenna; if necessary, unsolder the chassis connecting leads and remove the nut that mounts the battery life indicator switch.

MOTOROLA

MODEL X54
CHASSIS HS-6123

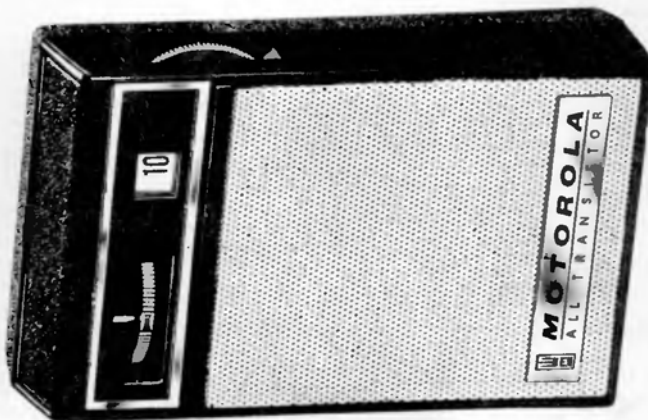

V5
25B56
PMR AMP

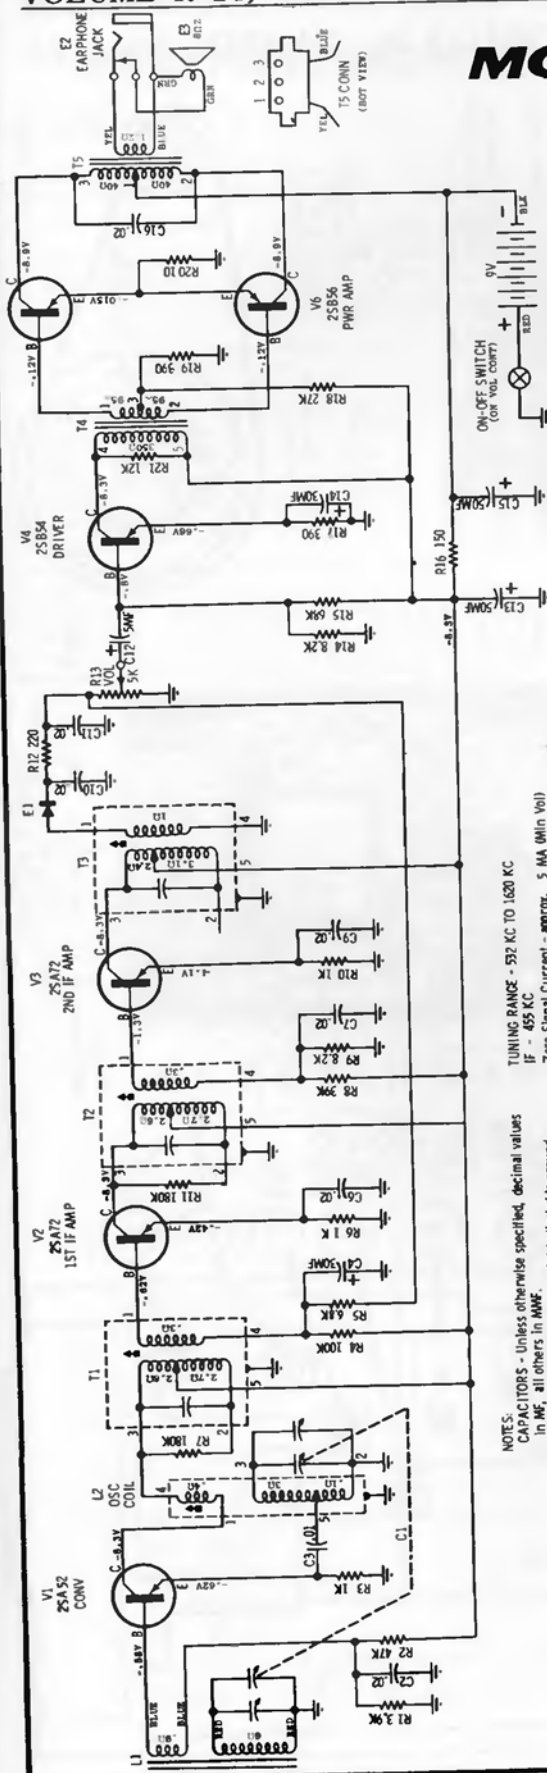

TUNING RANGE - 532 KC TO 1620 KC
IF - 455 KC
Zero Signal Current - approx. 5 mA (Min Vol)

NOTES:
CAPACITORS - Unless otherwise specified, decimal values
in MF, all others in MMF.
VOLTAGES - Measured from point indicated to ground
with a VTVM, $\pm 10\%$. No signal in, vol at min


Power Supply

Operates from one (1) 9-volt battery;
use Eveready #206 or equivalent.

Battery Drain - 5.0 ma with no input
signal and volume at minimum. To
measure battery drain, turn radio
off and connect a milliammeter
across the on-off switch (observe
polarity); the meter should read
5.0 ma.


Chassis Removal

1. Remove cabinet back by applying thumb pressure at bottom, then remove one (1) chassis mounting screw located next to tuning gang.
2. Spread cabinet slightly at right side (adjacent to volume control) until chassis is free from its two (2) chassis retainers (part of cabinet). Lift chassis up until it clears all three (3) retainers.
3. If necessary, unsolder all chassis connecting leads. If it becomes necessary to remove the earphone jack, pull jack retainer out of the groove in cabinet wall.




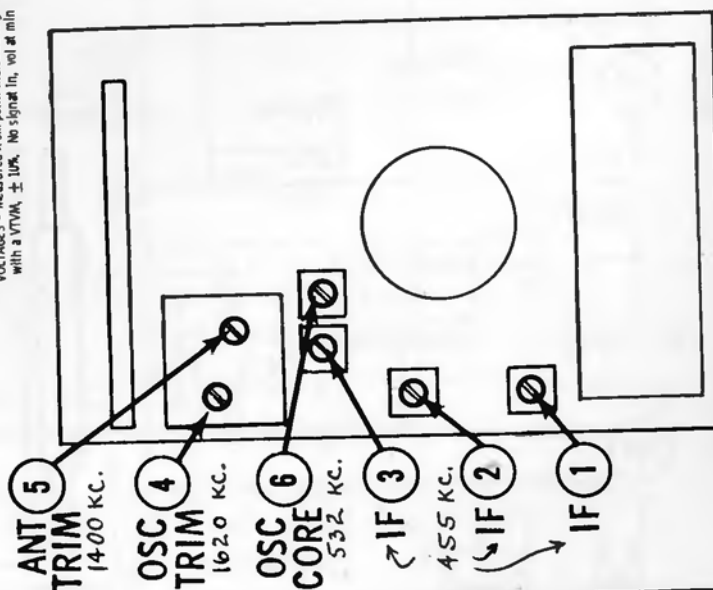


ALIGNMENT LOCATIONS

MOTOROLA MODEL X56 CHASSIS HS-6124

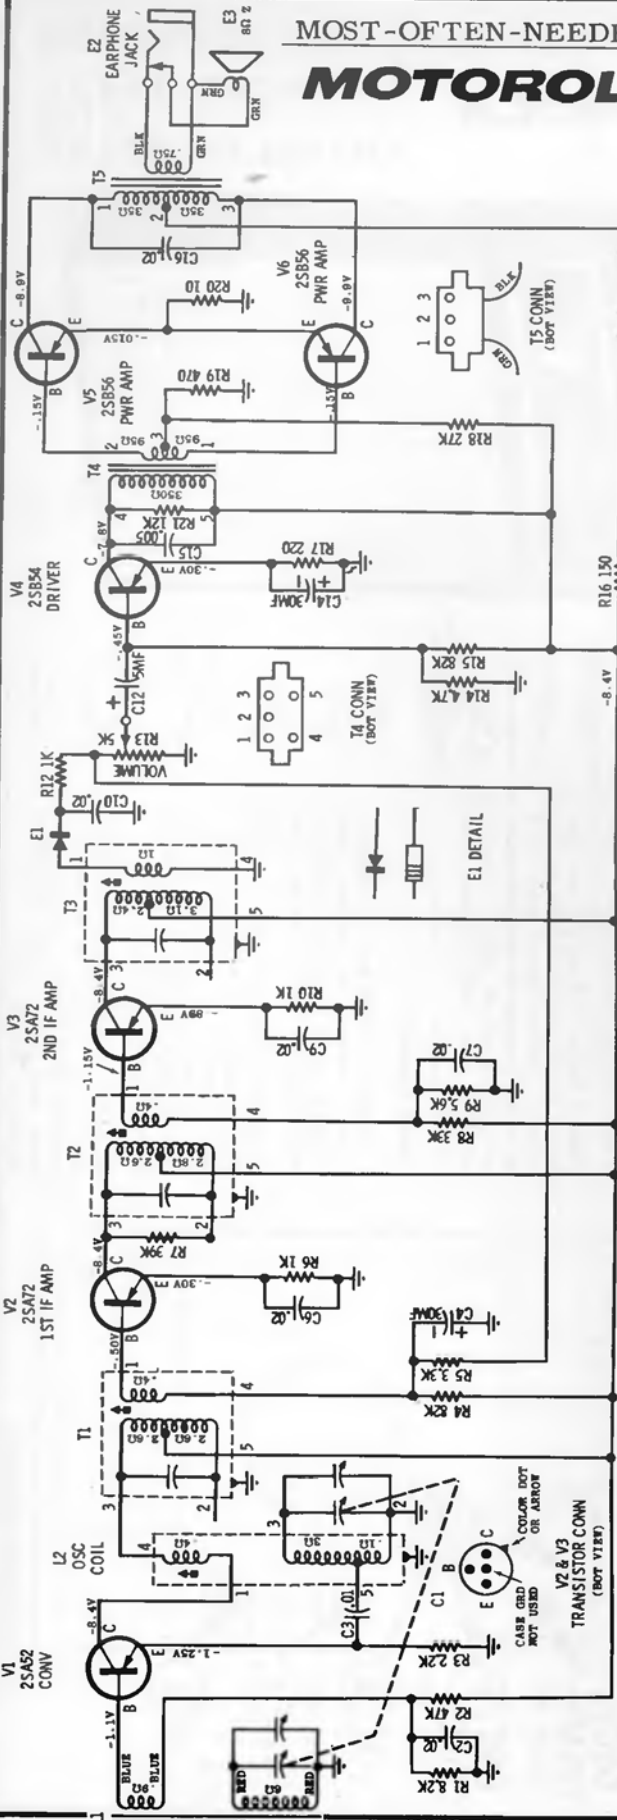

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF. ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED TO GROUND WITH A VTVM, $\pm 10\%$. NO SIGNAL IN VOL AT MIN. ZERO SIGNAL CURRENT - APPROX. 5.5 MA (MIN VOL)

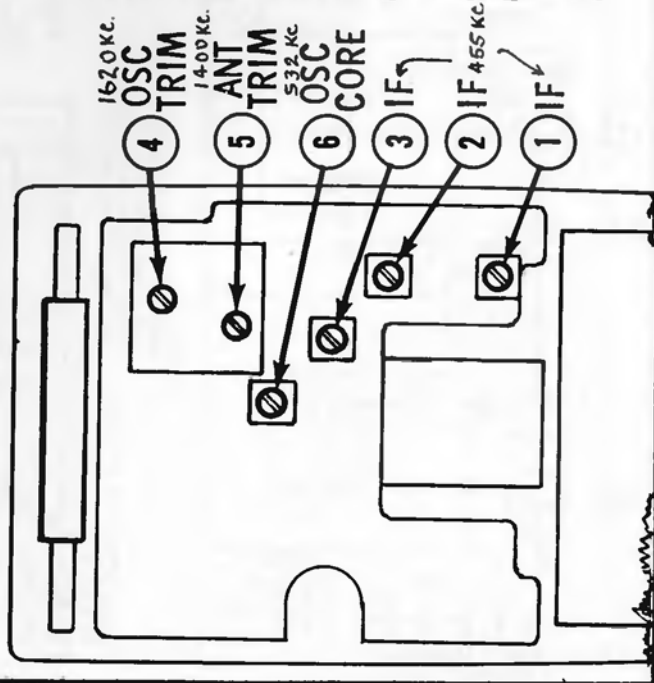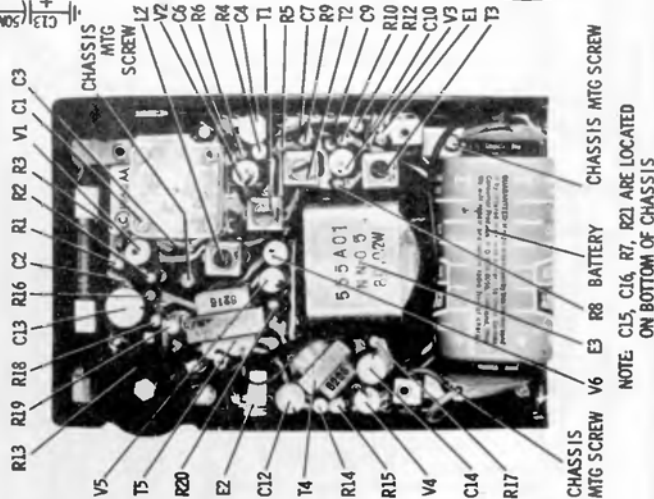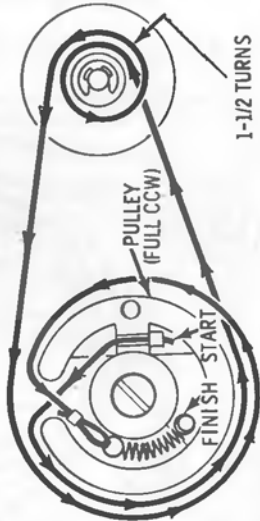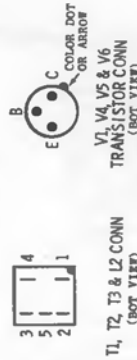

PARTS LOCATION

ALIGNMENT LOCATIONS

MOTOROLA MODEL SP51 CHASSIS HS-1134**CHASSIS REMOVAL**

1. Remove 4 screws that mount the record changer mounting board to the cabinet.

2. Lift up the record changer mounting board to gain access to underside of record changer, then unsolder and disconnect all leads that are connected from chassis to record changer and speaker.

3. Remove 3 control knobs and two large chassis mounting nuts and washers, then remove chassis from cabinet; if necessary, remove 4 screws that mount control bracket to chassis to expose chassis interior and controls.

TONE ARM
RAISED TO
VERTICAL
POSITION

STYLUS ROTATED
IN "V" OF CARTRIDGE


"V" OF CARTRIDGE

REAR PORTION
OF STYLUS


STYLUS ROTATED
TO 78 RPM
POSITION

RETAINING
CLIP


LINE CORD REVERSAL - For minimum hum, insert line cord plug in both positions. Leave it in the position that provides minimum hum.

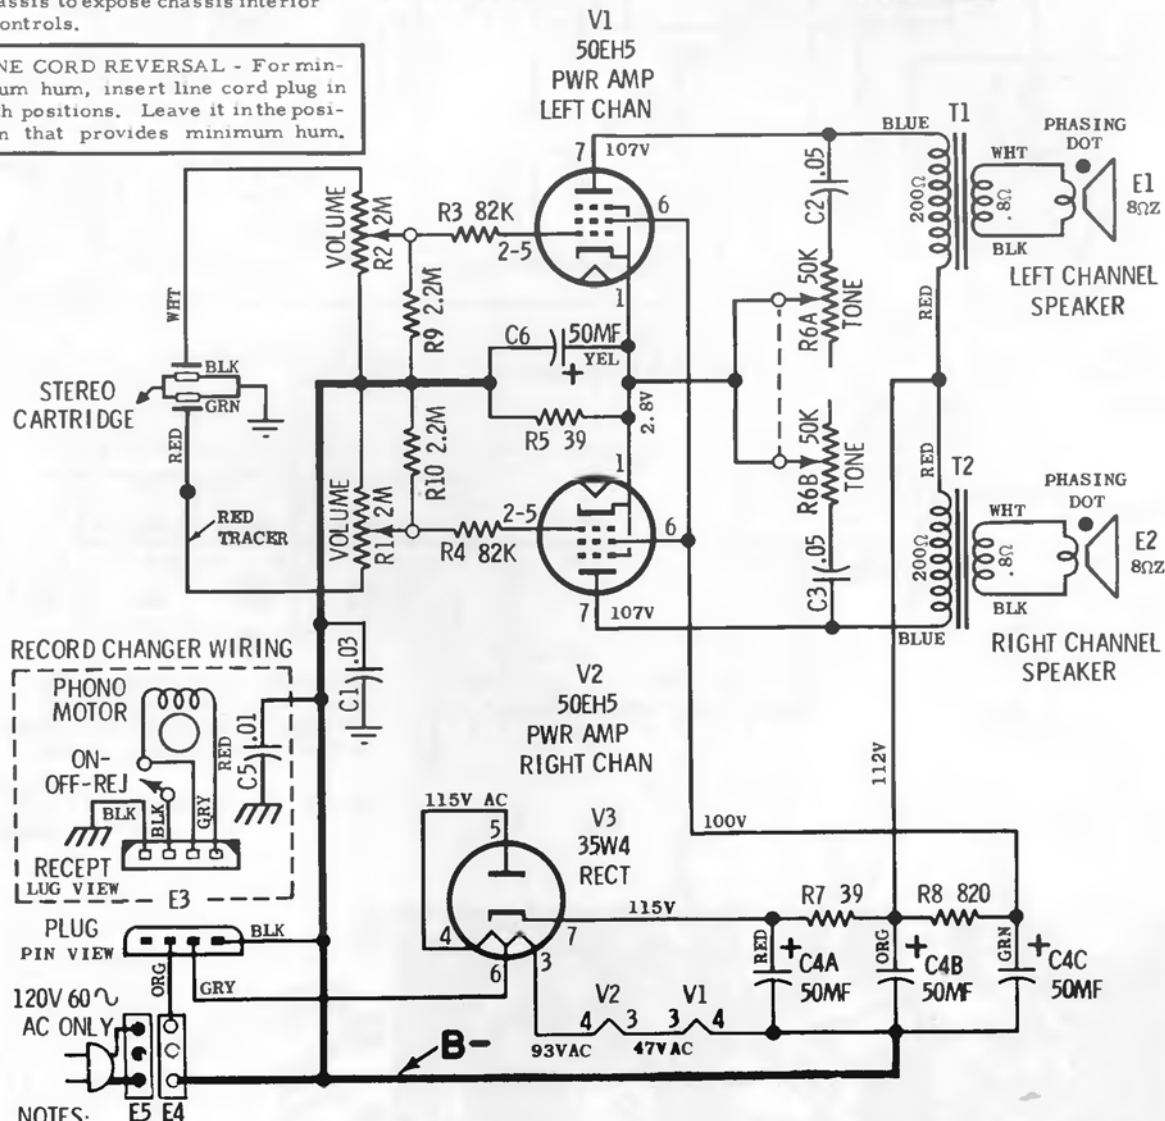

MOTOROLA MODELS SP52, SP511 CHASSIS HS-1135



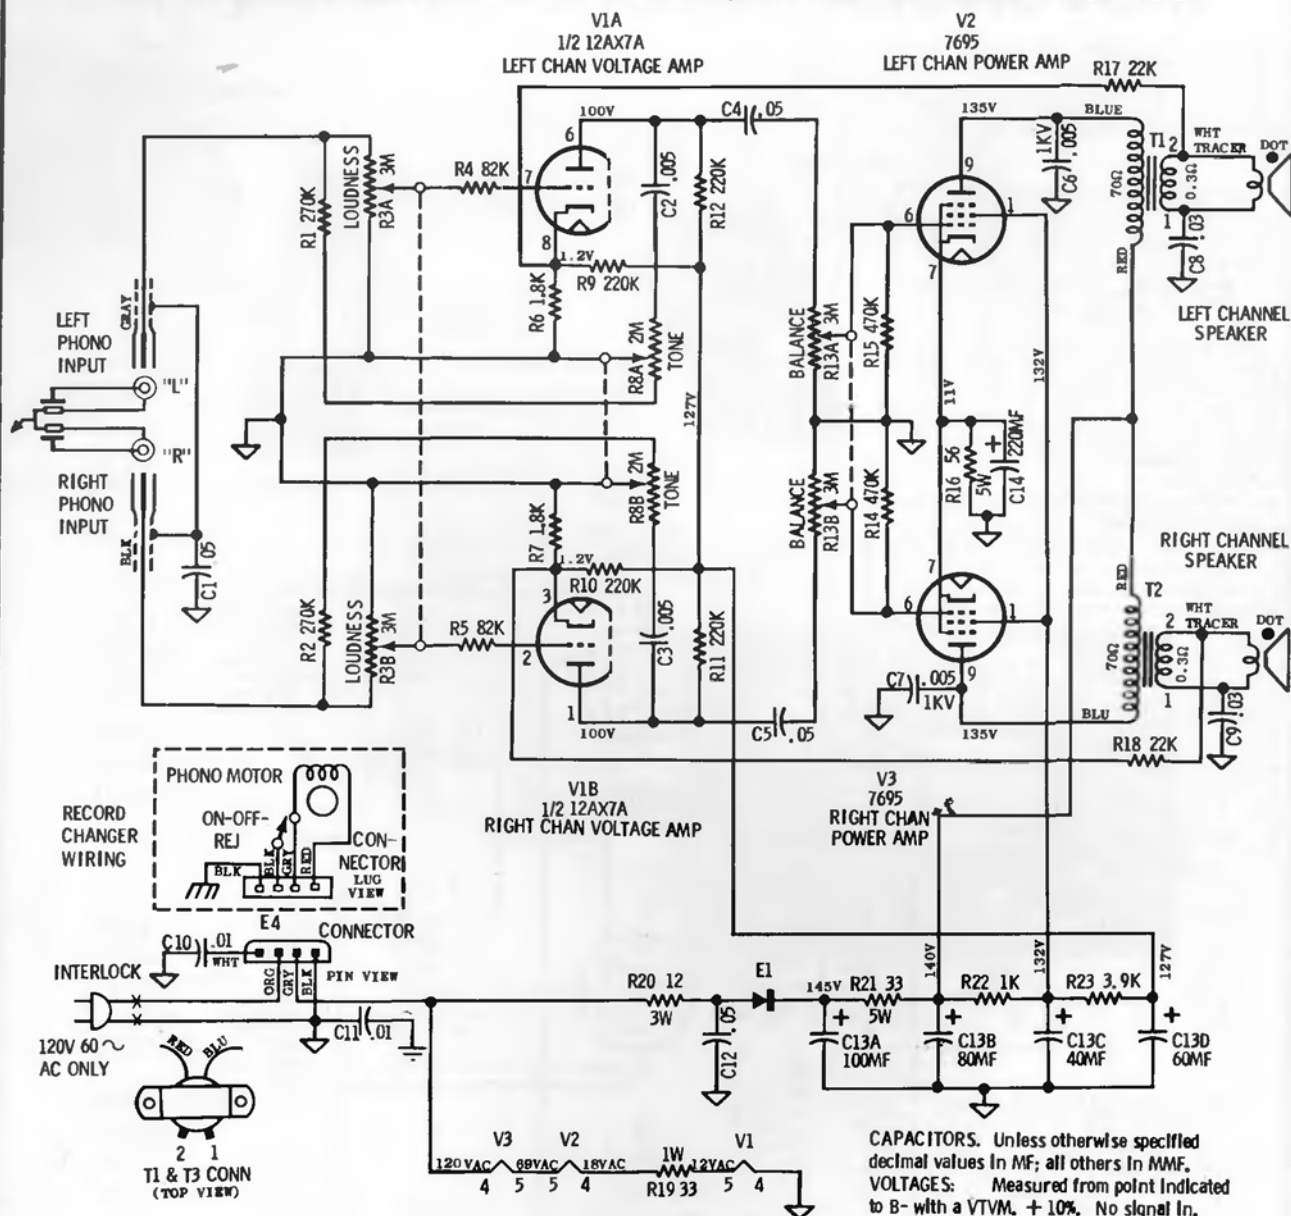


⏚ = B- $\frac{1}{\square}$ = CHASSIS = RECORD CHANGER FRAME

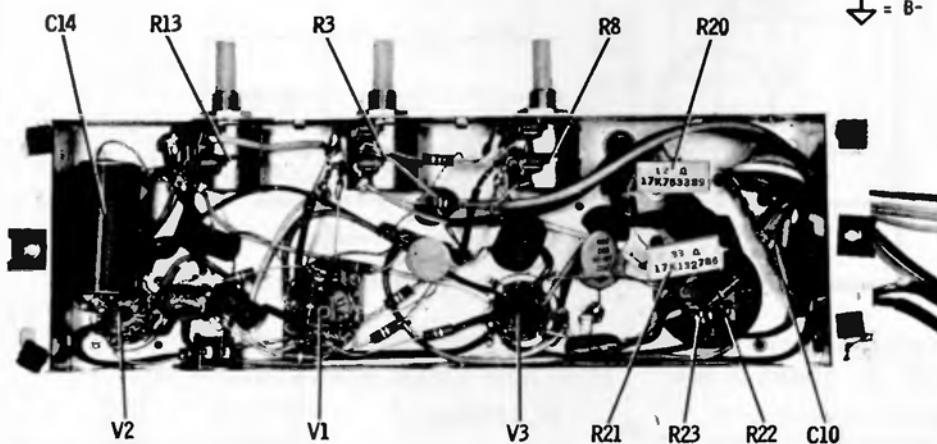

PARTS LOCATION



(This tuner is used in various combinations)

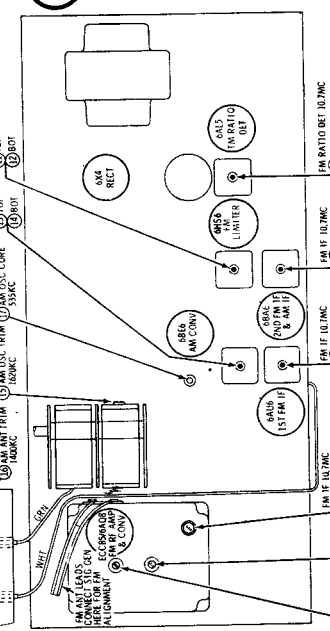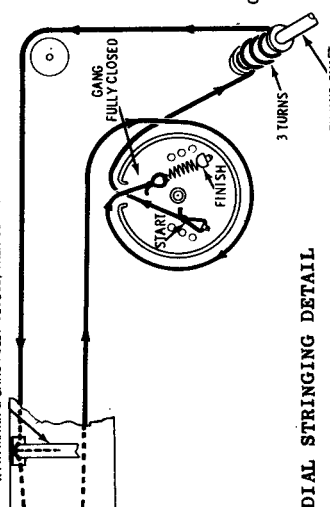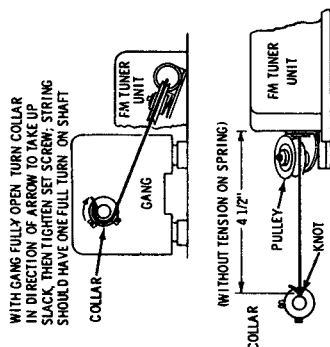

DIAL STRINGING DETAIL

ALIGNMENT LOCATION DETAIL

MOTOROLA Model HK54-2, Chassis HS-996, used in various FM-Stereo combinations

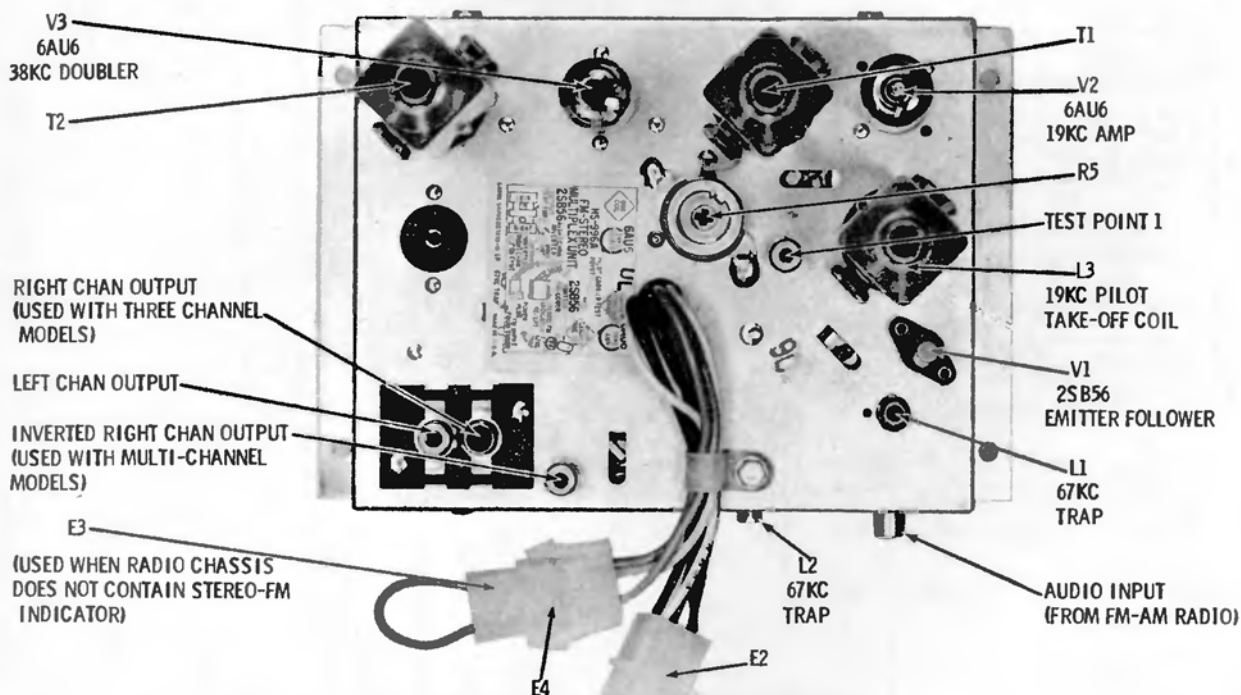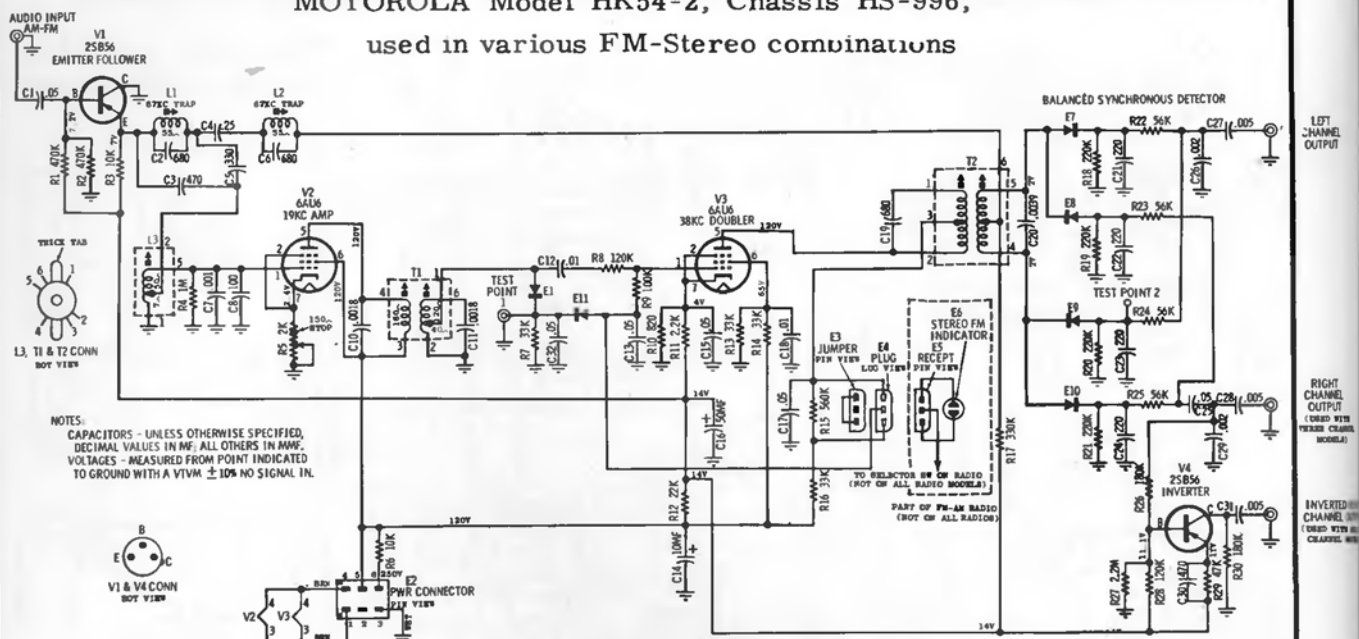

METHOD ALIGNMENT OF HK-54-2 USING AN FM-STEREO STATION AIR SIGNAL

NOTE: Storecast traps cannot be aligned using an air signal. A generator must be used for trap alignment.

19Kc Pilot Carrier Channel Alignment And 38Kc Frequency Doubler Adjustment

With stereo radio tuned to a good stereo-FM broadcast and output of radio applied to audio input jack of HK-54-2, proceed as follows:

1. Connect positive lead of VTVM to Test Point 1; negative lead to ground.
2. Adjust L-3 and primary and secondary of T-1 for maximum indication on VTVM.
3. Move VTVM to Test Point 2 and adjust T-2 primary and secondary for maximum meter indication.
4. Move VTVM to Test Point 1 and while monitoring this voltage, care-


fully adjust L-3 for maximum separation in left and right speakers on program material. This maximum separation point should be very near peak meter indications.

Adjustment of Sensitivity Control, R 5


The control should be set so that the stereo monitor lights on stereo signals but does not light on noise in between stations.

MOTOROLA



Chassis HS-1048 and
HS-1050 used in
Models SK-77-2,
SK-78-1, SK-79-1,
SK-111, SK-112,
SK-115, SK-116.

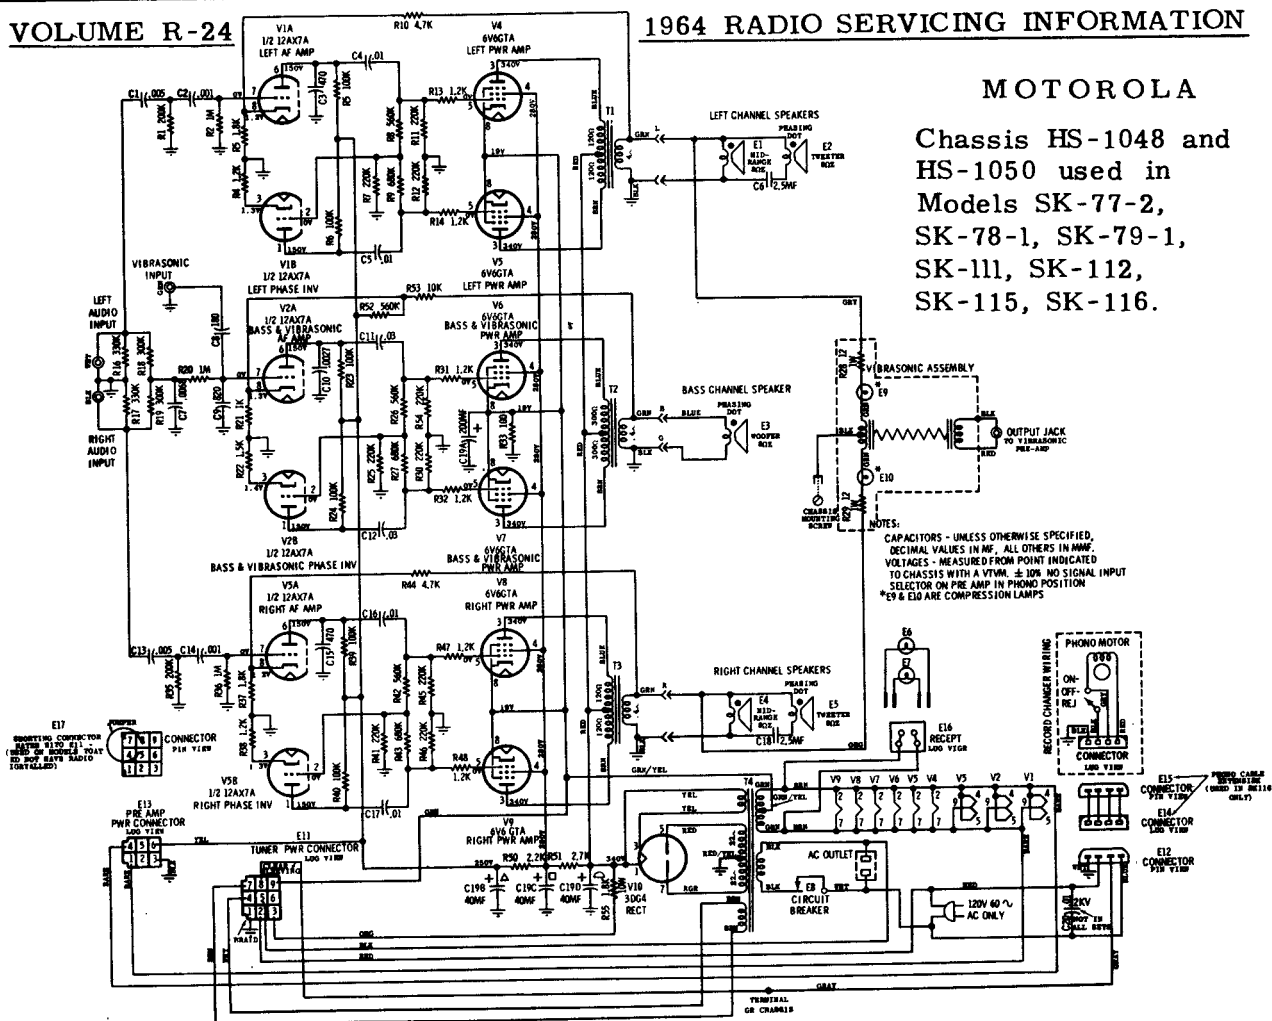

HS-1048 POWER AMP & POWER SUPPLY SCHEMATIC DIAGRAM



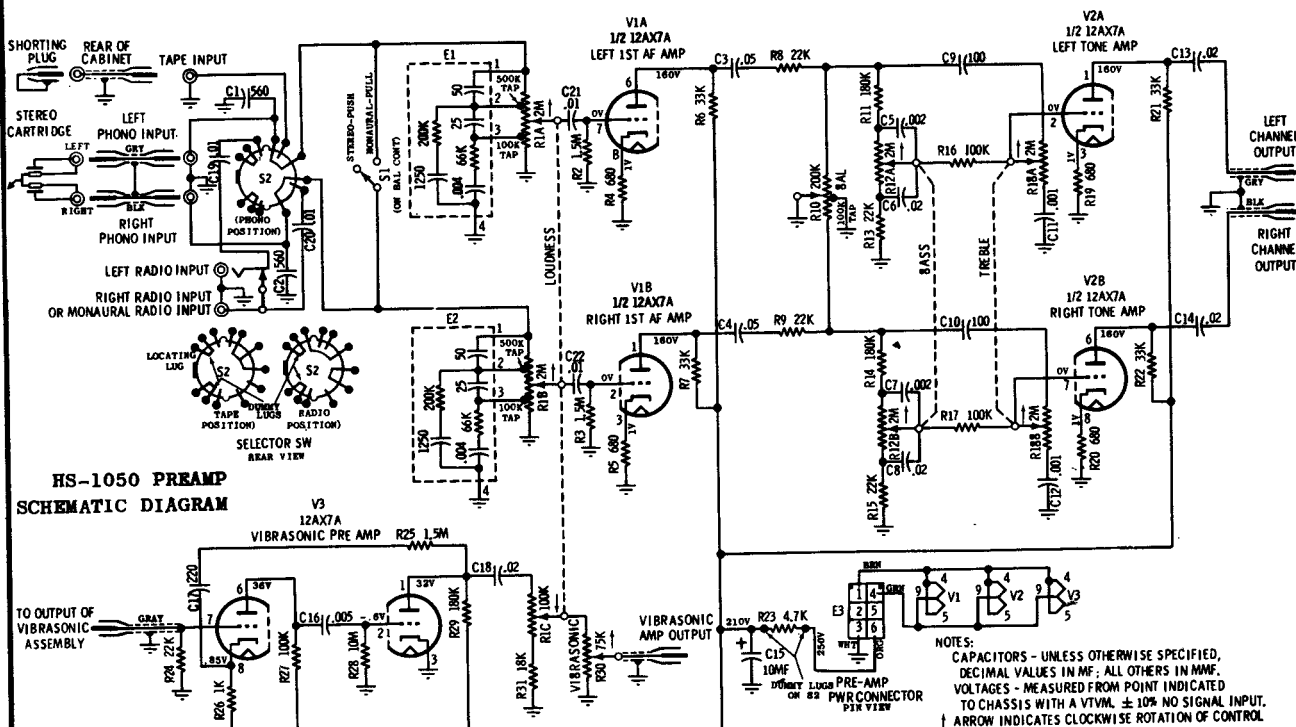


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

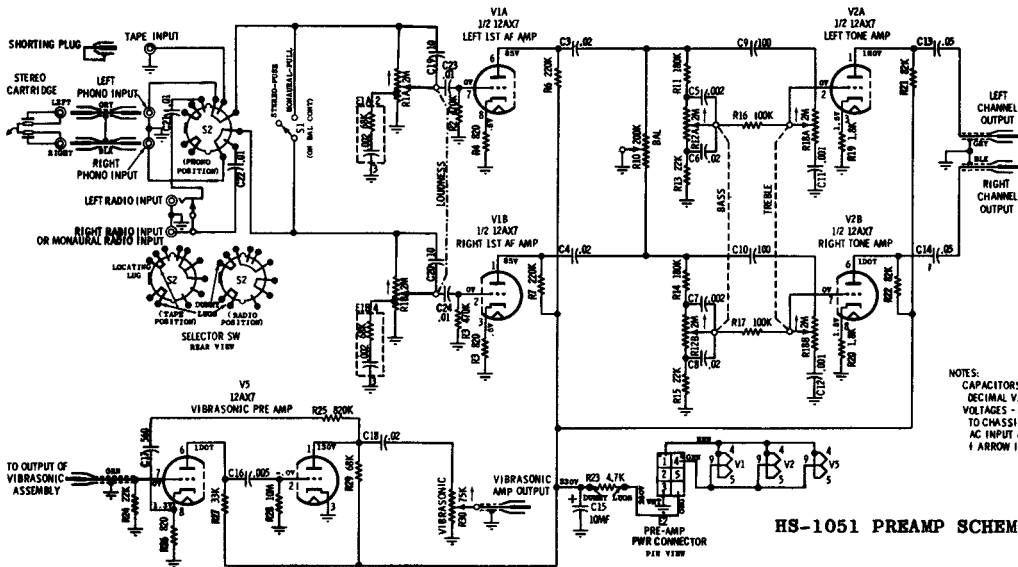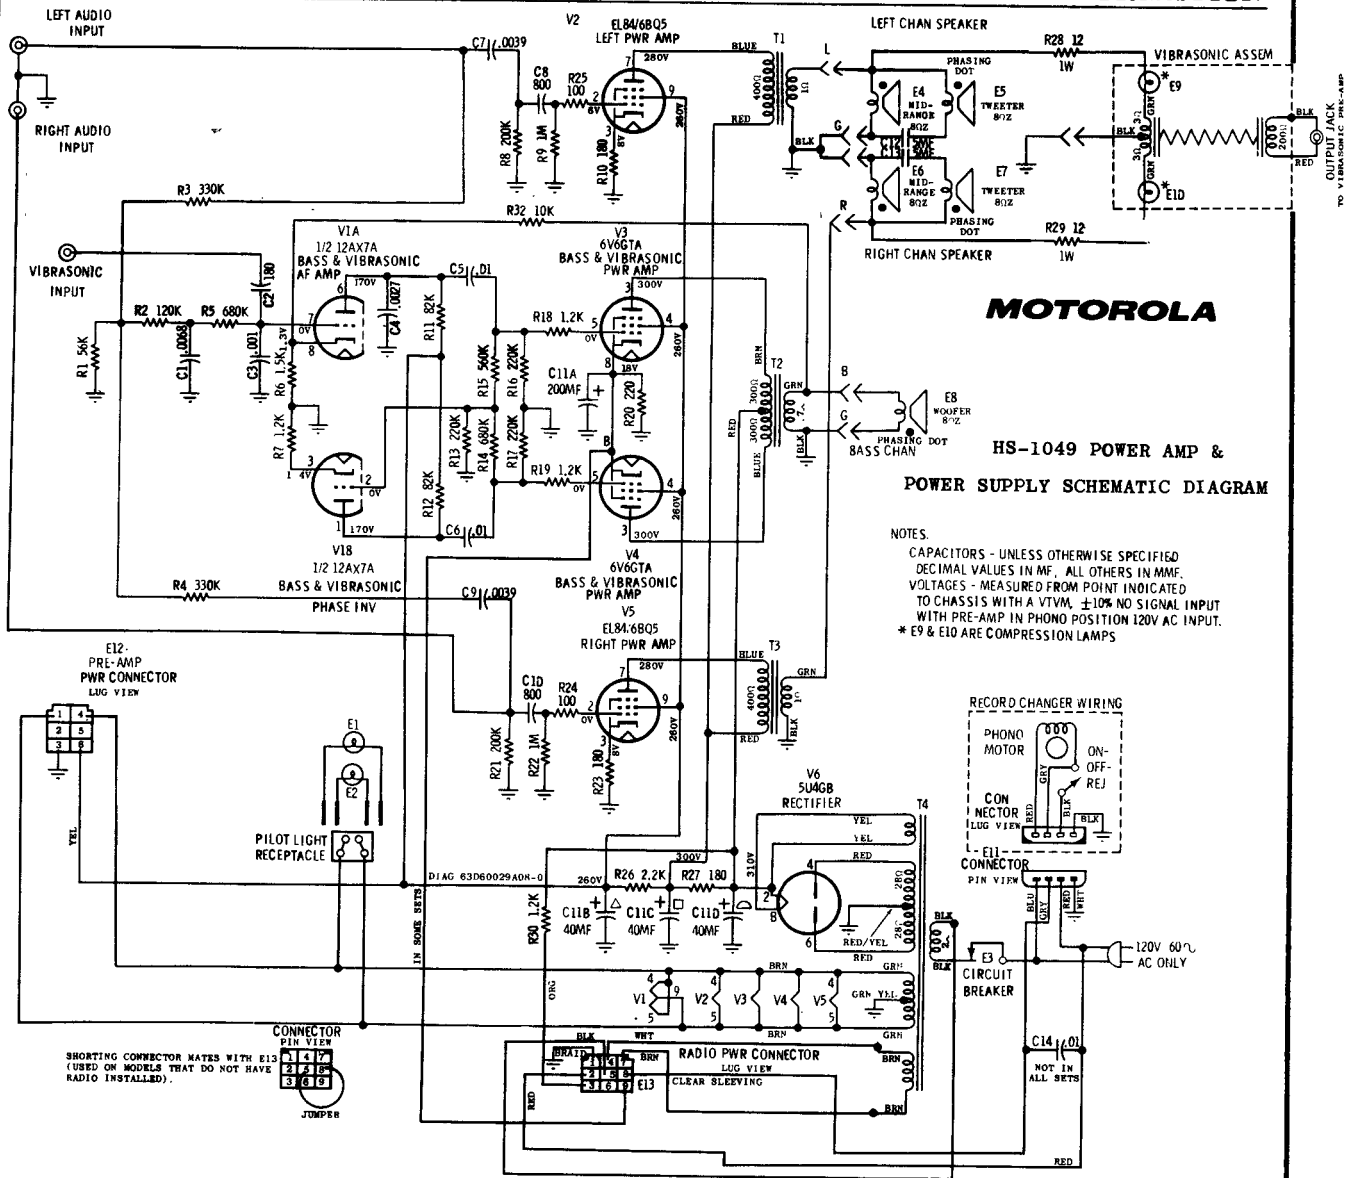

Chassis HS-1049
with HS-1051
used in sets
SK106, SK107,
SK109, SK110.

MOTOROLA MODELS SK100-4, SK124, SK125 CHASSIS HS-1201

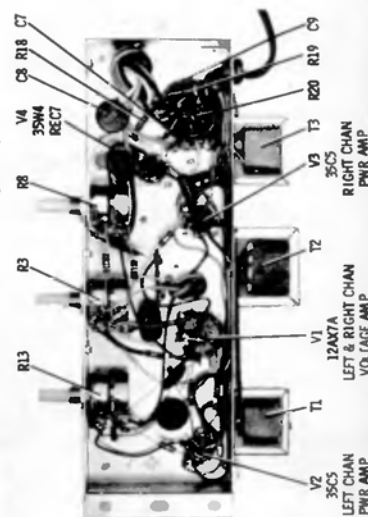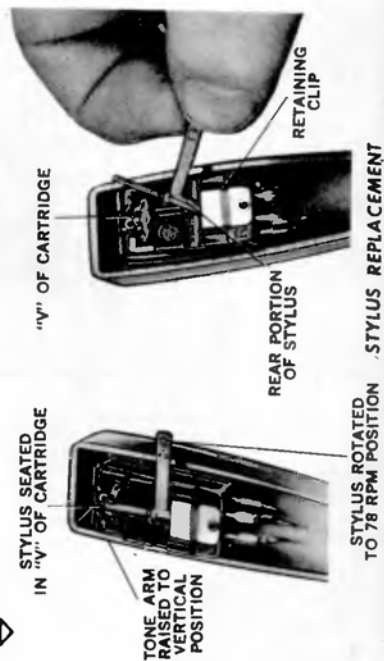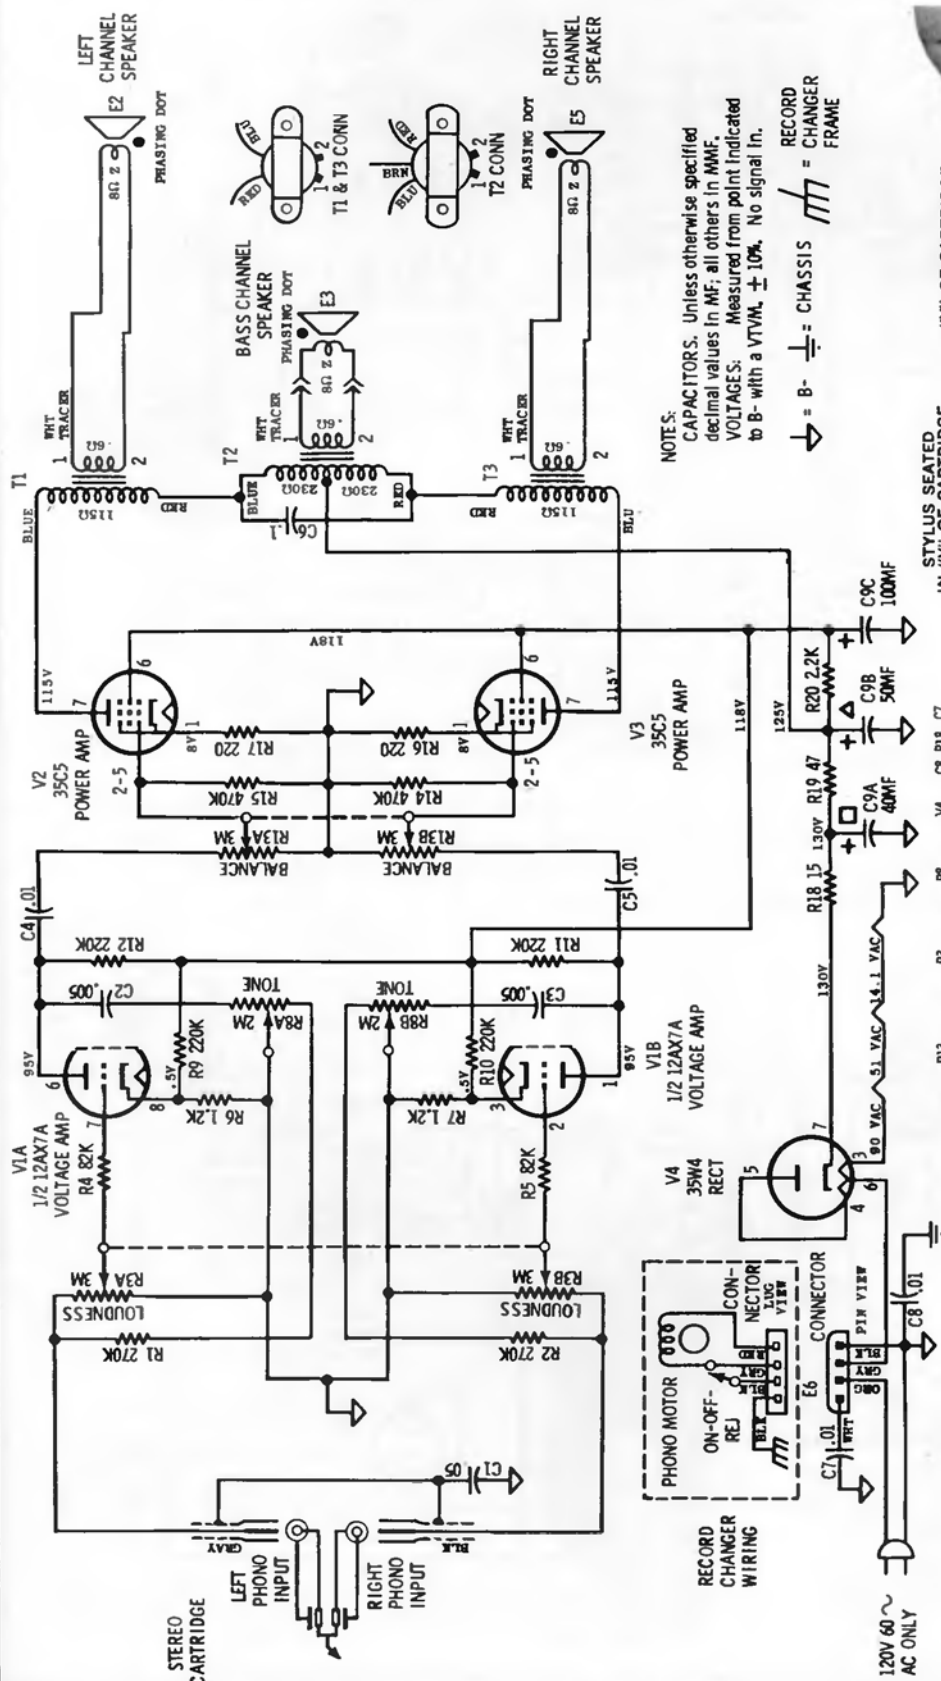


CHASSIS REMOVAL


1. From bottom of cabinet, disconnect all leads and cables connected to chassis (on SK100-4, remove bottom panel first).
2. From inside record changer compartment, remove 3 control knobs and loosen large hex nuts located under knobs; then grasp the chassis from bottom and loosen nuts completely.
3. Remove chassis from cabinet.

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


MOTOROLA Models SK103, SK104, SK105, SK108, Chassis HS-1055, HS-1102

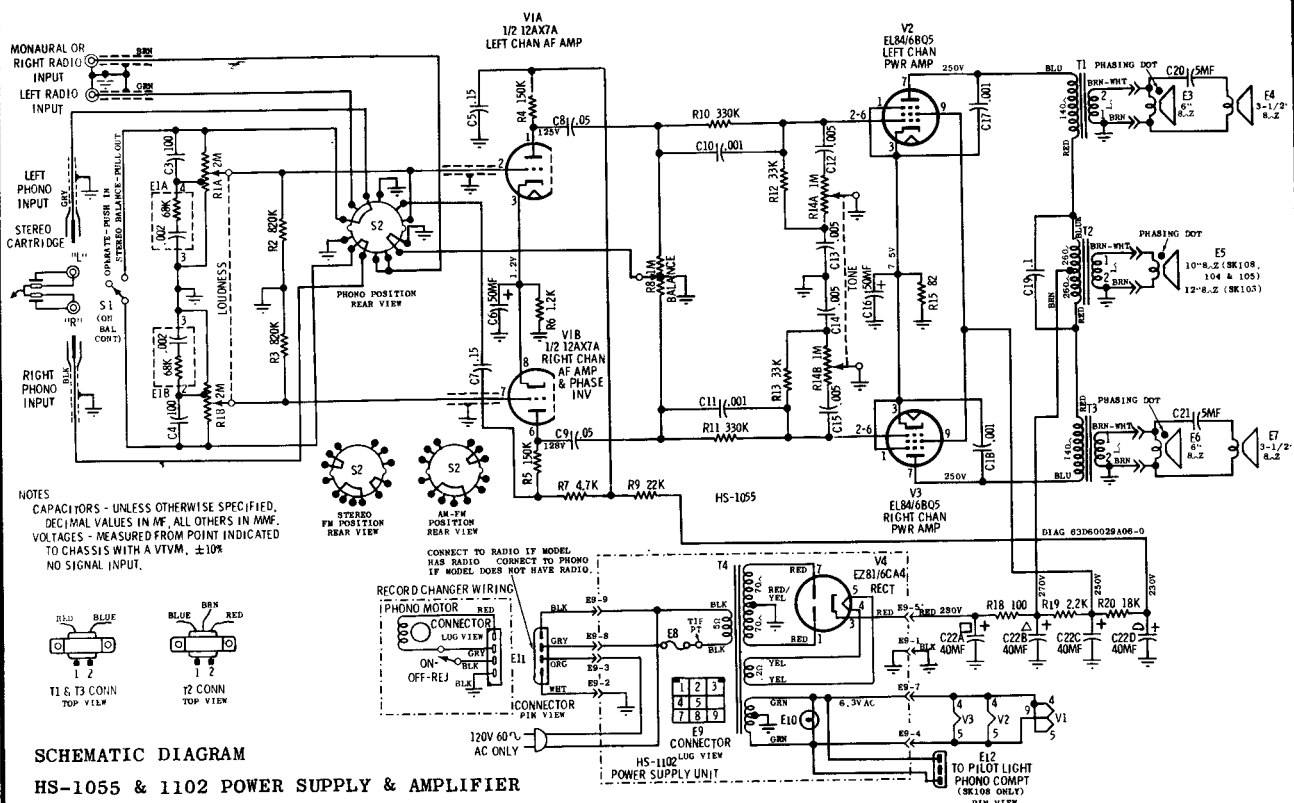


MOTOROLA Model SP41, Chassis HS-1059

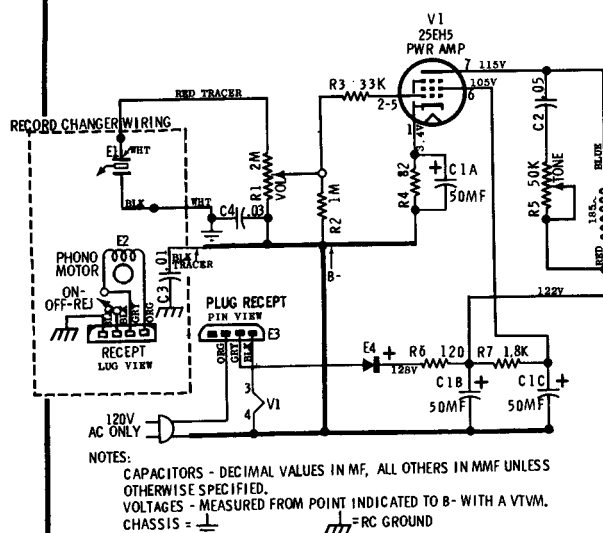

MOTOROLA Models SP42, SP43, Chassis HS-1061

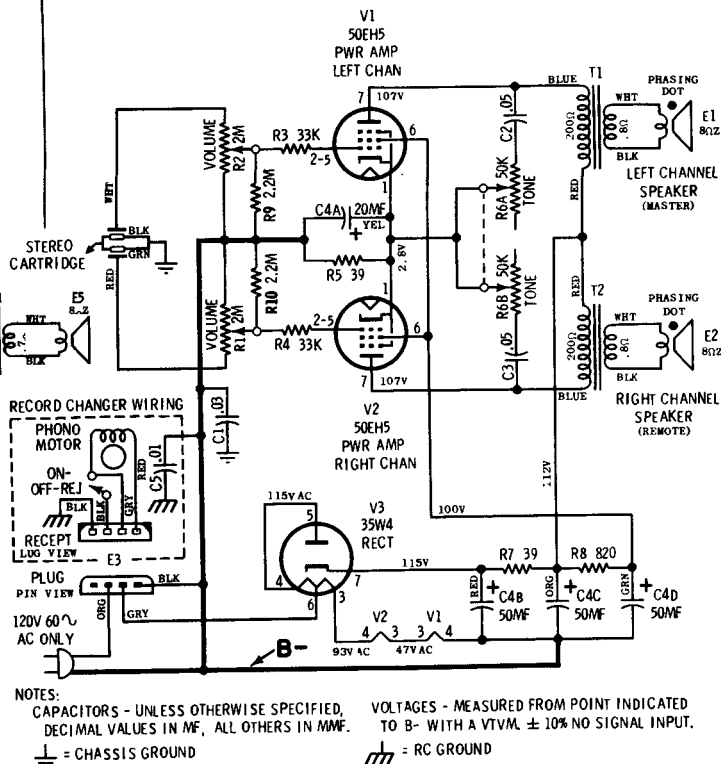

MOTOROLA MODEL SK119 CHASSIS HS-1192

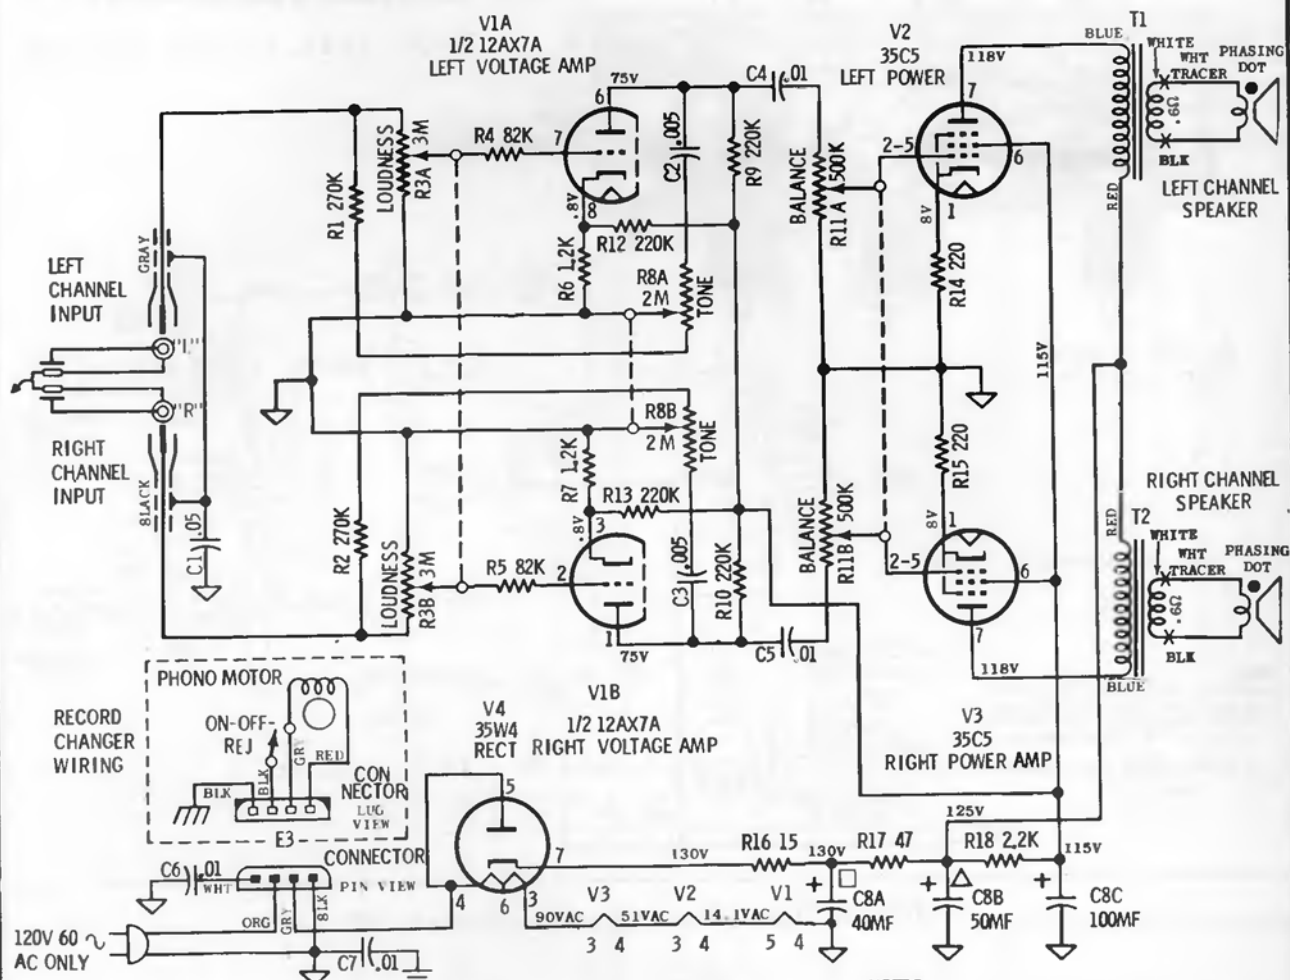


CHASSIS REMOVAL

1. From bottom of cabinet, disconnect all leads and cables connected to chassis.
2. From inside record changer compartment, remove 3 control knobs and loosen large hex nuts located under knobs; then grasp chassis from bottom and loosen nuts completely.
3. Remove chassis from cabinet.

RECORD CHANGER REMOVAL


1. Turn the 2 changer mounting screws clockwise until they are flush with the changer base.
2. From underside of changer, disconnect all cables from record changer.
3. Turn the mounting clips located at the ends of the mounting screws so they are parallel with the mounting screws, then lift changer out of cabinet.

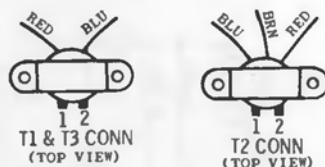

NOTES:

CAPACITORS - Unless otherwise specified decimal values in MF; all others in MMF.
VOLTAGES - Measured from point indicated to B- with a VTVM, + 10%. No signal in.


↓ = B- ⊥ = CHASSIS [] = RECORD CHANGER FRAME

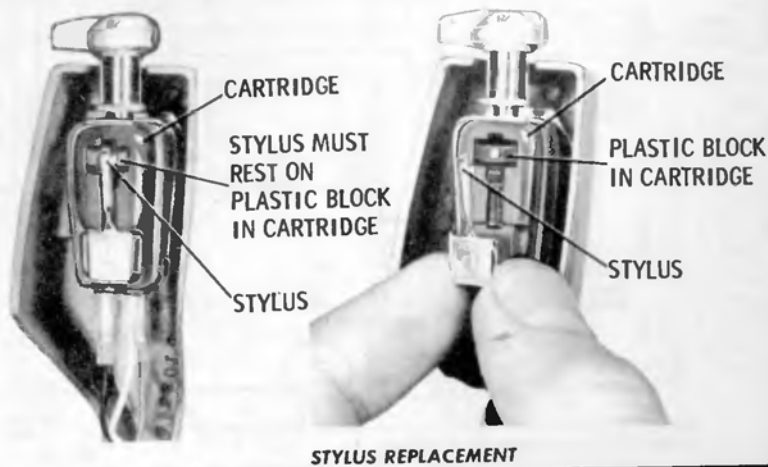

STYLUS REPLACEMENT


MOTOROLA

Model SP44, Chassis HS-1058

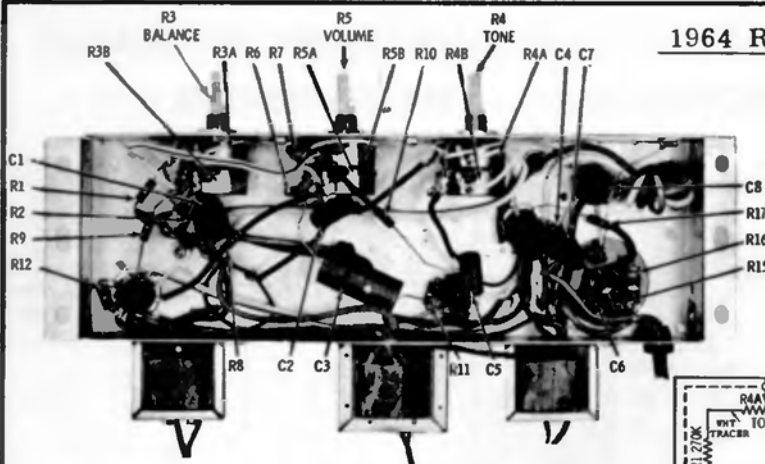
HS-1058 CHASSIS
PARTS LOCATION

HS-1058 SCHEMATIC DIAGRAM

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED
DECIMAL VALUES IN MF, ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED
TO B- WITH A VTVM, $\pm 10\%$ NO SIGNAL INPUT.
— = CHASSIS GROUND — = RC GROUND
— = 0—

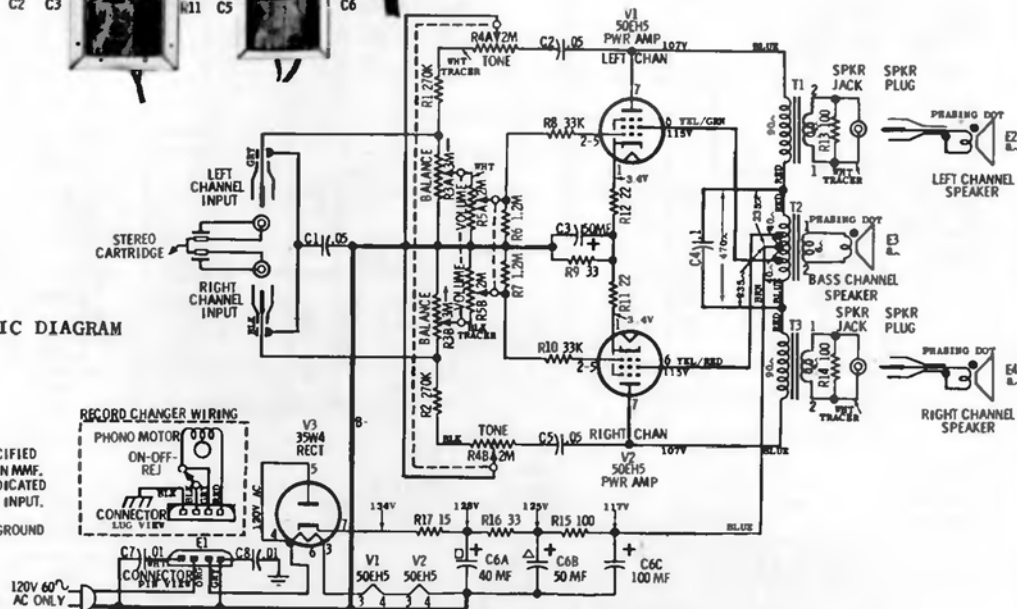

MOTOROLA Model SP44-1, Chassis HS-1125

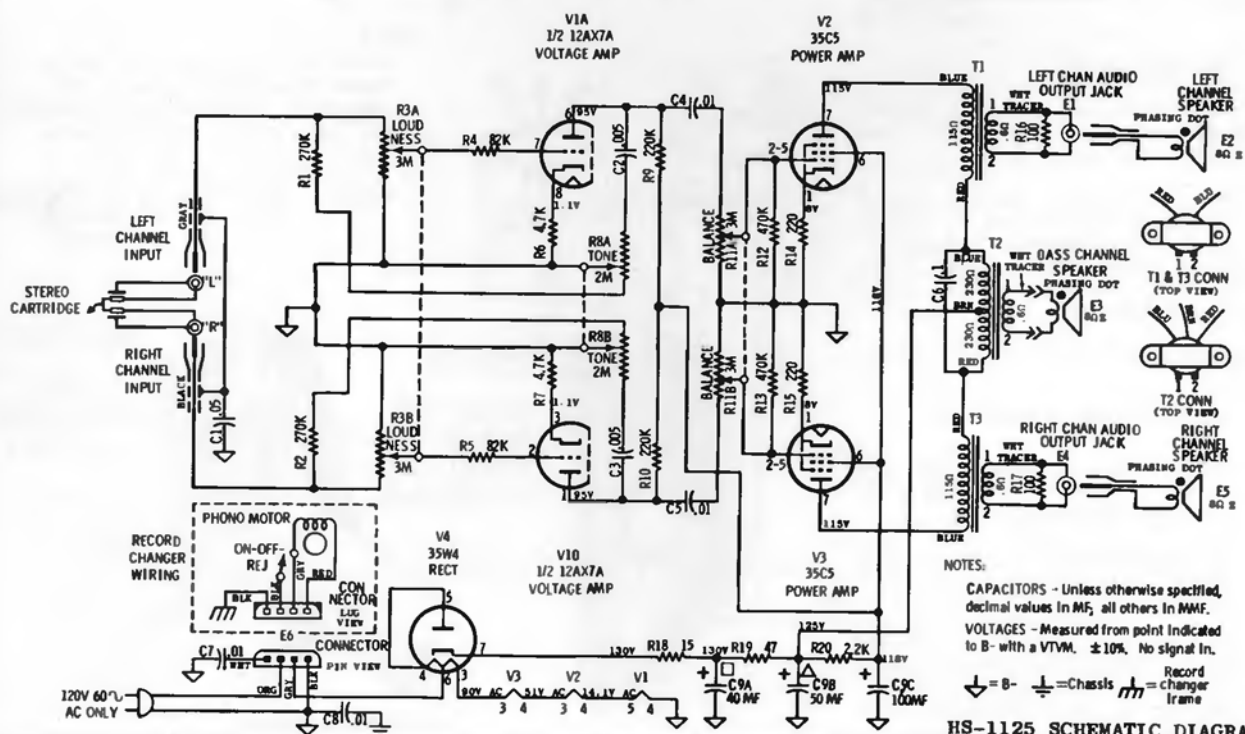


NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED,
DECIMAL VALUES IN MF, ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED
TO B- WITH A VTVM, $\pm 10\%$ NO SIGNAL IN.

— = B- — = Chassis — = Record
changer frame

HS-1125 SCHEMATIC DIAGRAM

Packard Bell


Model RC-1S, using Chassis 8HF1 or 8HF2
(Continued on the next page)

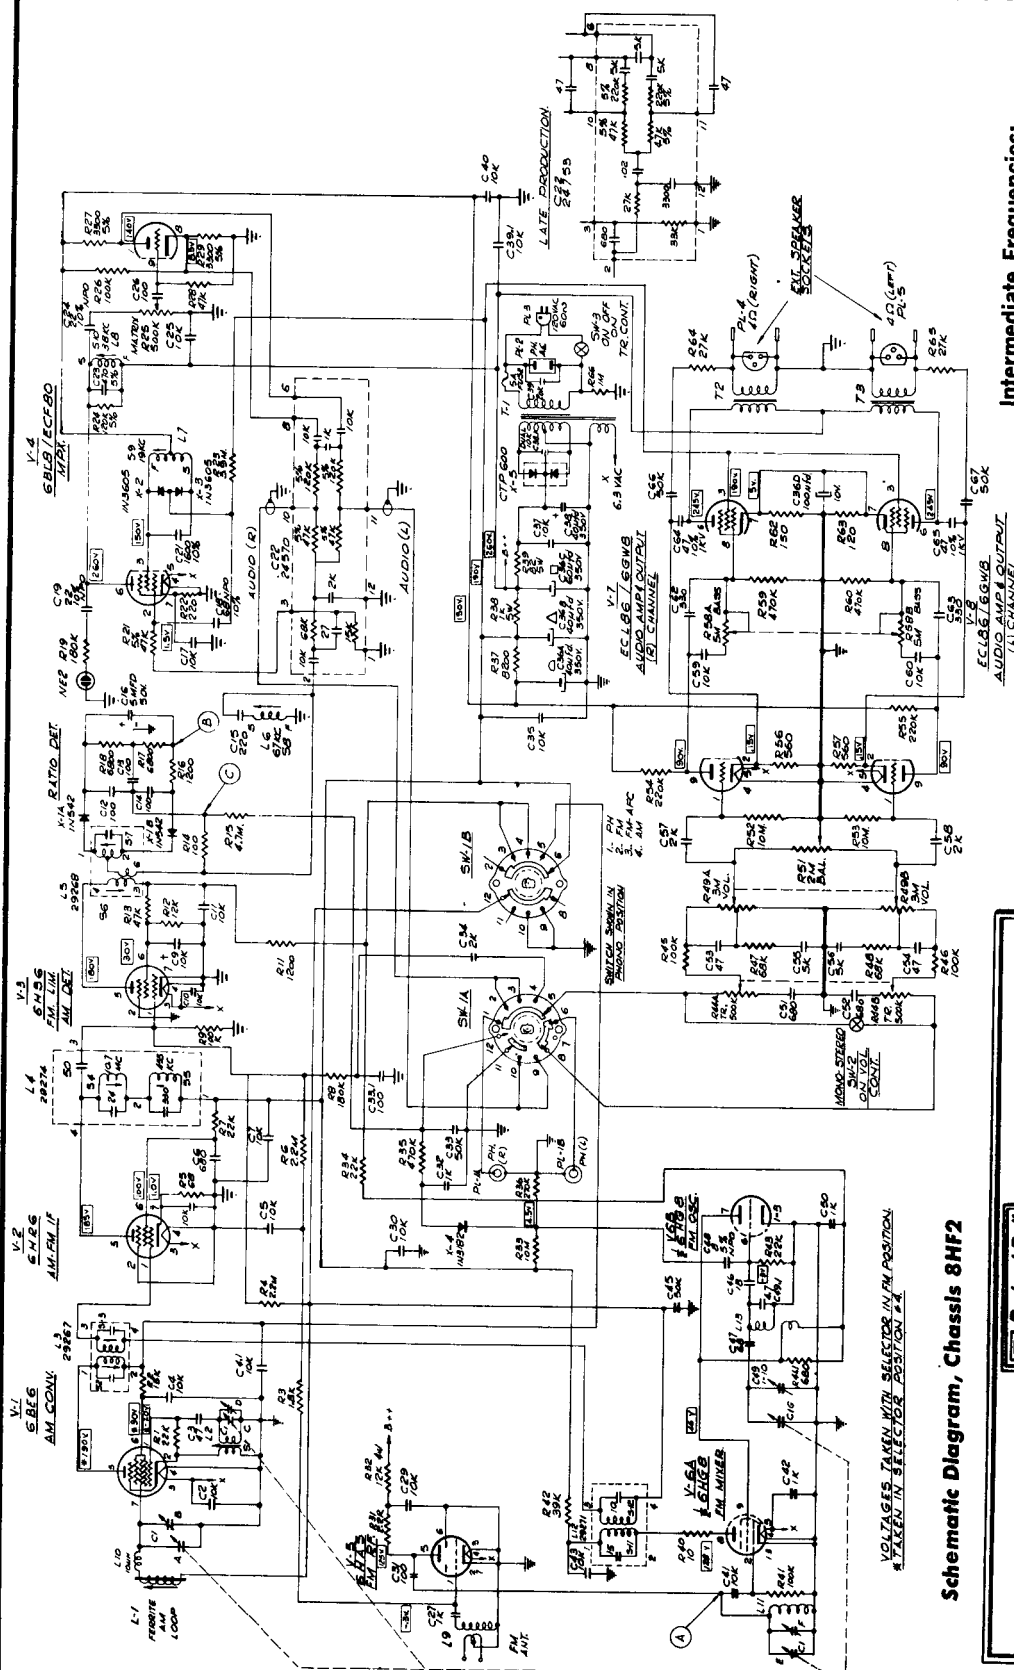

Intermediate Frequencies:
AM Radio: 455 kc
FM Radio: 10.7 mc

Model RC-1S contains either chassis 8HF1 or chassis 8HF2. These chassis are similar, each being an AM/FM radio receiver with built-in multiplex circuitry. The major difference between the 8HF1 and 8HF2 is that the tube types of V-5 and V-6 differ, along with the associated circuitry. See schematics for details of differences.



Schematic Diagram, Chassis 8HF2

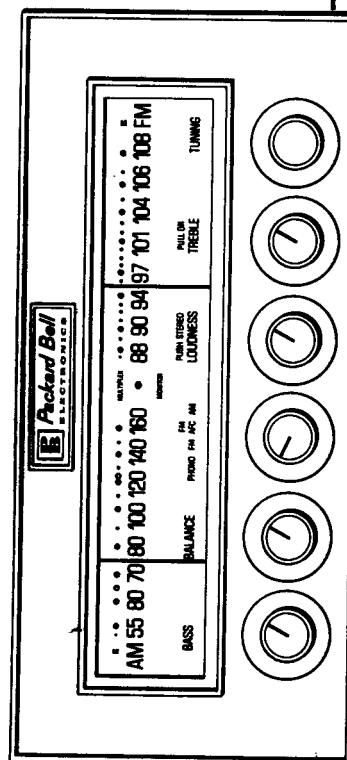

Control Panel, Model RC-1S

Packard Bell

Model RC-1S, Chassis 8HF1 or 8HF2
(Continued from preceding page)

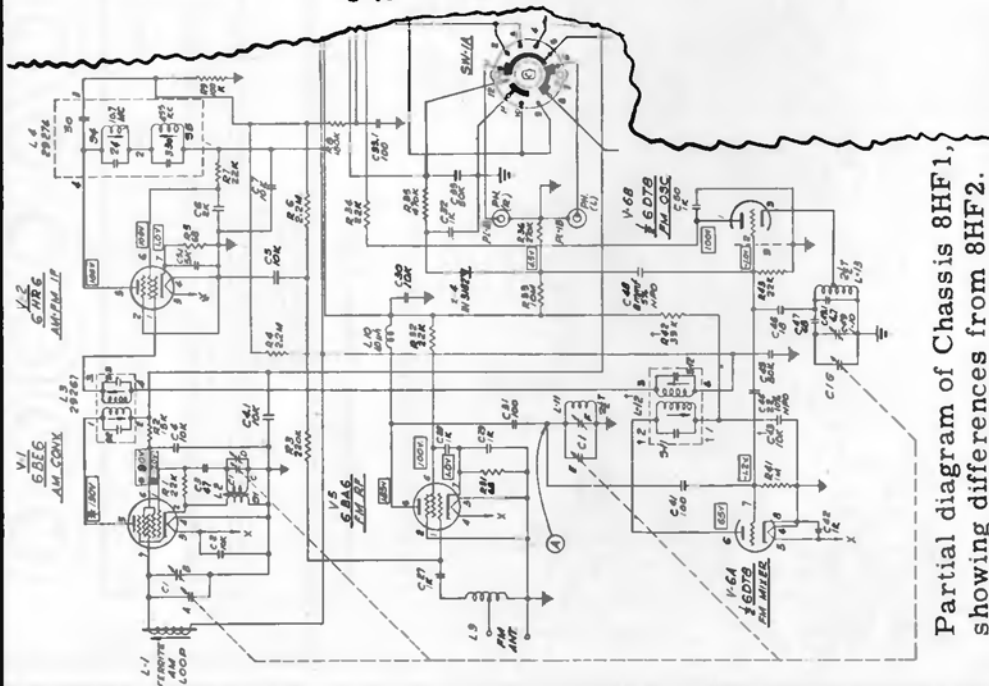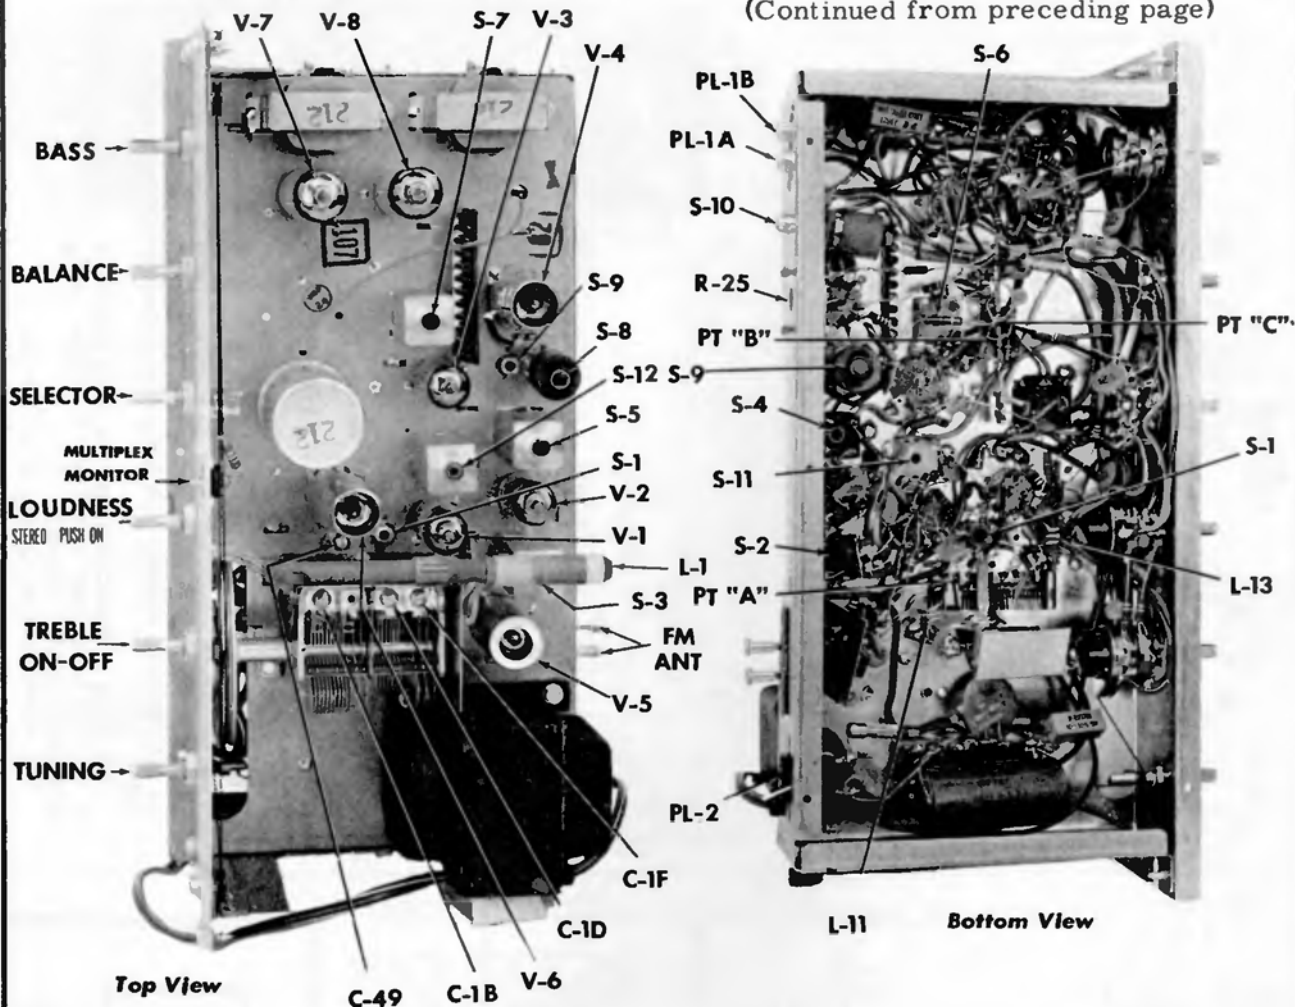

Partial diagram of Chassis 8HF1, showing differences from 8HF2.

PRODUCTION MODIFICATION ON 8HF1



Capacitors C-9 and C-43 were changed from 2000 mmf to 10,000 mmf.
Resistor R-42 was changed from 220,000 ohms to 39,000 ohms.
Chassis stamped with the number 4104 (or a higher number) contain the production modification described above.

MARKING FOR 8HF2 CHASSIS:

Models containing chassis 8HF2 are stamped with the number 4116.

PHILCO

TRANSISTOR PORTABLE MODEL T-67

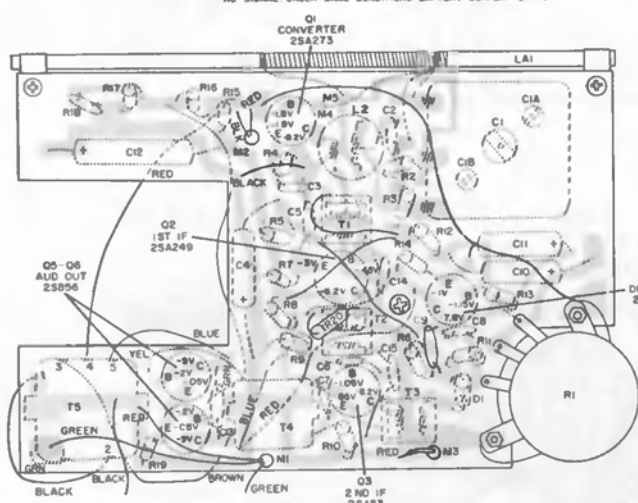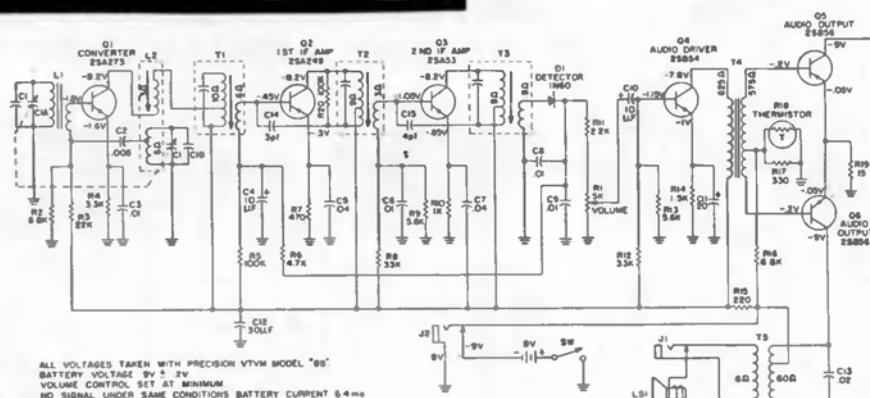

PANEL REMOVAL - To remove panel from cabinet, lift out jack assembly and remove screw in panel located at D5 (see graph). Panel may now be lifted out; speaker will remain in cabinet.

Foil Side of Perma-Circuit Panel



ALIGNMENT: Allow the test equipment at least 15 minutes to warm up before starting the alignment procedure. Connect an a-c VTVM or oscilloscope across the speaker voice coil. Use an AM R-F signal generator connected as indicated in chart. Keep generator output low enough to prevent A.G.C. overload.

ALIGNMENT CHART

SIGNAL GENERATOR			RADIO		
STEP	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	SPECIAL INSTRUCTIONS	ADJUST
1	Use radiating loop (see note 1 below)	455KC	1600KC gang fully open	Adjust for maximum output in order given	T3-3rd I-F T2-2nd I-F T1-1st I-F
2	Same as Step 1	540KC	540KC	Adjust for maximum output. Adjust L1 by sliding coil on core and waxing into position of maximum output. Rock tuning gang while adjusting L2.	L2-osc. L1-ant. coil
3	Same as Step 1	1600KC	1600KC	Adjust for maximum output.	C1A-ant. trimmer
4	Same as Step 1	1400KC	1400KC	Adjust for maximum output.	C1B-osc. trimmer
5	Repeat last three steps.				


NOTE 1: Use a 6 to 8 turn, 6-inch diameter loop made up of insulated wire. Connect to generator terminals and loosely couple to radio antenna.

PHILCO Transistor Portable Model T-68

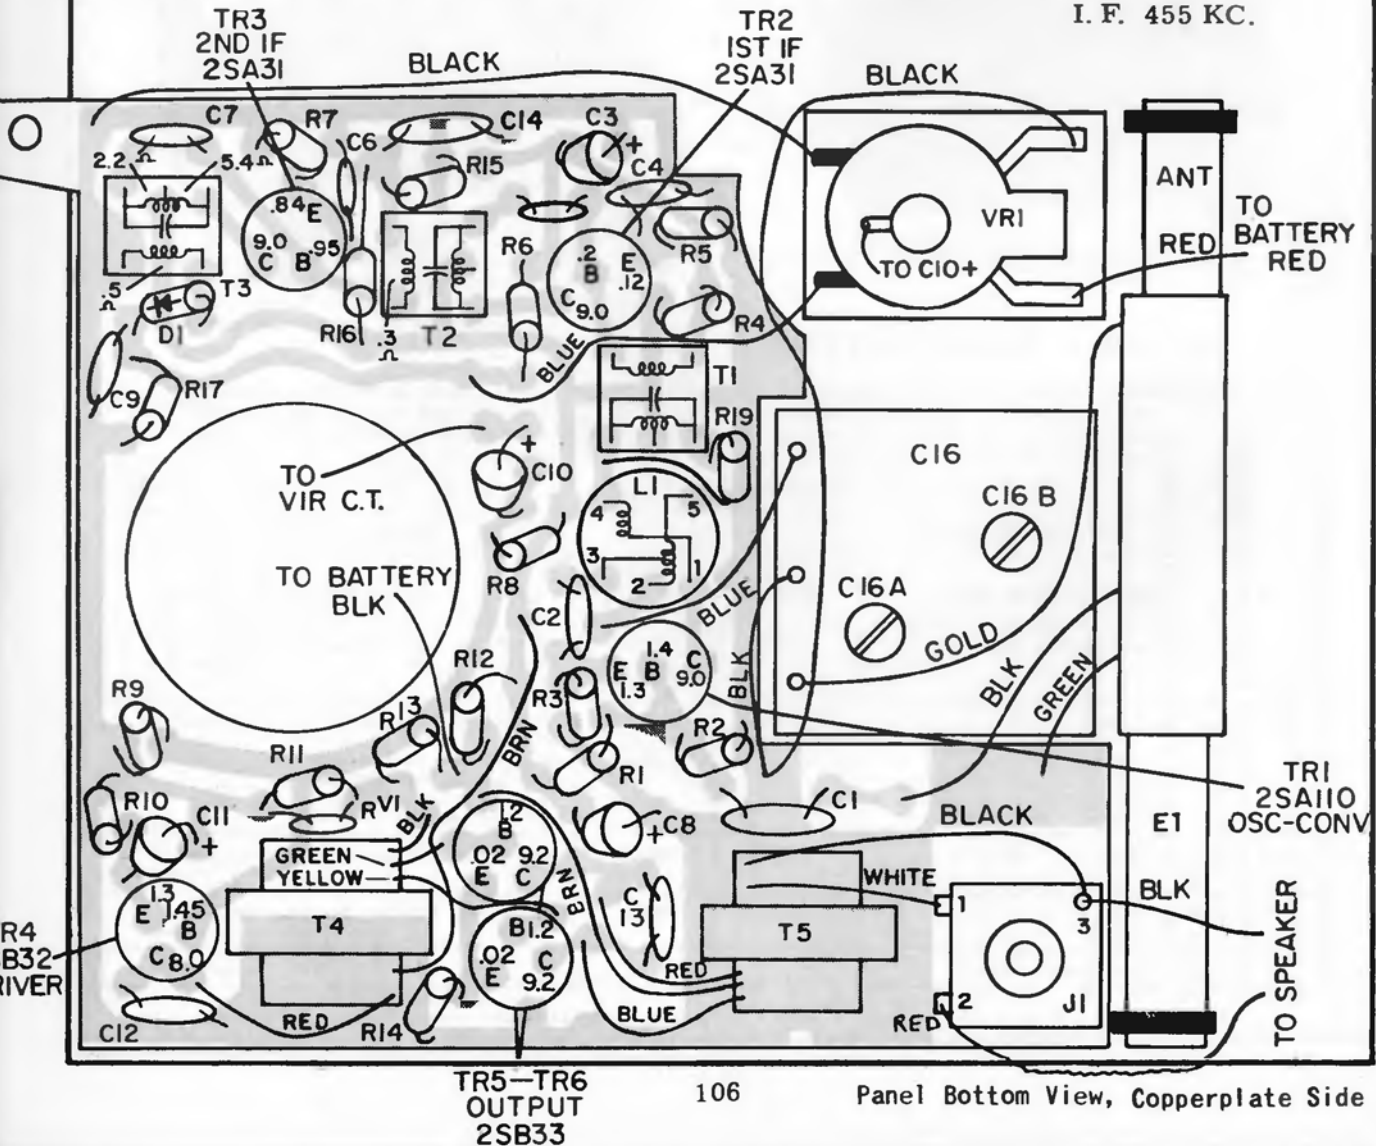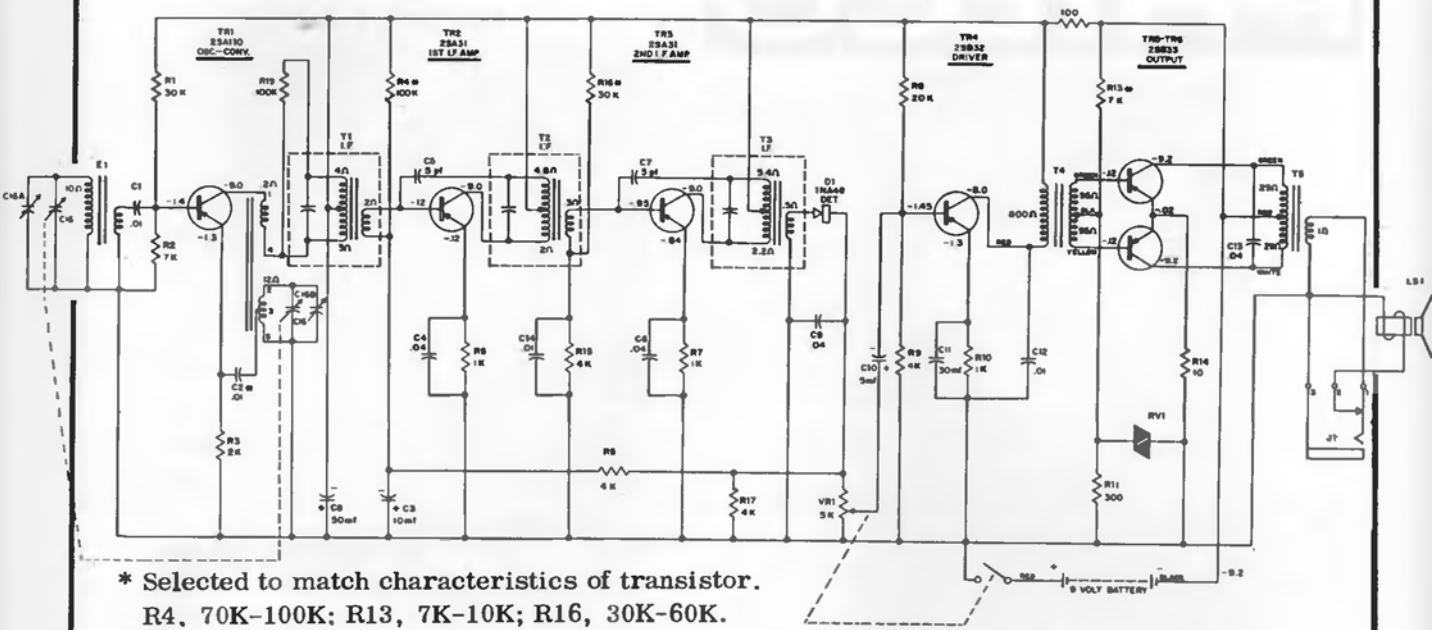

PHILCO


PORTABLE TRANSISTOR RADIO — MODEL T-84

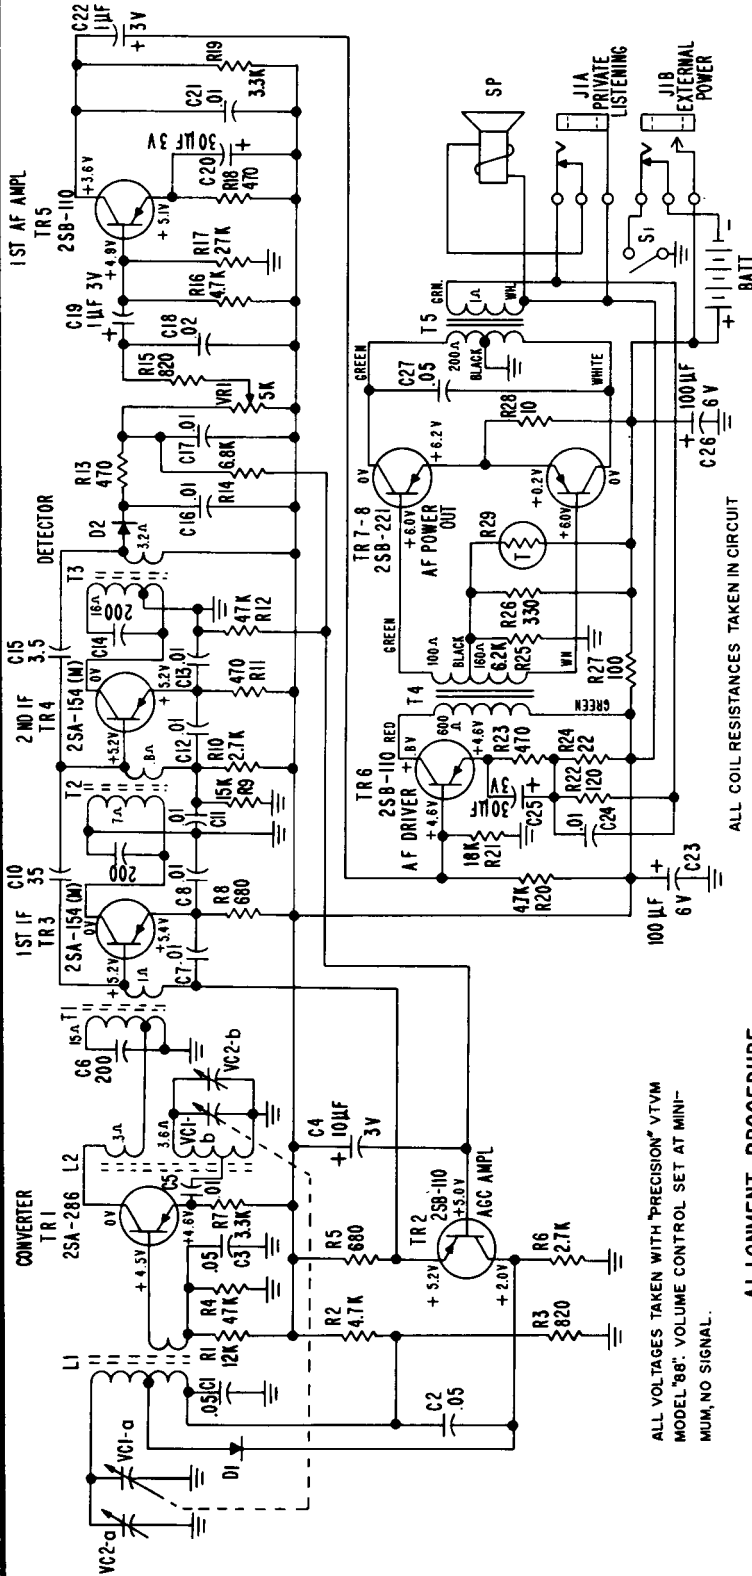

ALIGNMENT PROCEDURE

Allow the test equipment at least fifteen (15) minutes to warm up before starting the alignment procedure. Connect an a-c VTVM or oscilloscope across the speaker voice coil. Use an AM-R-F signal generator connected to a test loop placed in close proximity to the receiver antenna. Keep generator output low enough to prevent A.V.C. overload. Set volume at maximum.

STEP	SIGNAL GENERATOR SETTING	DIAL INDICATOR SETTING	ADJUST FOR MAX. OUTPUT
1	455KC	Quiet point near 1600KC	I-F transformers T3, T2, T1
2	1600KC	1600KC	CV2-b (osc. trimmer)
3	1400KC	1400KC	CV2-a (RF trimmer)
4	540KC	540KC	L2 (osc. -slug)
5	600KC	600KC	L1 (ant.)
6	Repeat steps 2, 3, 4 and 5.		

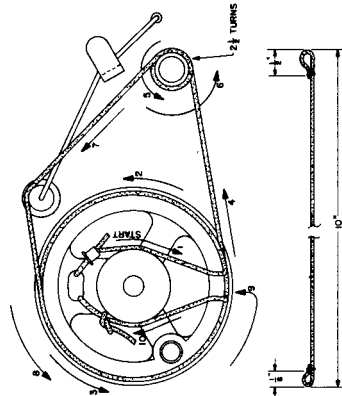

Dial Cord — Model T-84

PANEL REMOVAL -
The complete panel, tuning dial and knob assembly is removed by extracting three Philco lip head screws located as follows: 1 - single screw on right end of panel (viewing from rear); 2 - screw holding metallic mounting assembly tab located between volume control knob and tuning dial; 3 - screw holding metallic mounting assembly tab located between tuning knob and case bottom. Note that it is advisable to slide the external power jack free of the cabinet to prevent strain on the connecting leads.

PORTABLE TRANSISTOR RADIO — MODEL T-84


PHILCO

(Continued on the next page, at right)

TRANSISTOR PORTABLE MODEL T-81

Panel Removal - To remove panel from cabinet, remove three Phillips head screws located at A1, C9 and G1 (see bottom component location view). Panel and jack assembly may now be lifted out simultaneously. The speaker will remain in the cabinet. Jack assembly and panel may not be removed separately. They must be removed together. Remove jack assembly by prying up side of jack assembly toward front of radio.

BATTERY SUPPLY - One 9 volt type 216 battery. Special receptacle provided for connecting a line connected power supply. Special receptacle automatically disconnects internal battery with use of external supply.

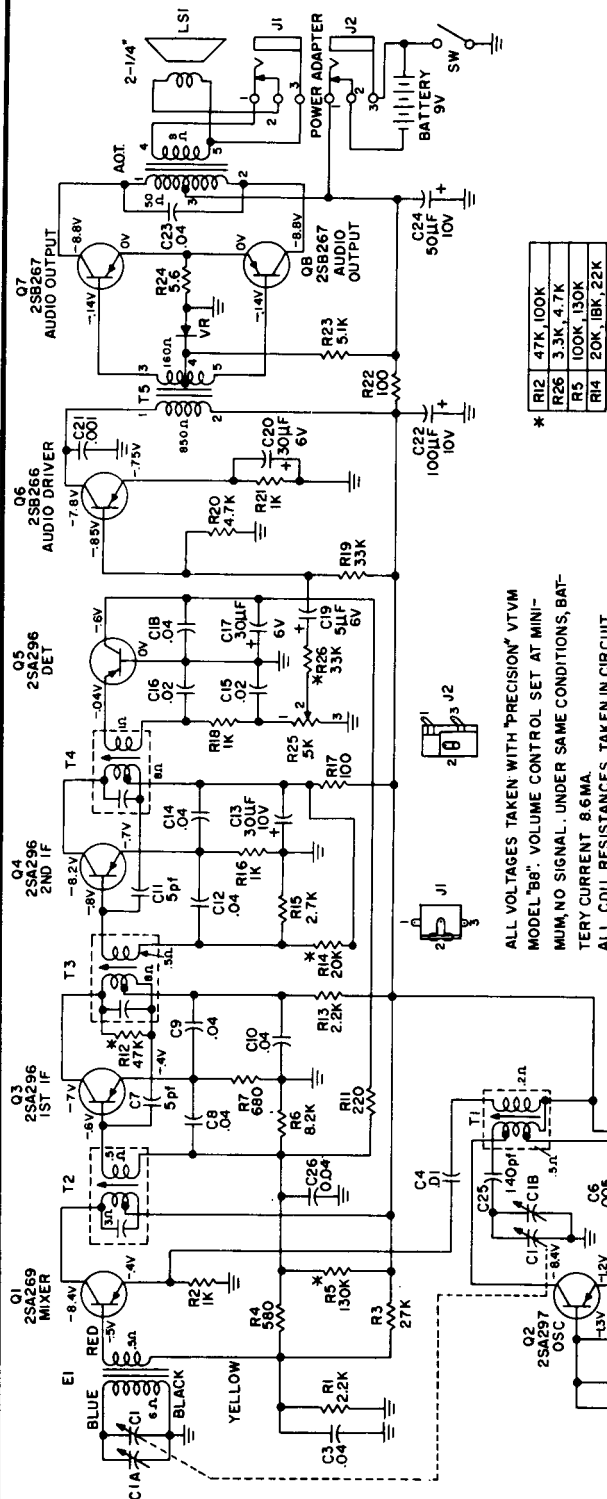


ALL VOLTAGES TAKEN WITH "PRECISION" VTVM
MODEL "88". VOLUME CONTROL SET AT MIN-
MUM NO SIGNAL. UNDER SAME CONDITIONS, BAT-
TERY CURRENT 8.6MA
ALL COIL RESISTANCES TAKEN IN CIRCUIT

ALIGNMENT CHART

SIGNAL GENERATOR			RADIO	
STEP	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	SPECIAL INSTRUCTIONS
1	To base of mixer, Q1 through a .01 μ fd cap.	455KC	Quietpoint near 1600KC	Adjust for max. output in order given.
2	Radiating loop (See Note below)	600KC	600KC	Adjust for max. output.
3	Radiating loop	1500KC	1500KC	Adjust for max. output.
4	Repeat steps 2 and 3 until no further improvement is obtained.			
5	Radiating loop	600KC	600KC	Adjust for max. output by sliding ant. coil on core.
6	Radiating loop	1500KC	1500KC	Adjust for maximum output.
7	Repeat steps 5 and 6 until no further improvement is obtained.			



Note: For radiating loop, use a 6 to 8 turn, 6-inch diameter loop made up of insulated wire. Connect to generator terminals and place about one foot from antenna coil.

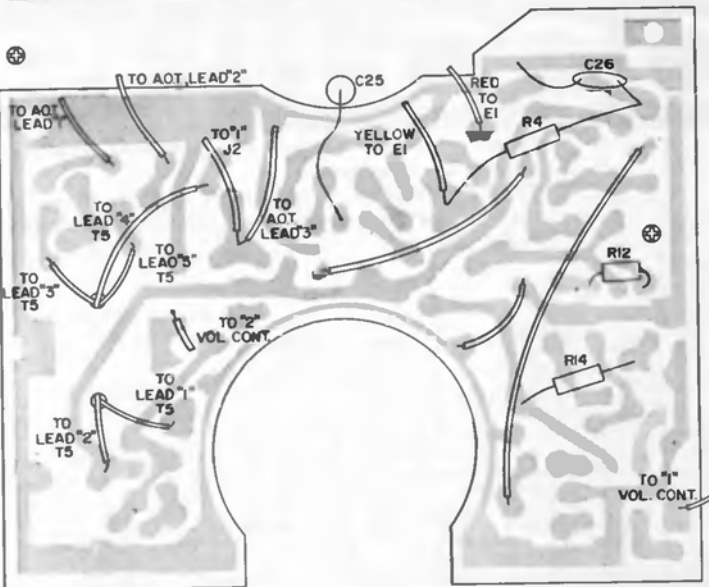

Foil Side of Perma-circuit Panel, Bottom Component Location

PHILCO
MODEL T-81

(Continued from preceding page at left)

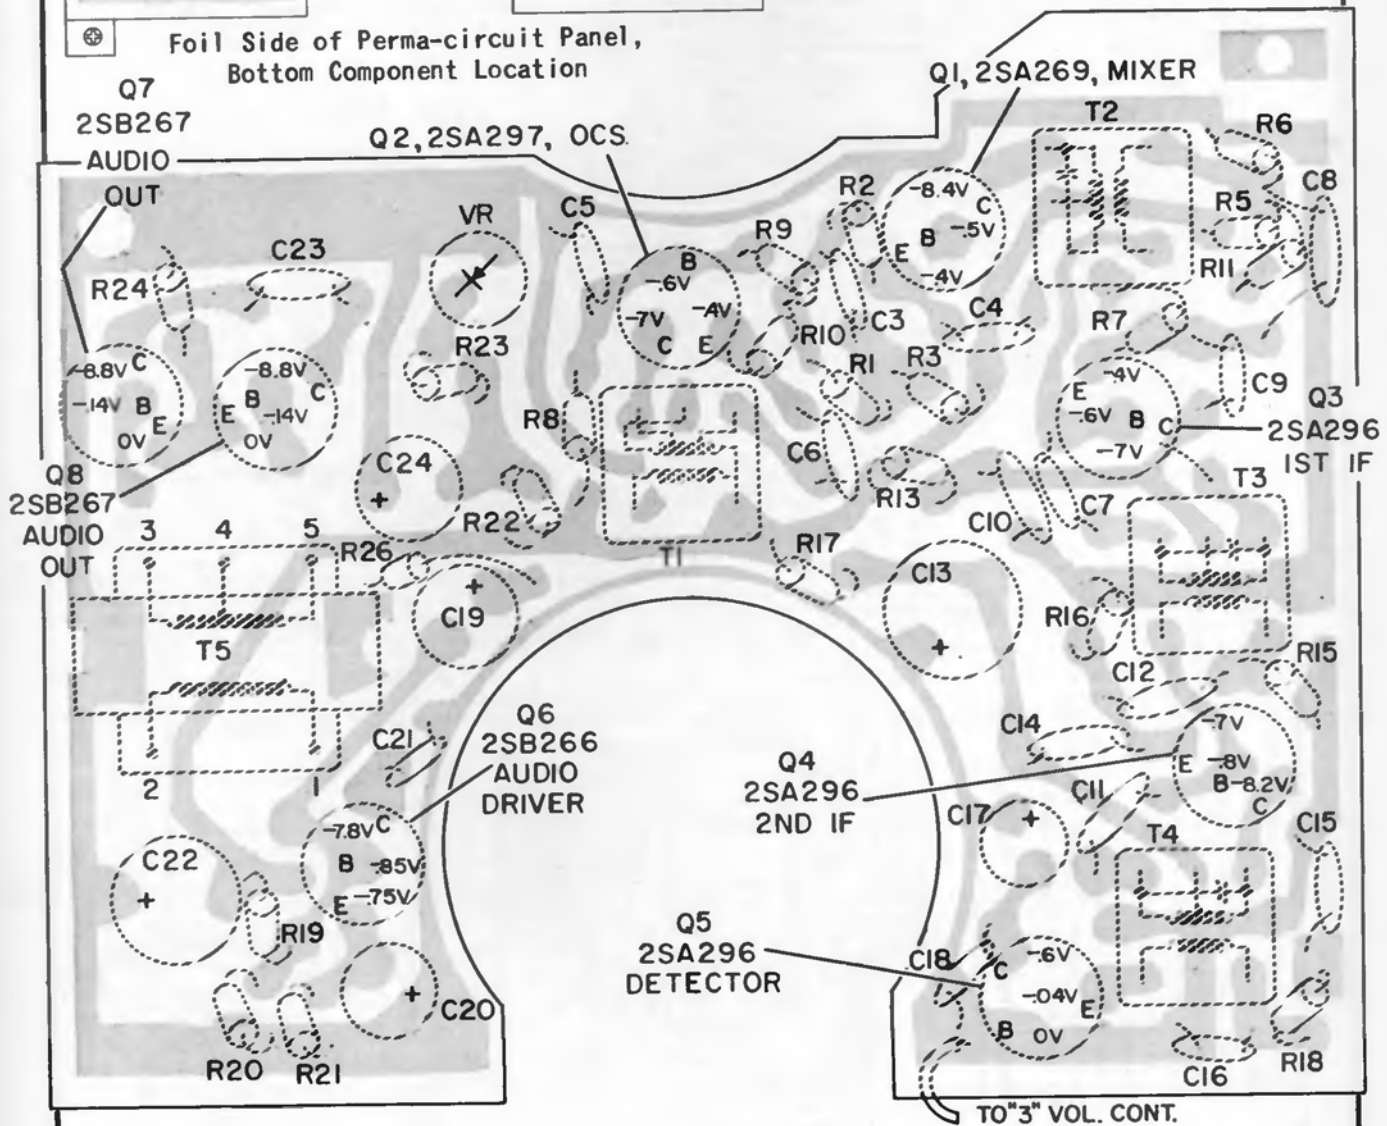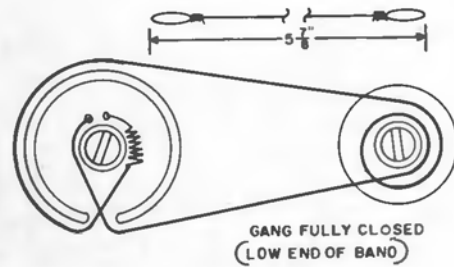


Foil Side of Perma-circuit Panel, Top Component Location

PHILCO

TRANSISTOR PORTABLE MODEL T-90


FREQUENCY COVERAGE: 520KC to 1650KC
INTERMEDIATE FREQUENCY: 455KC
ANTENNA: Self-contained ferrite loop
SPEAKER: 2-3/4 inch PM 10 ohms V.C. impedance. Jack provided for optional private listening attachment.
BATTERY SUPPLY: 4 penlight cells, 6 volt supply, battery type "AA", P-15 or mercury type "AA" P-9

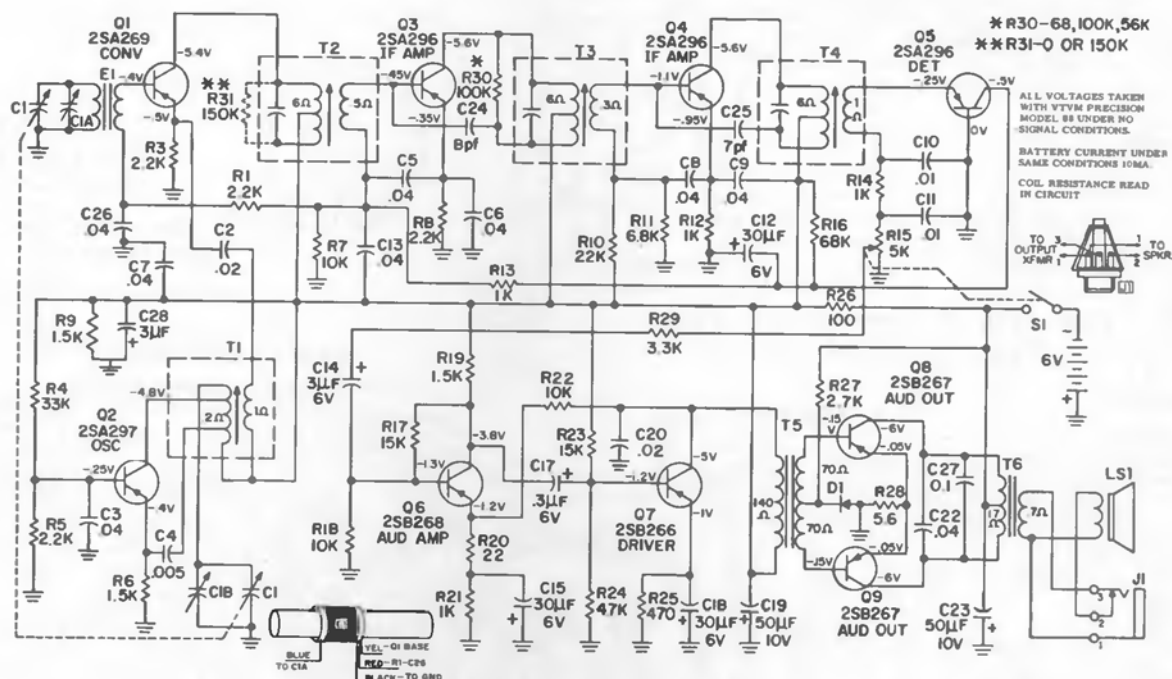


PERMA-CIRCUIT PANEL REMOVAL

1. Remove battery compartment cover (bottom of case) and remove battery holder.
2. Remove two screws located on top of back cover, push out back cover from inside.
3. Remove decorative plate from center of tuning knob (turn counter-clockwise) and unscrew tuning knob spacer. Tuning knob can now be removed.
4. Remove four screws holding perma-circuit panel to cabinet (graph locations D3, B6, K1 and K8) and remove panel.

Speaker will remain in cabinet when panel is removed.

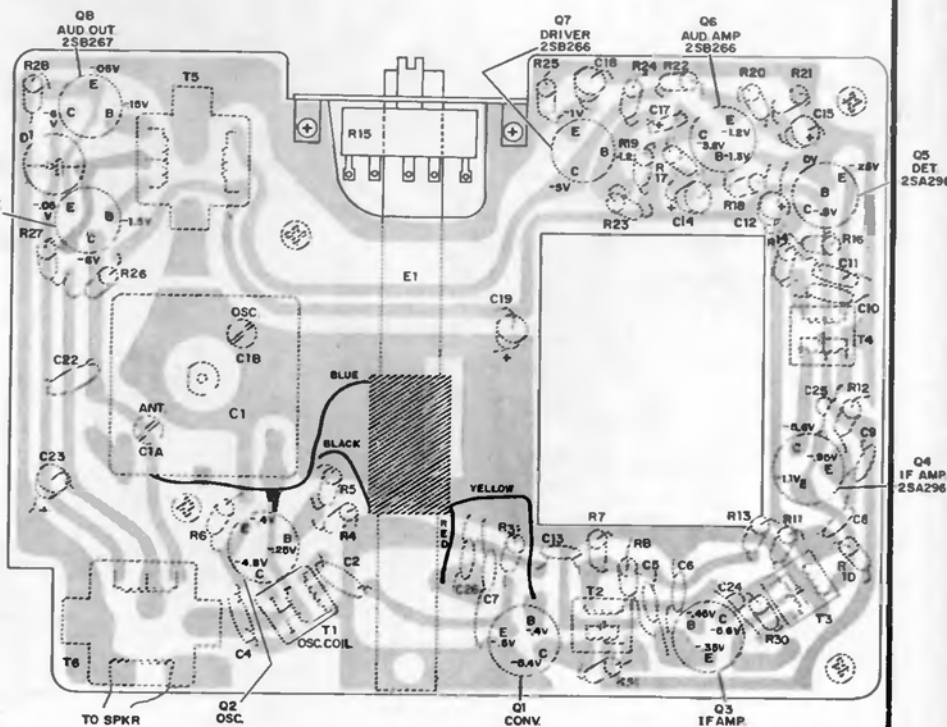

Bottom View of Perma-Circuit Panel Showing Parts Location

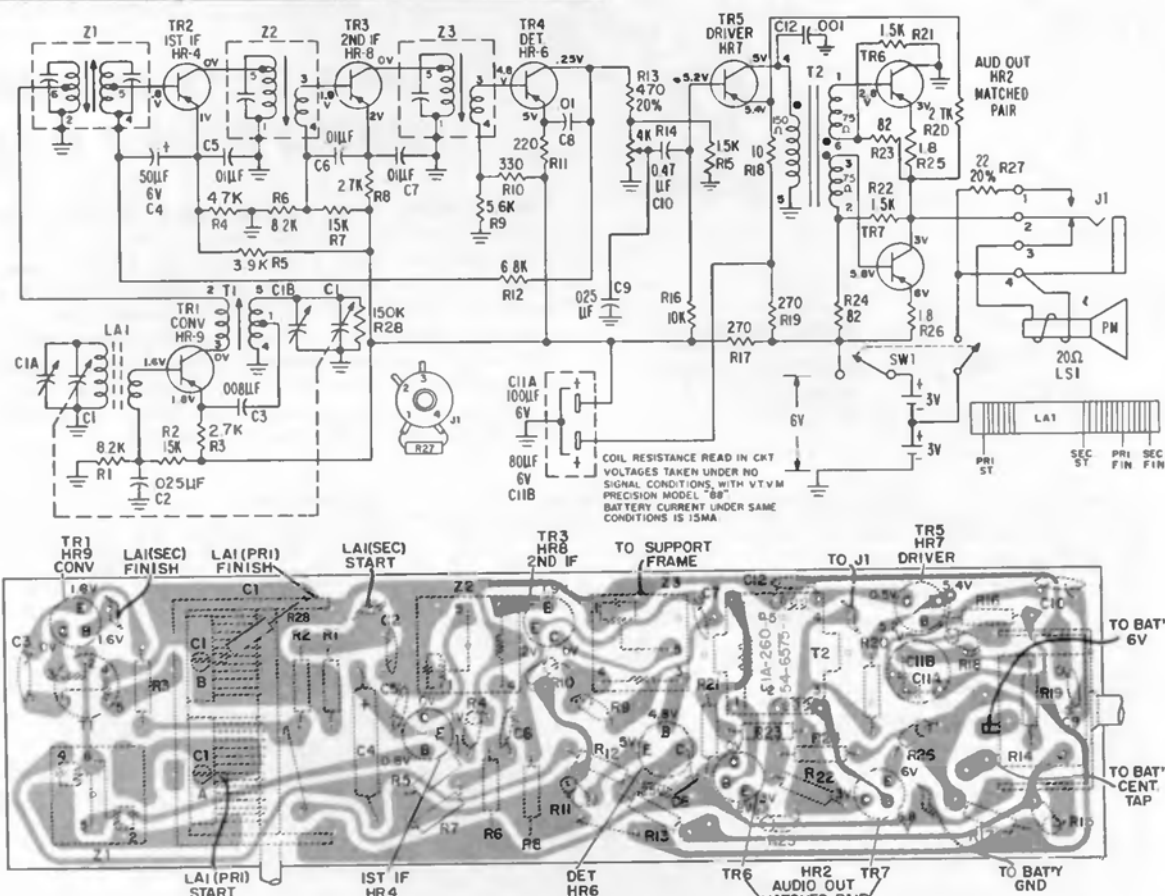PHILCO**TRANSISTOR PORTABLE
MODEL T-703 CODE 124**

Bottom Composite View of Perma-Circuit Panel

ALIGNMENT PROCEDURE



Allow the test equipment to warm up for fifteen minutes before starting the alignment procedure. Connect the output indicator (a-c voltmeter, or an oscilloscope) across the voice-coil terminals. Use an AM r-f signal generator. Connect the ground lead to chassis, and connect the output lead as indicated in the alignment chart. Attenuate the signal-generator output throughout the alignment so as to maintain the output level below 1 volt.

SIGNAL GENERATOR			RADIO		
STEP	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	SPECIAL INSTRUCTIONS	ADJUST
1	Connect signal generator through a .1-uf. condenser to ant. section of gang.	455 kc.	Tuning gang fully open.	Adjust for maximum output in order given.	Z3 - 3rd i-f Z2 - 2nd i-f Z1 - 1st i-f
2	Use radiating loop. (See NOTE 1 below)	600 kc.	600 kc.	Adjust for maximum output. Rock tuning gang while making this adjustment.	T1 - osc. core
3	Same as step 2.	1620 kc.	1620 kc. (Tuning gang fully open)	Adjust for maximum output.	C1B - osc. trimmer
4	Same as step 2.	1400 kc	1400 kc.	Adjust for maximum output.	C1A - antenna trimmer
5	Repeat steps 2, 3 and 4 until no further improvement is obtained. Always stop on step 4.				

NOTE 1. Use a 6-to-8-turn, 6-inch-diameter loop made up of insulated wire. Connect to generator terminals, and place about one foot from radio loop.


PHILCO

TABLE/CLOCK AM RADIO MODELS M-709 & M-869

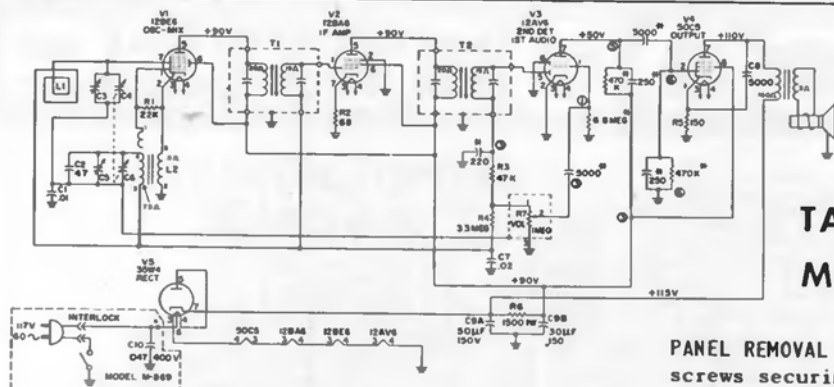

NOTE
ALL COMPONENTS MARKED WITH AN ASTERISK ARE CONTAINED IN ONE UNIT; CONNECTIONS ARE ENCIRCLED NUMBERS
ALL VOLTAGES AND RESISTANCES TAKEN WITH "PRECISION" VTVM MODEL 78F VOLUME CONTROL SET AT MINIMUM, NO SIGNAL IN.
RESISTANCES TAKEN WITH COILS AND TRANSFORMERS IN CIRCUIT

PANEL REMOVAL - To remove panel, unscrew two screws securing cabinet back to front. Separate cabinet back from front by prying away front on line cord side of cabinet. Separate cabinet, being careful not to break time and alarm set knob and antenna leads. Remove knobs and nut on volume control. Remove two screws located at E3 and D10 (see parts location). Unsolder speaker, antenna and clock wires (M-709 only). Panel may now be removed.

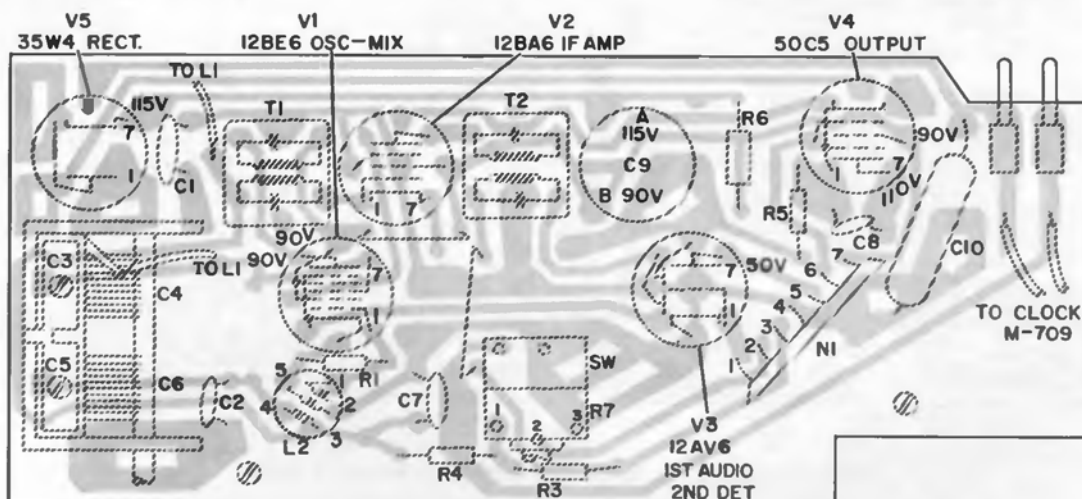

Component Location, Foil Side of Perma-Circuit Panel


ALIGNMENT - To eliminate shock hazard, use an isolation transformer between radio chassis and a-c power outlet. Allow radio and test equipment about 15 minutes to warm up before starting alignment. Connect an a-c VTVM across the speaker voice coil. Use an AM R-F signal generator connected as indicated in chart. Set volume control to maximum no signal output. Keep generator output as low as possible.

ALIGNMENT CHART


SIGNAL GENERATOR			RADIO		
STEP	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	SPECIAL INSTRUCTIONS	ADJUST
1	R-F section of gang through a .1mf cap.	455KC	Gang fully open	Adjust for max. output in order given.	T1-bot. & top T2-bot. & top
2	Use radiated signal (See note)	600KC	600KC	Adjust for max. output; rock tuning gang while making adjustment.	L1-osc.
3	Use radiated signal	1650KC	Gang fully open	Adjust for max. output.	C5-osc. trim.
4	Use radiated signal	1500KC	1500KC	Adjust for max. output.	C3-ant. trim.
5	Repeat steps 2, 3 and 4 until no further improvement is obtained.				

NOTE: Use a 6 to 8 turn, 6-inch diameter loop made up of insulated wire. Connect to generator terminals, and place about one foot from radio loop.

PHILCO Models M-712, M-714, M-715, M-716, M-871, M-872, M-874, M-876



CII IS PART OF OSC. COIL
 * MODEL \$M876, M716,
 ** MODELS M871, M872, M874,
 M712, M714, M715.





Dial Cord Stringing Models M-714, M-715, M-874




Perma-Circuit Panel, AM Models M-714, M-715, M-716, M-874, M-876, Bottom View

PHILCO


TABLE/CLOCK AM-FM RADIOS M-719, M-798, M-936, M-937, M-938, M-939

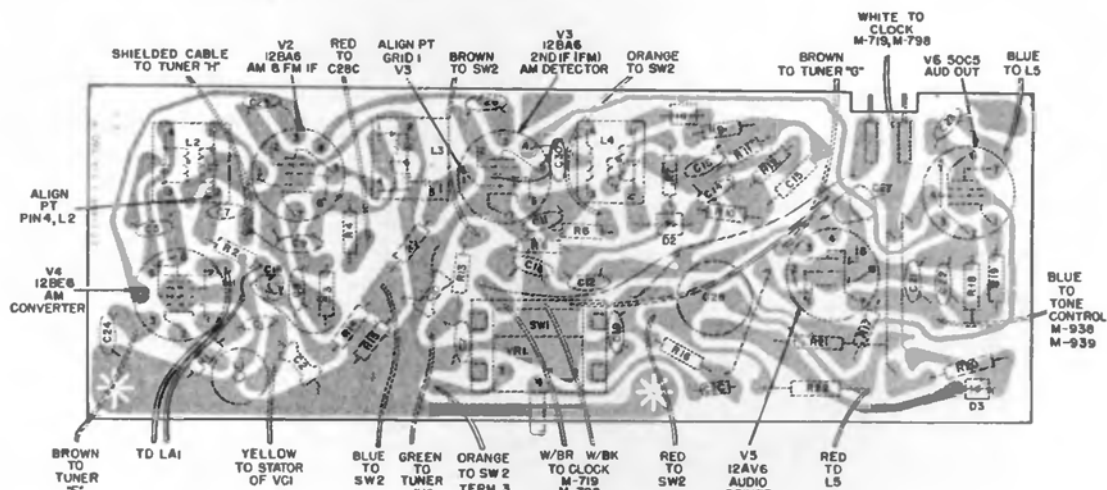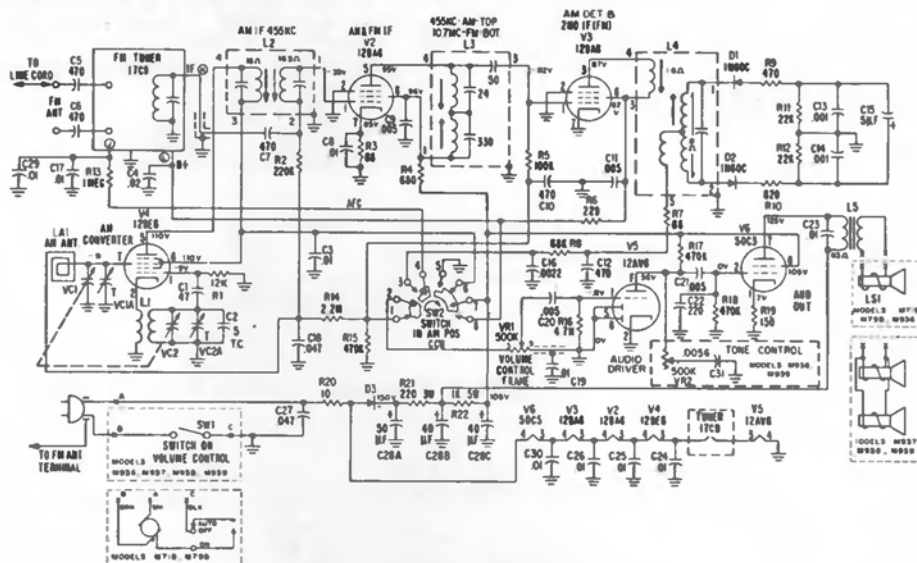

Perma-Circuit Panel, AM-FM Models, Bottom View

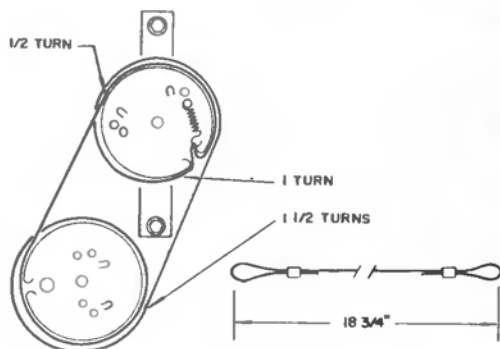

Tuner Dial Cord Stringing
FM Models

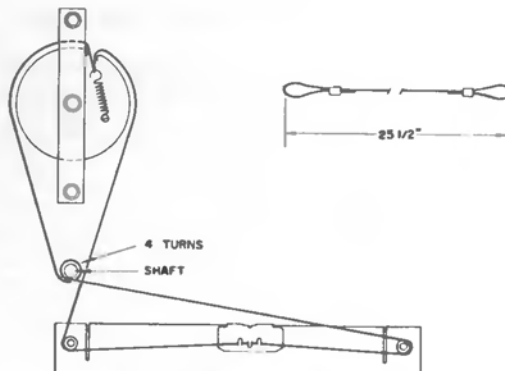

Main Dial Cord Stringing
FM Models

Model 100

12

ANTENNA 2.5 μH TO

TR1
MR-5
RF AMP
95V
1.25V
C1
C2
C3
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
R25
R26
R27
R28
R29
R30
R31
R32
R33
R34
R35
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
R46
R47
R48
R49
R50
R51
R52
R53
R54
R55
R56
R57
R58
R59
R60
R61
R62
R63
R64
R65
R66
R67
R68
R69
R70
R71
R72
R73
R74
R75
R76
R77
R78
R79
R80
R81
R82
R83
R84
R85
R86
R87
R88
R89
R90
R91
R92
R93
R94
R95
R96
R97
R98
R99
R100

TR2
MR-8
OSC
65V
1.25V
C1
C2
C3
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
R25
R26
R27
R28
R29
R30
R31
R32
R33
R34
R35
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
R46
R47
R48
R49
R50
R51
R52
R53
R54
R55
R56
R57
R58
R59
R60
R61
R62
R63
R64
R65
R66
R67
R68
R69
R70
R71
R72
R73
R74
R75
R76
R77
R78
R79
R80
R81
R82
R83
R84
R85
R86
R87
R88
R89
R90
R91
R92
R93
R94
R95
R96
R97
R98
R99
R100

TR3
MR-4
MIXER
0V
1.15V
C1
C2
C3
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
R25
R26
R27
R28
R29
R30
R31
R32
R33
R34
R35
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
R46
R47
R48
R49
R50
R51
R52
R53
R54
R55
R56
R57
R58
R59
R60
R61
R62
R63
R64
R65
R66
R67
R68
R69
R70
R71
R72
R73
R74
R75
R76
R77
R78
R79
R80
R81
R82
R83
R84
R85
R86
R87
R88
R89
R90
R91
R92
R93
R94
R95
R96
R97
R98
R99
R100

TR4
MR-4
1ST IF
0V
1.25V
C1
C2
C3
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
R25
R26
R27
R28
R29
R30
R31
R32
R33
R34
R35
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
R46
R47
R48
R49
R50
R51
R52
R53
R54
R55
R56
R57
R58
R59
R60
R61
R62
R63
R64
R65
R66
R67
R68
R69
R70
R71
R72
R73
R74
R75
R76
R77
R78
R79
R80
R81
R82
R83
R84
R85
R86
R87
R88
R89
R90
R91
R92
R93
R94
R95
R96
R97
R98
R99
R100

TR5
MR-8
2ND IF
0V
1.1V
C1
C2
C3
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
R25
R26
R27
R28
R29
R30
R31
R32
R33
R34
R35
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
R46
R47
R48
R49
R50
R51
R52
R53
R54
R55
R56
R57
R58
R59
R60
R61
R62
R63
R64
R65
R66
R67
R68
R69
R70
R71
R72
R73
R74
R75
R76
R77
R78
R79
R80
R81
R82
R83
R84
R85
R86
R87
R88
R89
R90
R91
R92
R93
R94
R95
R96
R97
R98
R99
R100


TR6
MR-6
2ND DET
35V
0.5V
C1
C2
C3
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
R25
R26
R27
R28
R29
R30
R31
R32
R33
R34
R35
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
R46
R47
R48
R49
R50
R51
R52
R53
R54
R55
R56
R57
R58
R59
R60
R61
R62
R63
R64
R65
R66
R67
R68
R69
R70
R71
R72
R73
R74
R75
R76
R77
R78
R79
R80
R81
R82
R83
R84
R85
R86
R87
R88
R89
R90
R91
R92
R93
R94
R95
R96
R97
R98
R99
R100

TR7
MR-7
DRIVER
4.7V
4.9V
C1
C2
C3
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
R25
R26
R27
R28
R29
R30
R31
R32
R33
R34
R35
R36
R37
R38
R39
R40
R41
R42
R43
R44
R45
R46
R47
R48
R49
R50
R51
R52
R53
R54
R55
R56
R57
R58
R59
R60
R61
R62
R63
R64
R65
R66
R67
R68
R69
R70
R71
R72
R73
R74
R75
R76
R77
R78
R79
R80
R81
R82
R83
R84
R85
R86
R87
R88
R89
R90
R91
R92
R93
R94
R95
R96
R97
R98
R99
R100


TR8
MR-2
AUDIO OUT
3V
3V
C1
C2
C3
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
R25
R26
R27
R28
R29
R30
R31
R32
R3

FREQUENCY COVERAGE: 540 to 1620 KC.
INTERMEDIATE FREQUENCY: 455 KC.

ALL VOLTAGES MEASURED FROM
0 MINUS (USING PRECISION VTVM
MODEL "88") UNDER NO SIGNAL
CONDITIONS

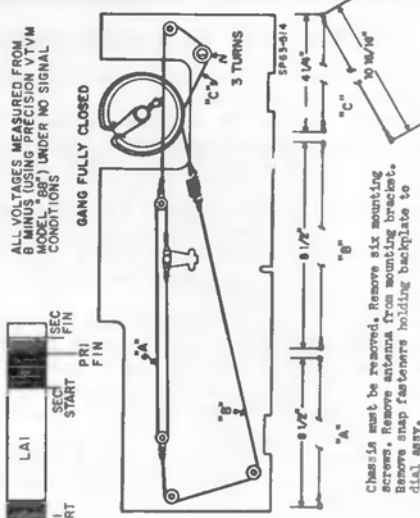

Dial Cord Stringing

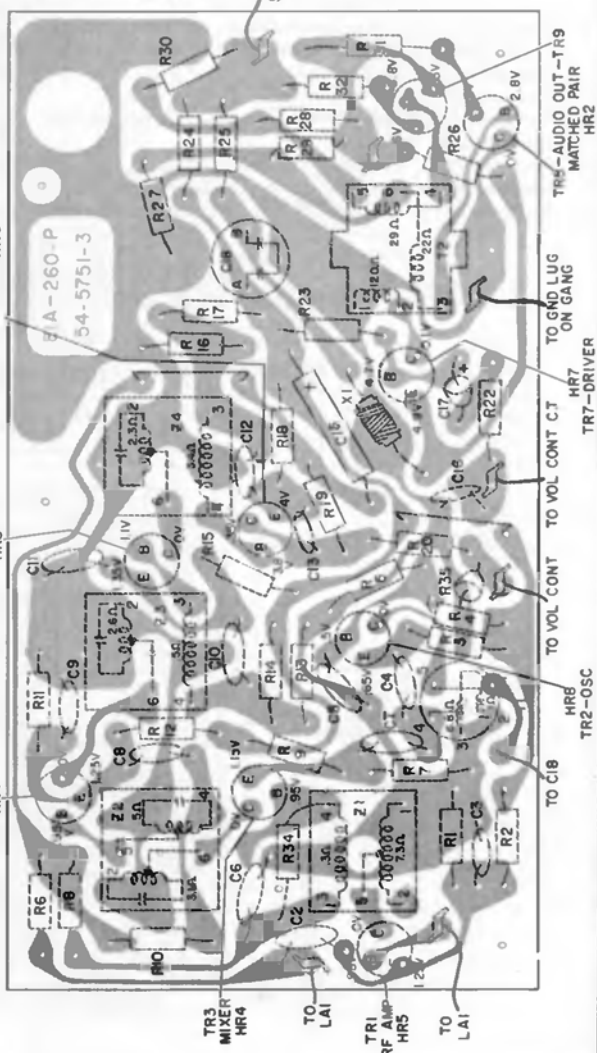

Base Layout - Bottom View of Perma-Circuit Panel

PHILCO

AM-FM TRANSISTOR PORTABLE MODEL T-907


(Material below and the next two pages)

REMOVAL OF FM TUNER PANEL

1. Remove chassis from cabinet. See "Chassis Disassembly" instructions.
2. Remove 2 magnecore antenna mounting clamps and swing magnecore out of the way.
3. Loosen 2 FM tuner shield screws and remove shield.
4. Disconnect FM tuner leads from their points of origin. See FM tuner perma-circuit illustration. Do Not attempt to disconnect leads from the tuner panel. Bring free leads up through hole in main perma-circuit panel.
5. Unsolder "Tuning Gang Grounds" (See FM tuner perma-circuit illustration), separate and straighten lugs. Be sure lugs are free of excess solder.
6. Unsolder "Shield Grounds" from rear or outside of back shield. Be sure lugs are clean and free in the shield holes.
7. While alternately heating the gang terminals C1-R-F and C1-osc., gently pry panel out using a thin bladed tool.


CHASSIS DISASSEMBLY

1. Remove back by loosening back retaining screw. CAUTION - Monopole antenna lead is connected; disconnect lead from antenna.
2. Remove knobs.
3. Remove nut holding band switch clamp and remove clamp.
4. Remove back mounting threaded post.
5. Remove nut at volume control end of back plate.
6. Remove nut at left end of FM R-F sub-assembly.

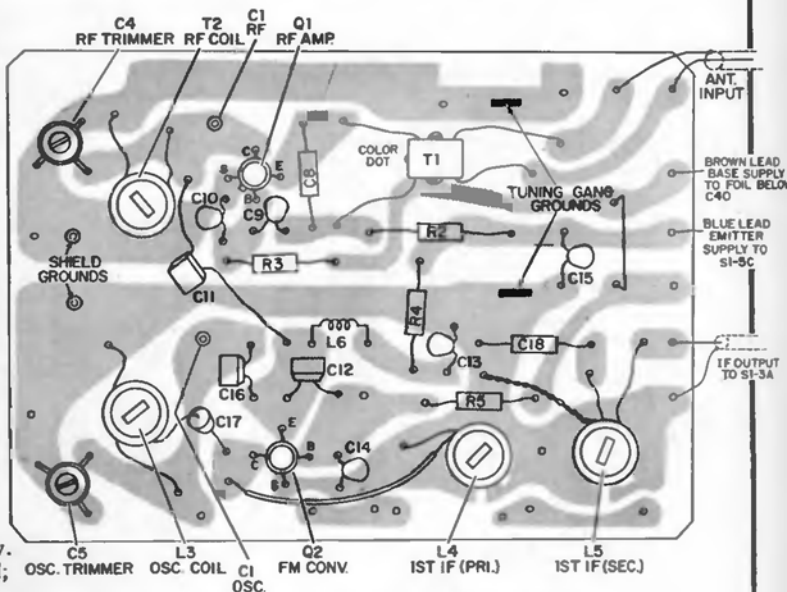

Top Composite View of FM Tuner Perma-Circuit Panel

7. Remove nut in front of 1st I-F, T3.
8. Remove panel, dial, switch and mtg. plate assembly.

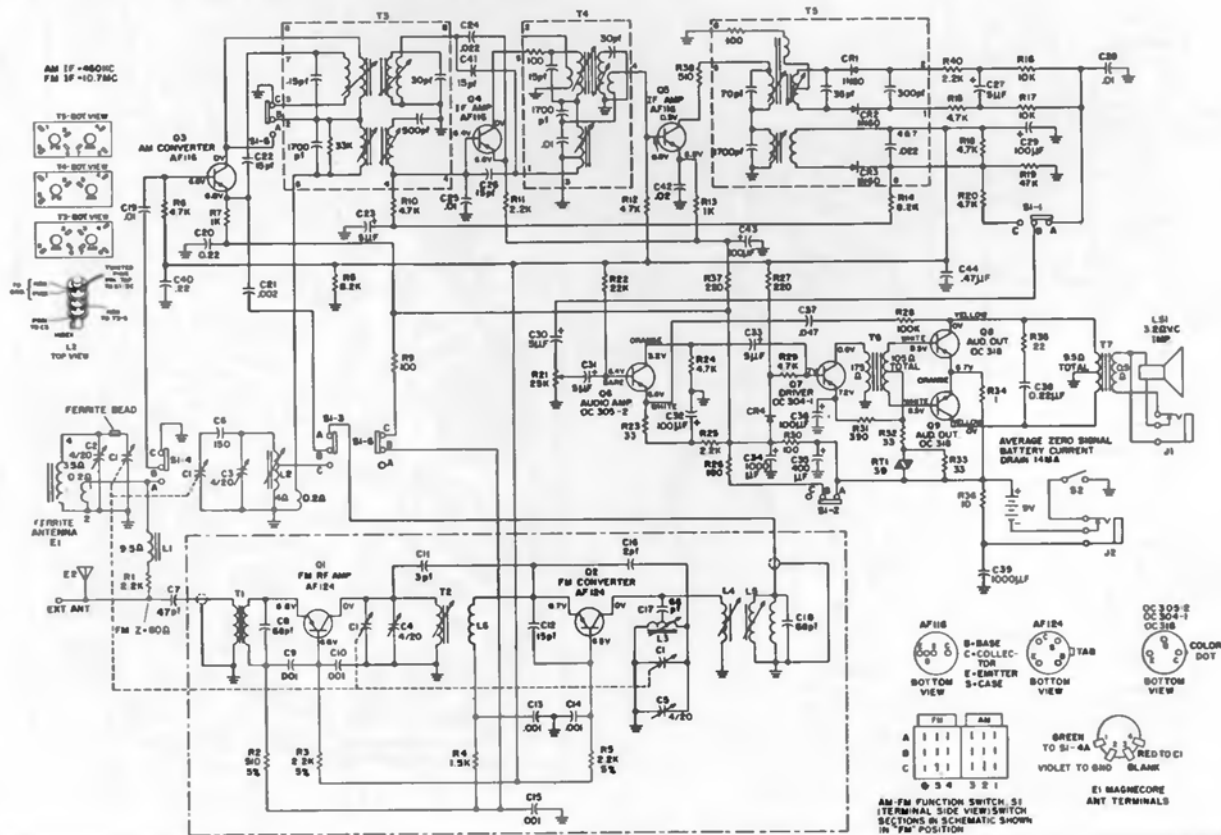

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


PHILCO Model T-907, Continued from preceding page, alignment on next page

BATTERY SUPPLY - 6 type "C" cells (number 635) in a 9 volt supply. Provision for connecting an external battery or AC power supply. Special receptacle automatically disconnects internal battery.


CIRCUIT - Nine transistor, 3 diode, AM-FM super-heterodyne.

FREQUENCY COVERAGE - AM, 540KC to 1610KC
FM, 87.5MC to 108.5MC


INTERMEDIATE FREQUENCY - AM, 460KC
FM, 10.7MC

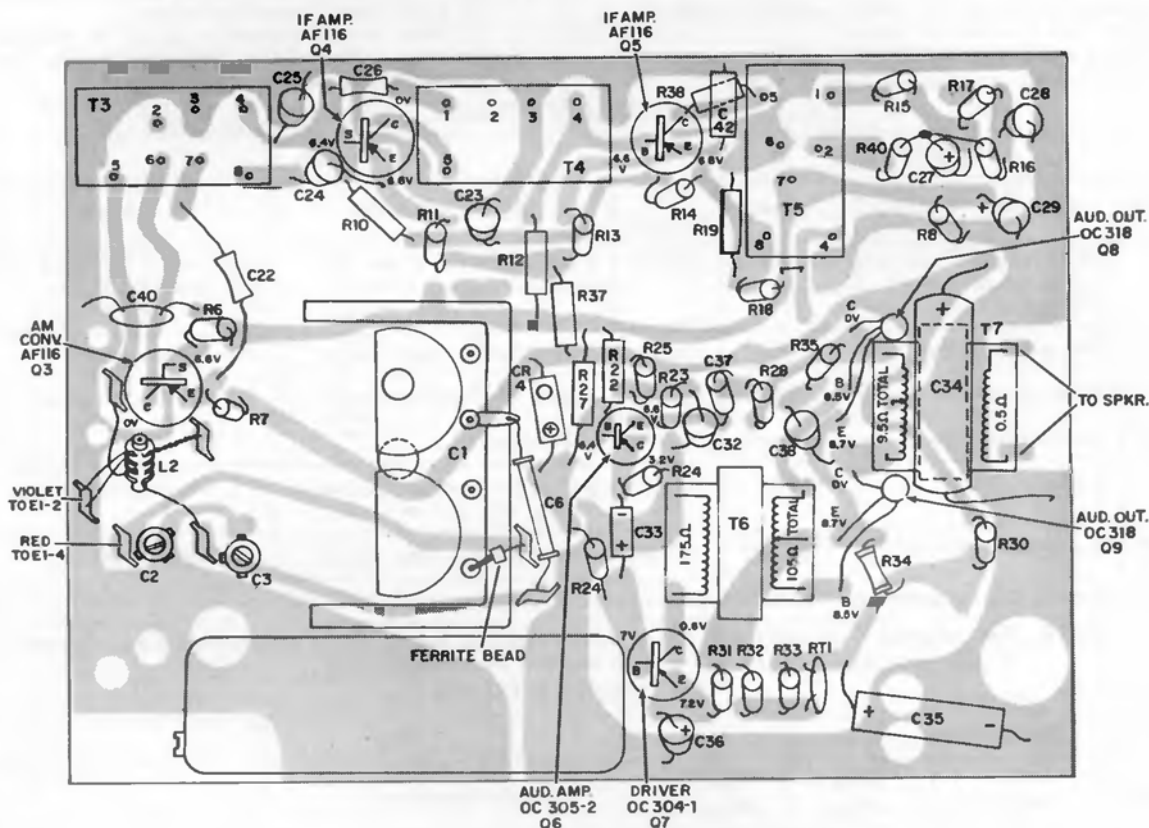

Bottom Composite View of Main Perma-Circuit Panel

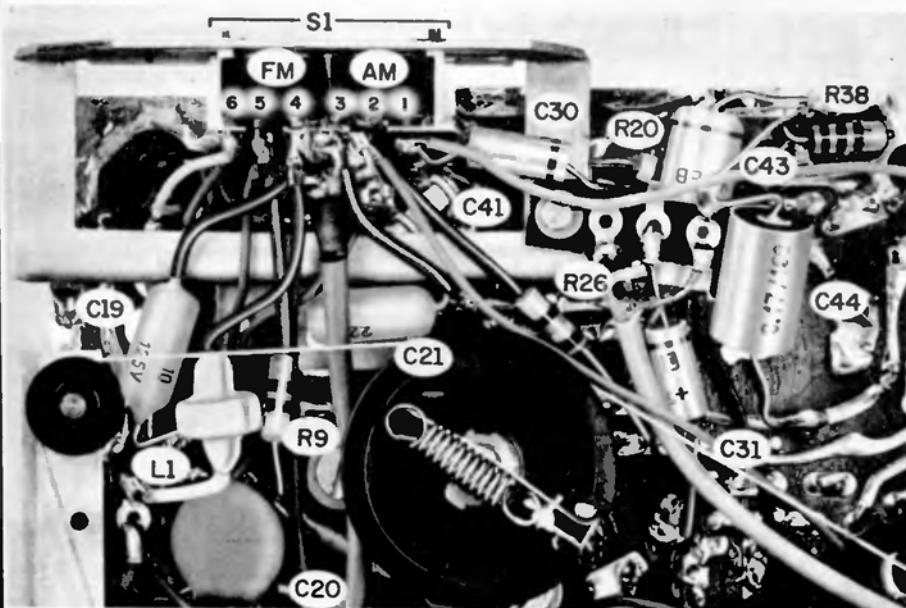

Under Panel Component Identification

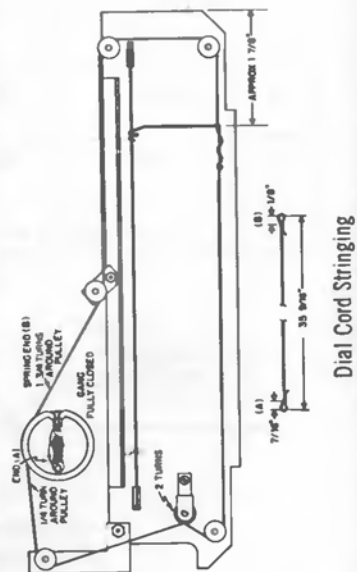

Dial Cord Stringing

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

PHILCO Model T-907, Alignment Information, Continued from preceding pages

AM ALIGNMENT PROCEDURE

Allow generator to warm up for 15 minutes.
Check pointer-scale alignment.
Chassis must be removed from cabinet. See disassembly instructions.
Connect scope or AC meter across speaker voice coil to observe output.
Volume control to maximum.
Check battery supply voltage, 9 volts.

FM ALIGNMENT PROCEDURE

Check pointer-scale alignment.
Chassis must be removed from cabinet. See disassembly instructions.
Depress FM push button.
Connect scope across volume control to observe "S" curve (see illustration below).
Loosely couple generator output to telescope antenna. Use only sufficient signal for clean scope presentation --- Do Not Overload.



AM ALIGNMENT CHART

Signal Generator			Radio		
Step	Connection To Radio	Frequency	Dial Setting	Special Instructions	Adjust
1	To base of AM converter, Q3, thru a .01 μ f capacitor.	460KC	1500KC	Adjust, in order given, for maximum output.	T3, 1st AM I-F top & bot. T4, 2nd AM I-F, top T5, 3rd AM I-F, top
2	Use radiating loop.	600KC	600KC	Adjust for maximum output.	L2, AM oac. core
3	Radiating loop	1500KC	1500KC	Adjust for maximum output.	C3, AM osc. trimmer
4.	Repeat Steps 2 and 3 until no further improvement is obtained.				
5	Radiating loop	600KC	600KC	Adjust for maximum output by sliding ant. coil on core.	E1, AM magnecore ant.
6	Radiating loop	1500KC	1500KC	Adjust for maximum output.	C2, AM ant. trimmer
7	Repeat Steps 5 and 6 until no further improvement is obtained.				

NOTE: For radiating loop, use a 6 to 8 turn, 6-inch diameter loop made up of insulated wire. Connect to generator terminals and place about one foot from antenna coil.

FM ALIGNMENT CHART


Sweep Generator			Radio		
Step	Center Frequency	Sweep Width	Dial Setting	Special Instructions	Adjust
1	10.7MC	50KC		Adjust for cross-over at 10.7MC.	T5 - FM top.
				Adjust in order given for maximum output and best symmetry. Repeat	T5 - FM bottom T4 - FM Top & Bot. T3 - FM Top & Bot. L4 & L5
2	89MC	25KC	89MC	Adjust for maximum output.	L3 - FM osc. core T2 - FM R-F core
3	102MC	25KC	102MC	Adjust for maximum output.	C5 - FM osc. trim. C4 - FM R-F trim.
4	Repeat Steps 2 and 3 until no further improvement is noted.				

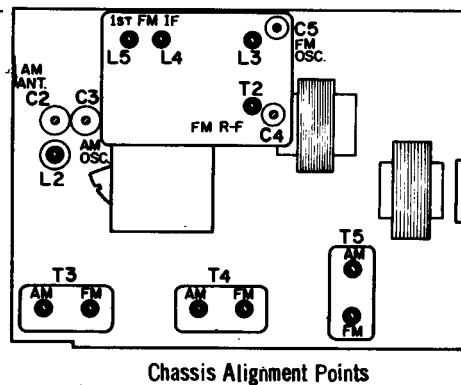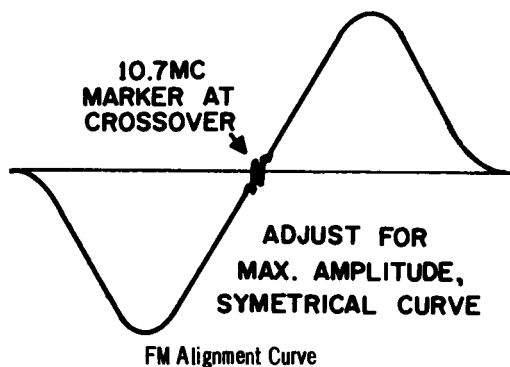


PHILCO

TRANSISTOR PORTABLE AM-FM MULTI-BAND T-911


(Service material continued on the next page, at right)

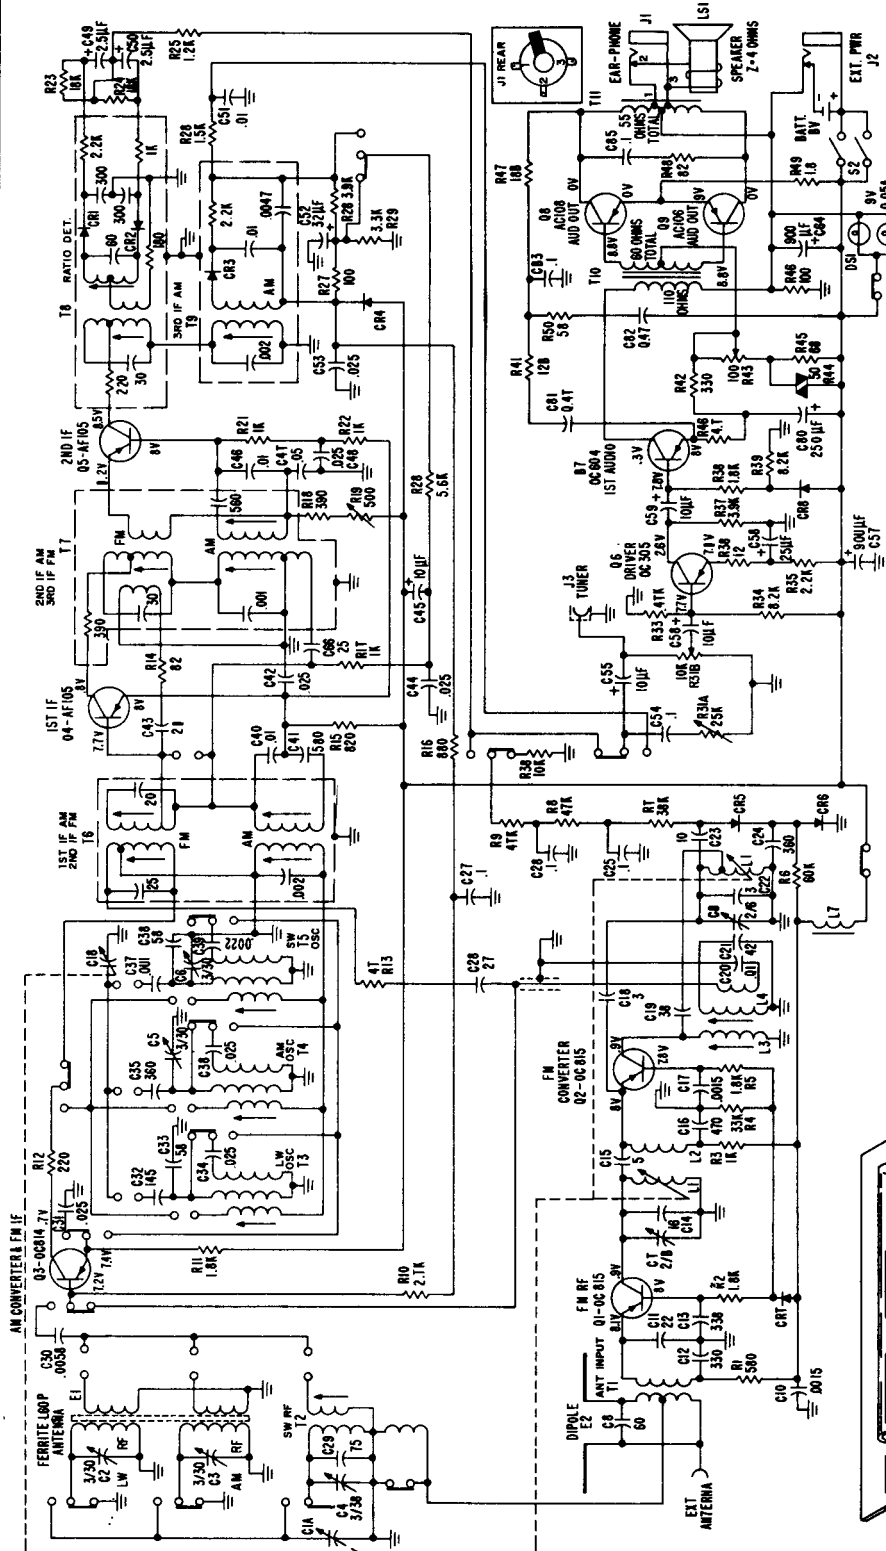


1. ALL VOLTAGES MEASURED FROM B-TO POINTS INDICATED.
2. VOLTAGES TAKEN UNDER 80 SIGNAL CONDITIONS WITH VTM PRECISION MODEL "M" EXCEPT Q1, Q2 & Q3.
3. VOLTAGES READ ON Q3 TAKEN IN "AM POSITION".
4. VOLTAGES READ ON Q1, Q2 TAKEN IN "FM POSITION".

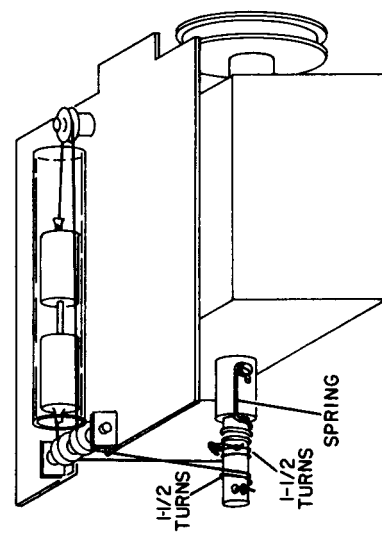


FM Tuner Dial Cord

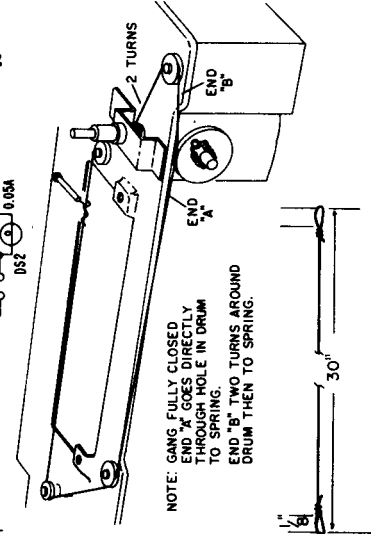


Dial Cord Stringing

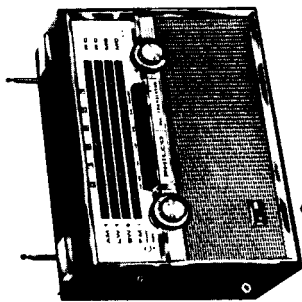

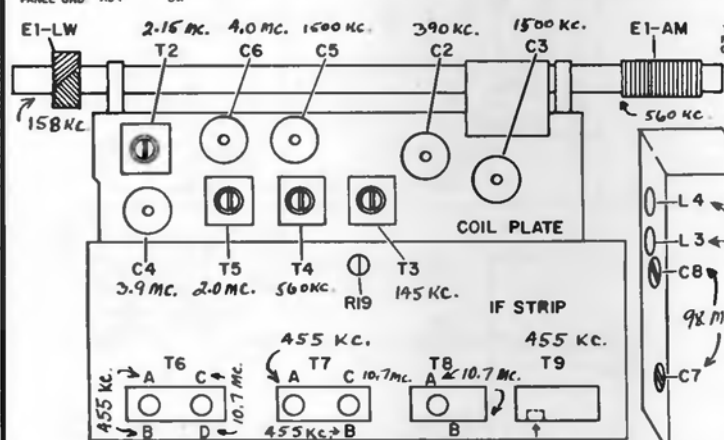


FM TUNER

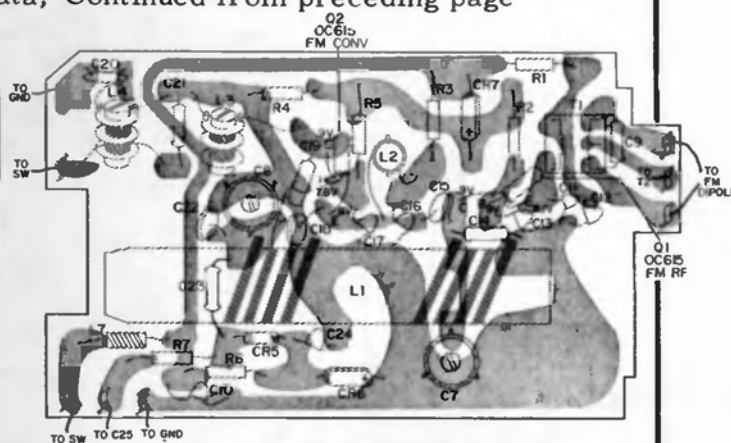

121

PHILCO
Model M-1421
and
Model M-1529

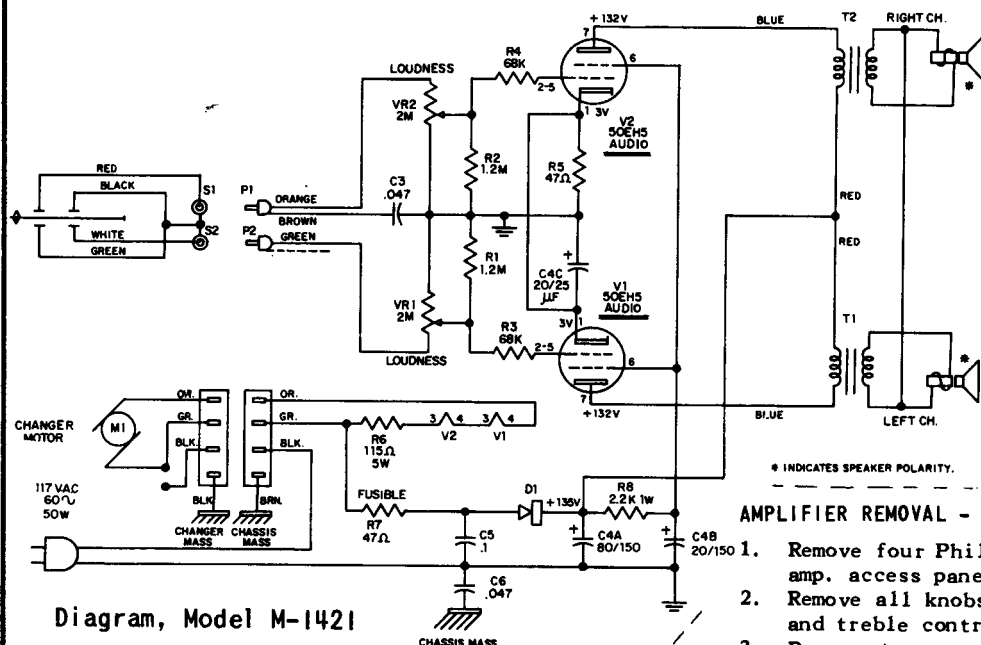


Diagram, Model M-1421

AMPLIFIER REMOVAL - MODEL M-1421

1. Remove six Phillips screws securing changer mounting board to cabinet.
2. Remove changer mounting board and amp. assembly.
3. Remove two T-nuts securing amp. to changer mounting board.
4. Amp. may now be removed.


AMPLIFIER REMOVAL - MODEL M-1529

1. Remove four Phillips screws securing rear amp. access panel and remove panel.
2. Remove all knobs and two T-nuts from bass and treble controls.
3. Remove two speed nuts on studs securing rear of chassis.
4. Straighten clip securing left side of changer. Lift left side of changer to free mounting screws. Slide changer to left in order to free right mounting screw.
5. Lift changer and remove phono power and phono input cables.
6. Remove two cable clamps securing phono power and phono input cables.
7. Remove amp. while feeding cables through slot in side of changer drawer.

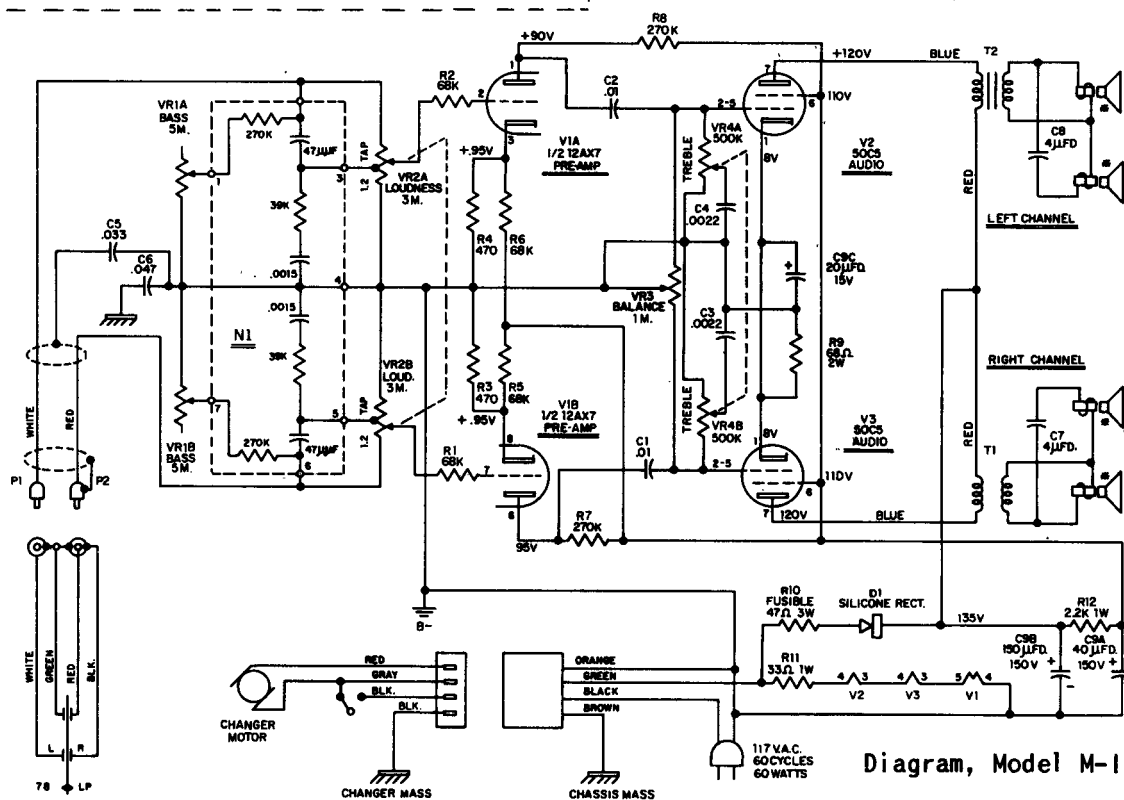


Diagram, Model M-1529

PHILCO Model M-1537 and Model M-1416 (Below)

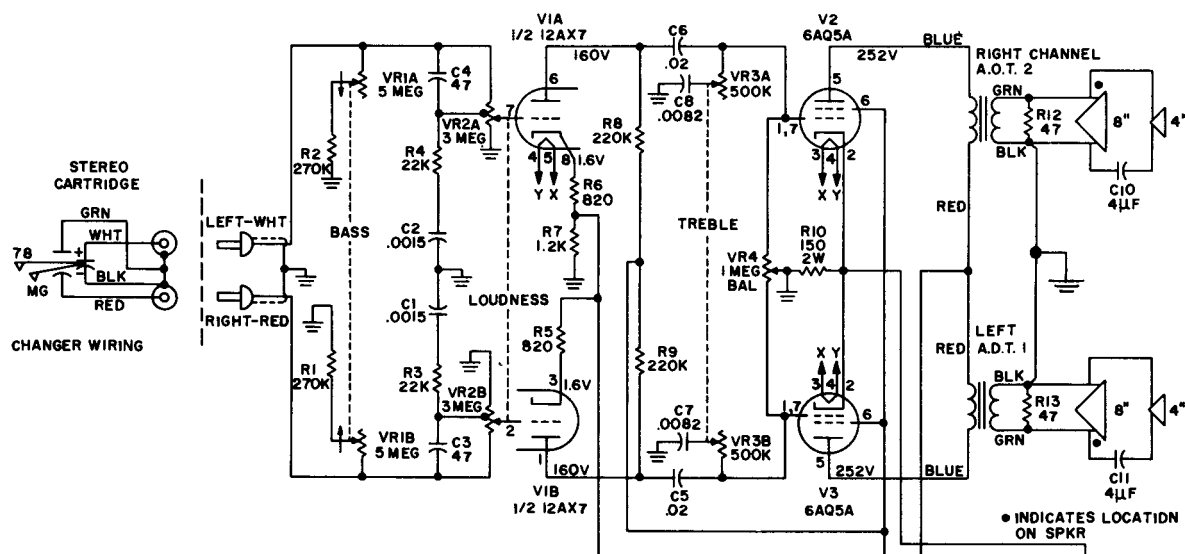


Schematic Diagram, Model M-1537

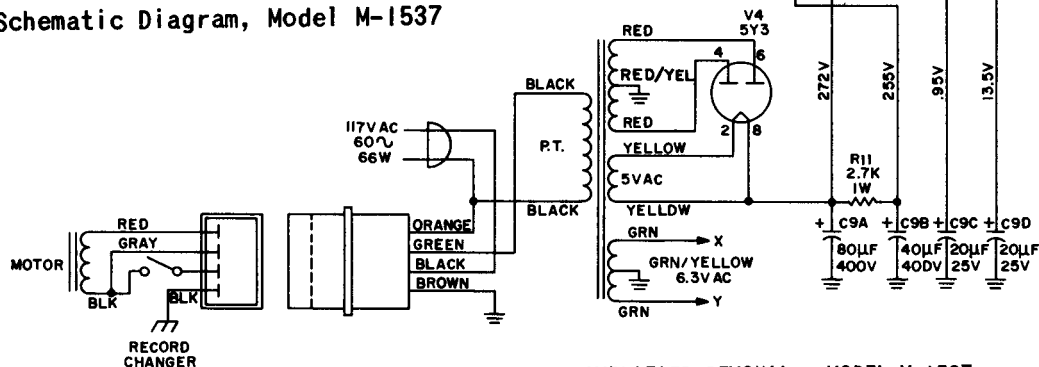

AMPLIFIER REMOVAL - MODEL M-1537

1. Remove two Phillips screws from back of cabinet. Do not remove two screws that fasten grille to cabinet back.
2. Remove plug on right side of changer base. Grasp washer on changer, hold down screw with long nose pliers. Grasp washer on side opposite washer opening through hole in right side of changer bin.
3. Lift right side of changer and slide changer to the right in order to free left side.
4. Unplug phono power and phono input cables. Set changer aside.
5. With a short screw driver, remove the two Phillips screws holding the amplifier compartment in the cabinet. These screws are located at the top of the changer compartment and run through the changer bin stop blocks.
6. Loosen phono power and phono input cable hold downs.
7. Slide amplifier compartment out of cabinet guiding all cables through openings in side and back of cabinet.
8. Remove knobs and T-nuts located on controls behind knobs.
9. Remove two speed nuts from studs on amplifier rear flange. Lift amplifier to clear studs and pull away from compartment.

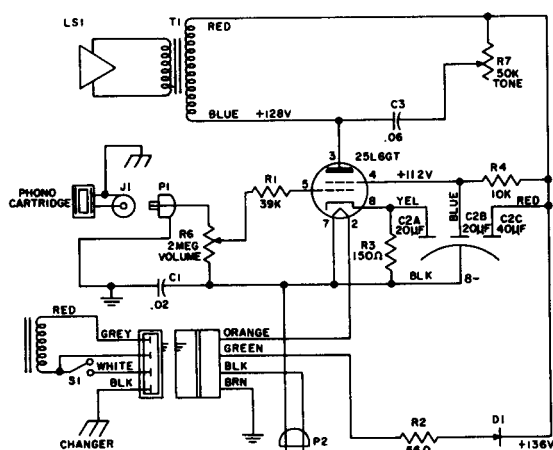


Schematic Diagram, Model M-1416

PHILCO


MODELS L-1651, L-1652, & L-1653

(Service material continued on pages 125 through 128)

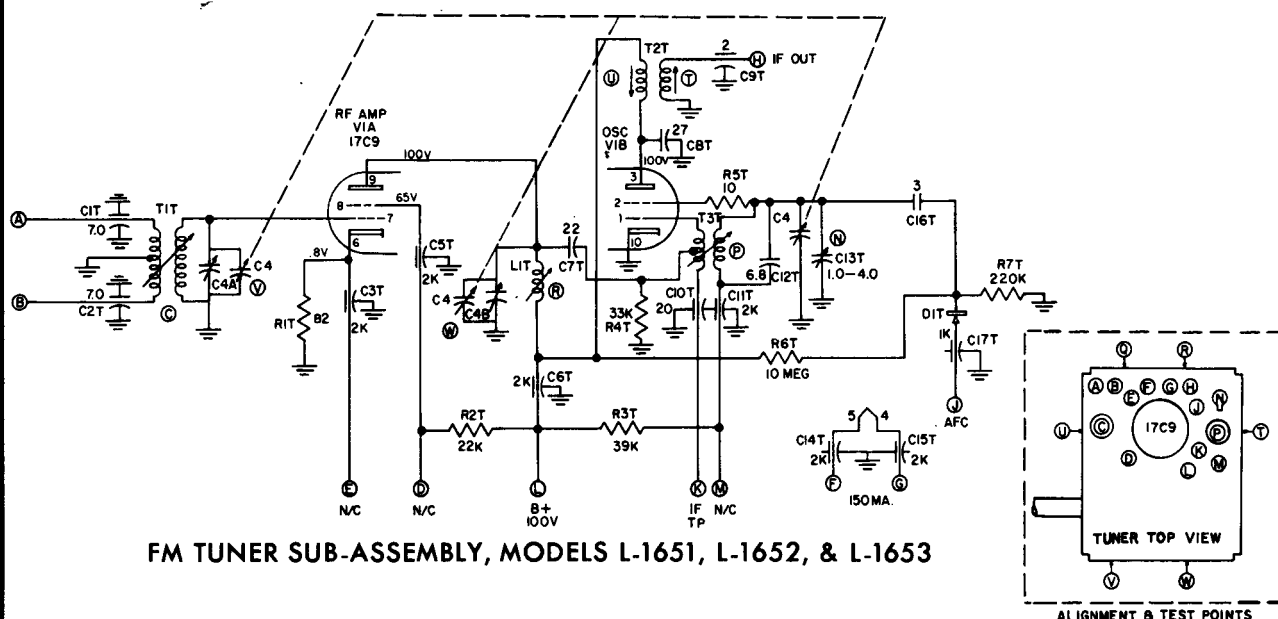

FM TUNER SUB-ASSY. REMOVAL - MODELS L-1651, L-1652 & L-1653

1. Remove 8 screws holding front faceplate to chassis.
2. Remove faceplate and large pulley connected to AM tuning gang. DO NOT REMOVE dial cord.
3. Remove connecting cord from FM and AM tuning gang pulleys only.
4. Unsolder 6 wires that connect tuner to chassis.
5. Remove 4 sheet metal screws holding front and back of tuner in chassis.
6. Remove tuner by forcing from chassis.

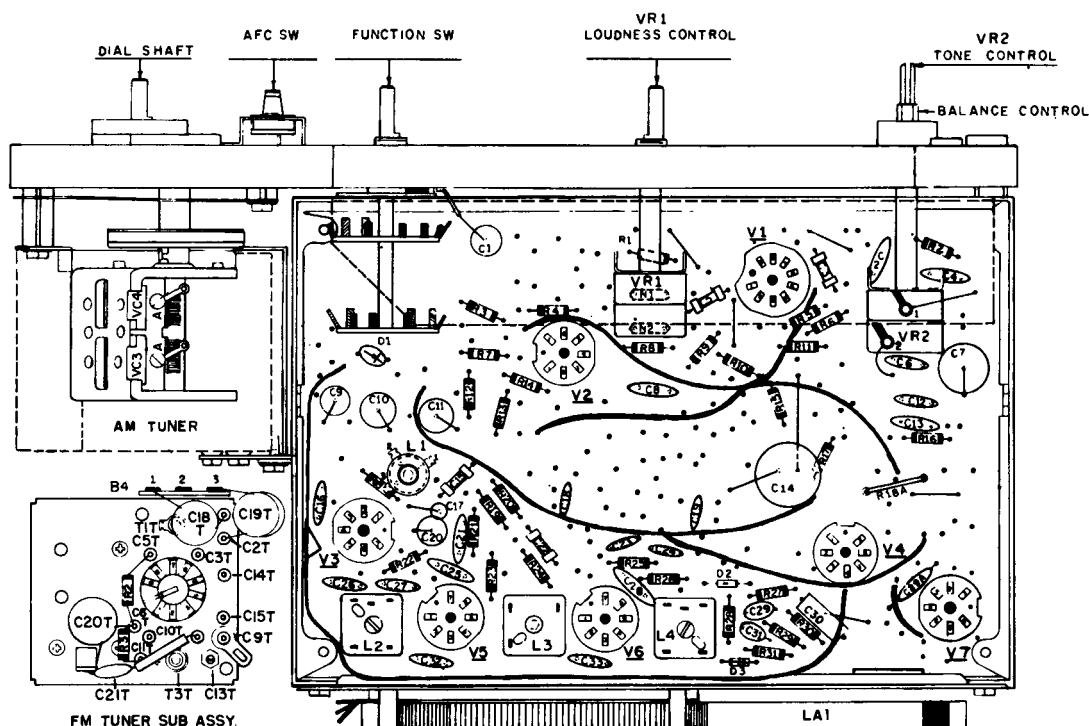


PHILCO

MODEL L-1651 AMPLIFIER AND TUNER


(Continued from page 124,
Diagram is on page 125)

AMPLIFIER AND TUNER PANEL REMOVAL - L-1651, L-1652 & L-1653

1. Unsolder all wires holding perma-circuit panel in chassis.
2. Remove 6 sheet metal screws that secure perma-circuit panel to front panel and FM tuner.
3. Remove 2 nuts from function switch and loudness control.
4. Pull panel and associated chassis from front panel.
5. Remove 5 sheet metal screws holding perma-circuit panel to chassis.
6. Lift panel away from chassis.

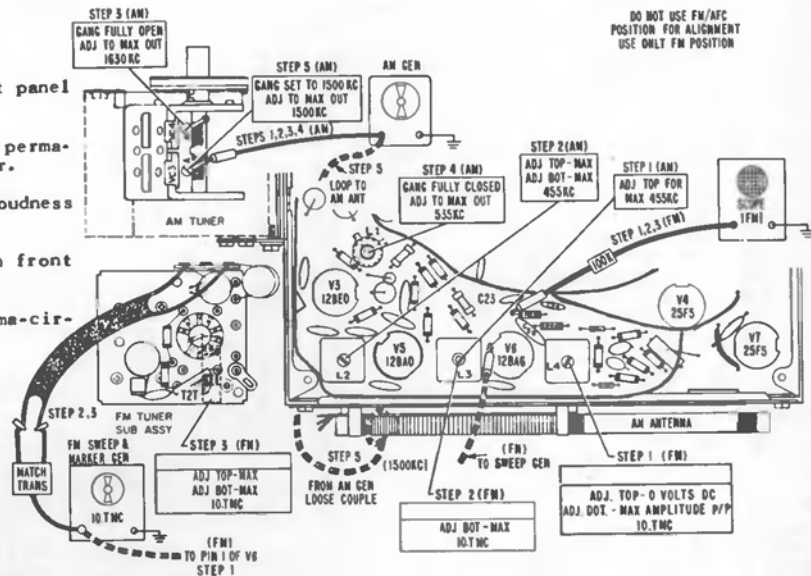

Alignment Procedure Chart, Model L-1651

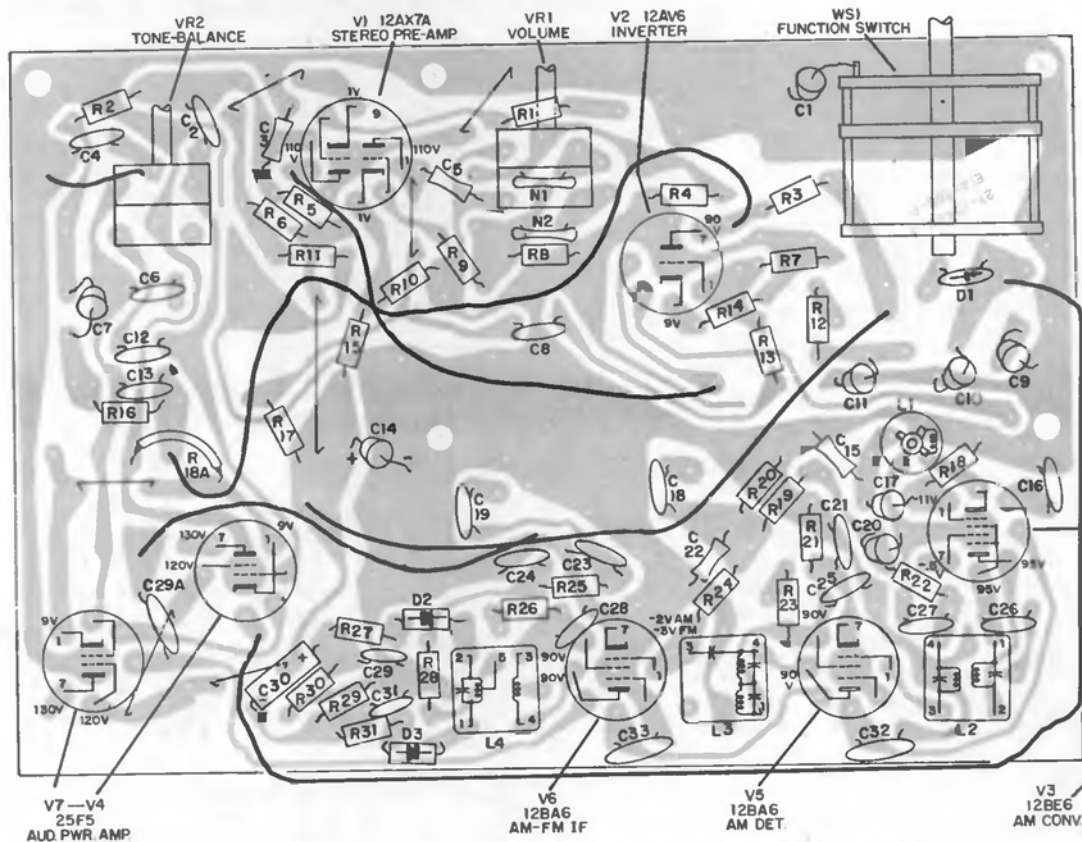

Bottom Perma-Circuit View, Parts Location, Model L-1651


Amplifier and Tuner Schematic Model L-1651



PHILCO


MODELS L-1652 & L-1653 AMPLIFIER AND TUNER

(Continued)

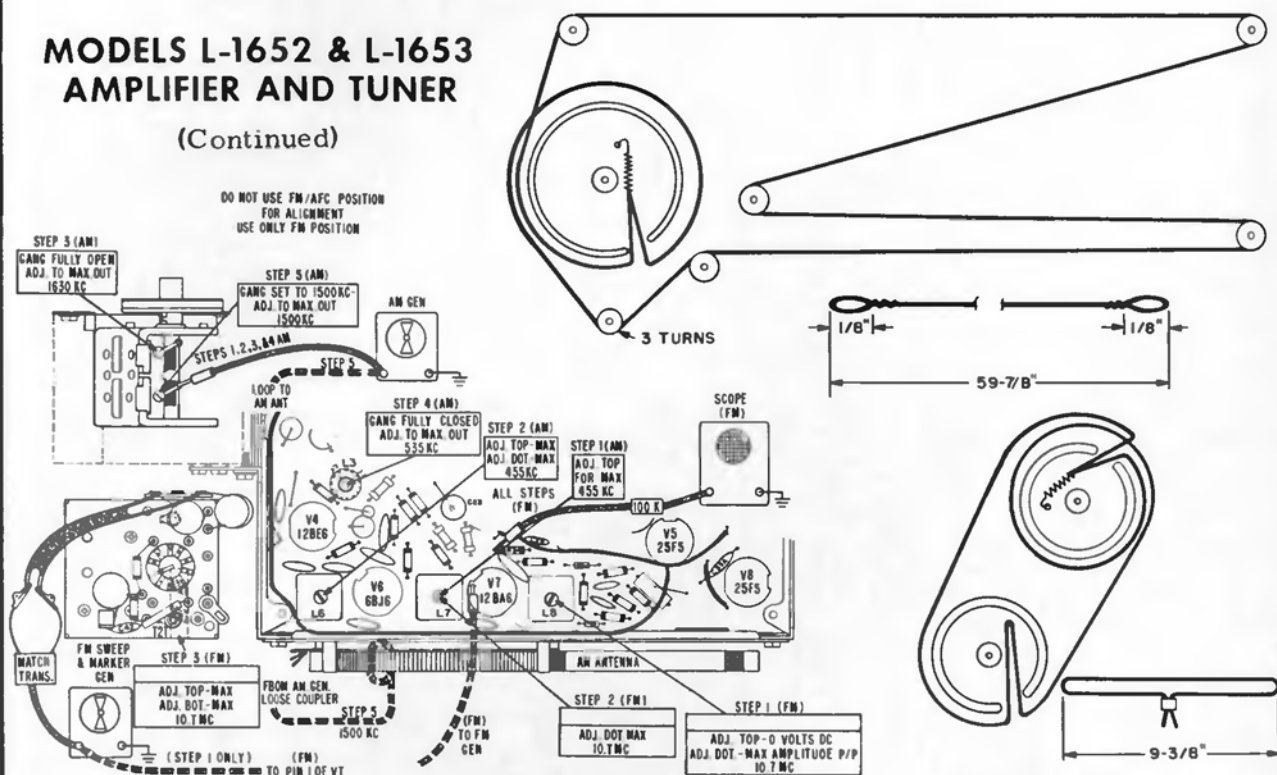

Alignment Procedure Chart, Models L-1652 & L-1653


Dial Cord Stringing

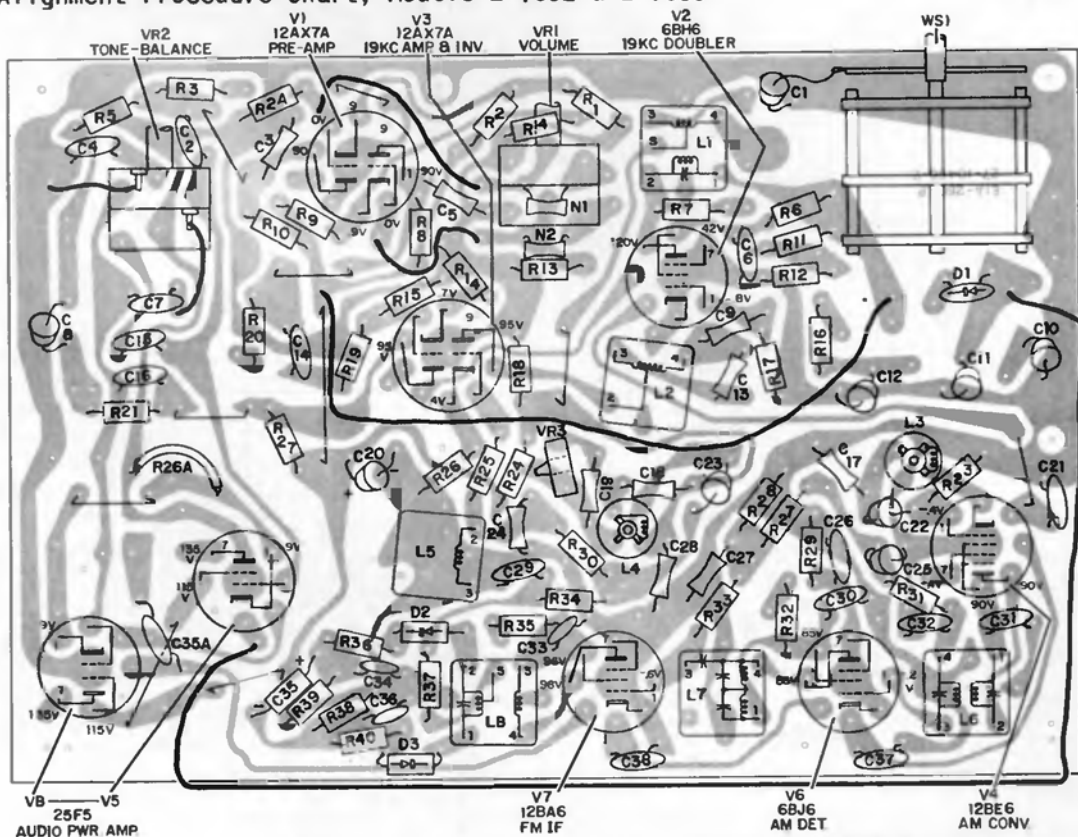

Bottom Perma-Circuit View Parts Location, Models L-1652 & L-1653


PHILCO MODELS L-1652 & L-1653

ALL VOLTAGES TAKEN WITH "PRECISION" VTVM MODEL "88". ALL CONTROLS SET AT MINIMUM AND SELECTOR SWITCH SET TO PHONO OR FM POSITIONS.

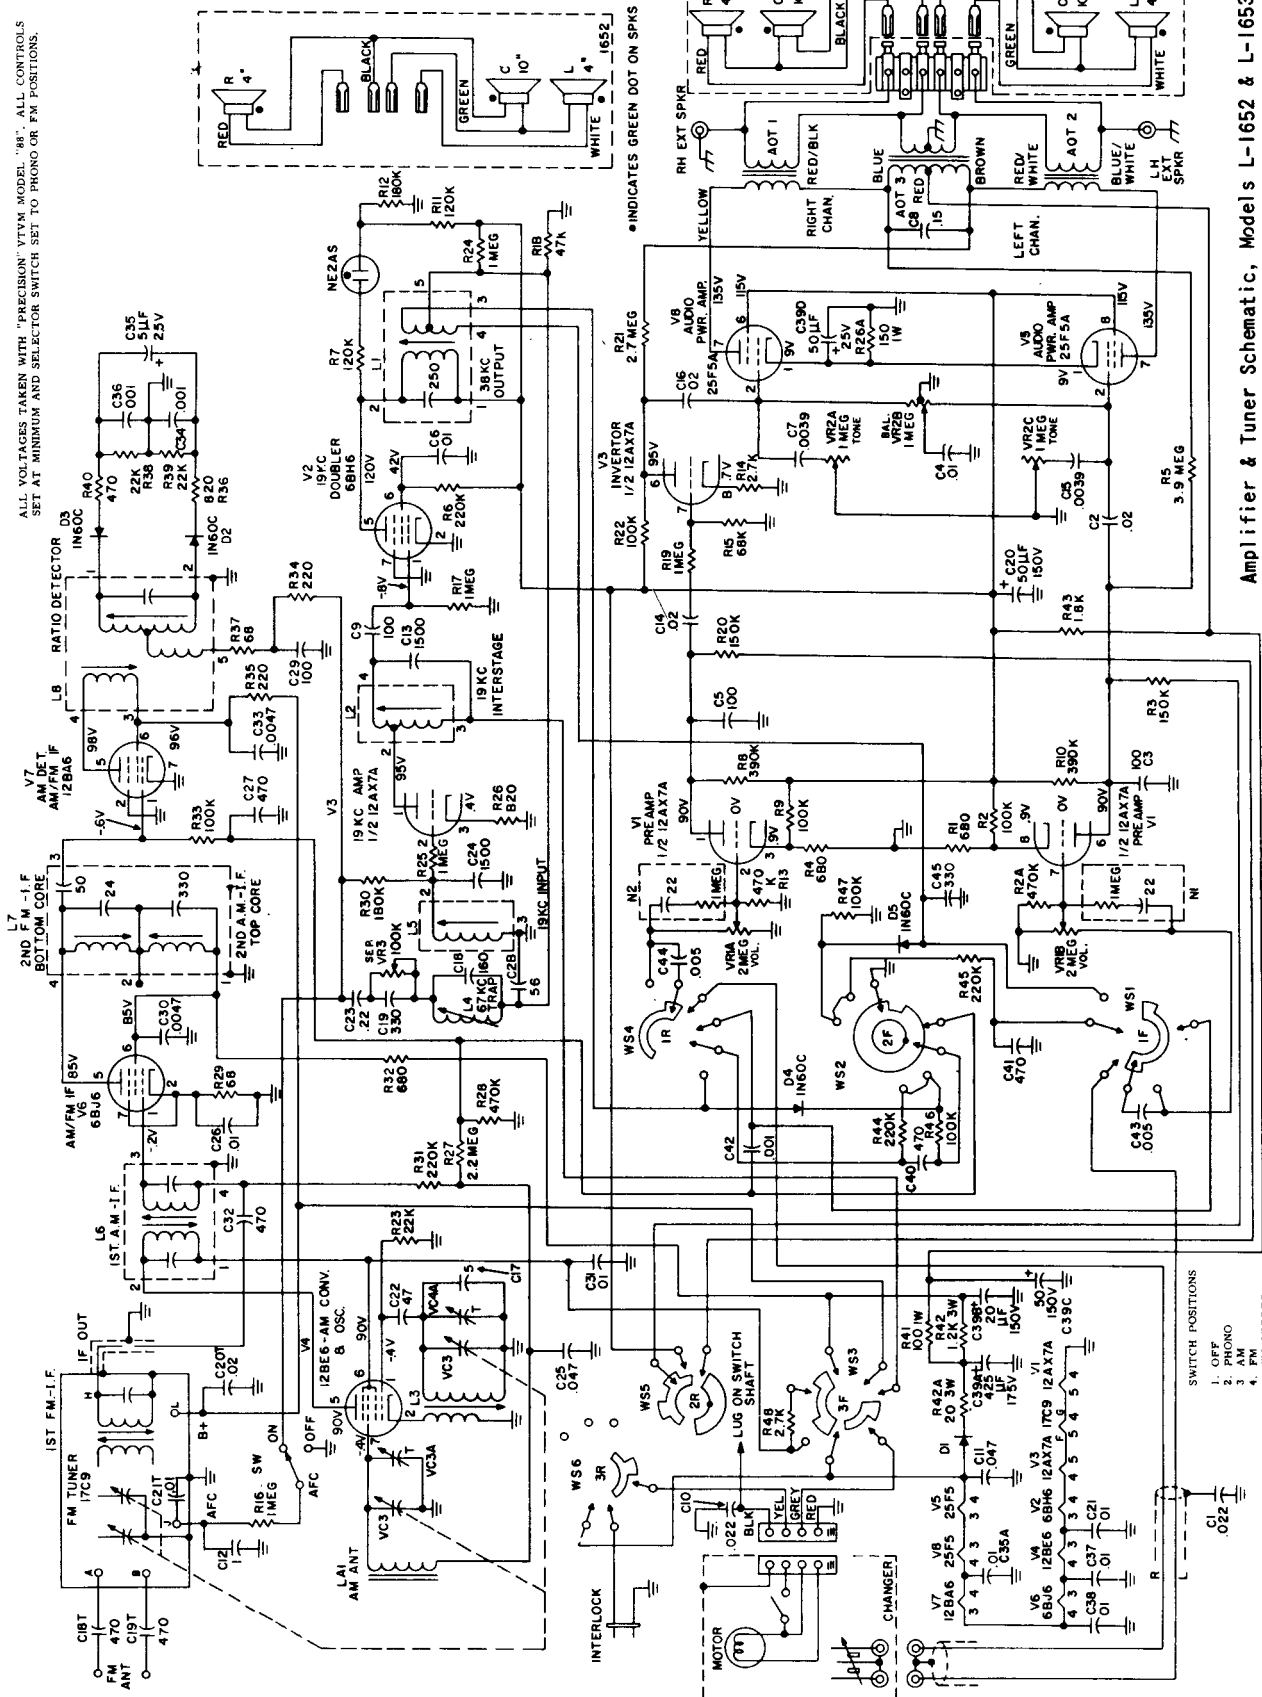


Amplifier & Tuner Schematic, Models L-1652 & L-1653

PHILCO Models L-1656, L-1667 & L-1679

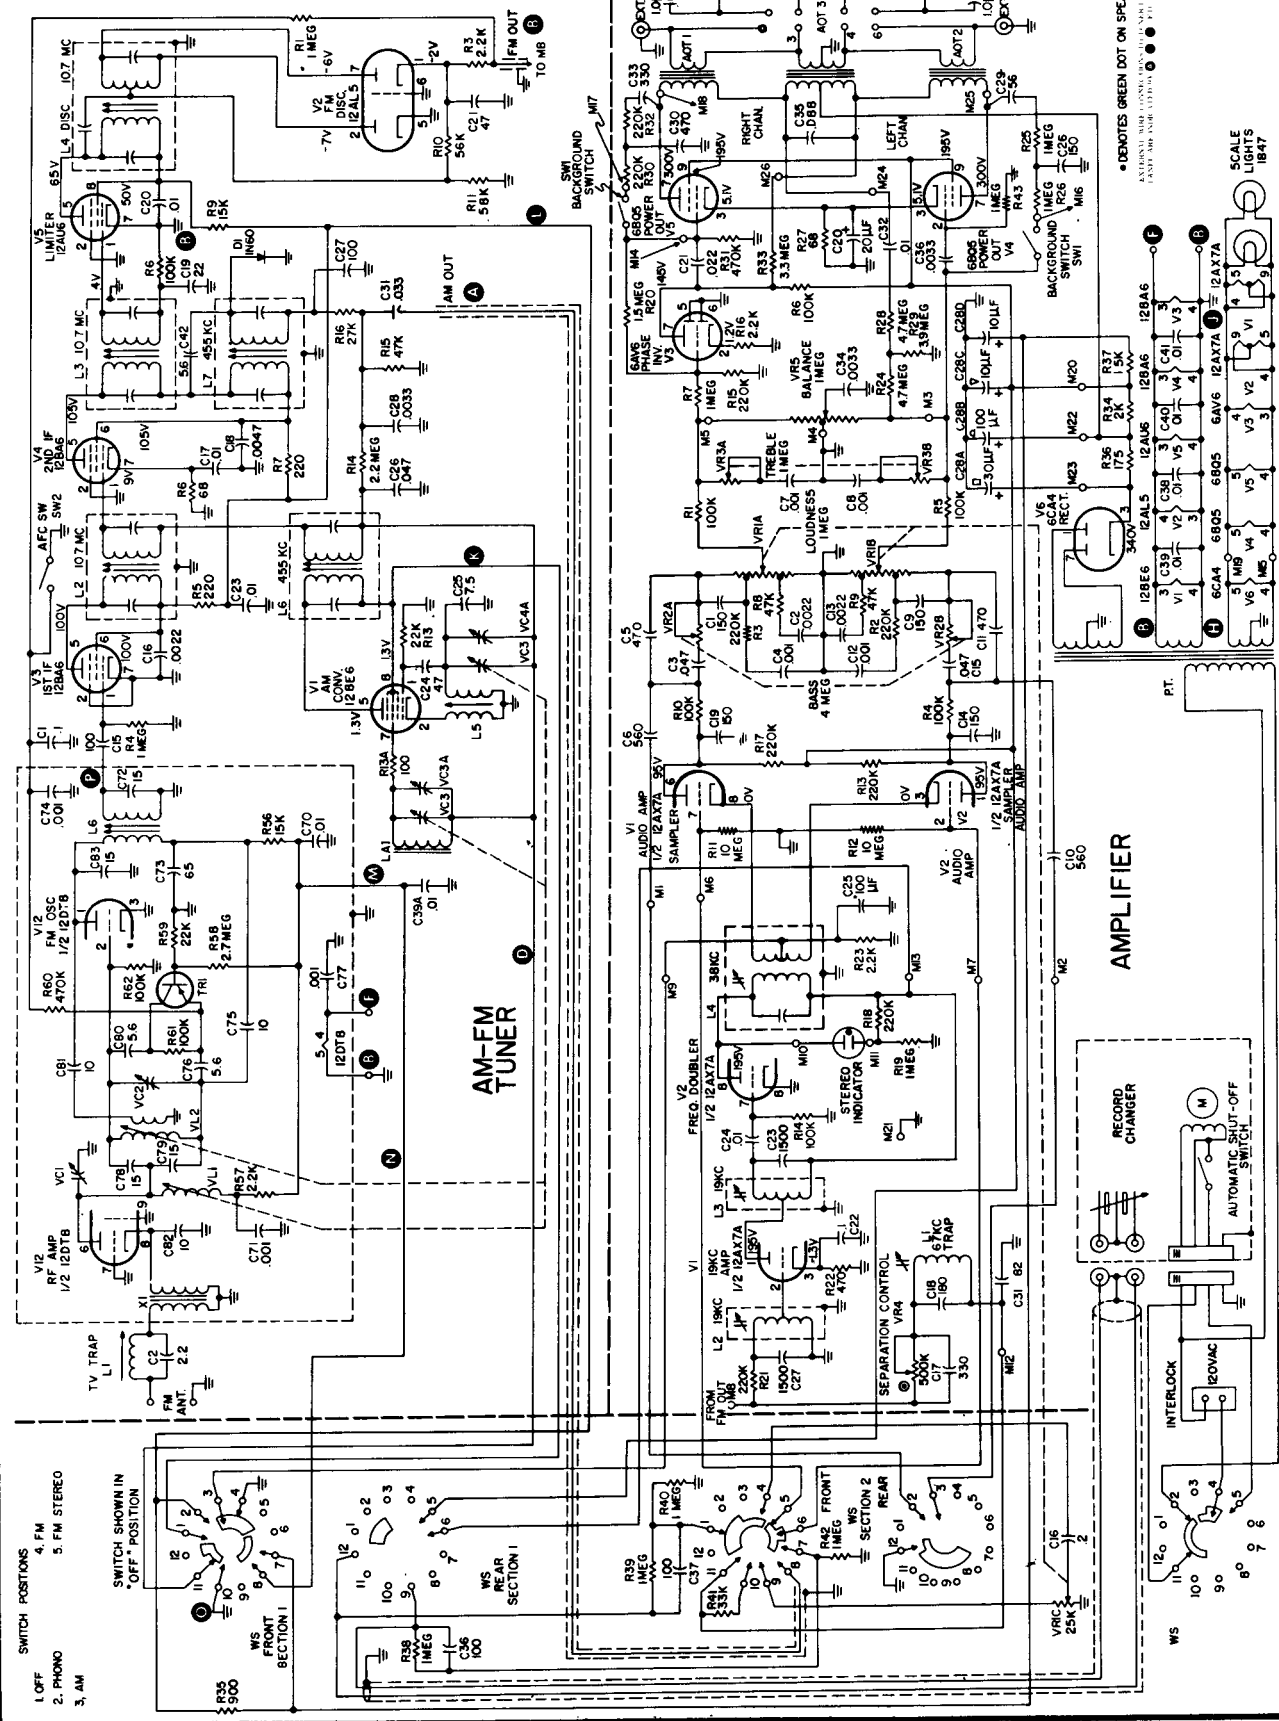

Amplifier and Tuner Schematic Diagram, Models L-1656, L-1667 & L-1679


PHILCO Models L-1656, L-1667, L-1679, (L-1731) Amplifier & Tuner (Continued)

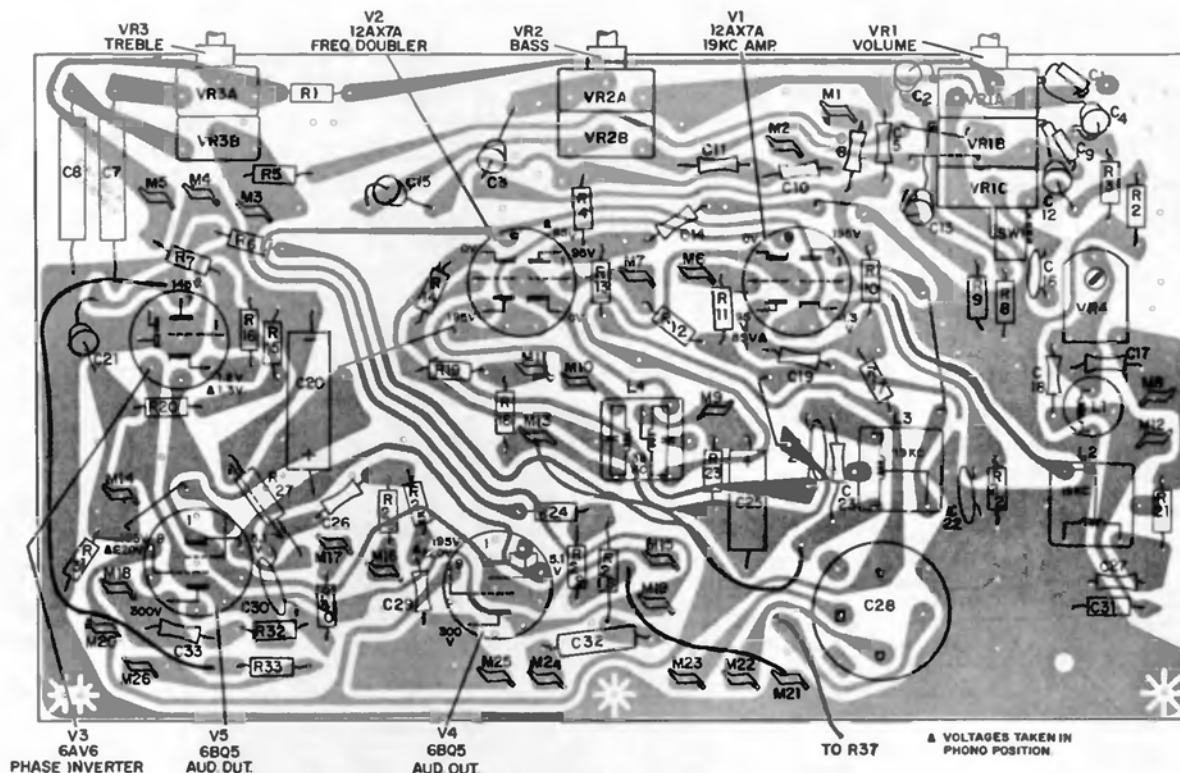

Bottom Perma-Circuit View, Parts Location, Models L-1656, L-1667 & L-1679

Amplifier perma-circuit panel was changed to Run 2 identified by a red dot. Panel changes consisted of removing wire jumper from Pin 1 of V1 to center tap of L3. Wire jumper was replaced with a 1K Ω resistor R16A. Resistor R18 was changed to 270K Ω . R14 was changed to 220K Ω . The copper foil connecting M10 and Pin 6 of V2 was opened. A 780K Ω resistor was soldered to the bottom of the panel from M10 to Pin 6 of V2. R19 was changed to a 1 megohm resistor.

Amplifier perma-circuit panel was changed to Run 3 identified by an orange dot. Panel changes consisted of removing wire jumper connecting Pin 2 of V5 to junction of M14, C21 and R31 and replacing with a 1K Ω resistor.

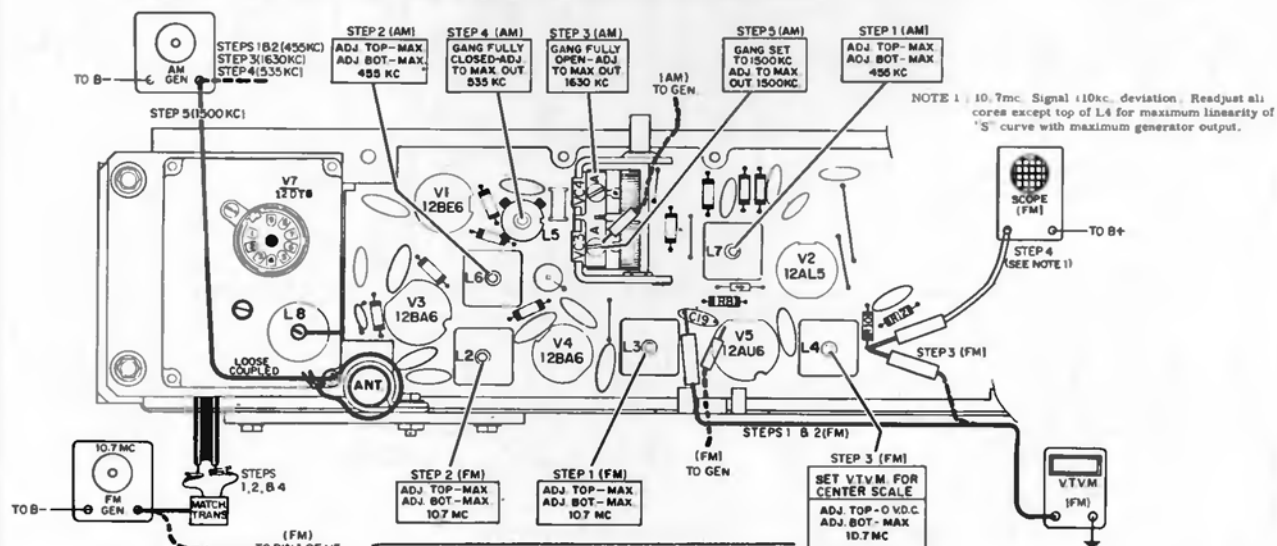

Alignment Procedure Chart AM-FM Tuner Models L-1656, L-1667, L-1679 & L-1731

RCA VICTOR

Chassis RS-202A, Models 3VC64, 3VC82, 4VC64, 4VC69, 4VC82,
and similar Chassis RS-202B, used in Models 4VE045, 4VE046.

ACCESS TO TUBES

All tubes are accessible through the small panel on the rear of the instrument.

1. Remove power cord.
2. Remove three (3) plated screws holding small access panel on rear of instrument.
3. Swing panel down and to right on its pivot. DO NOT ATTEMPT TO REMOVE PANEL.

CHASSIS REMOVAL


The top of the record changer compartment comprises the complete chassis. It rests on and is secured to a ledge at the front and is held by screws at the rear. The recommended procedure for its removal is as follows:

1. Remove knobs.
2. Open small access panel as described in "Access to Tubes."
3. Position two (2) holes in access panel over screws holding power cord interlock.
4. Remove two (2) machine screws holding interlock.


5. Pull record changer drawer down.

If it is not desired to remove chassis completely, omit Steps 6 & 7.

6. Unscrew two (2) bolts securing record changer in access holes in turntable, one at front and one at rear.) drawer. (Lift mat of turntable and reach bolts through access holes in turntable, one at front and one at rear.) DO NOT ATTEMPT TO REMOVE RECORD CHANGER DRAWER.
7. Lift up changer and disconnect cables.
8. Remove four (4) plated screws holding front of chassis to horizontal ledge located inside of compartment at front of top.
9. Remove wires, running down each back corner of compartment, from holding clips.
10. Remove four (4) painted screws holding rear of chassis to rear of instrument—just below the access panel.
11. Chassis may then be lowered and removed.
12. Disconnect speaker cables from transformers and lift chassis out of case.

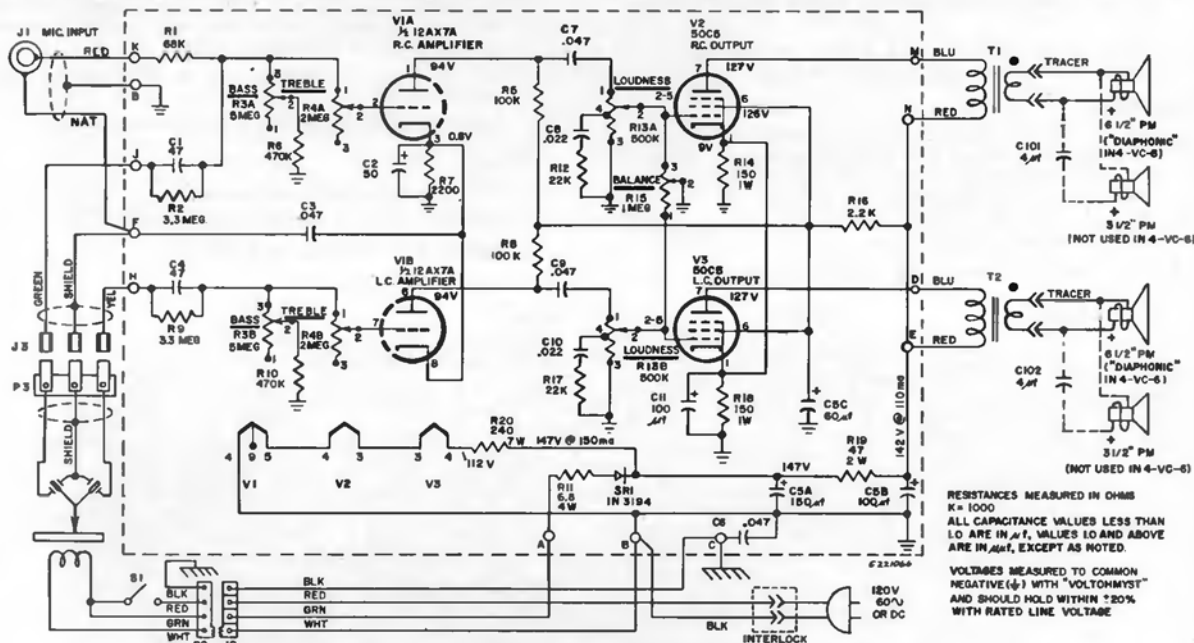

Wiring Board—View from Wiring Side

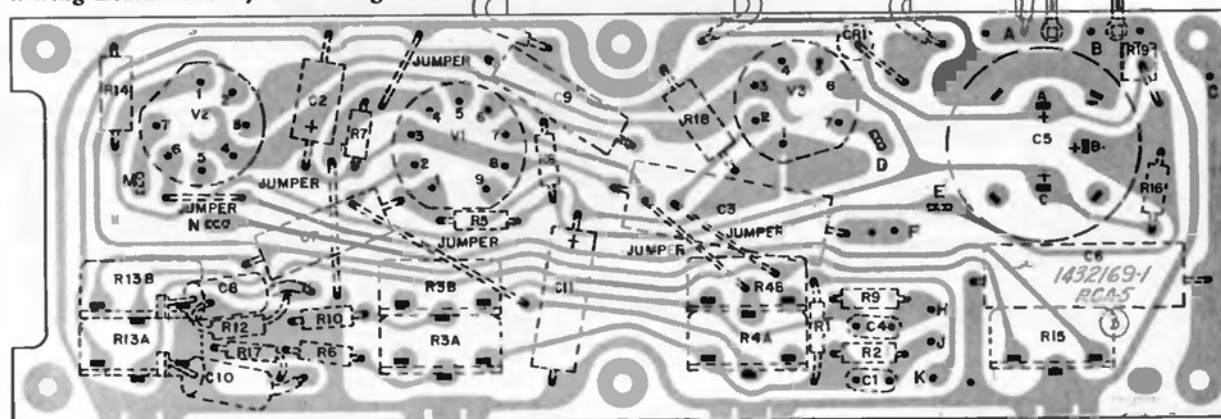

RCA VICTOR

4RA1 Series, Models 4RA10, 4RA14, 4RA15, Chassis RC-1213A,
 4RA3 Series, Models 4RA30, 4RA31, 4RA34, Chassis RC-1213B,
 4RA4 Series, Models 4RA41, 4RA42, 4RA45, Chassis RC-1213F,
 4RD4 Series, Models 4RD40, 4RD44, 4RD41, Chassis RC-1213H,
 4RD5 Series, Models 4RD51, 4RD52, 4RD55, Chassis RC-1213E.

(Service data below and continued on the next page at right)

CHASSIS ACCESSIBILITY

4RA1 and 4RD4 Series

1. DO NOT ATTEMPT TO REMOVE THE KNOBS. The tuning and volume control knobs are held captive to the cabinet by retainers on their shafts.
2. Remove the back cover by lifting the protrusions on the bottom of the back cover, out of the slots in the base of the cabinet.
3. Unsolder speaker leads if necessary. Avoid putting a strain on the speaker leads.
4. Remove two chassis retainers (screws or clips), one at the volume control and one on the left end mounting.
5. Grasp tuning capacitor and volume control, and pull chassis out of knobs and mounting slots.

4RA3 Series

1. IT IS NOT NECESSARY TO REMOVE THE KNOBS. The chassis, antenna, and loudspeaker are all mounted on the front panel section and are readily accessible when the back is removed.
2. Remove two (2) screws, one at each of the upper corners of the back.
3. Pull front panel section out of hood-back section.

To reassemble—


1. Align the power interlock connector.
2. Press the front and back sections of the cabinet together.
3. Check that the three bosses on the bottom of the front section are seated in their respective slots in the bottom of the back section.
4. Replace screws at upper back corners.

4RA4 and 4RD5 Series


1. IT IS NOT NECESSARY TO REMOVE THE KNOBS. The chassis, antenna, and loudspeaker are all mounted on the front panel section and are readily accessible when the back is removed.
2. Remove four (4) screws, one at each of the back corners.
3. Pull front panel section out of hood-back section.

To reassemble—

1. Align the power interlock connector.
2. Press the front and back sections together.
3. Replace four screws in back corners.

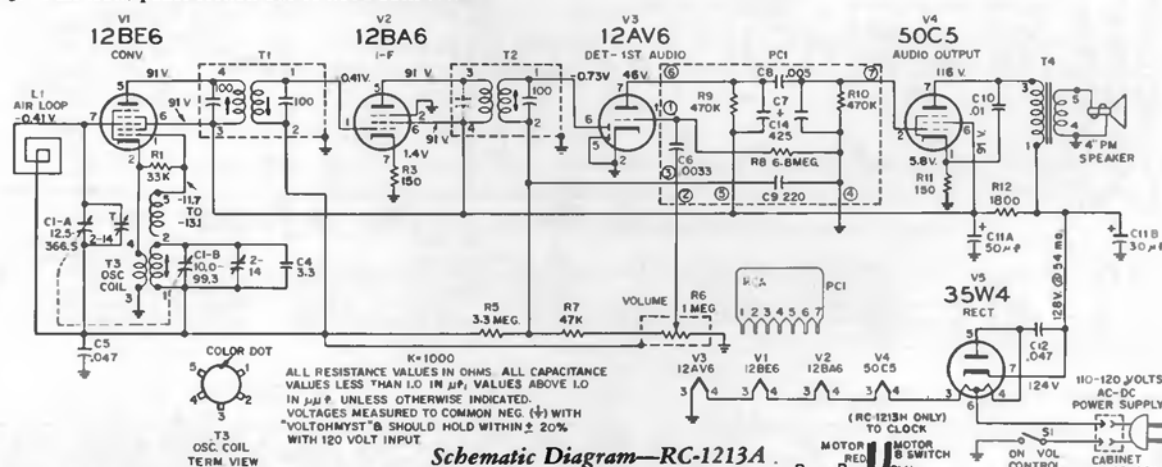

Schematic Diagram—RC-1213A

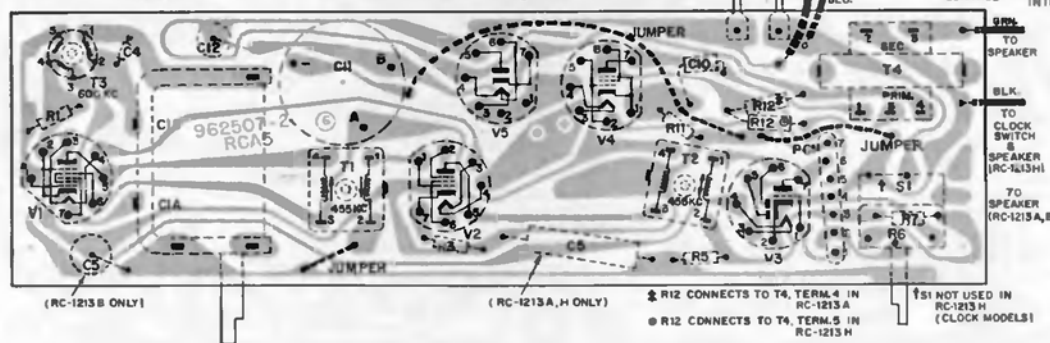


Chassis Layout—RC-1213A, B, H


View from Wiring Side

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


RCA Victor Chassis RC-1213A, -B, -E, -F, -H, Continued from preceding page.

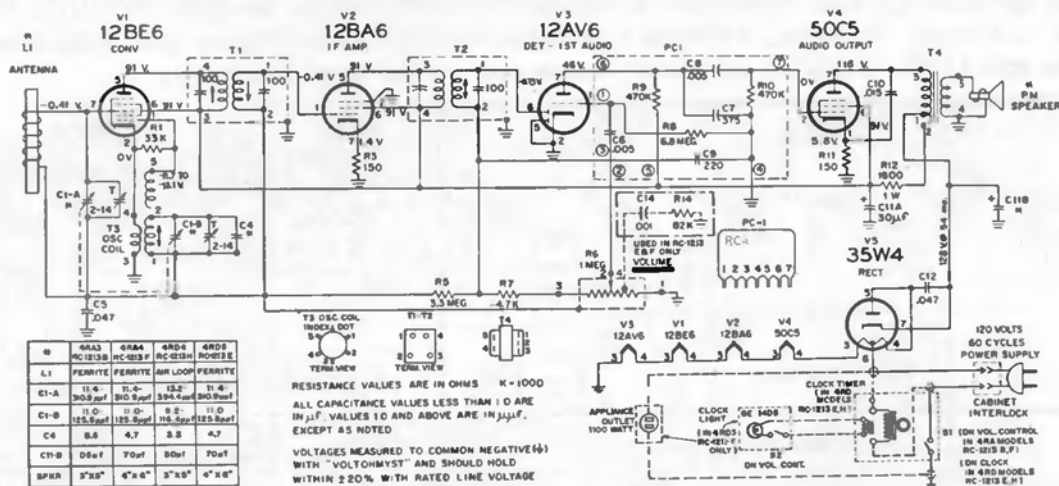


Schematic Diagram—RC-1213B, E, F, H

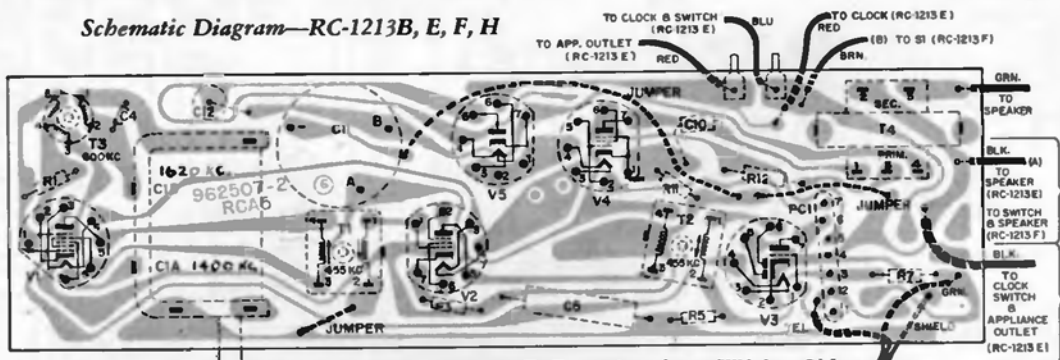


Chassis Layout—RC-1213E, F View from Wiring Side

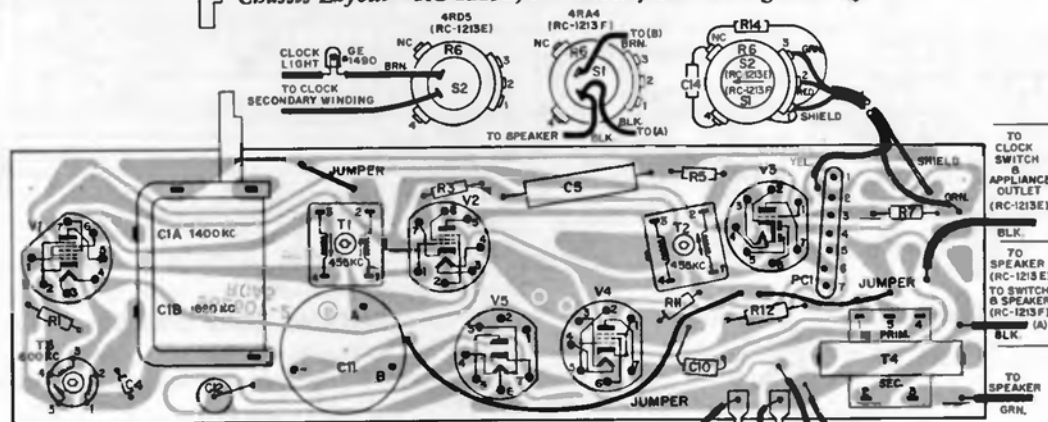



Chassis Layout—RC-1213E, F View from Component Side

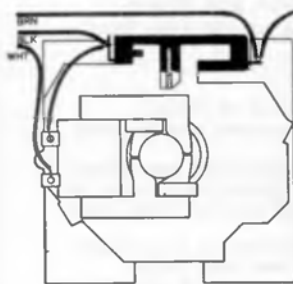

Clock Wiring

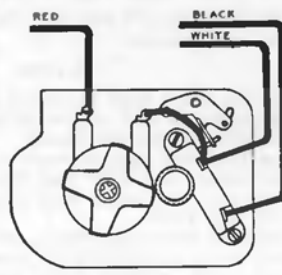


Dial Cord Stringing

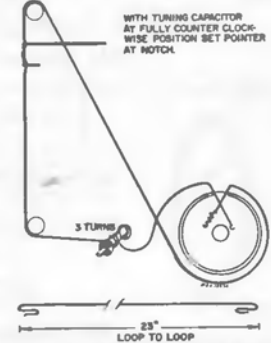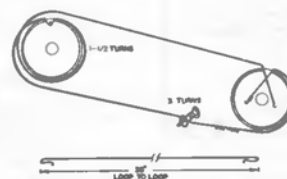


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

RCA VICTOR Models 3VF305, 3VF306, 3VF340, 3VF346, 3VF349, employ Tuner Chassis RC-1205C and Amplifier Chassis RS-199B; while Models 3VF405, 3VF446, 3VF516, 3VF534, 3VF604, 3VF619, 3VF646, use the same Tuner and Amplifier Chassis RS-177H. Service material below and on the next two pages.

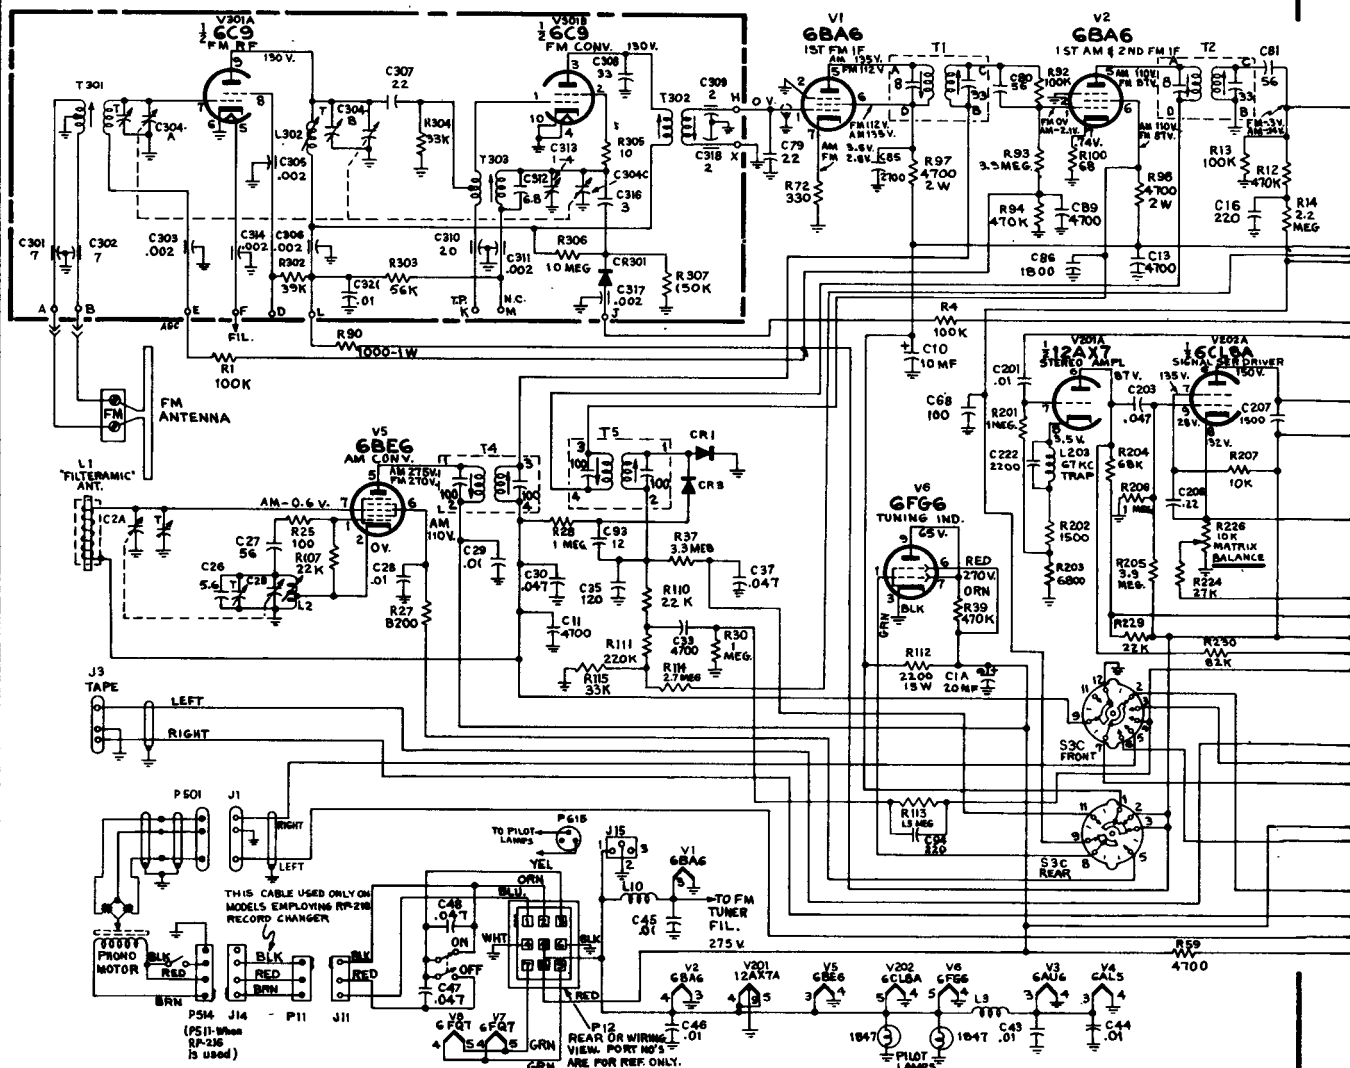

Dial Cord Stringing

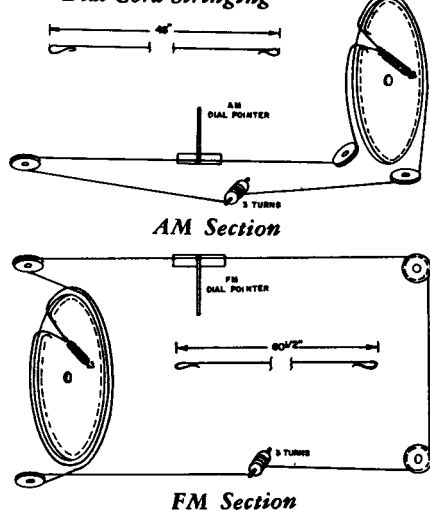

CRITICAL LEAD DRESS

RC-1205C


1. Dress R3 and R9 up and away from all other components.
2. Keep 10.7 mc IF grid and plate wiring short and close to chassis.
3. Dress L3 close to chassis.
4. Keep heater leads away from audio grid circuits.
5. Dress C46 and C48 and AC wiring up and away from audio components.

RS-177H

1. Dress all heater leads flat along bottom of chassis.
2. Use minimum lead length on all resistors between V401 and V402 and terminal board.
3. Dress feed back leads between terminal board near output transformers and V401 and V402, along inside corner of chassis and then along back side of terminal board near V401 and V402.
4. Dress plate leads from output transformers to output tubes down center of chassis away from feed back leads.
5. Dress power resistors R426, R427, and R428 well away from chassis. All insulated leads are to be dressed away from these resistors.

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

RCA VICTOR Continuation of service material on Tuner Chassis RC-1205C, for list of models using this chassis see preceding page at left, material on Amplifier Chassis RS-177H and RS-199B is on the next page, over.

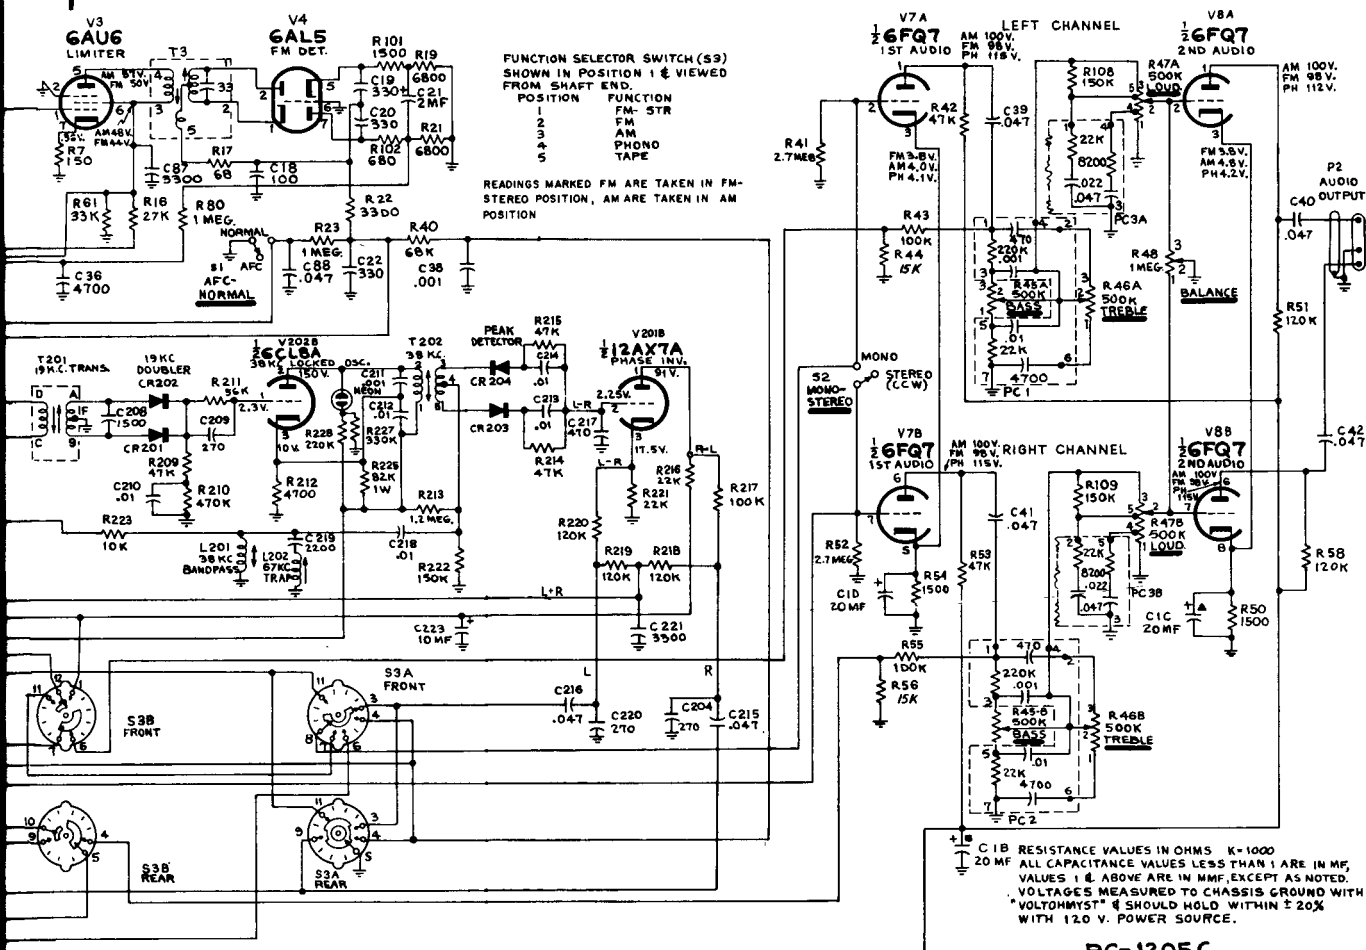


SPEAKER PHASING



The two speaker systems must be properly connected in order to have "in-phase" sound outputs. Incorrect connections will be evidenced by "loss of bass" or distortion in the sound when playing a monophonic recording and listening

from a point midway between the two speaker systems. Similarly the speakers in each system must be phased with each other.

To maintain correct phasing, the speaker connections as shown should be closely followed.

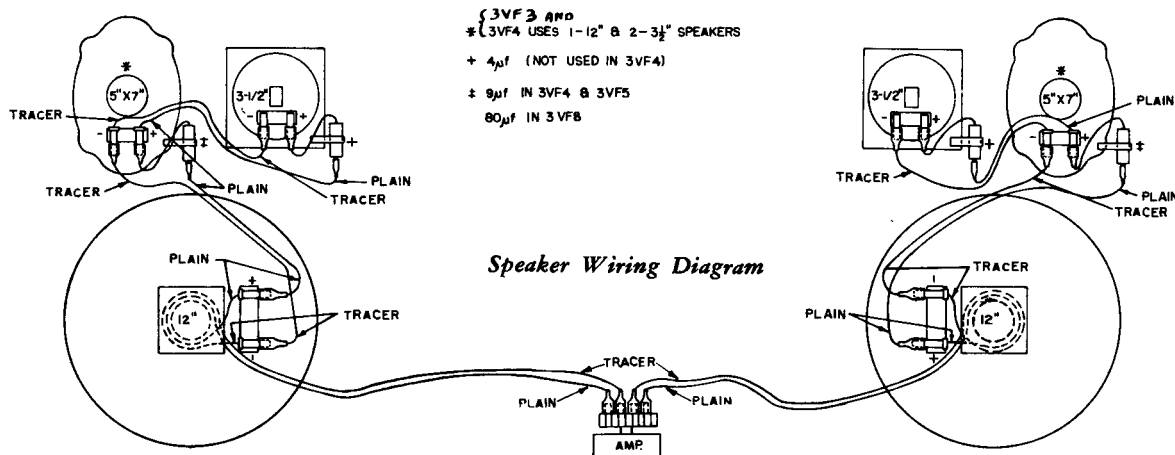


RCA VICTOR Amplifier Chassis RS-177H and RS-199B, for list of models using these chassis, associated tuner data, etc., see preceding two pages.

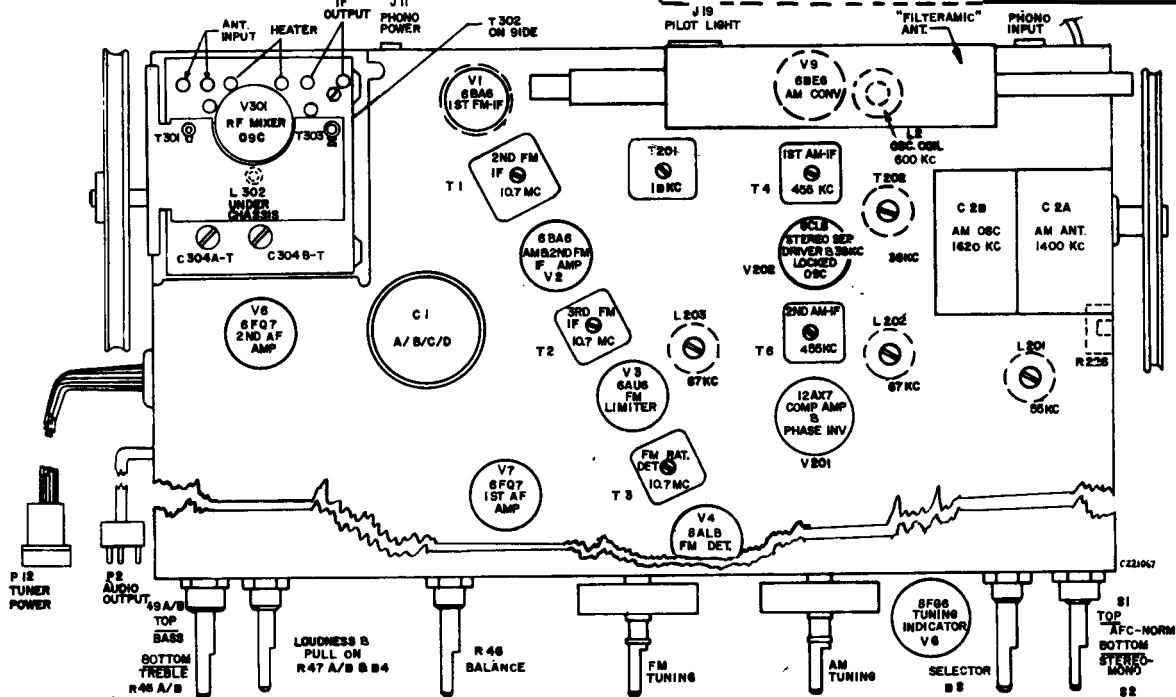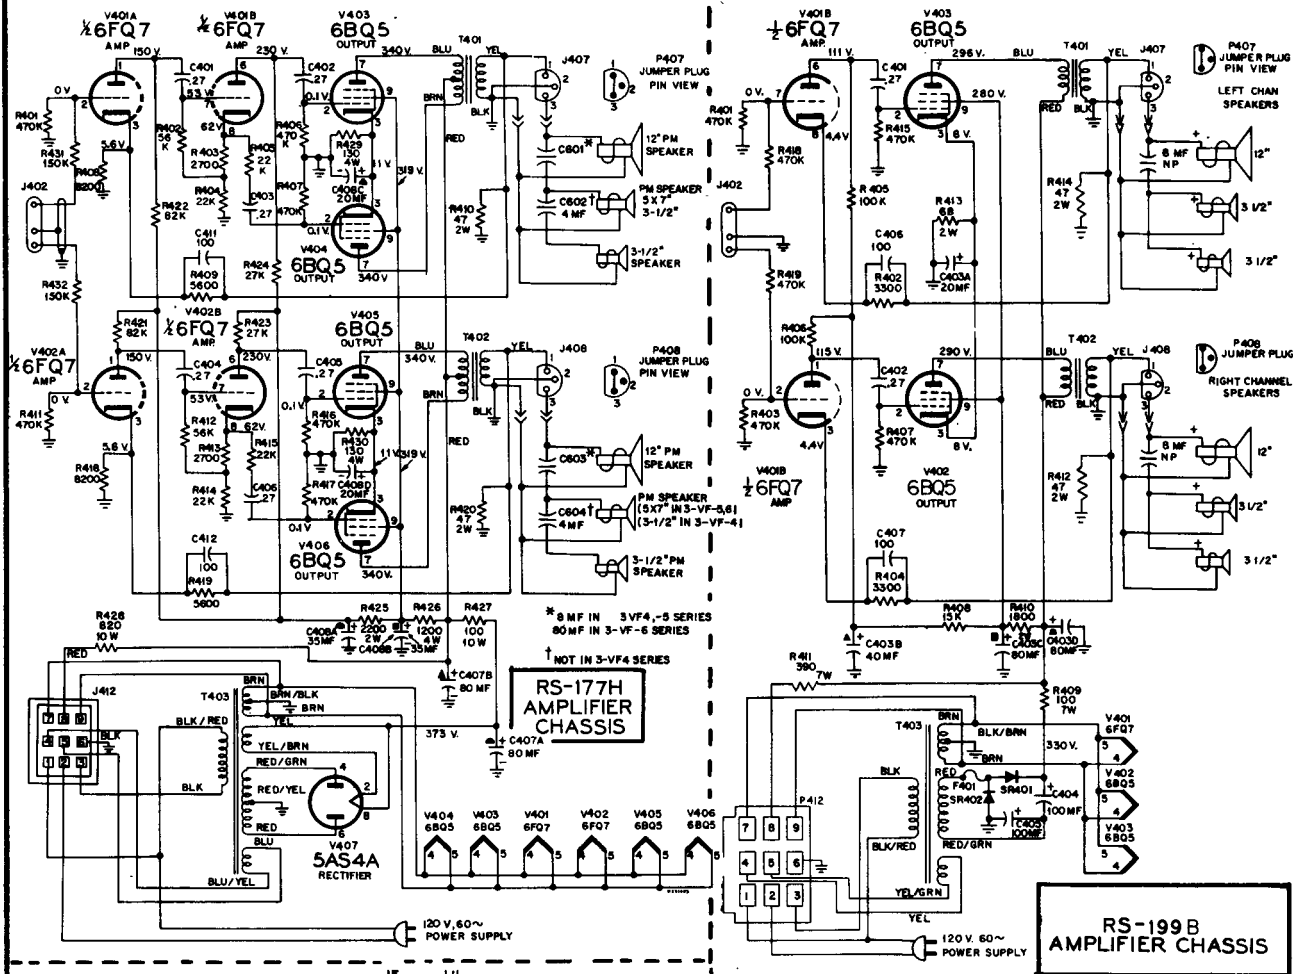



RCA VICTOR

4RG1 Series, Models 4RG11, 4RG12, 4RG16, Chassis RC-1208D
4RG3 Series, Models 4RG31, 4RG34, Chassis RC-1208H

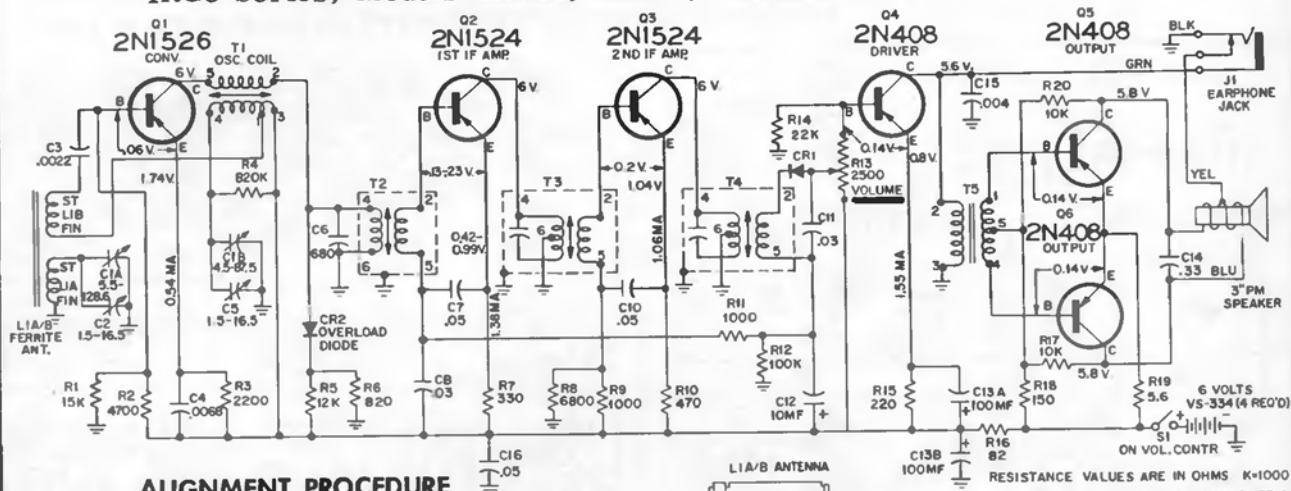

ALIGNMENT PROCEDURE

Step	Connect High Side of Signal Generator to—	Signal Gen. Output	Dial Pointer Setting	Adjust for Max. Output
1				T4 (3rd I-F)
2	Antenna gang stator C1A thru .01 mf capacitor	455 kc	Gang fully open	T3 (2nd I-F)
3				T2 (1st I-F)
4	Repeat Steps 1, 2, and 3			
5		1620 kc	Gang fully open	Oscillator trimmer C5
6	Short wire placed near antenna for radiated signal	1400 kc	1400 kc (rock gang if necessary)	Antenna trimmer C2
7		600 kc	600 kc (rock gang)	T1 osc. coil
8	Repeat Steps 5, 6, and 7.			




CHASSIS REMOVAL

Remove tuning knob. Open case

Remove two screws—one at each corner—located near antenna. Remove two screws located between positive battery contacts.

If speaker is connected to board by wires, unsolder wires at board.


Lift slightly the end of each board that was secured by screws and slide boards out of slots which hold opposite ends.

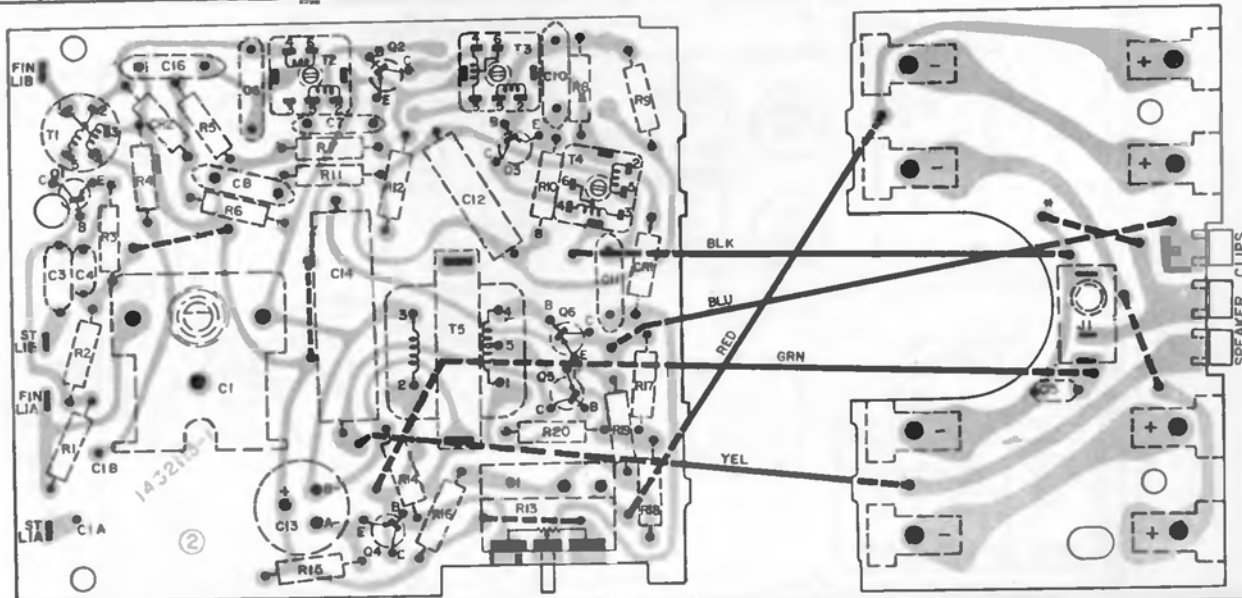

Wiring Side (Removed from Case)



RCA VICTOR

Models 4VF304, 4VF325, 4VF326, 4VF348, 4VF349, 4VF405, 4VF446, 4VF464, 4VF480, 4VF488, 4VF534, use Tuner Chassis RC-1211A covered across these two pages, and Amplifier Chassis RS-177J or RS-199C which are very similar to amplifier chassis of the number (but different suffix) covered on the preceding page.

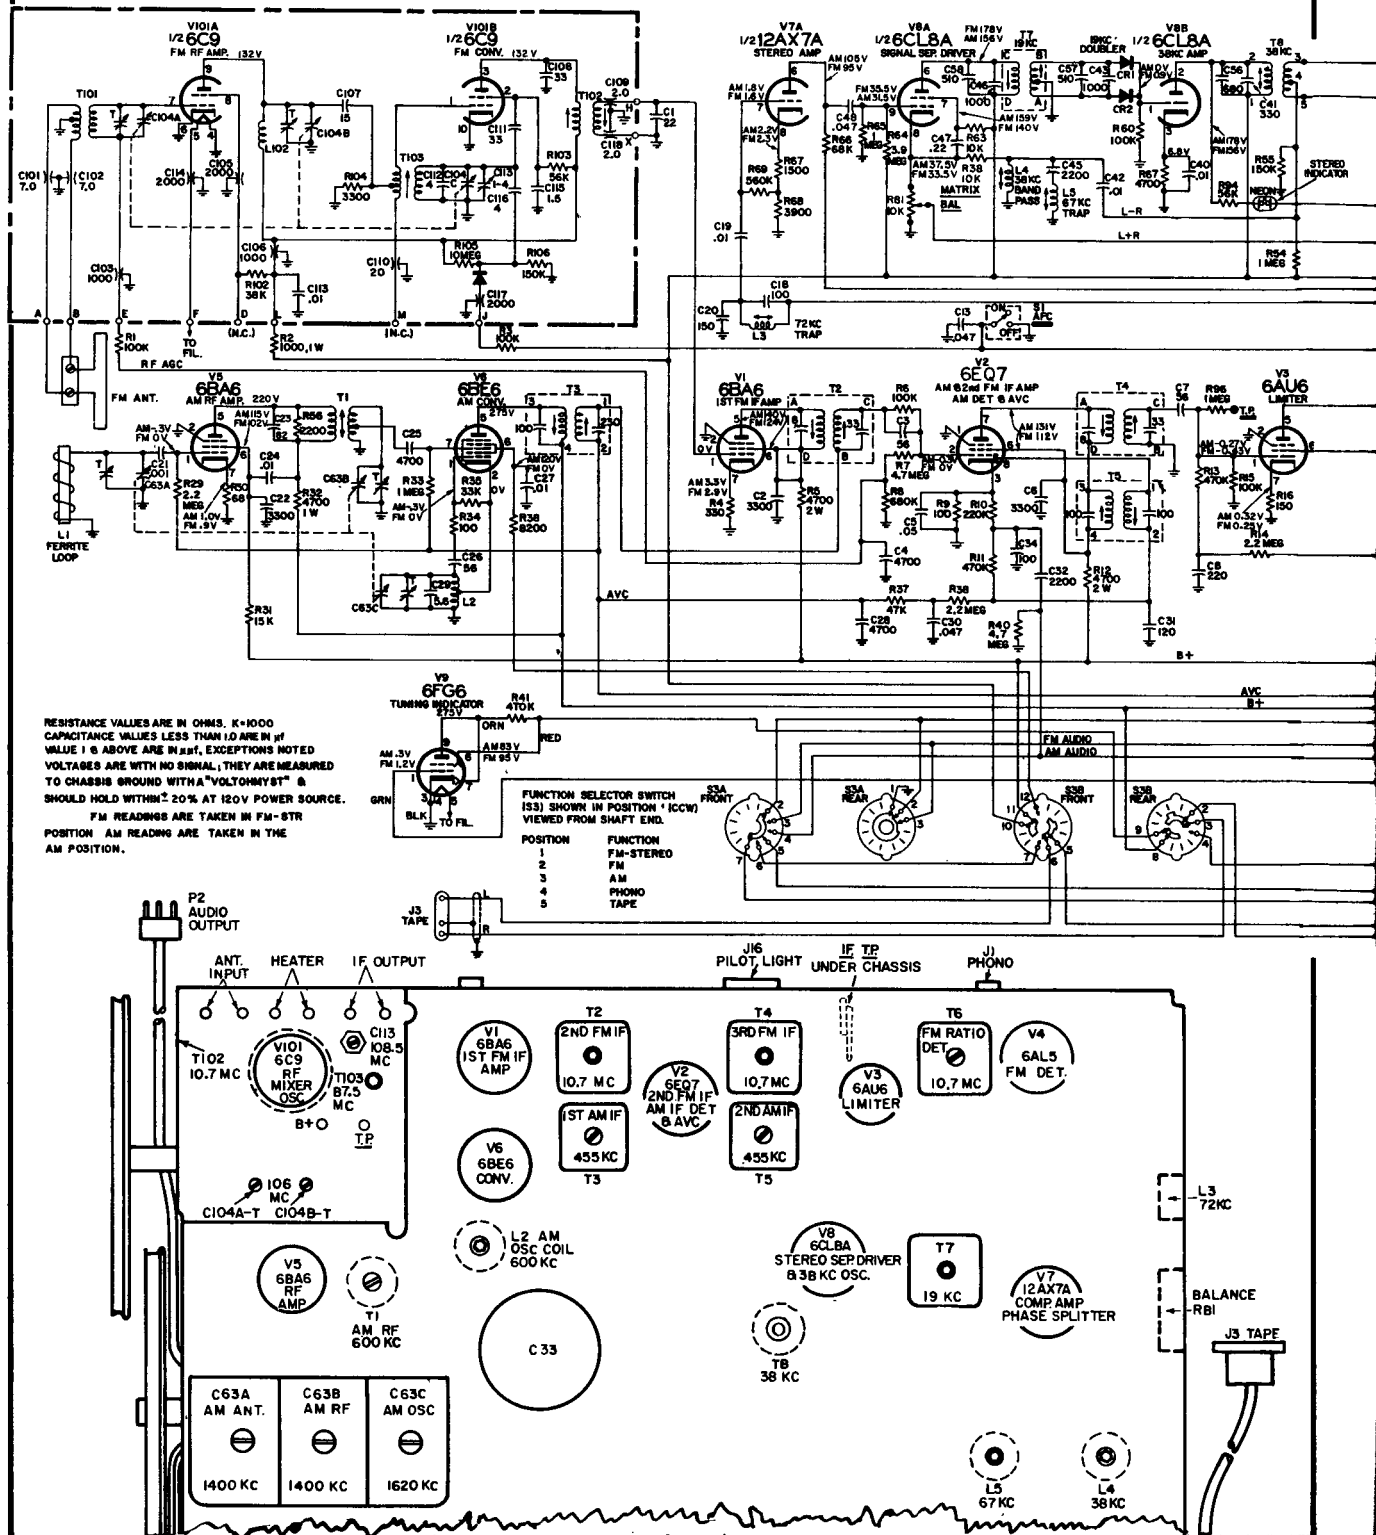




RCA VICTOR

Models 4VF304, 4VF325, 4VF326, 4VF348, 4VF349, 4VF405, 4VF446, 4VF464, 4VF480, 4VF488, 4VF534, use Tuner Chassis RC-1211A covered across these two pages, and Amplifier Chassis RS-177J or RS-199C which are similar to amplifier chassis of corresponding number (but different suffix) of previous section.

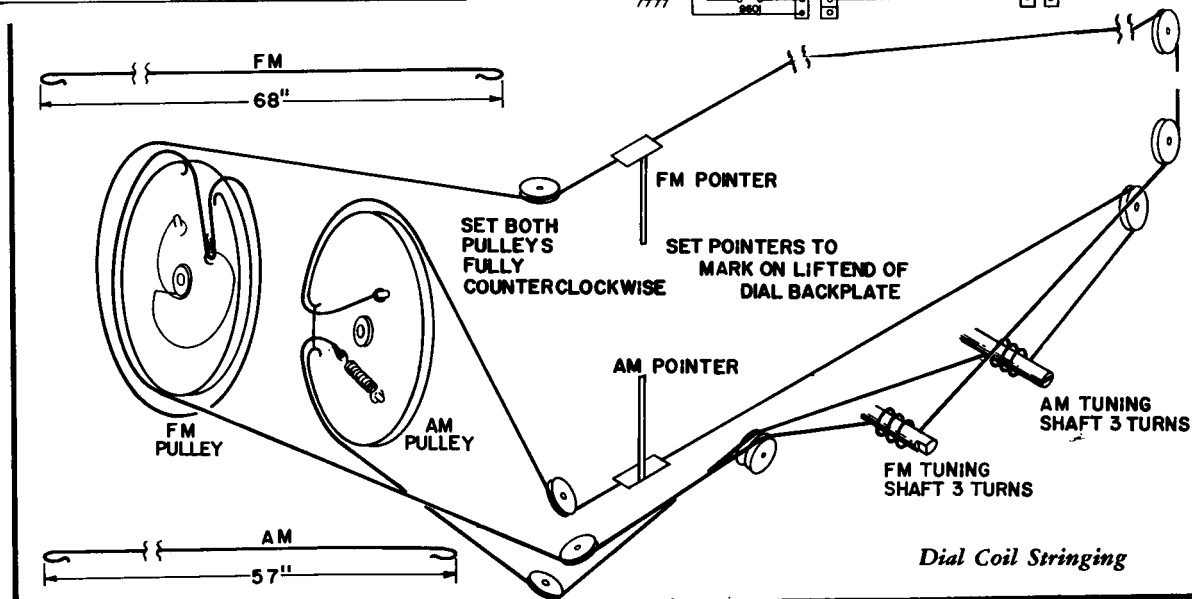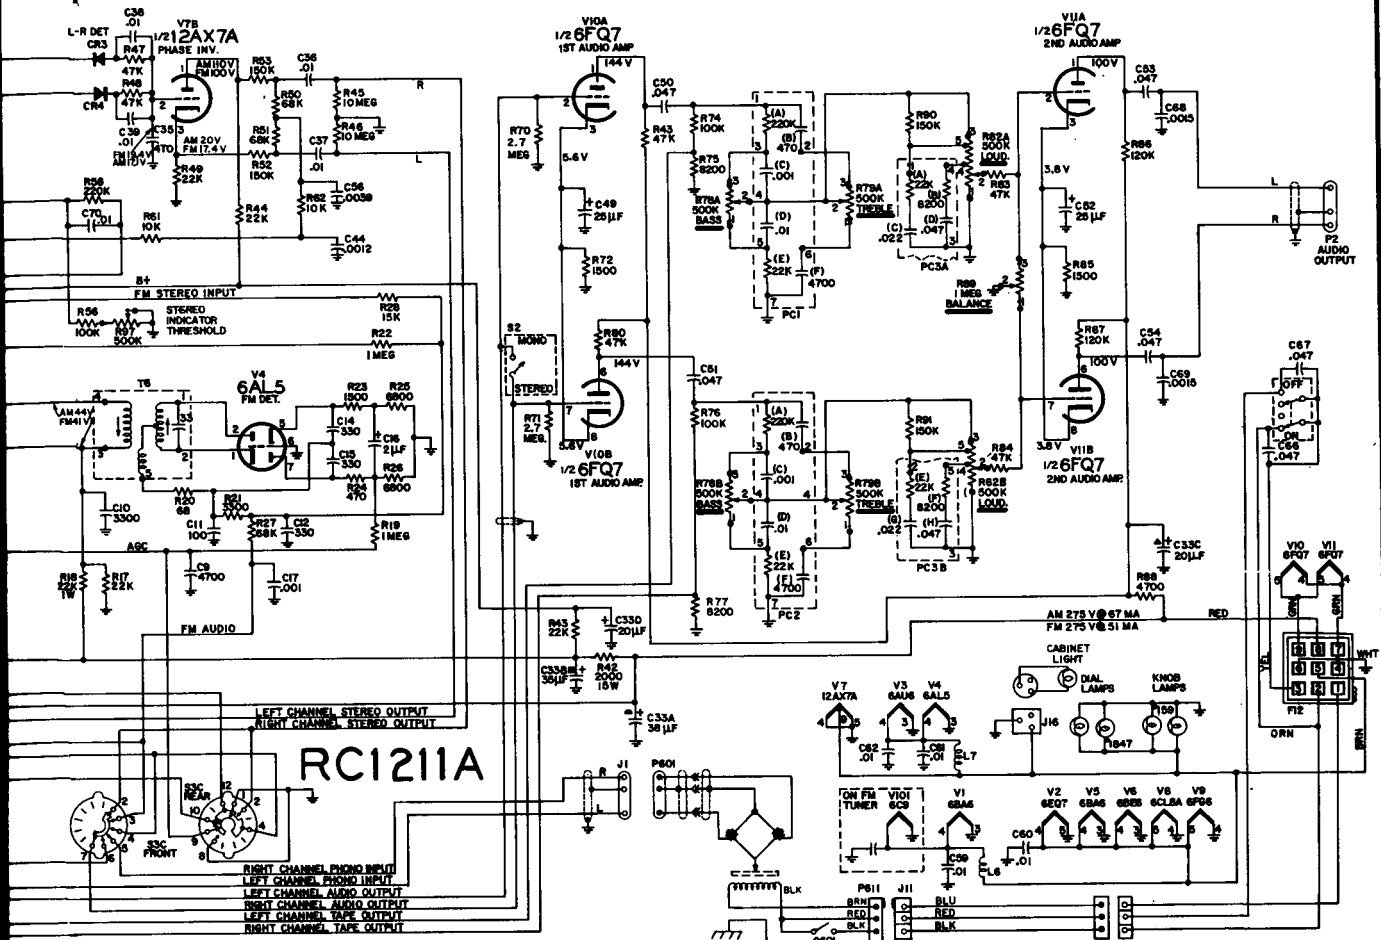



VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

RCA Victor Models 4VF095, 4VF096, 4VF105, 4VF106, 4VF114, 4VF124, 4VF145, 4VF146, 4VF155, 4VF156, 4VF206, 4VF224, 4VF282, 4VF289, use Chassis RC-1215A & B Tuner and Amplifier Chassis RS-203A, schematics across these two pages and other service material on the page following.

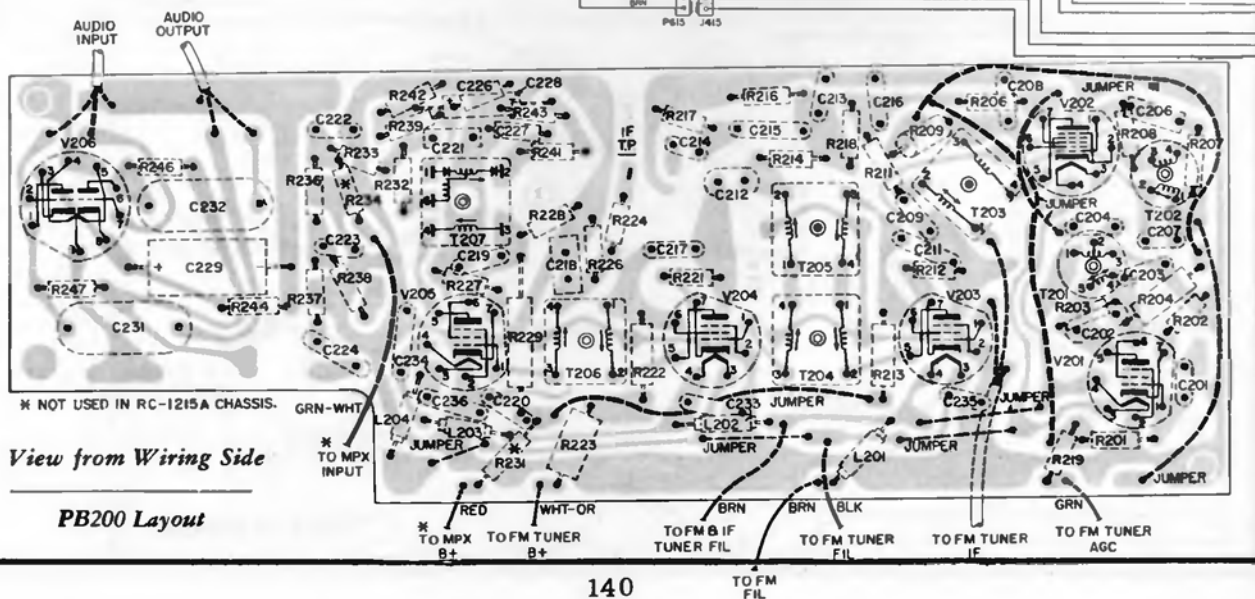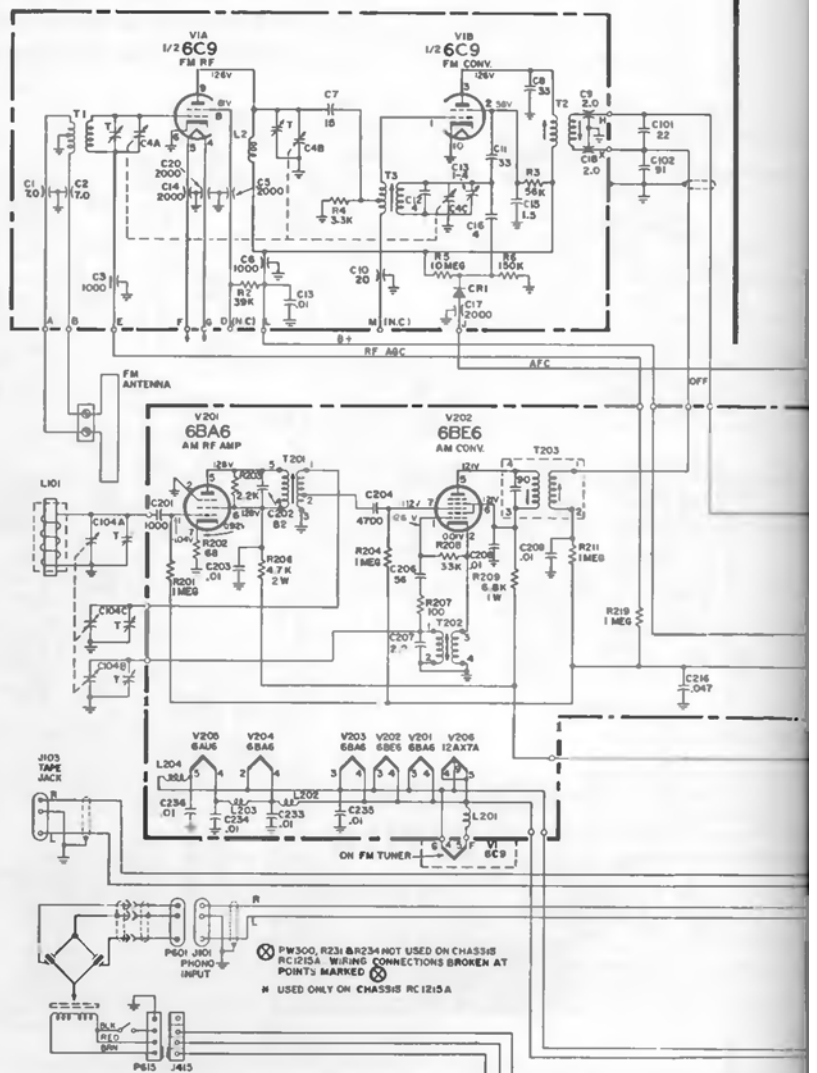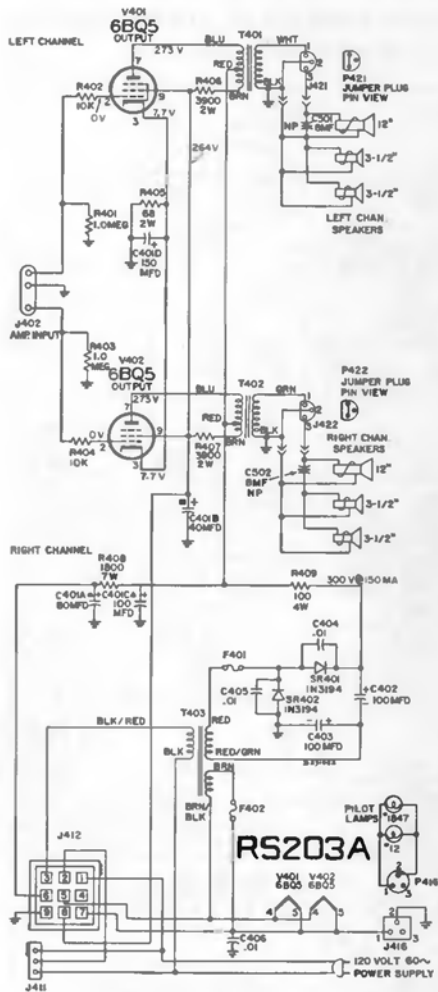


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

RCA Victor Models 4VF095, 4VF096, 4VF105, 4VF106, 4VF114, 4VF124, 4VF145, 4VF146, 4VF155, 4VF156, 4VF206, 4VF224, 4VF282, 4VF289, use Tuner Chassis RC-1215A & B and Amplifier Chassis RS-203A, schematics printed across these two pages and other material on the page following.

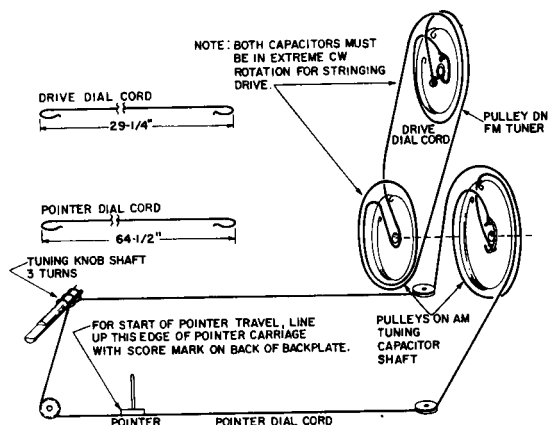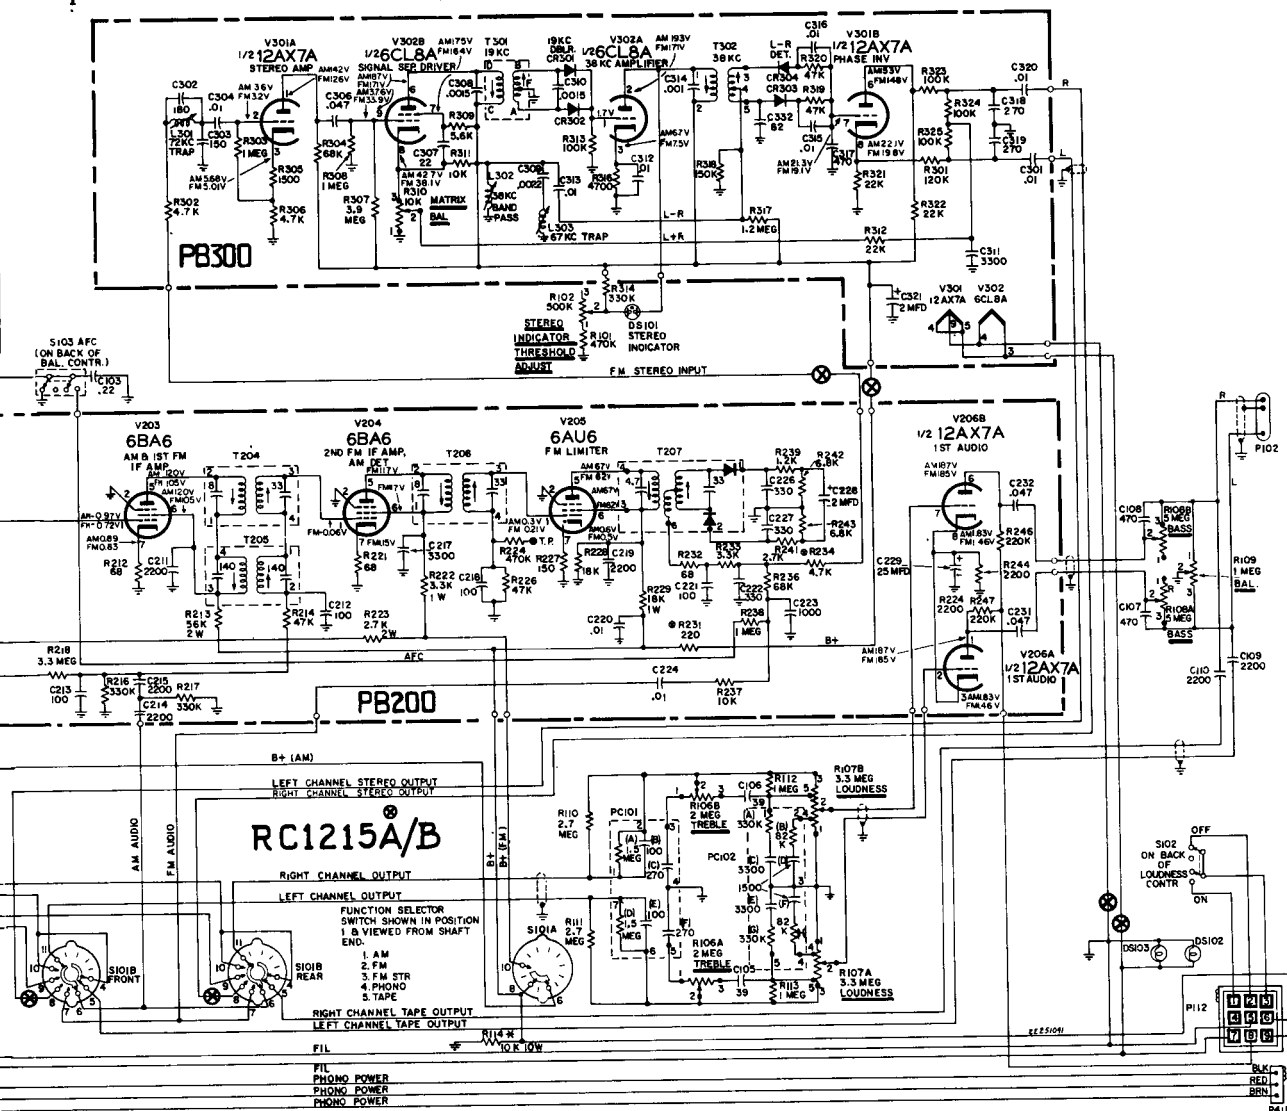


Dial Cord Arrangement

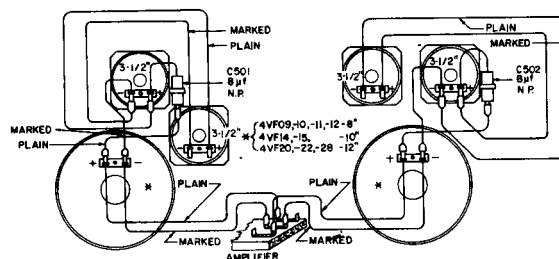

Speaker Wiring

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION



RCA Victor Models 4VF095, 4VF096, 4VF105, 4VF106, 4VF114, 4VF124, 4VF145, 4VF146, 4VF155, 4VF156, 4VF206, 4VF224, 4VF282, 4VF289, use Tuner Chassis RC-1215A & B, Amplifier RS-203A, material continued.

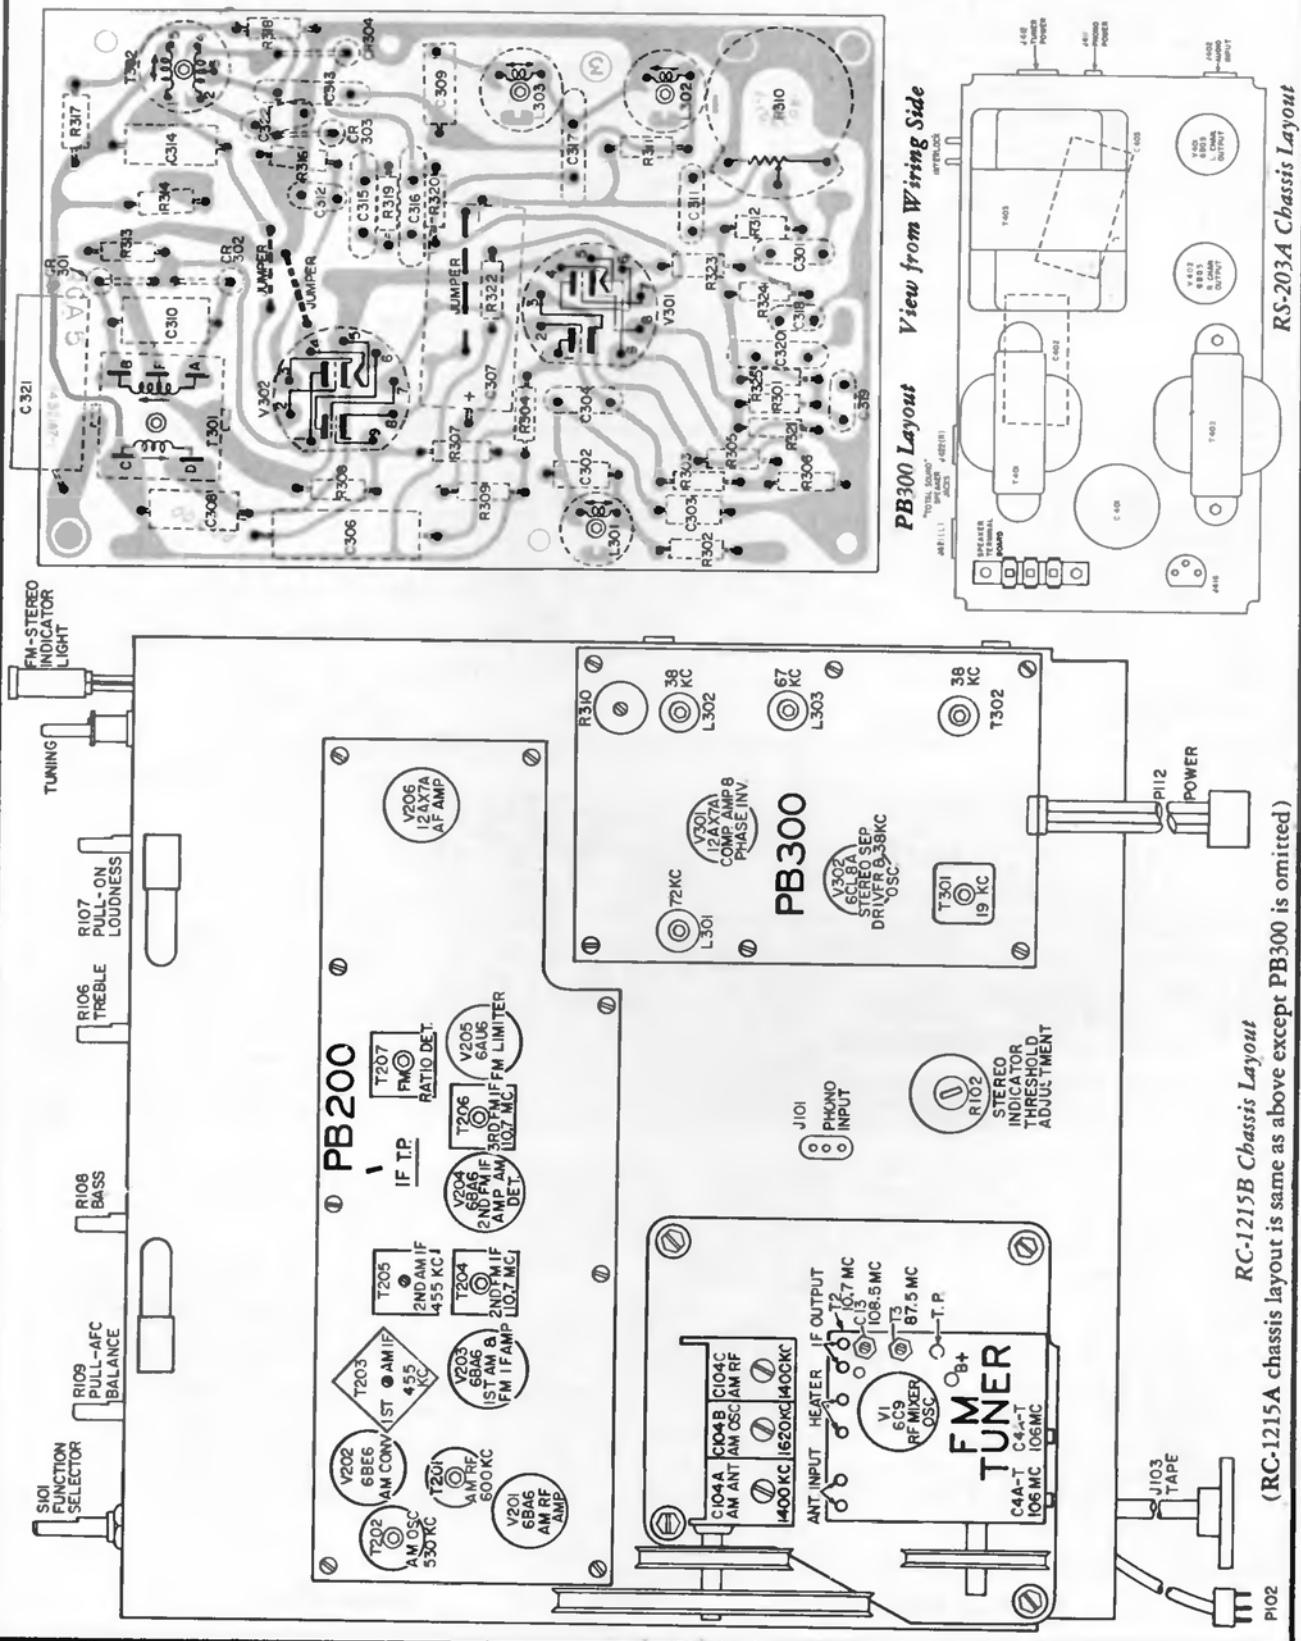

RCA VICTOR

4RG6 Series, Models 4RG61, 4RG62, 4RG66, Chassis RC-1214A;


4RG5 Series, Models 4RG51, 4RG52, 4RG56, also use the same chassis and are electrically the same, but are positioned differently in the case and do not use a dial light.

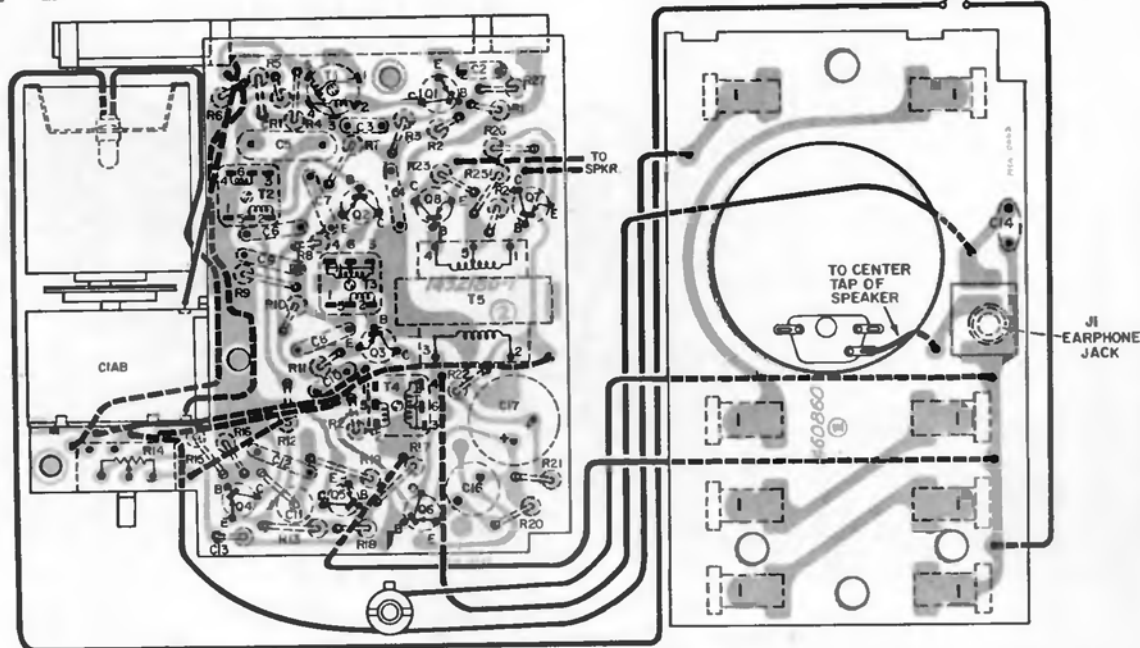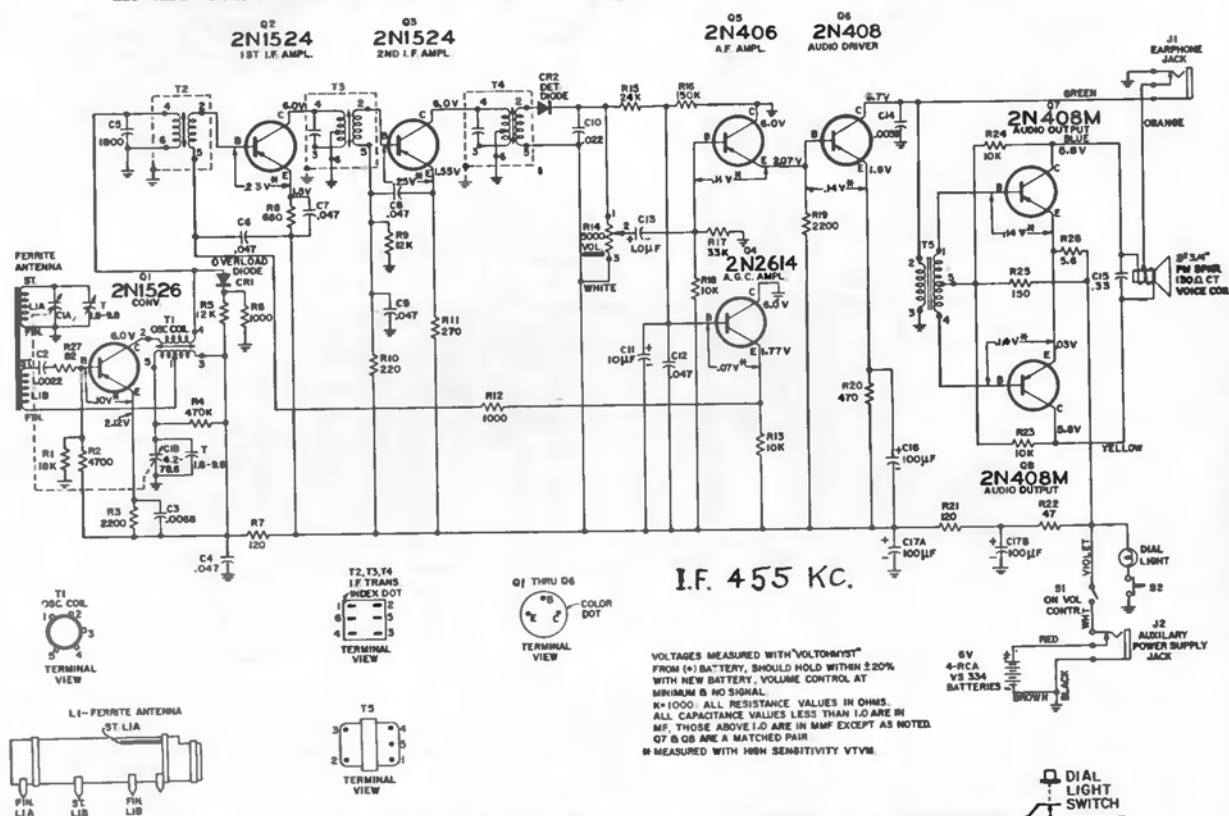

SEARS, ROEBUCK AND CO.



Silvertone

CHASSIS 132.75901
MODEL 4001, 4002, 4003

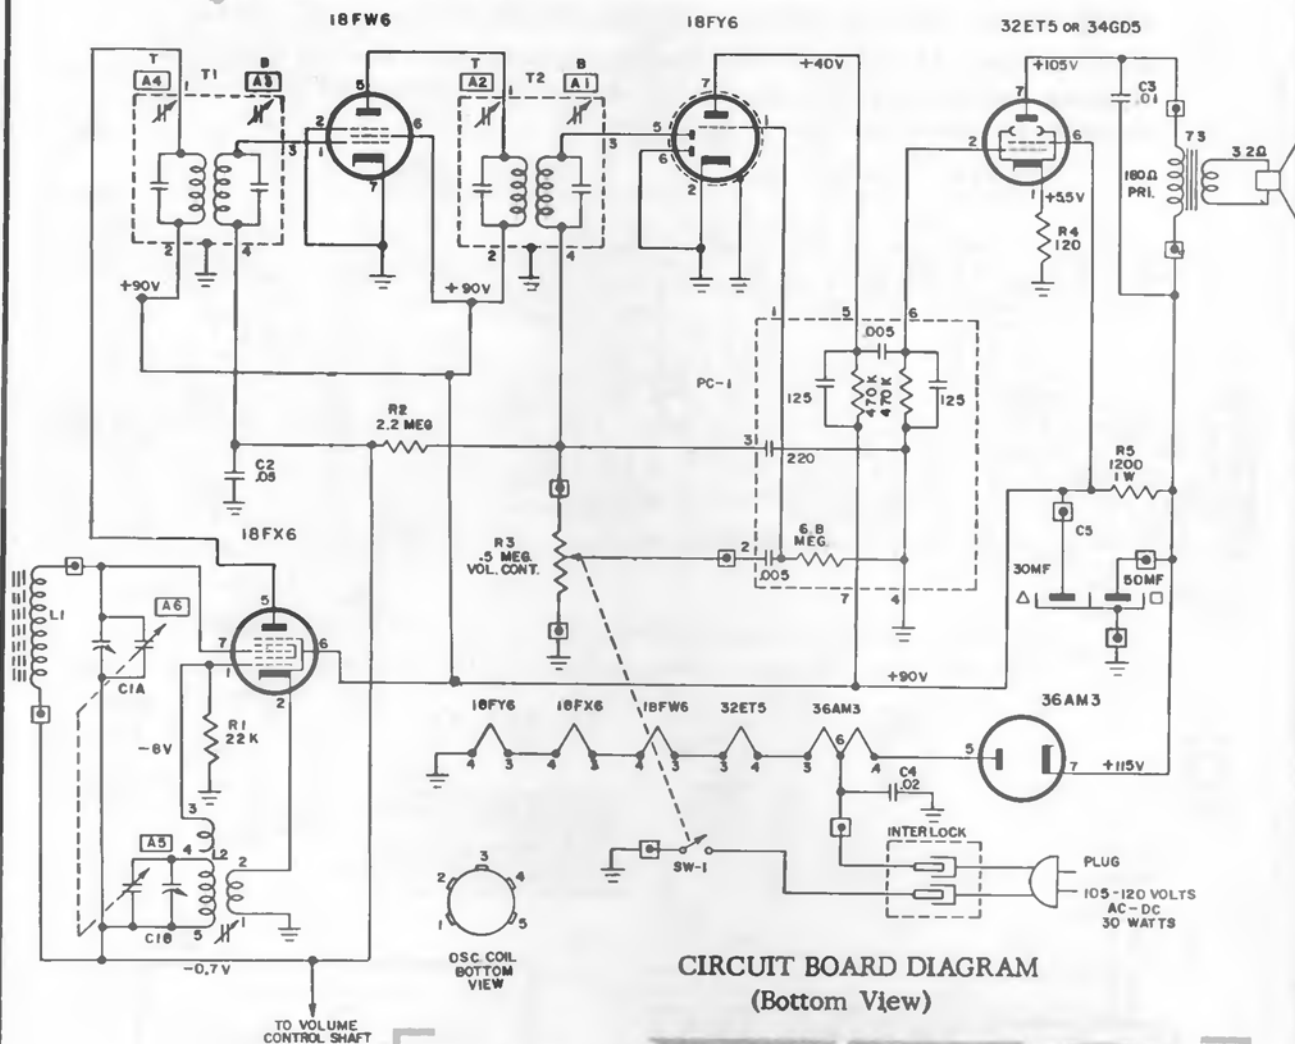


1-8-
□ = EXTERNAL CONNECTIONS TO PRINTED BOARD.
VOLTAGES MEASURED WITH A V.T.M.
RESISTANCE VALUES ARE IN OHMS X=1,000,
MEG=1,000,000.
CAPACITANCE VALUES LESS THAN (1) ARE IN
MICROFARADS (μF) AND VALUES D1, D2, D3, D4,
D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15,
D16, D17, D18, D19, D20, D21, D22, D23, D24, D25,
D26, D27, D28, D29, D30, D31, D32, D33, D34, D35,
D36, D37, D38, D39, D40, D41, D42, D43, D44, D45,
D46, D47, D48, D49, D50, D51, D52, D53, D54, D55,
D56, D57, D58, D59, D60, D61, D62, D63, D64, D65,
D66, D67, D68, D69, D70, D71, D72, D73, D74, D75,
D76, D77, D78, D79, D80, D81, D82, D83, D84, D85,
D86, D87, D88, D89, D90, D91, D92, D93, D94, D95,
D96, D97, D98, D99, D100, D101, D102, D103, D104,
D105, D106, D107, D108, D109, D110, D111, D112,
D113, D114, D115, D116, D117, D118, D119, D120,
D121, D122, D123, D124, D125, D126, D127, D128,
D129, D130, D131, D132, D133, D134, D135, D136,
D137, D138, D139, D140, D141, D142, D143, D144,
D145, D146, D147, D148, D149, D150, D151, D152,
D153, D154, D155, D156, D157, D158, D159, D160,
D161, D162, D163, D164, D165, D166, D167, D168,
D169, D170, D171, D172, D173, D174, D175, D176,
D177, D178, D179, D180, D181, D182, D183, D184,
D185, D186, D187, D188, D189, D190, D191, D192,
D193, D194, D195, D196, D197, D198, D199, D200,
D201, D202, D203, D204, D205, D206, D207, D208,
D209, D210, D211, D212, D213, D214, D215, D216,
D217, D218, D219, D220, D221, D222, D223, D224,
D225, D226, D227, D228, D229, D230, D231, D232,
D233, D234, D235, D236, D237, D238, D239, D240,
D241, D242, D243, D244, D245, D246, D247, D248,
D249, D250, D251, D252, D253, D254, D255, D256,
D257, D258, D259, D260, D261, D262, D263, D264,
D265, D266, D267, D268, D269, D270, D271, D272,
D273, D274, D275, D276, D277, D278, D279, D280,
D281, D282, D283, D284, D285, D286, D287, D288,
D289, D290, D291, D292, D293, D294, D295, D296,
D297, D298, D299, D300, D301, D302, D303, D304,
D305, D306, D307, D308, D309, D310, D311, D312,
D313, D314, D315, D316, D317, D318, D319, D320,
D321, D322, D323, D324, D325, D326, D327, D328,
D329, D330, D331, D332, D333, D334, D335, D336,
D337, D338, D339, D340, D341, D342, D343, D344,
D345, D346, D347, D348, D349, D350, D351, D352,
D353, D354, D355, D356, D357, D358, D359, D360,
D361, D362, D363, D364, D365, D366, D367, D368,
D369, D370, D371, D372, D373, D374, D375, D376,
D377, D378, D379, D380, D381, D382, D383, D384,
D385, D386, D387, D388, D389, D390, D391, D392,
D393, D394, D395, D396, D397, D398, D399, D400,
D401, D402, D403, D404, D405, D406, D407, D408,
D409, D410, D411, D412, D413, D414, D415, D416,
D417, D418, D419, D420, D421, D422, D423, D424,
D425, D426, D427, D428, D429, D430, D431, D432,
D433, D434, D435, D436, D437, D438, D439, D440,
D441, D442, D443, D444, D445, D446, D447, D448,
D449, D450, D451, D452, D453, D454, D455, D456,
D457, D458, D459, D460, D461, D462, D463, D464,
D465, D466, D467, D468, D469, D470, D471, D472,
D473, D474, D475, D476, D477, D478, D479, D480,
D481, D482, D483, D484, D485, D486, D487, D488,
D489, D490, D491, D492, D493, D494, D495, D496,
D497, D498, D499, D500, D501, D502, D503, D504,
D505, D506, D507, D508, D509, D510, D511, D512,
D513, D514, D515, D516, D517, D518, D519, D520,
D521, D522, D523, D524, D525, D526, D527, D528,
D529, D530, D531, D532, D533, D534, D535, D536,
D537, D538, D539, D540, D541, D542, D543, D544,
D545, D546, D547, D548, D549, D550, D551, D552,
D553, D554, D555, D556, D557, D558, D559, D560,
D561, D562, D563, D564, D565, D566, D567, D568,
D569, D570, D571, D572, D573, D574, D575, D576,
D577, D578, D579, D580, D581, D582, D583, D584,
D585, D586, D587, D588, D589, D590, D591, D592,
D593, D594, D595, D596, D597, D598, D599, D600,
D601, D602, D603, D604, D605, D606, D607, D608,
D609, D610, D611, D612, D613, D614, D615, D616,
D617, D618, D619, D620, D621, D622, D623, D624,
D625, D626, D627, D628, D629, D630, D631, D632,
D633, D634, D635, D636, D637, D638, D639, D640,
D641, D642, D643, D644, D645, D646, D647, D648,
D649, D650, D651, D652, D653, D654, D655, D656,
D657, D658, D659, D660, D661, D662, D663, D664,
D665, D666, D667, D668, D669, D670, D671, D672,
D673, D674, D675, D676, D677, D678, D679, D680,
D681, D682, D683, D684, D685, D686, D687, D688,
D689, D690, D691, D692, D693, D694, D695, D696,
D697, D698, D699, D700, D701, D702, D703, D704,
D705, D706, D707, D708, D709, D710, D711, D712,
D713, D714, D715, D716, D717, D718, D719, D720,
D721, D722, D723, D724, D725, D726, D727, D728,
D729, D730, D731, D732, D733, D734, D735, D736,
D737, D738, D739, D740, D741, D742, D743, D744,
D745, D746, D747, D748, D749, D750, D751, D752,
D753, D754, D755, D756, D757, D758, D759, D760,
D761, D762, D763, D764, D765, D766, D767, D768,
D769, D770, D771, D772, D773, D774, D775, D776,
D777, D778, D779, D780, D781, D782, D783, D784,
D785, D786, D787, D788, D789, D790, D791, D792,
D793, D794, D795, D796, D797, D798, D799, D800,
D801, D802, D803, D804, D805, D806, D807, D808,
D809, D810, D811, D812, D813, D814, D815, D816,
D817, D818, D819, D820, D821, D822, D823, D824,
D825, D826, D827, D828, D829, D830, D831, D832,
D833, D834, D835, D836, D837, D838, D839, D840,
D841, D842, D843, D844, D845, D846, D847, D848,
D849, D850, D851, D852, D853, D854, D855, D856,
D857, D858, D859, D860, D861, D862, D863, D864,
D865, D866, D867, D868, D869, D870, D871, D872,
D873, D874, D875, D876, D877, D878, D879, D880,
D881, D882, D883, D884, D885, D886, D887, D888,
D889, D890, D891, D892, D893, D894, D895, D896,
D897, D898, D899, D900, D901, D902, D903, D904,
D905, D906, D907, D908, D909, D910, D911, D912,
D913, D914, D915, D916, D917, D918, D919, D920,
D921, D922, D923, D924, D925, D926, D927, D928,
D929, D930, D931, D932, D933, D934, D935, D936,
D937, D938, D939, D940, D941, D942, D943, D944,
D945, D946, D947, D948, D949, D950, D951, D952,
D953, D954, D955, D956, D957, D958, D959, D960,
D961, D962, D963, D964, D965, D966, D967, D968,
D969, D970, D971, D972, D973, D974, D975, D976,
D977, D978, D979, D980, D981, D982, D983, D984,
D985, D986, D987, D988, D989, D990, D991, D992,
D993, D994, D995, D996, D997, D998, D999, D1000.

SEARS, ROEBUCK & CO. Chassis 528.54400, Model 4030

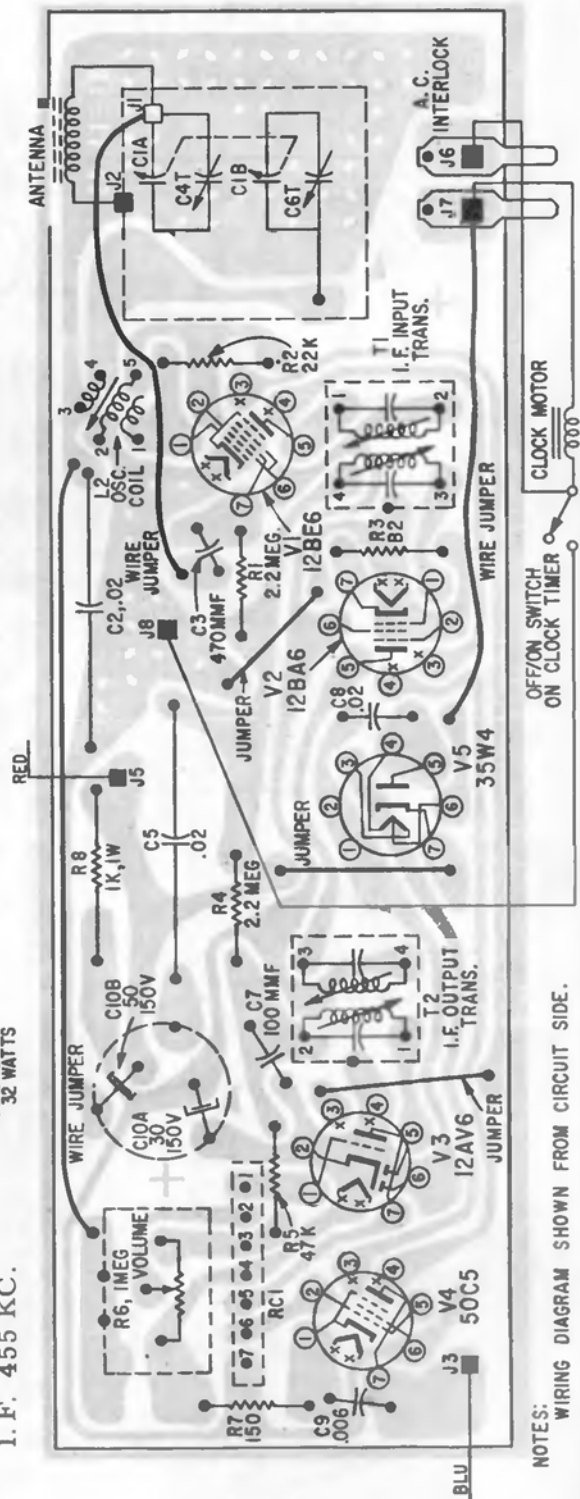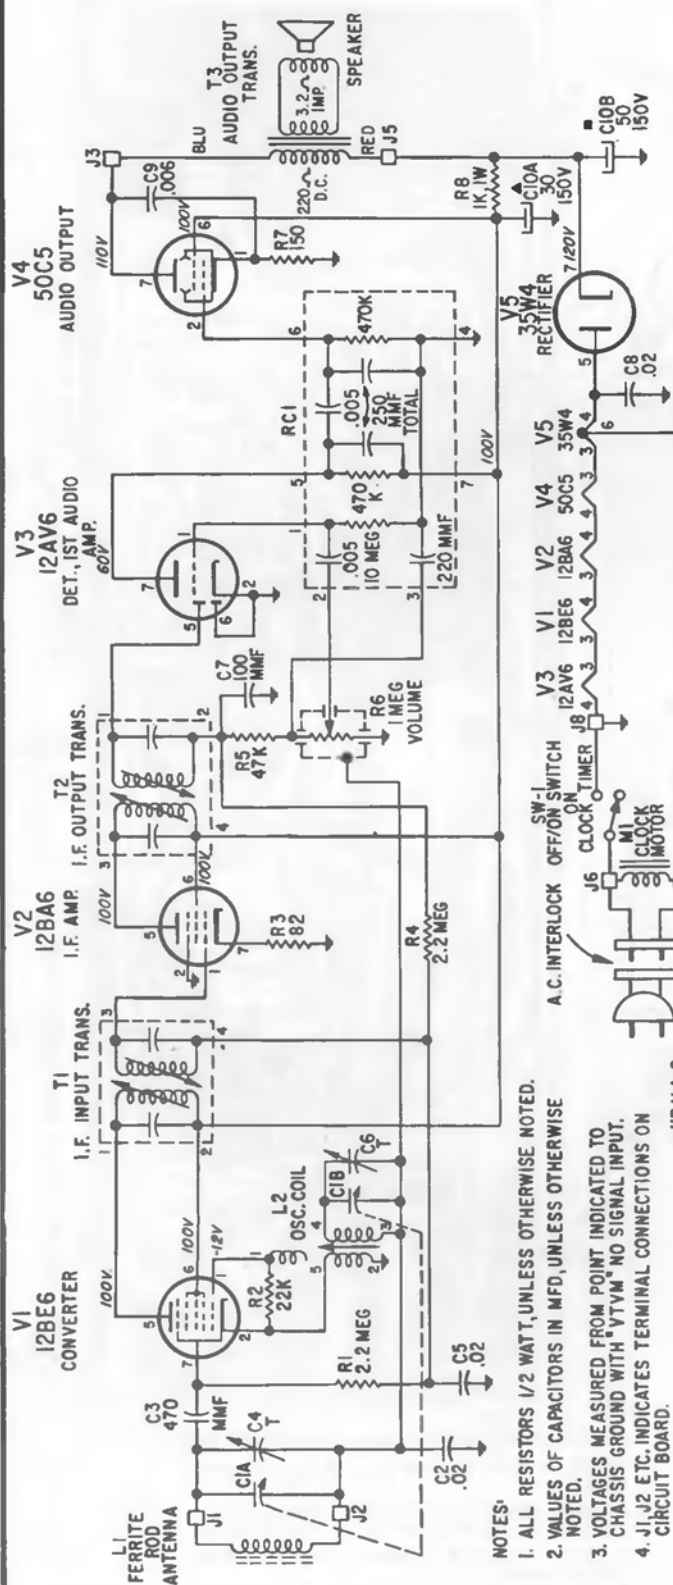


SEARS ROEBUCK AND CO.

SEARS, ROEBUCK & CO. Chassis 528.53500, Models 4032, 4033, 4034

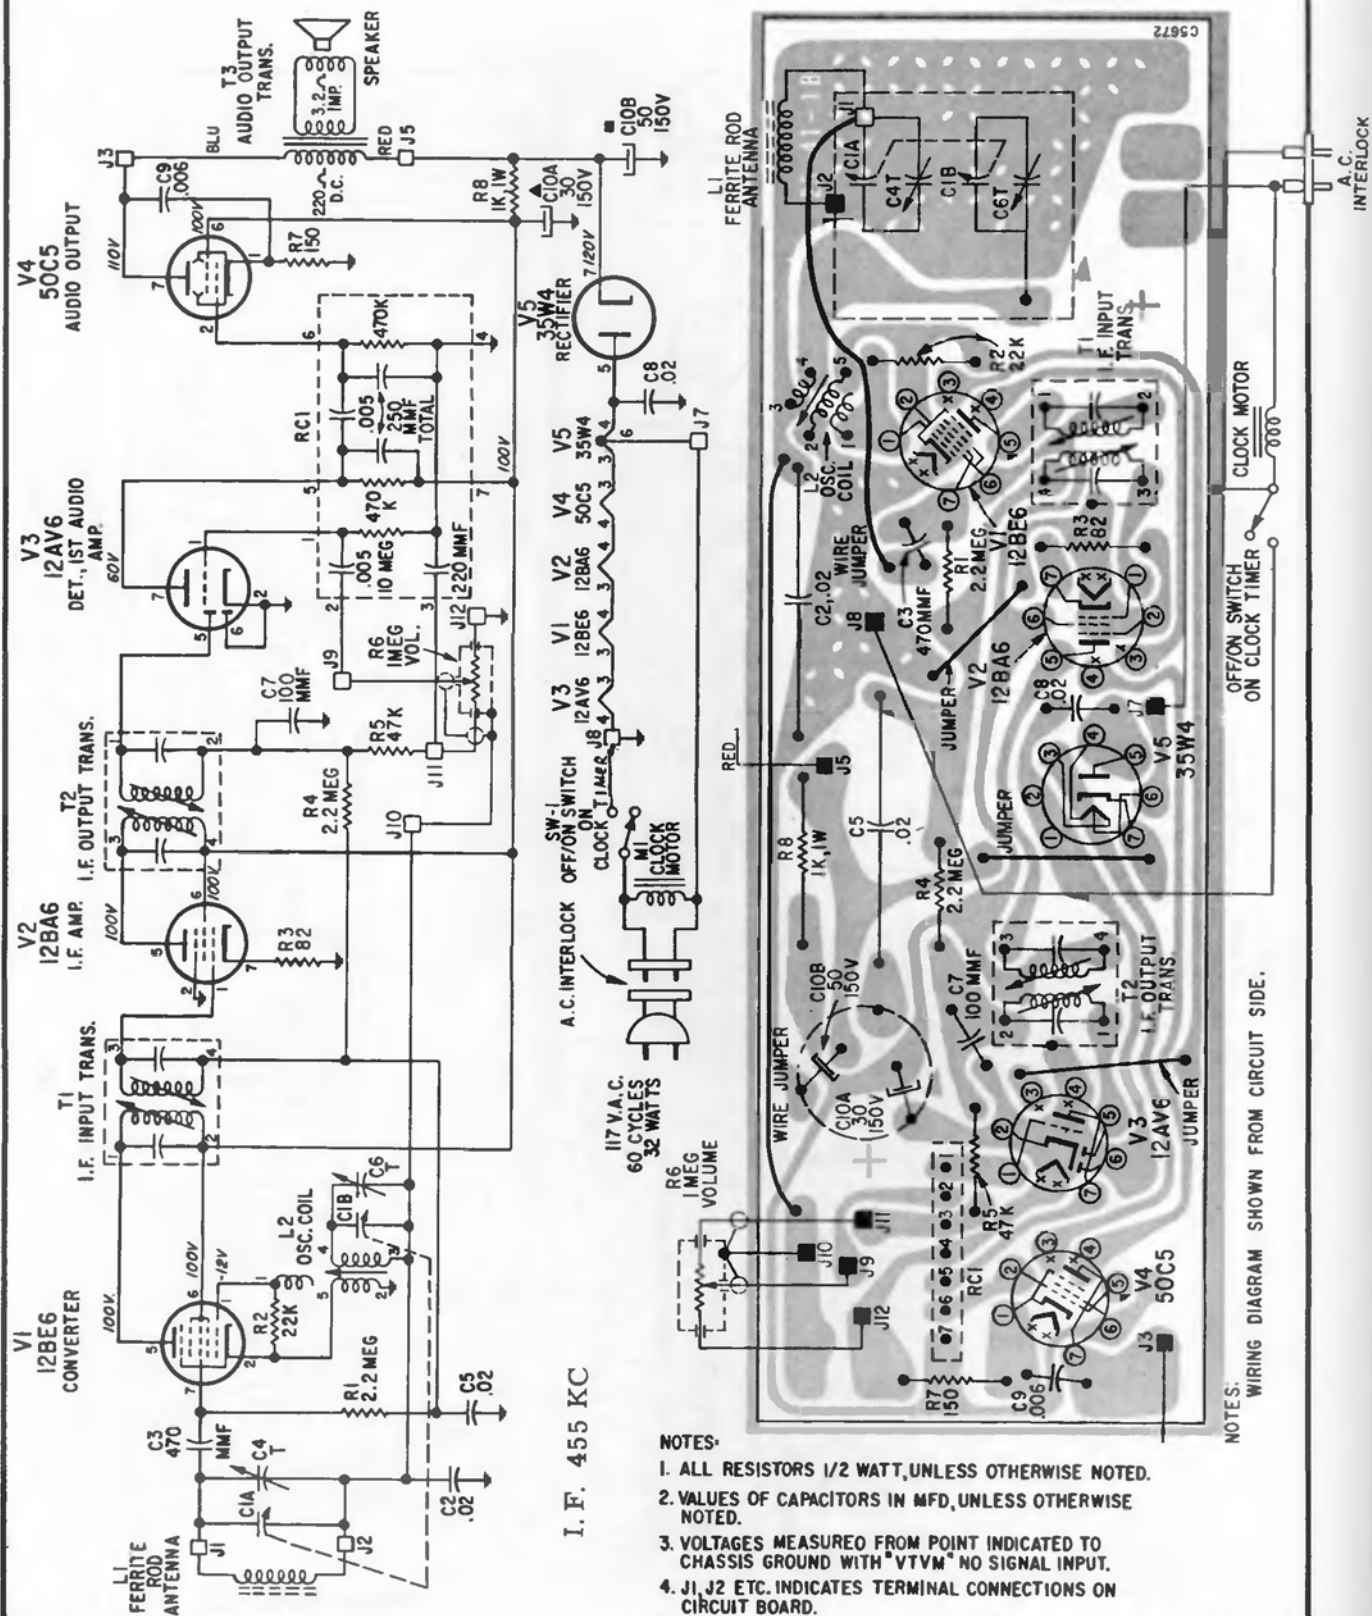

SEARS, ROEBUCK and CO.



Chassis 528.54670,
Models 4043, 4044

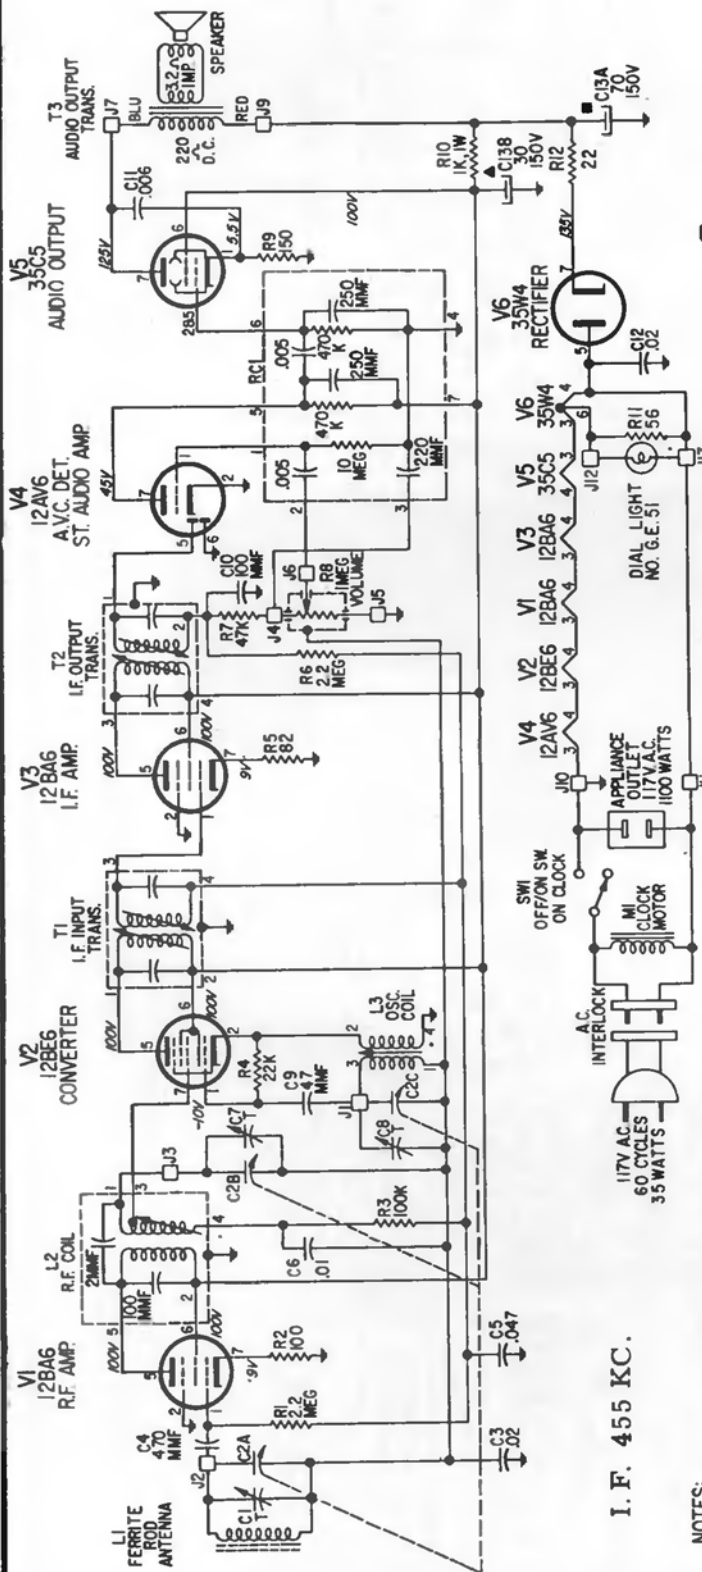

I. F. 455 KC.

NOTES:


1. ALL RESISTORS 1/2 WATT, UNLESS OTHERWISE NOTED.
2. ALL CAPACITORS ARE MFD, UNLESS OTHERWISE NOTED.
3. VOLTAGES MEASURED FROM POINT INDICATED TO CHASSIS. GROUND WITH "VTVM" NO SIGNAL INPUT.
4. J1, J2 ETC. INDICATE TERMINAL CONNECTIONS ON CIRCUIT BOARD.

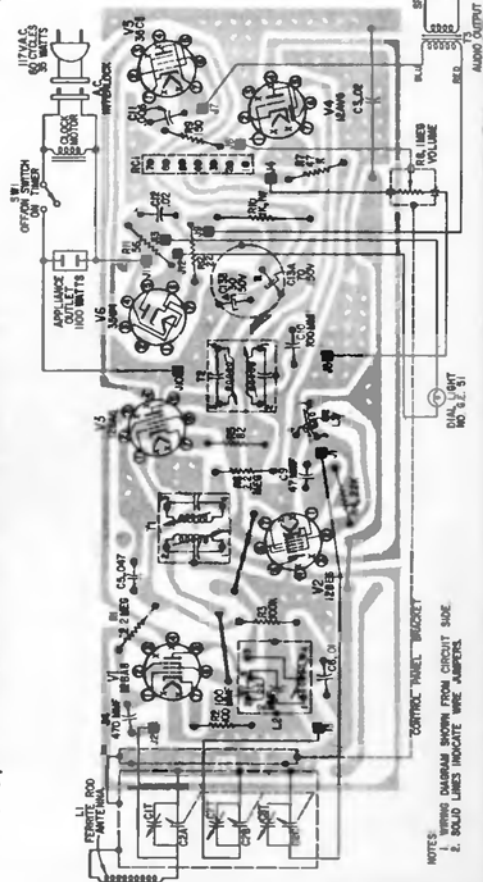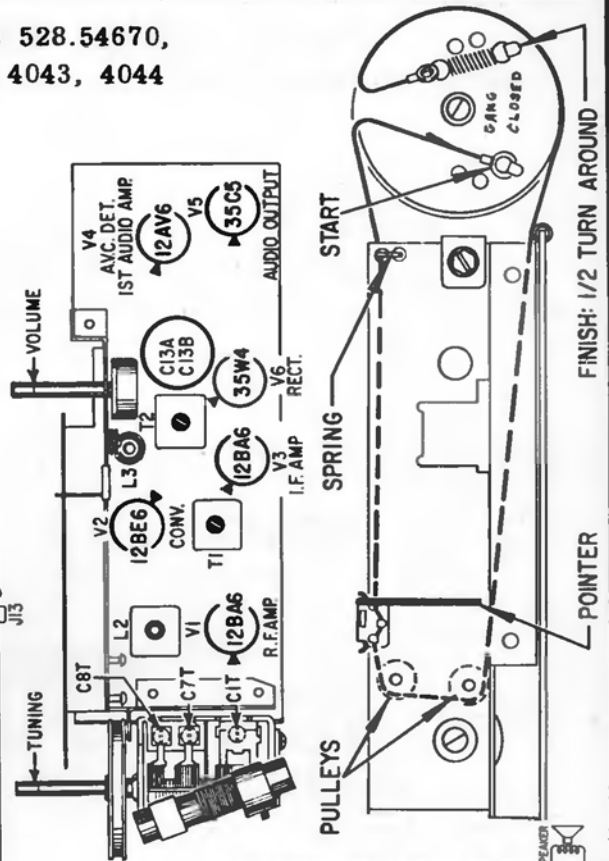

NOTES:
1. WIRING DIAGRAM SHOWN FROM CIRCUIT SIDE.
2. SOLID LINES INDICATE WIRE ASSEMBLY.

SEARS, ROEBUCK and CO.

SEARS, ROEBUCK & CO. Chassis 528.54880, Models 4079, 4080, 4081, 4082


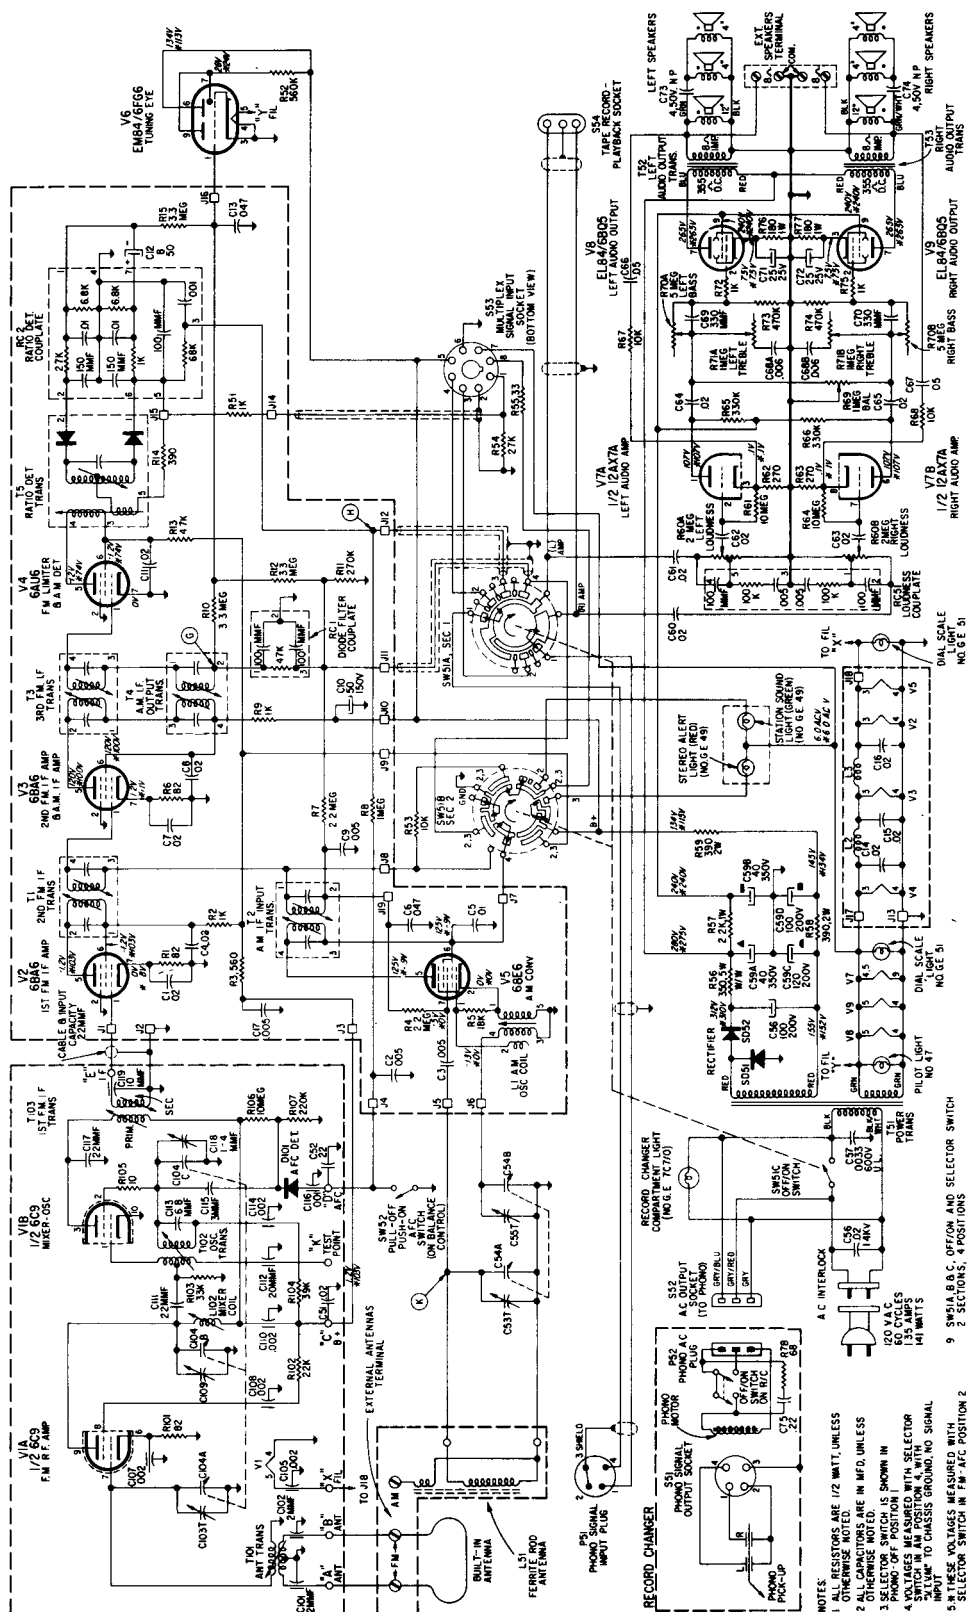


A.M. I.F. 455 KC.



F.M. I.F. 10.7 MC.

SEARS, ROEBUCK & CO. Chassis 528.54880, Models 4079, 4080, 4081, 4082

SONY TR-727

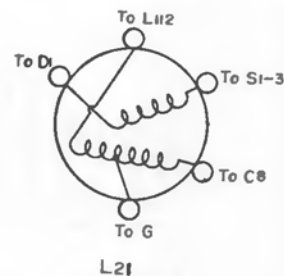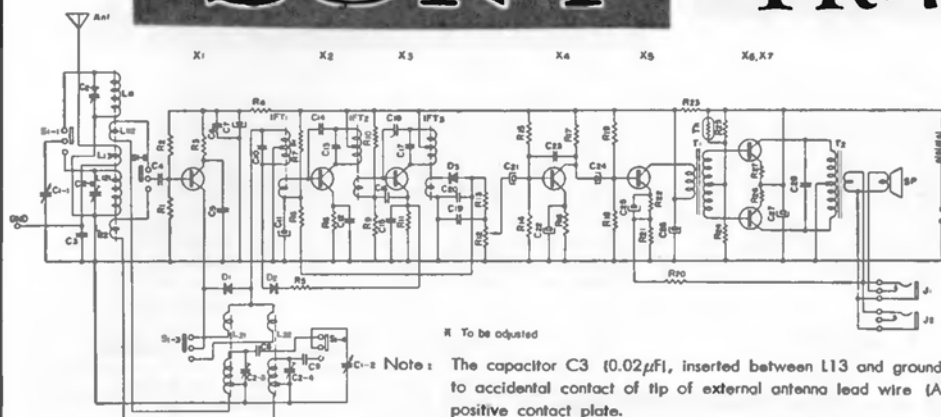

Mounting Diagram for TR-727 —Mounted Side—

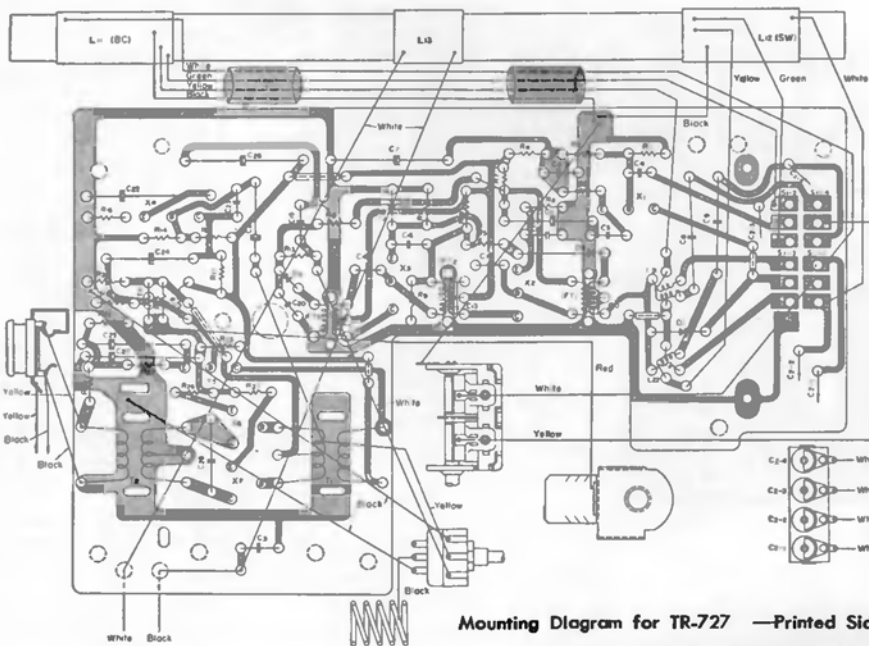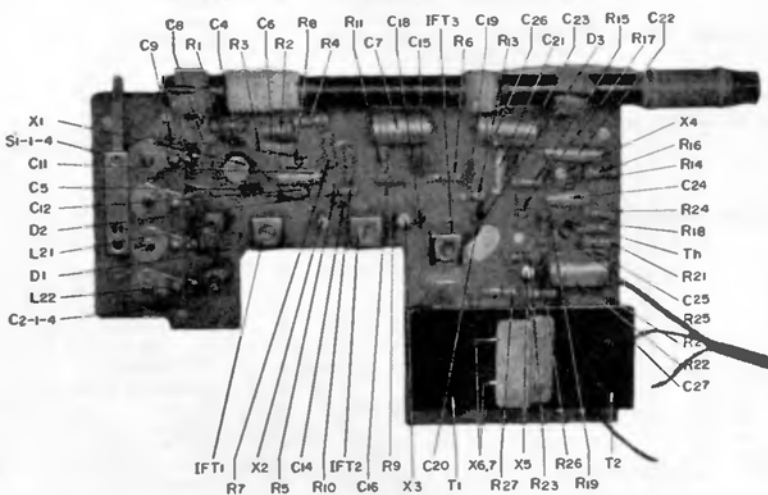


Mounting Diagram for TR-727 —Printed Side—


Frequency Coverage: MW 535 Kc—1,605 Kc
SW 3.9 Mc—12 Mc
IF Frequency: 455 Kc

Electronic Parts List for TR-727

Parts No.	Symbol	Description
1-401-118-00	L1, L12	Ferrite Bar Antenna
1-405-003-01	L21	MW, Oscillator Coil
1-405-004-01	L22	SW, Oscillator Coil
1-313-056-00	Sw, 1-4	Band Setting Switch
1-403-034-00	IFT1	IF Transformer
1-403-035-00	IFT2	"
1-403-036-00	IFT3	"
1-423-043-00	T1	Driving Transformer
1-427-041-00	T2	Output Transformer
1-507-030-20	A1, 1	Turntable Earphone Jack
1-502-063-00	SP	Speaker, 8Ω
	X1	Transistor 2SA70
	X2	" 2SC769
	X3	" 2SC768
	X4	" 2SD451
	X5	" 2SD450
	X6	" 2SB513
	X7	" 2SB513
	D1	Diode 1T26G
	D2	" 1T23G
	D3	Diode 1T23G
	Th	Thermistor 5-90
1-203-130-00	R1	Carbon Resistor
		18 KΩ RD 1/4L ± 5%
1-203-058-00	R2	"
		3.3 KΩ "
1-203-049-00	R3	"
		2.2 KΩ "
1-203-049-00	R4	"
		2.2 KΩ "
1-203-031-00	R5	"
		1 KΩ "
1-203-065-00	R6	"
		5.6 KΩ "
1-203-583-00	R7	"
		64 KΩ "
1-203-026-00	R8	"
		470Ω "
1-203-038-00	R9	"
		3.3 KΩ "
1-203-129-00	R10	"
		27 KΩ "
1-203-024-00	R11	"
		330Ω "
1-221-231-00	R12	Potentiometer 5 KΩ
1-203-026-00	R13	Carbon Resistor
		470Ω RD 1/4L ± 5%
1-203-045-00	R14	"
		5.6 KΩ "
1-203-130-00	R15	"
		18 KΩ "
1-203-031-00	R16	"
		1 KΩ "
1-203-058-00	R17	Carbon Resistor
		3.3 KΩ RD 1/4L ± 5%
1-203-058-00	R18	"
		3.3 KΩ "
1-203-045-00	R19	"
		5.6 KΩ "
1-203-011-00	R20	"
		100Ω "
1-203-001-00	R21	"
		5.1Ω "
1-203-018-00	R22	"
		220Ω "
1-203-011-00	R23	"
		100Ω "
1-203-049-00	R24	"
		2.2 KΩ "
1-203-011-00	R25	"
		100Ω "
1-203-584-00	R26	"
		30Ω "
1-203-584-00	R27	"
		30Ω "
1-151-057-00	C1	Tuning Capacitor 2 Gang
1-141-109-00	C2	Trimmer Capacitor 4 Unit
1-101-073-00	C3	Ceramic Capacitor 0.02μF ± 15%
1-101-072-00	C4	" 0.01μF "
1-101-098-00	C5	" 0.005μF "
1-101-072-00	C6	" 0.01μF "
1-119-010	C7	Electrolytic Capacitor 100μF 4V
1-103-044	C8	Styrol Capacitor 370pF ± 5%
1-103-038	C9	Styrol Capacitor 3000pF ± 5%
1-119-001	C10	" 180pF built in IFT1
1-101-073-00	C11	Electrolytic Capacitor 10μF 3V
	C12	Ceramic Capacitor 0.02μF ± 15%
		180pF built in IFT2
1-101-046-00	C13	" 2pF ± 0.5pF
1-101-073-00	C14	" 0.02μF ± 15%
1-101-073-00	C15	" 0.02μF "
	C16	180pF built in IFT3
1-101-046-00	C17	" 2pF ± 0.5pF
1-101-073-00	C18	" 0.02μF ± 15%
1-101-073-00	C19	" 0.02μF "
	C20	" 0.02μF "
1-119-001	C21	Electrolytic Capacitor 10μF 3V
1-119-007	C22	" 30μF 3V
1-101-098-00	C23	Ceramic Capacitor 0.005μF ± 15%
1-119-001	C24	Electrolytic Capacitor 10μF 3V
1-119-007	C25	" 30μF 3V
1-119-010	C26	" 100μF 4V
1-119-010	C27	" 100μF 4V
1-105-097-00	C28	Mylar Capacitor 0.3μF

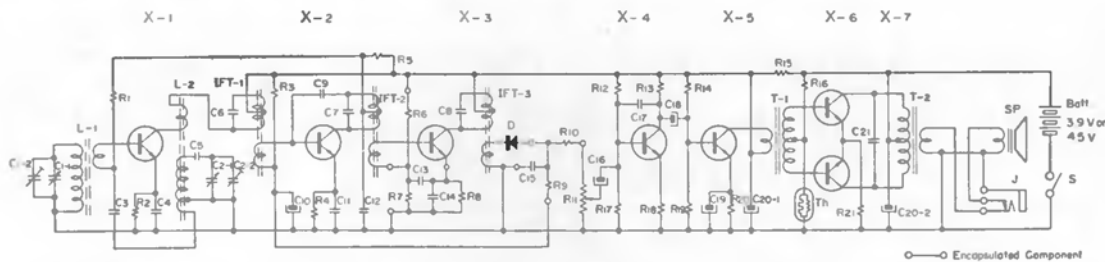
SONY**TR-730****Frequency Coverage:** 535 Kc ~ 1,605 Kc**IF Frequency:** 455 Kc**Current Drain:** 9 mA at zero signal, 42 mA at 92 mW output**Dimensions:** 3" x 2-1/4" x 1-1/8" (76 x 57 x 29 mm)**Weight:** Less than 7 ounces (180 gr.) with Battery**To take out Circuit Board:**

- 1) Remove one gold-plated Philips screw (plus screw) on the left side.
- 2) Unscrew the rear cover securing screw.
- 3) Open the rear cover.
- 4) Remove securing metal post for rear cover.
- 5) Remove one Philips screw (plus screw) on the chassis near volume knob.

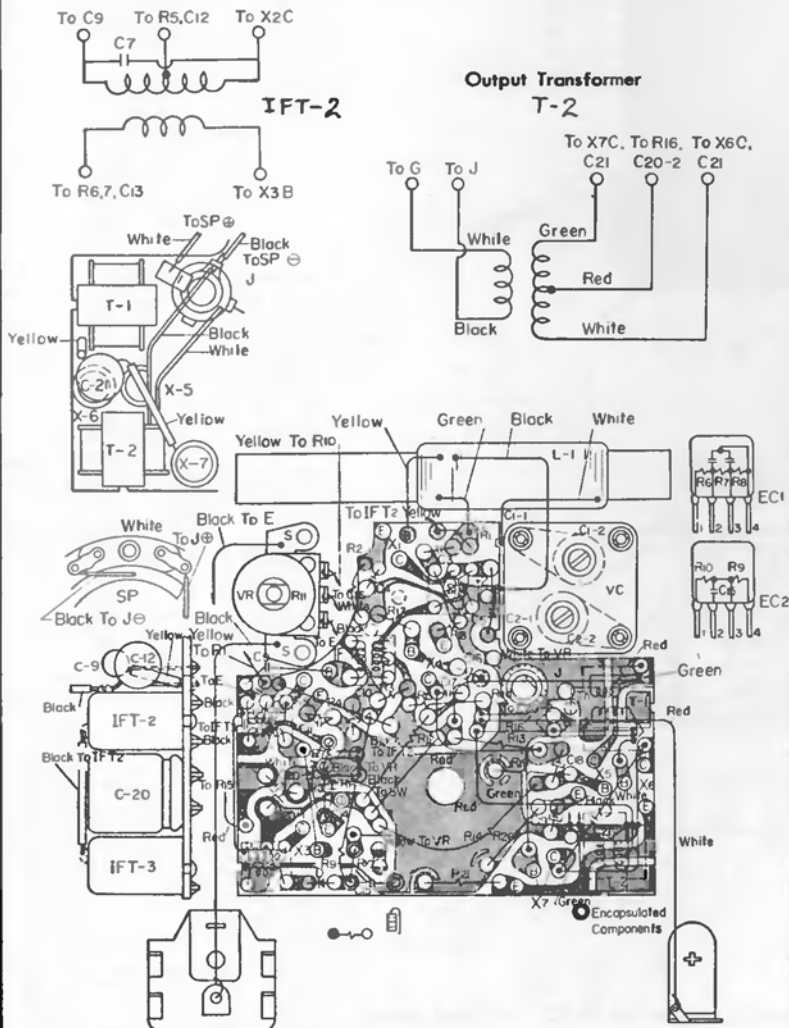

Parts No.	Symbol	Description
1-401-108-01	L ₁	Ferrite Bar Antenna
1-405-001-	L ₂	Oscillator Coil
1-403-057-00	IFT ₁	IF Transformer
1-403-058-00	IFT ₂	"
1-403-059-00	IFT ₃	"
1-423-042-	T ₁	Driving Transformer
1-427-059-	T ₂	Output "
1-502-044	Sp	Speaker
1-507-038-01	J	Earphone Jack
	X ₁	Transistor 2SC73
	X ₂	" 2SC75
	X ₃	" 2SC76
	X ₄	" 2SD65
	X ₅	" "
	X ₆	" "
	X ₇	" "
	D	Diode 1T23G
	Th	Thermistor CS120
	Batt.	Battery
1-201-601-00	R ₁	Composition Resistor
1-528-010-00		10 kΩ 1/10 W ± 10%
1-528-011-00		15 kΩ "
1-201-145-00	R ₂	10 kΩ 1/10 W ± 10%
1-201-201-00	R ₃	15 kΩ "
1-201-211-00	R ₄	75 kΩ 1/10 W ± 5%
1-201-131-00	R ₅	330 Ω 1/10 W ± 10%
1-201-106-00	R ₆	5.6 kΩ "
1-101-403-	R ₇	Encapsulated Components 22 kΩ
1-101-404	R ₈	" " 3.3 kΩ
	R ₉	" " 330 kΩ
	R ₁₀	" " 10 kΩ
	R ₁₁	" " 330 Ω
1-221-257-	R ₁₂	Potentiometer 5 kΩ
1-201-202-00	R ₁₃	Composition Resistor
		56 kΩ 1/10 W ± 10%
1-201-135-00	R ₁₄	2.2 kΩ "
1-201-166-00	R ₁₅	27 kΩ "
1-201-188-00	R ₁₆	Composition Resistor
		100 Ω 1/10 W ± 10%
1-201-189-00	R ₁₇	" 2.7 kΩ "
1-201-158-00	R ₁₈	" 3.3 kΩ "
1-201-186-00	R ₁₉	" 33 Ω "
1-201-135-00	R ₂₀	" 2.2 kΩ "
1-201-187-00	R ₂₁	" 62 Ω "
1-201-185-00	R ₂₂	" 5.1 Ω "
1-101-021-	C ₃	Capacitor
		0.01 μF ±20% Ceramic
1-101-020-	C ₄	" 0.005 μF " "
1-103-047-	C ₅	" 130 pF ±50% Styrol
	C ₆	" 150 pF built in IFT ₁
	C ₇	" 150 pF built in IFT ₂
	C ₈	" 150 pF built in IFT ₃
1-101-045-	C ₉	" 1 pF 0.5 pF Ceramic
1-119-068-04	C ₁₀	" 5 μF ±10% 3 V Electrolytic
1-101-022-	C ₁₁	" 0.02 μF ±20% Ceramic
1-101-021-	C ₁₂	" 0.01 μF ±20% "
1-101-403-	C ₁₃	0.01 μF (Encapsulated with R _{8, 7, 8})
1-101-404-	C ₁₄	0.01 μF (Encapsulated with R _{9, 10})
1-127-901-	C ₁₅	Capacitor
		0.3 μF ±10% 6 V Alox
1-101-022-	C ₁₆	" 0.02 μF ±10% Ceramic
1-119-068-04	C ₁₇	" 5 μF ±10% 3 V Electrolytic
1-119-068-04	C ₁₈	" 5 μF ±10% "
1-125-105-04	C ₁₉	" 50 μF x 2 ±10% 4.5V Electrolytic Block
1-101-021-	C ₂₀	" 0.01 μF ±20% Ceramic


TR-7170

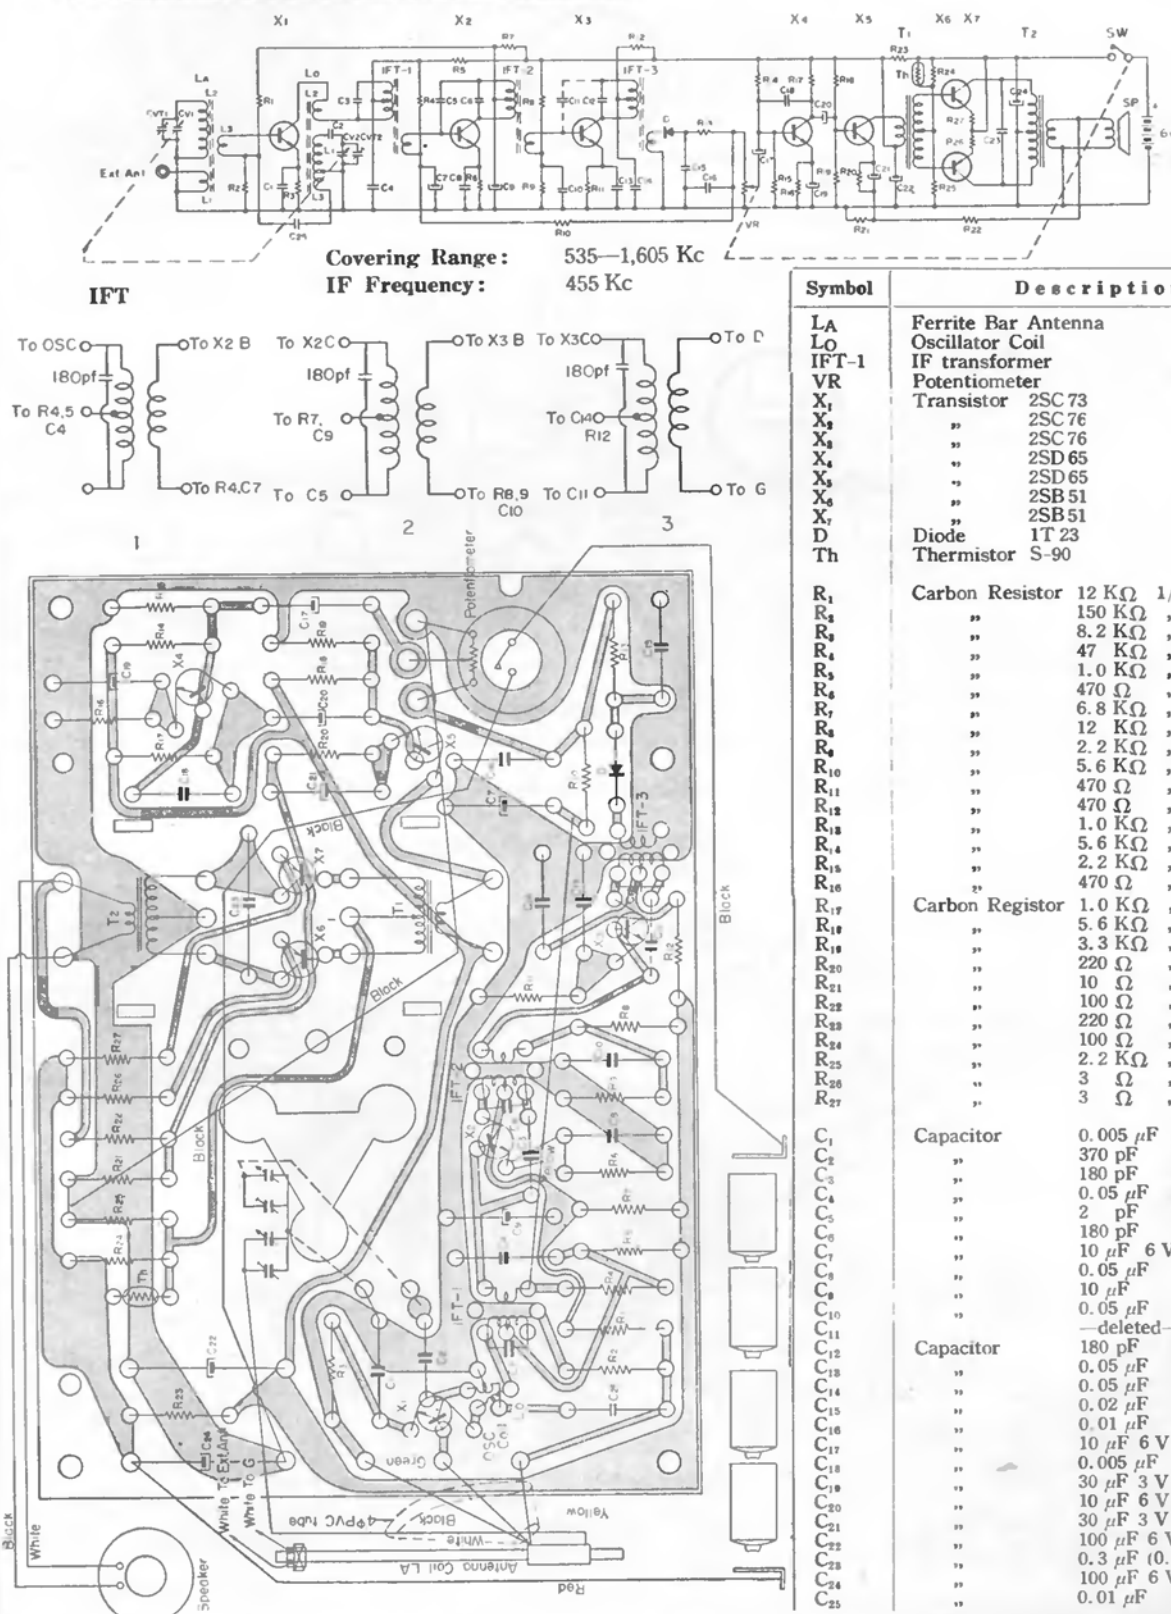


Symbol	Description
LA	Ferrite Bar Antenna
LO	Oscillator Coil
IFT-1	IF transformer
VR	Potentiometer
X ₁	Transistor 2SC 73
X ₂	" 2SC 76
X ₃	" 2SC 76
X ₄	" 2SD 65
X ₅	" 2SD 65
X ₆	" 2SB 51
X ₇	" 2SB 51
D	Diode 1T 23
Th	Thermistor S-90
R ₁	Carbon Resistor 12 KΩ 1/2 W ± 10%
R ₂	" 150 KΩ "
R ₃	" 8.2 KΩ "
R ₄	" 47 KΩ "
R ₅	" 1.0 KΩ "
R ₆	" 470 Ω "
R ₇	" 6.8 KΩ "
R ₈	" 12 KΩ "
R ₉	" 2.2 KΩ "
R ₁₀	" 5.6 KΩ "
R ₁₁	" 470 Ω "
R ₁₂	" 470 Ω "
R ₁₃	" 1.0 KΩ "
R ₁₄	" 5.6 KΩ "
R ₁₅	" 2.2 KΩ "
R ₁₆	" 470 Ω "
R ₁₇	Carbon Resistor 1.0 KΩ "
R ₁₈	" 5.6 KΩ "
R ₁₉	" 3.3 KΩ "
R ₂₀	" 220 Ω "
R ₂₁	" 10 Ω "
R ₂₂	" 100 Ω "
R ₂₃	" 220 Ω "
R ₂₄	" 100 Ω "
R ₂₅	" 2.2 KΩ "
R ₂₆	" 3 Ω "
R ₂₇	" 3 Ω "
C ₁	Capacitor 0.005 μF Electrolytic
C ₂	" 370 pF Styrol
C ₃	" 180 pF built in IFT
C ₄	" 0.05 μF Electrolytic
C ₅	" 2 pF Styrol
C ₆	" 180 pF built in IFT
C ₇	" 10 μF 6 V Electrolytic
C ₈	" 0.05 μF "
C ₉	" 10 μF "
C ₁₀	" 0.05 μF "
C ₁₁	" —deleted—
C ₁₂	Capacitor 180 pF built in IFT
C ₁₃	" 0.05 μF Electrolytic
C ₁₄	" 0.05 μF "
C ₁₅	" 0.02 μF "
C ₁₆	" 0.01 μF "
C ₁₇	" 10 μF 6 V "
C ₁₈	" 0.005 μF "
C ₁₉	" 30 μF 3 V "
C ₂₀	" 10 μF 6 V "
C ₂₁	" 30 μF 3 V "
C ₂₂	" 100 μF 6 V "
C ₂₃	" 0.3 μF (0.25) "
C ₂₄	" 100 μF 6 V "
C ₂₅	" 0.01 μF "

SYLVANIA



Chassis 405-1, Model 45P20

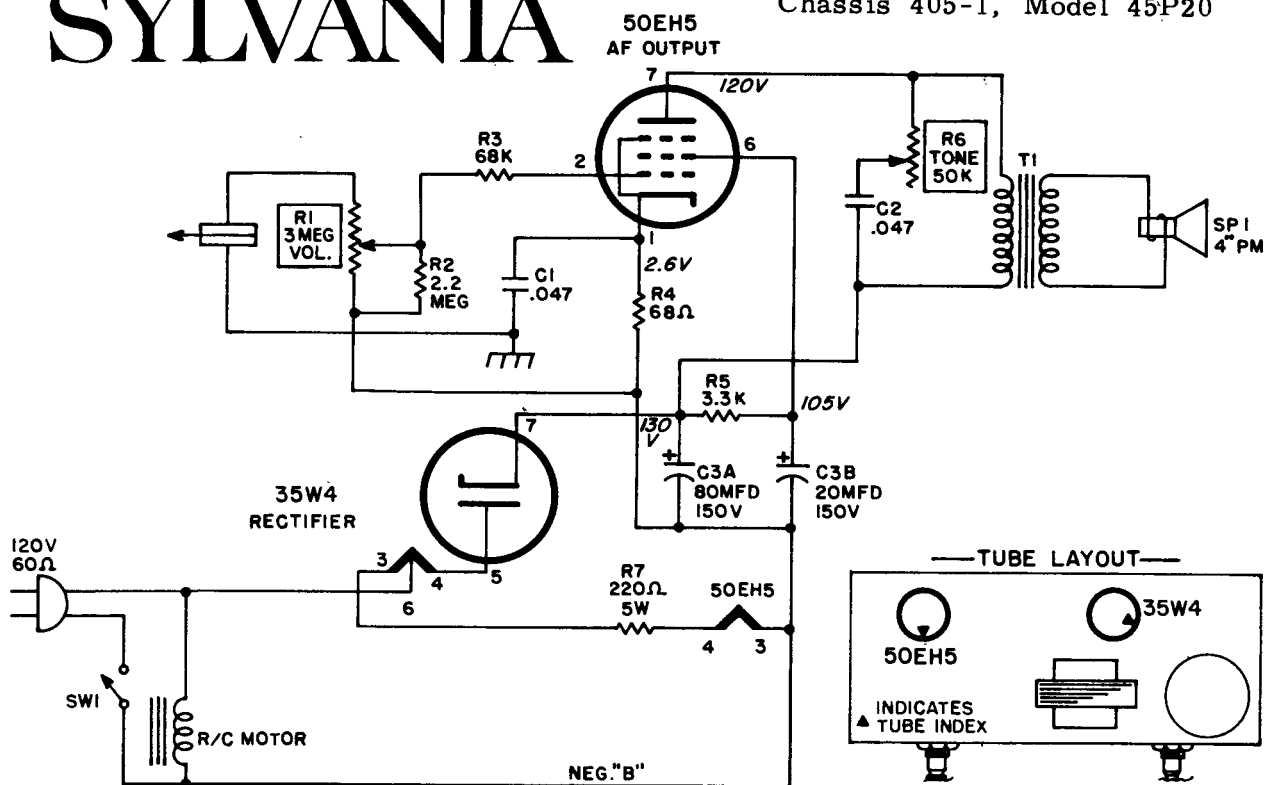

SYLVANIA Chassis 406-1, Model 45P32

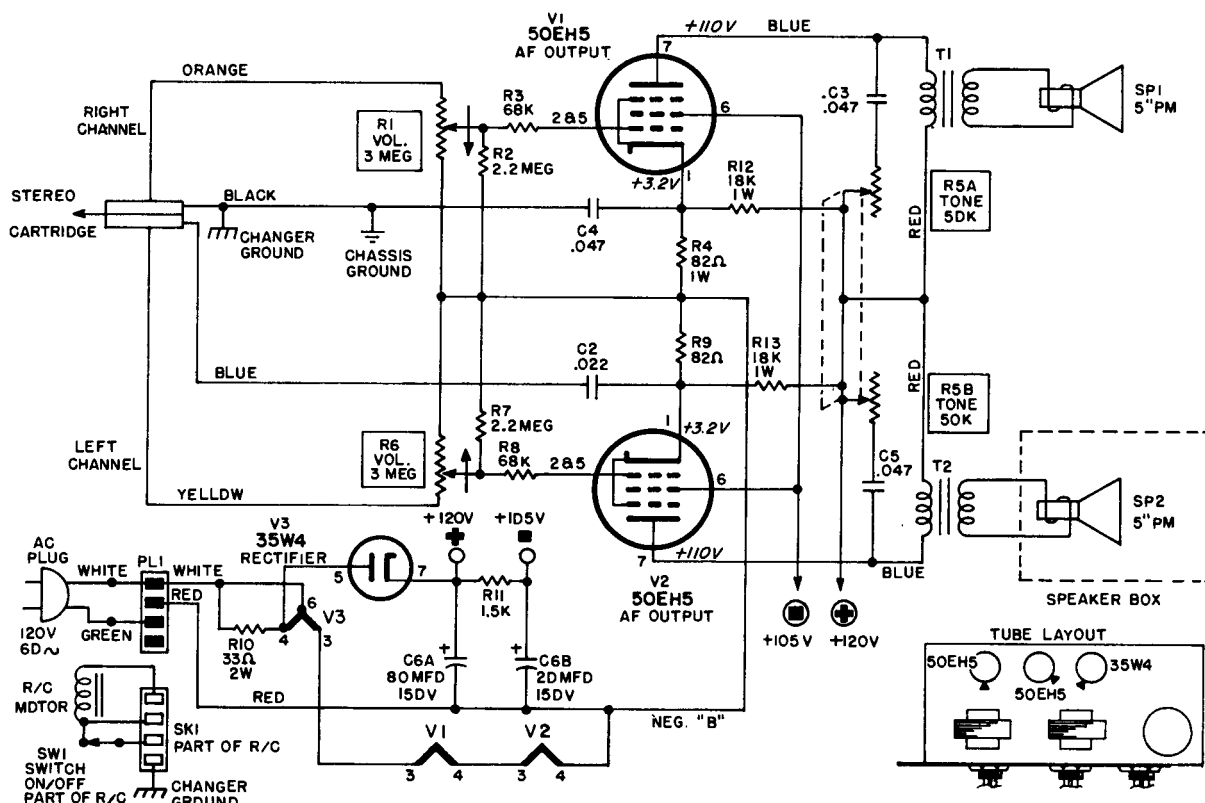

SYLVANIA Chassis 702-2, Models SC26 Series

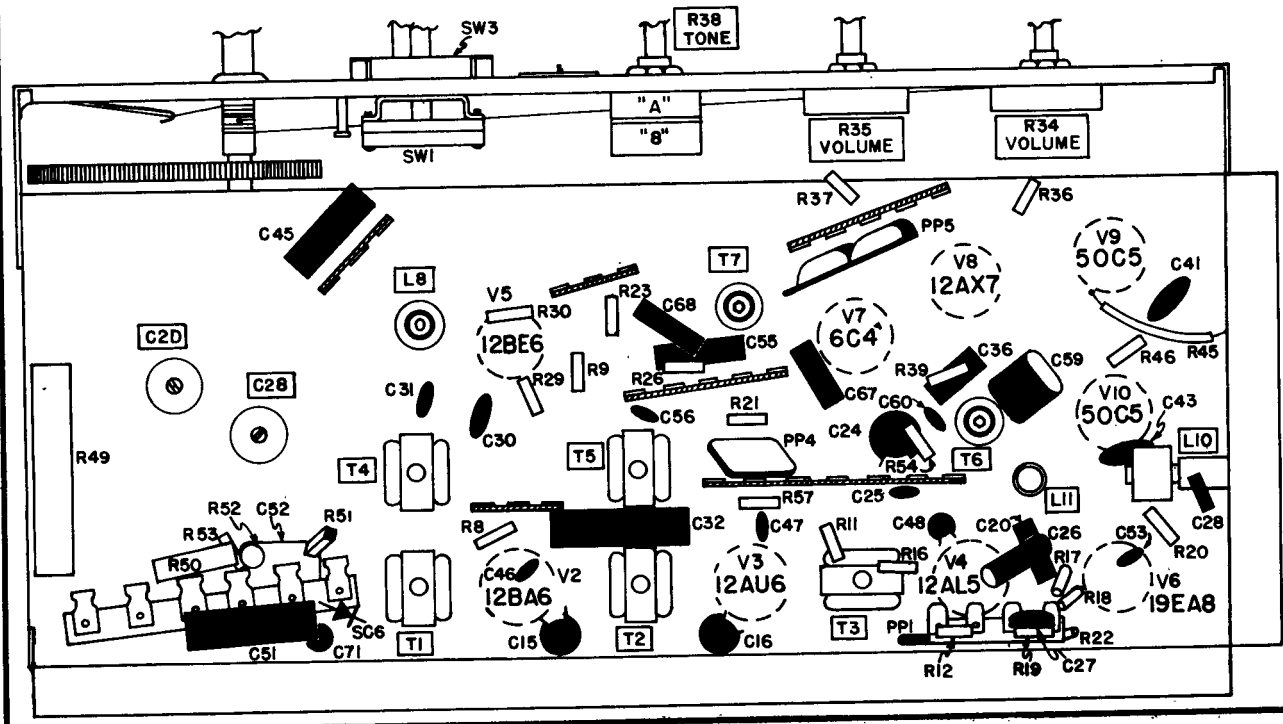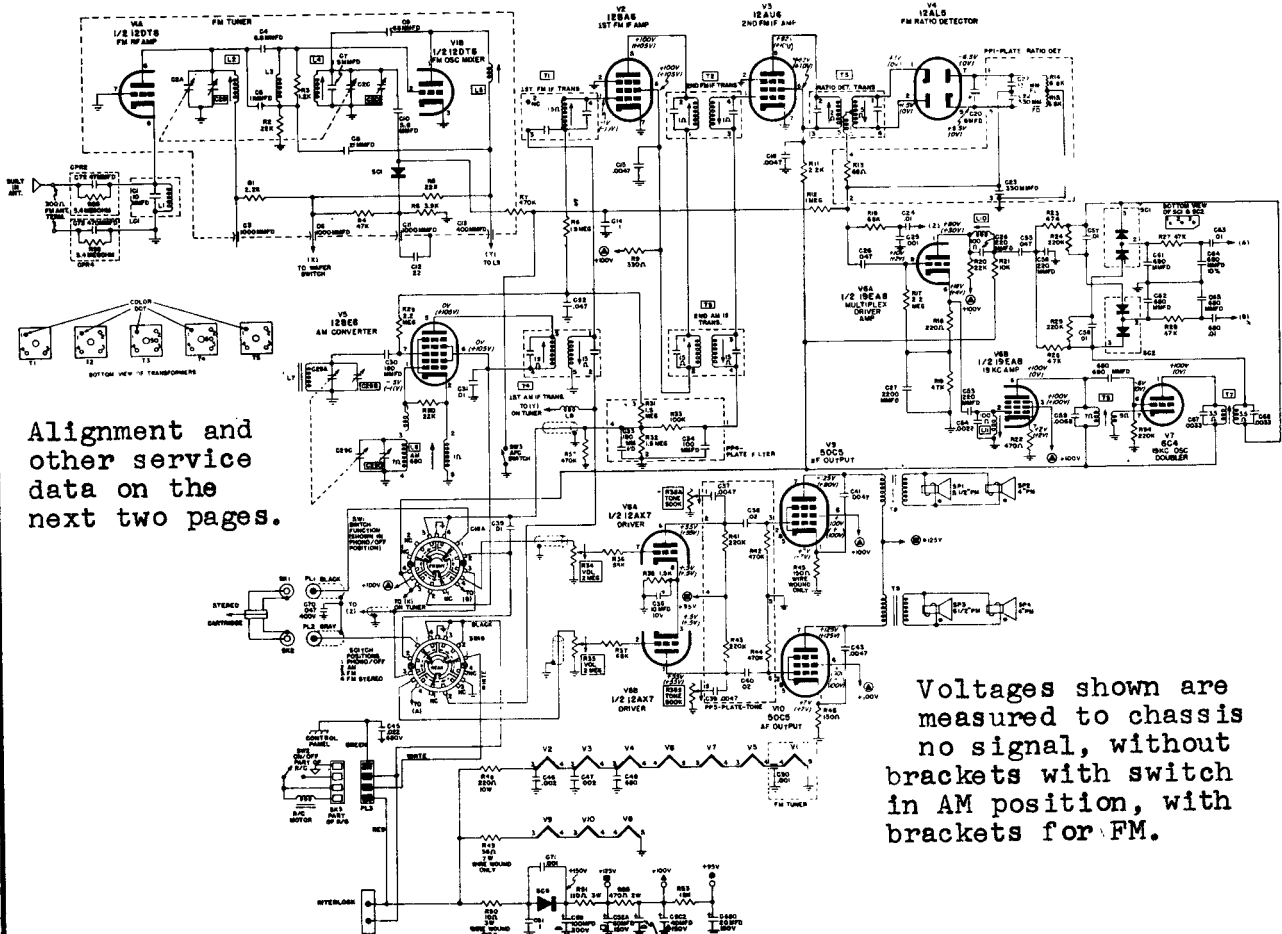

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

SYLVANIA Chassis 702-2, Models SC26 Series, Alignment Information, Continued
(Alignment continued on the next page, other data preceding and following)

——— AM ALIGNMENT ——— (Selector switch in AM position)

STEP	TUNING CAPACITOR SETTING	TEST EQUIPMENT HOOK-UP	GENERATOR FREQUENCY	ADJUSTMENT POINT	ADJUST FOR
1	Fully Open	SIGNAL GENERATOR - "Hot" lead thru a .1 Mfd Capacitor to test point (A). Ground lead to chassis. AC VOLTMETER - Across Speaker terminals of channel set at maximum volume.	455 KC	T5 Bottom T5 Top T4 Bottom T4 Top	Maximum Meter Reading
2	Fully Open	Same as Step 1	1620 KC	C29D AM Osc. Trimmer	Maximum Meter Reading
3	1400	SIGNAL GENERATOR - Radiate signal to receiver through a loup consisting of several turns of wire. AC VOLTMETER - Same as Step 1.	Set generator to a frequency corresponding to receiver dial (until signal is heard through receiver speaker.)	C29B AM Ant. Trimmer	Maximum Meter Reading

——— FM ALIGNMENT ——— (Selector switch in FM position)

STEP	TUNING CAPACITOR SETTING	TEST EQUIPMENT HOOK-UP	GENERATOR FREQUENCY	ADJUSTMENT POINT	ADJUST FOR
1	Point of non-interference	SIGNAL GENERATOR - "Hot" lead through a .005 Mfd capacitor to test point (B). Ground lead to chassis. AC VOLTMETER - "Hot" lead to test point (C). Ground lead to chassis.	10.7 MC	T3 Bottom T2 Bottom T2 Top T1 Top L5	Maximum Meter Reading
2	Same as Step 1	SIGNAL GENERATOR - Same as Step 1. AC VOLTMETER - "Hot" lead to test point (D). Ground lead connected to chassis.	10.7 MC	T3 Top	Zero Meter Reading
3	108	SIGNAL GENERATOR - Same as Step 1. AC VOLTMETER - Same as Step 1.	108 MC	C2D FM Osc. Trimmer	Maximum Meter Reading

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION
 SYLVANIA Chassis 702-2, Models SC26 Series, Alignment Information, Continued

— FM ALIGNMENT (Continued) —

4	88	SIGNAL GENERATOR - Same as Step 1. AC VOLTMEETER - Same as Step 1.	88 MC	C2B FM Ant. Trimmer	Maximum Meter Reading
---	----	---	-------	---------------------	-----------------------


— MULTIPLEX ALIGNMENT PROCEDURE —

Outlined below is an alternate method of FM MULTIPLEX ALIGNMENT using a standard Multiplex Broadcast as the signal source. Whenever FM multiplex alignment equipment is used, follow the procedures specified

by the equipment manufacturer. Peaking of the 19KC and 38KC coils is easily accomplished, however correct phase relationship is absolutely essential for maximum channel separation.


(Selector switch in FM multiplex position)

STEP	TEST EQUIPMENT HOOK-UP	SIGNAL USED	ADJUSTMENT POINT	ADJUST FOR
1	OSCILLOSCOPE - Hot lead to pin 6 of 19EA8. Ground lead to chassis.	Multiplex	T6	Max output of the 19 KC pilot carrier
2	OSCILLOSCOPE - Hot lead to pin 1 of 6C4. Ground lead to chassis	Multiplex	T7	Max output of the 38 KC signal
3	Remove test equipment			
4	Very carefully readjust T6 and T7 for maximum separation of sound. NOTE: Some multiplex stations transmit announcements on one channel only. Adjust T6 or T7 for minimum output on opposite channel being transmitted.			

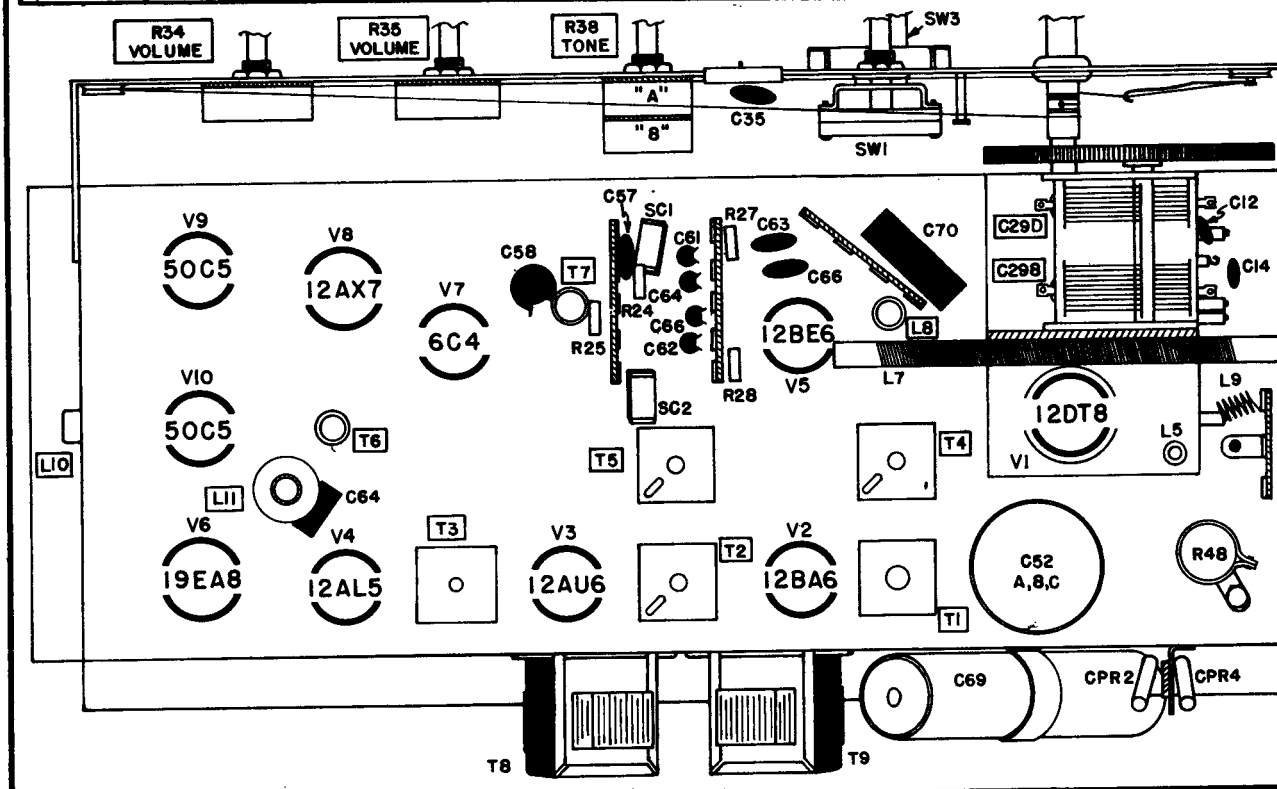

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


SYLVANIA Chassis 407-1, Models 45P34, 45P35 Series

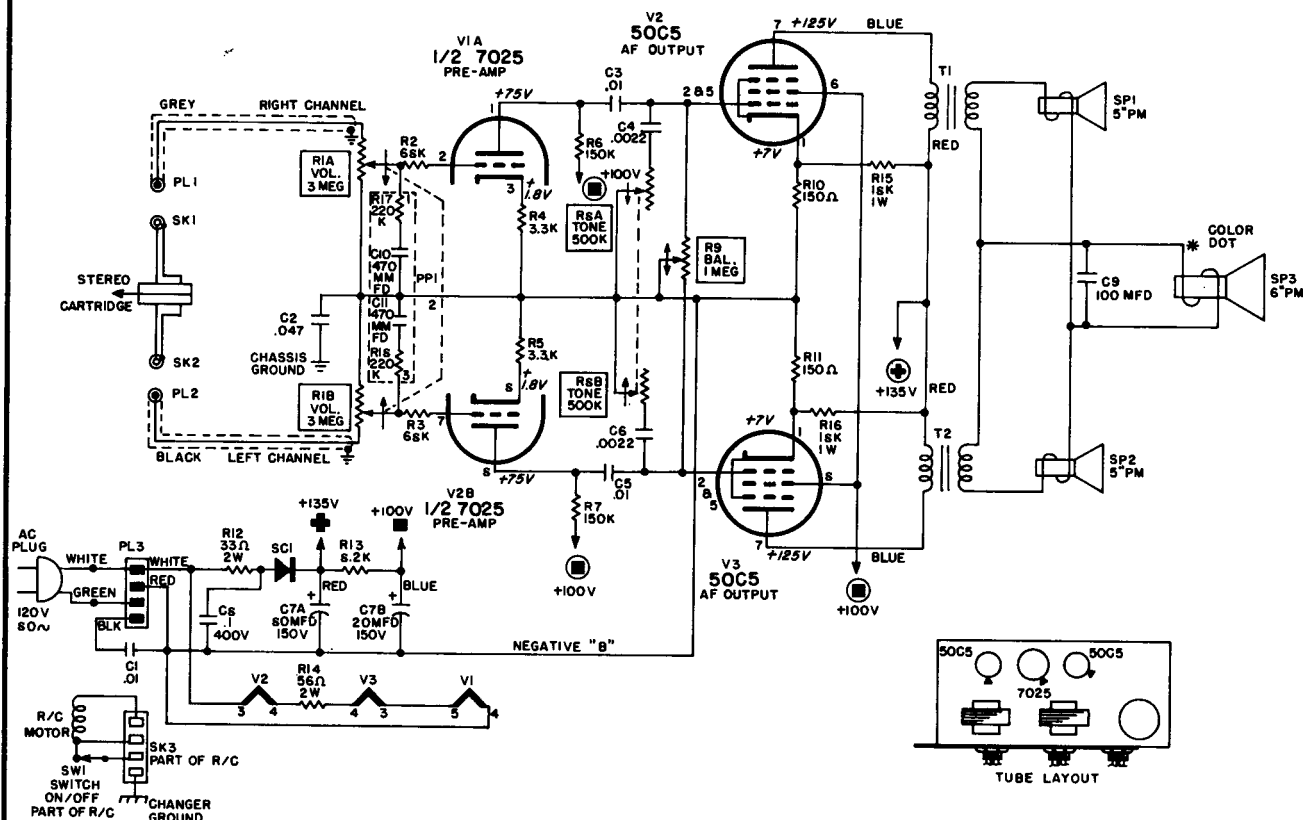


SYLVANIA Chassis 702-2, Models of SC26 Series, Service data continued

DIAL CORD

APPROX. 38 1/2"

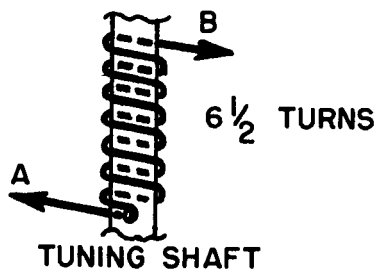

TUNING SHAFT

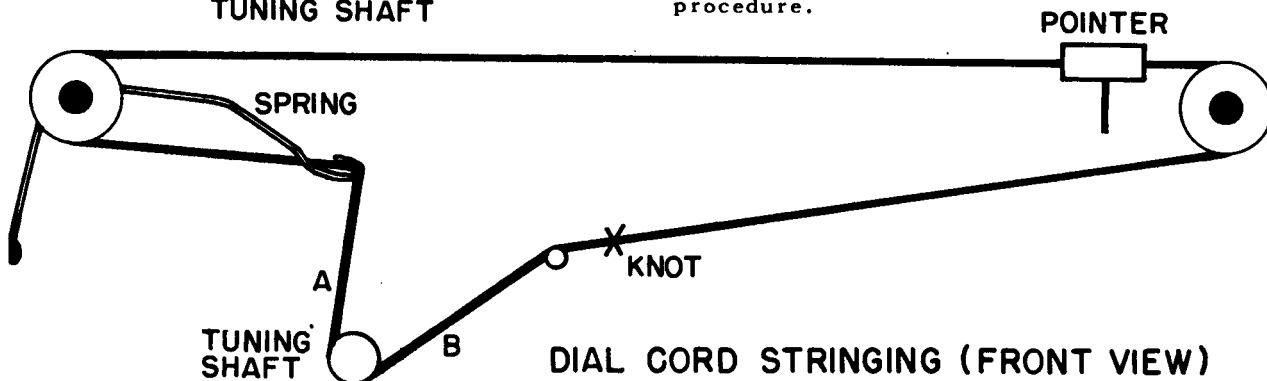


DIAL CORD STRINGING (FRONT VIEW)

CHASSIS REMOVAL

1. Remove screws securing backcover. Remove backcover.
2. Identify and disconnect leads to speakers and record changer.
3. Remove two (2) screws securing interlock to cabinet.
4. Remove screws securing antenna terminal board to cabinet.
5. Remove knobs by pulling straight up.
6. While supporting chassis remove the five (5) screws and two (2) nuts securing chassis to cabinet.
7. To replace chassis reverse the above procedure.

Toshiba


MODELS 7TP-30, 7TP-403Y

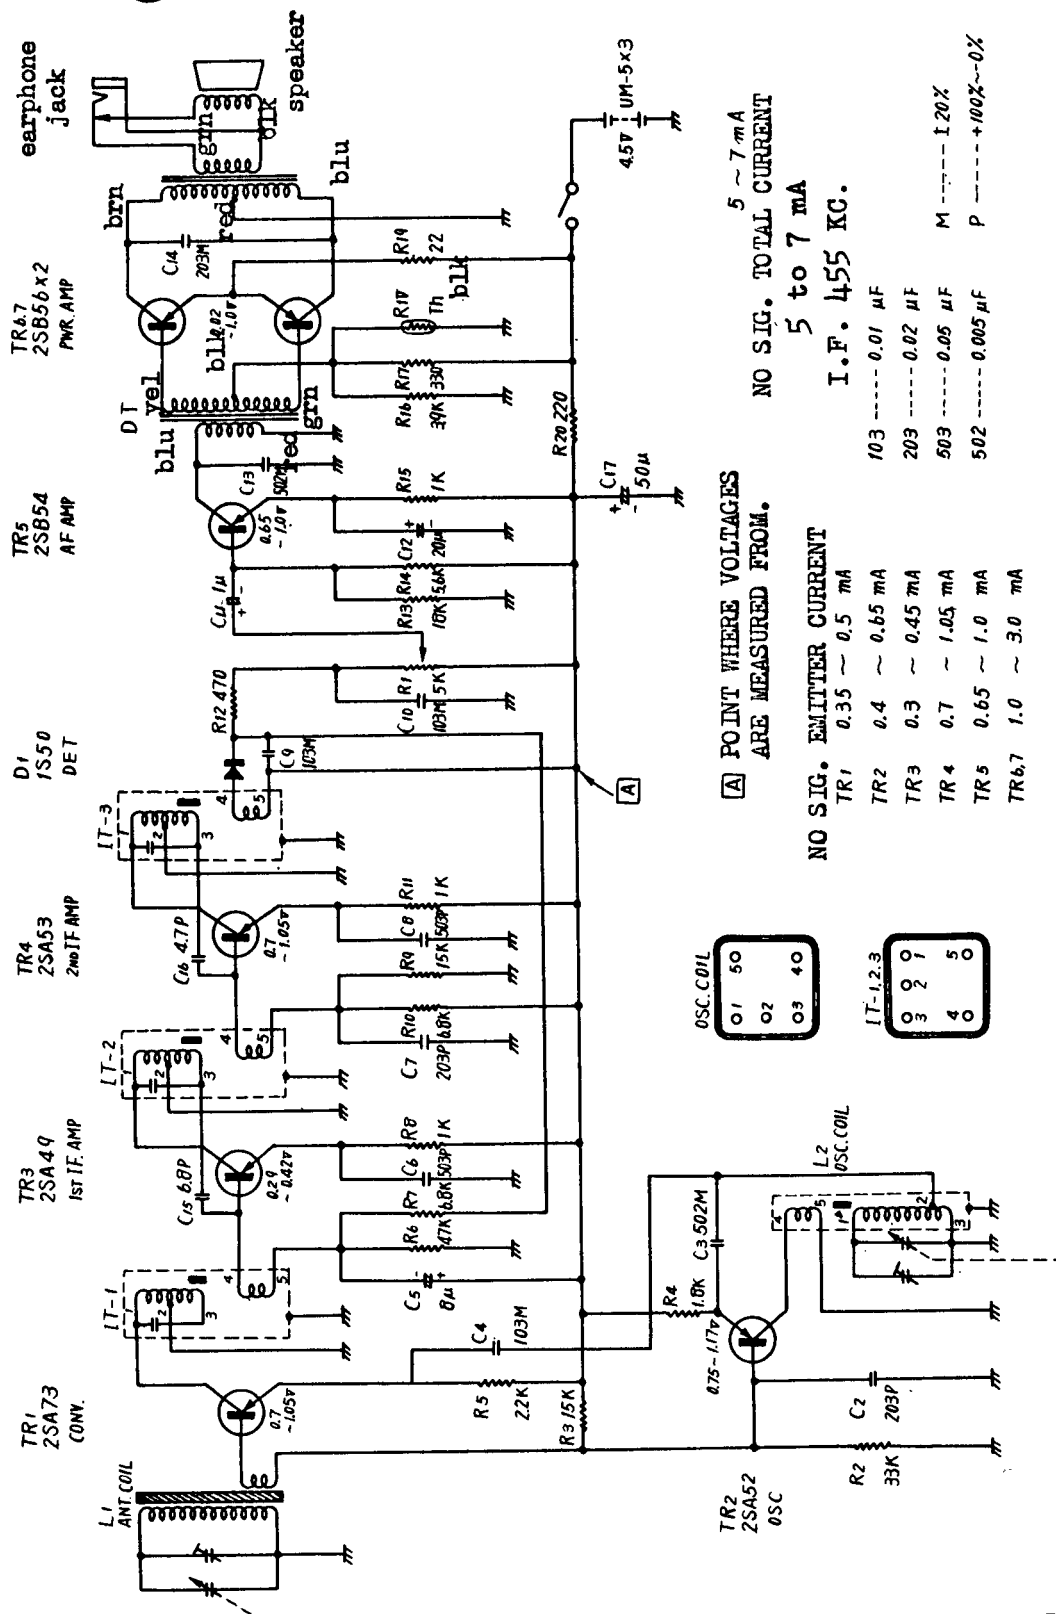

TOSHIBA Models 7TP-30, 7TP-403Y


W E B C O R

DIAGRAM FOR MODEL 1354

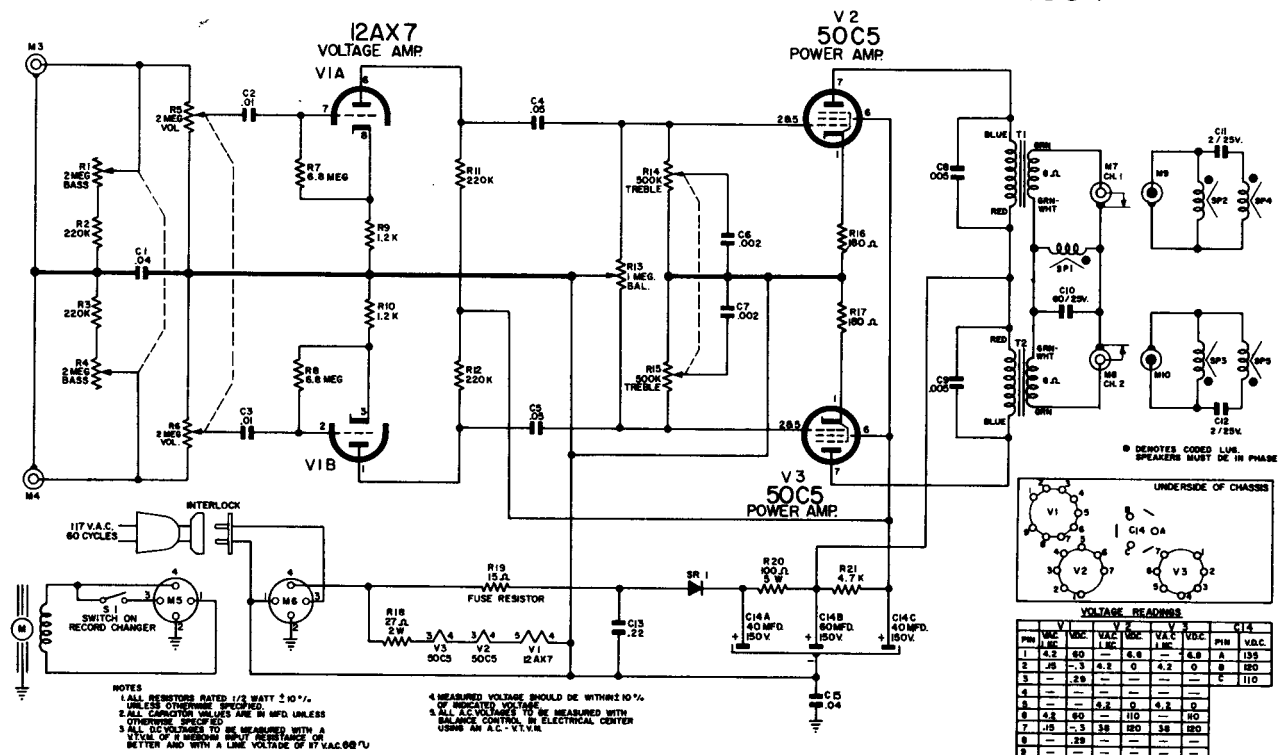


WEBCOR

MODEL 1153

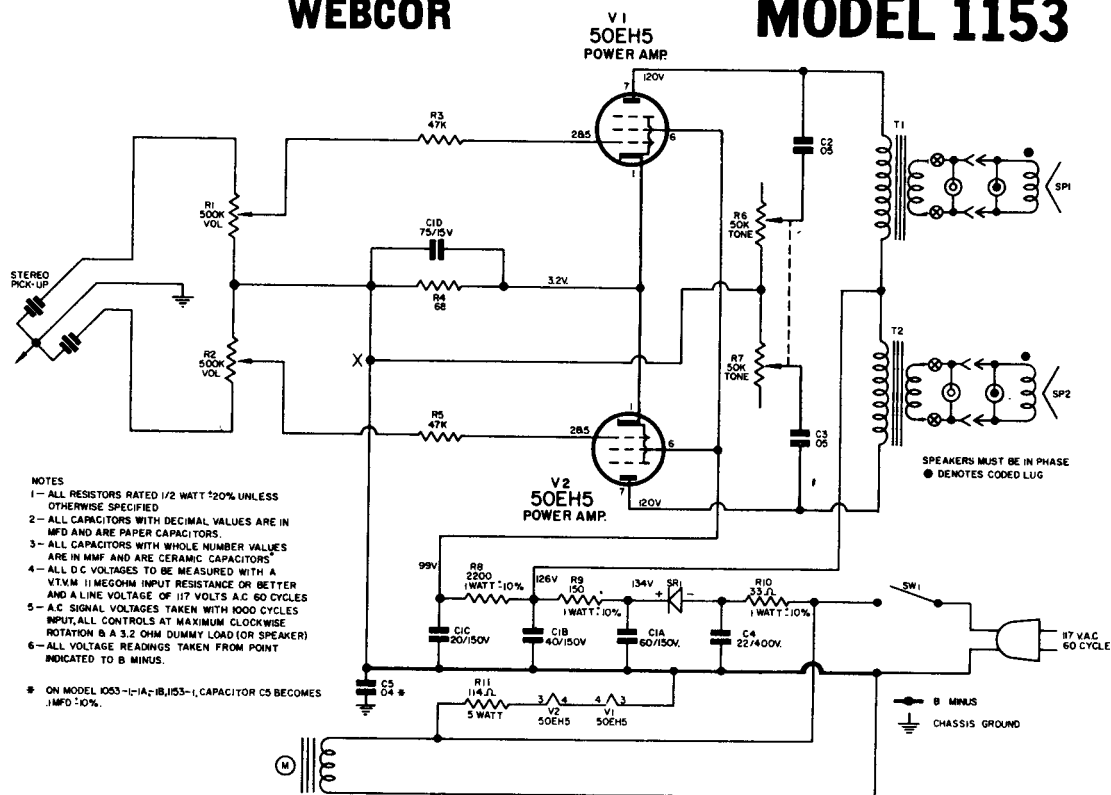


W E B C O R

MODEL 1353 AND 1356

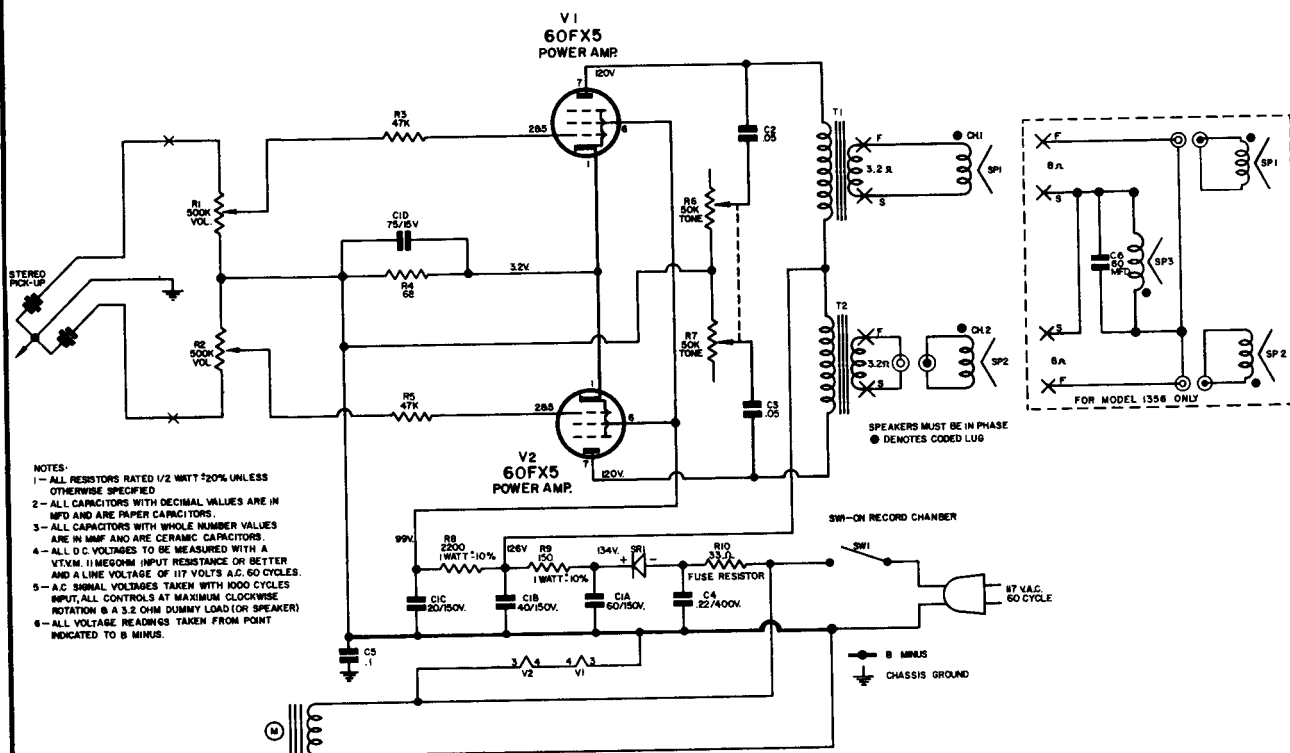

W E B C O R

MODEL 1450

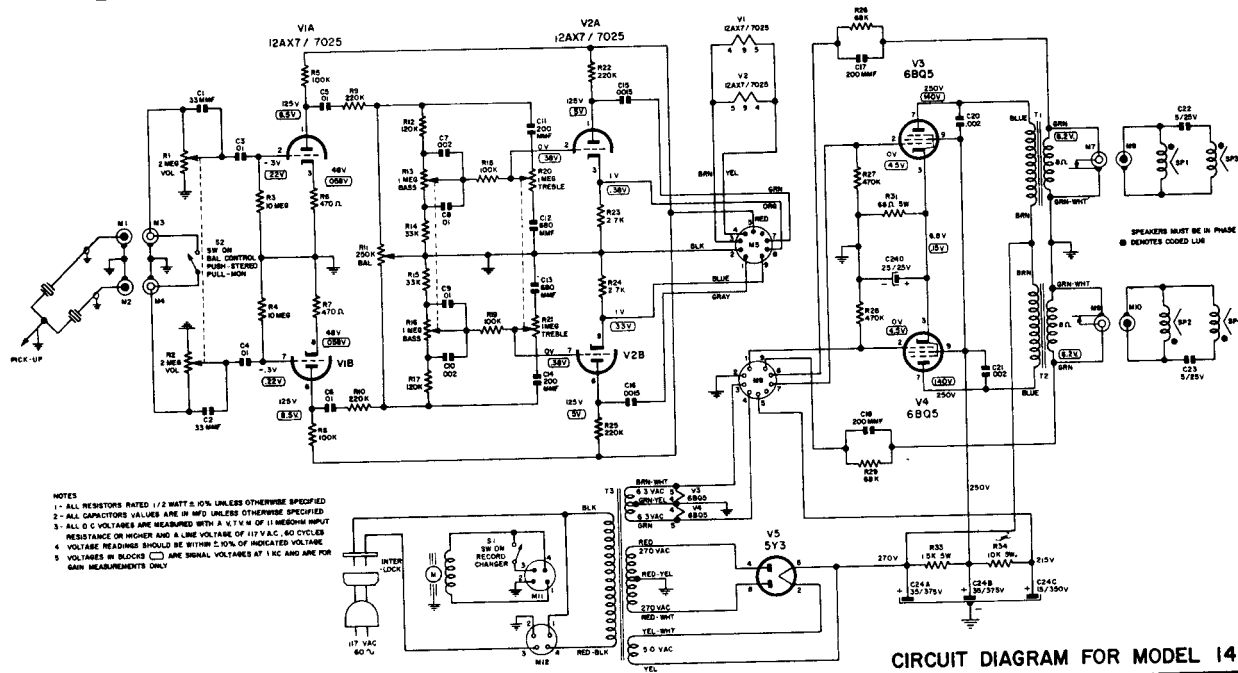

CIRCUIT DIAGRAM FOR MODEL 1450

Westinghouse

MODELS
H-846P8GP
H-846P8GPM

CHASSIS
V-2426-3
V-2426-3M


Frequency Range 540 to 1600 KC
Intermediate Frequency 455 KC

NOTES:

1. DURING SERVICING, BATTERY DOORS SHOULD BE METERED, WITH NO SIGNAL & VOL. CONT. AT MINIMUM. CURRENT DRAWN AT POINT SHOWN SHOULD BE 14 MA APPROX.
2. MEASUREMENTS MADE WITH A VTVM FROM POINTS INDICATED TO GROUND WITH TUNING CAPACITOR IN MAX. VOLUME CONTROL AT MIN. (NO SIGNAL INPUT) BATTERY SOURCE AT 6 VOLTS.
3. ALL CAPACITANCE VALUES LESS THAN 1 ARE IN PF. A VALUES GREATER THAN 1 ARE IN PF. ALL RESISTANCE VALUES ARE IN OHMS 1/2 WATT UNLESS OTHERWISE INDICATED.

* ON SW-12V IN EARLY PRODUCTION.
-SW-10V IN LATE PRODUCTION.

FUNCTION	TRANSISTOR	COMPONENT
TR1 OSC	PNP 25V03B002	1L544
TR2 MIXER	PNP 25V03B001	1L543
TR3 1ST IF AMP	PNP 25V03B001	1L543
TR4 2ND IF AMP	PNP 25V03B002	1L544
TR5 AUDIO AMP	PNP 25V03B001	1L543
TR6 AUDIO DRIVER	PNP 25V03B001	1L543
TR7 AUDIO DRIVER	PNP 25V03B001	1L543
TR8 AUDIO OUTPUT	PNP 25V03B001	1L543
TR9 MATCHED PAIR A	PNP 25V03B001	1L543
TR10 MATCHED PAIR B	PNP 25V03B001	1L543

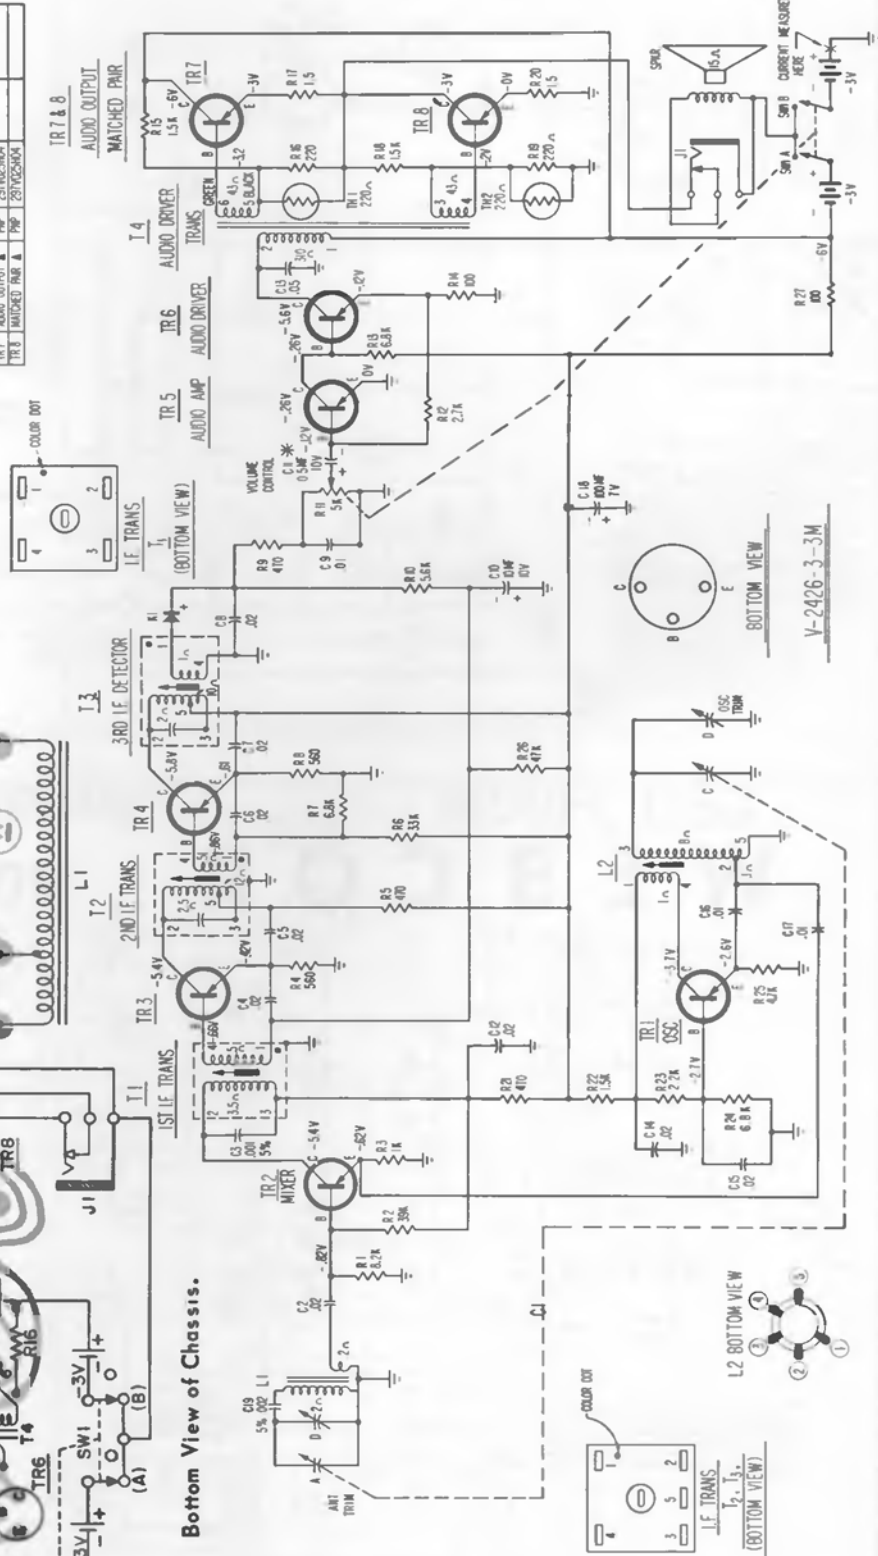


Westinghouse

MODELS H-848N5 H-849N5


(beige/oxford white) (blue/oxford white)

CHASSIS V-2427-1

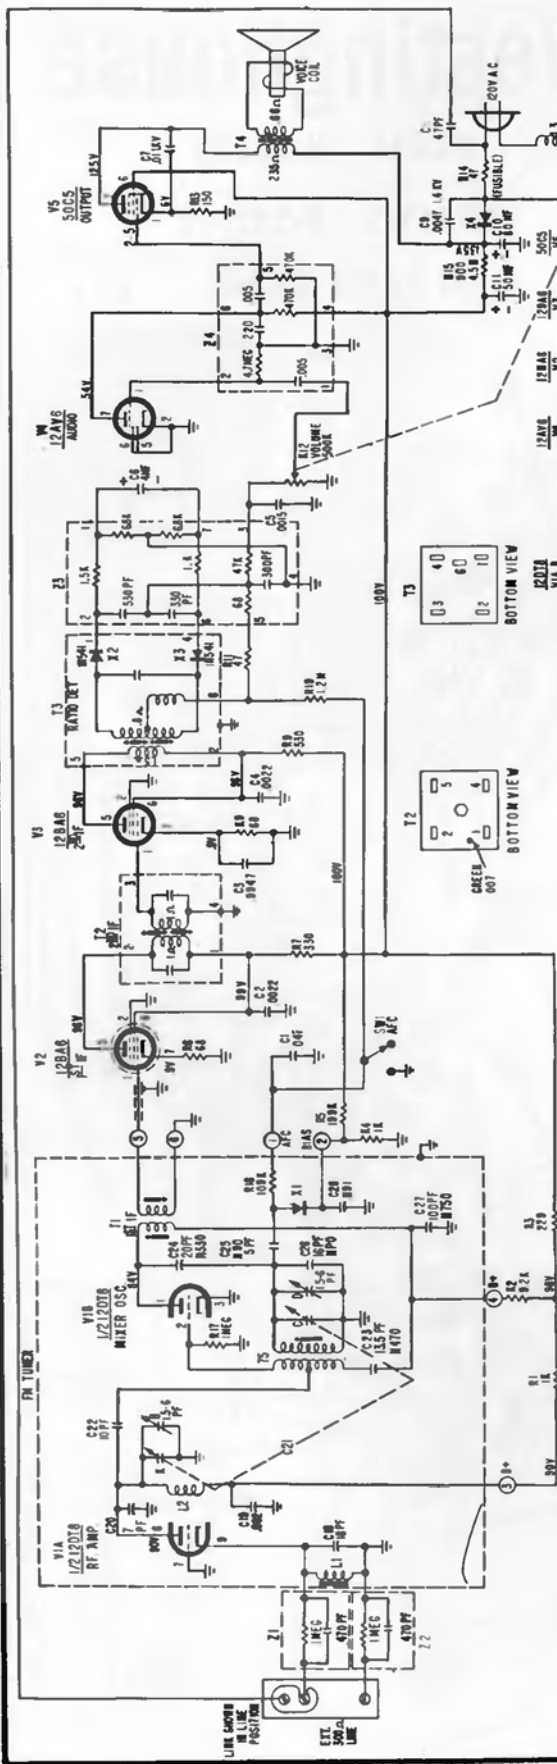

I.F. 10.7 MC.

Bottom View of PC Board.

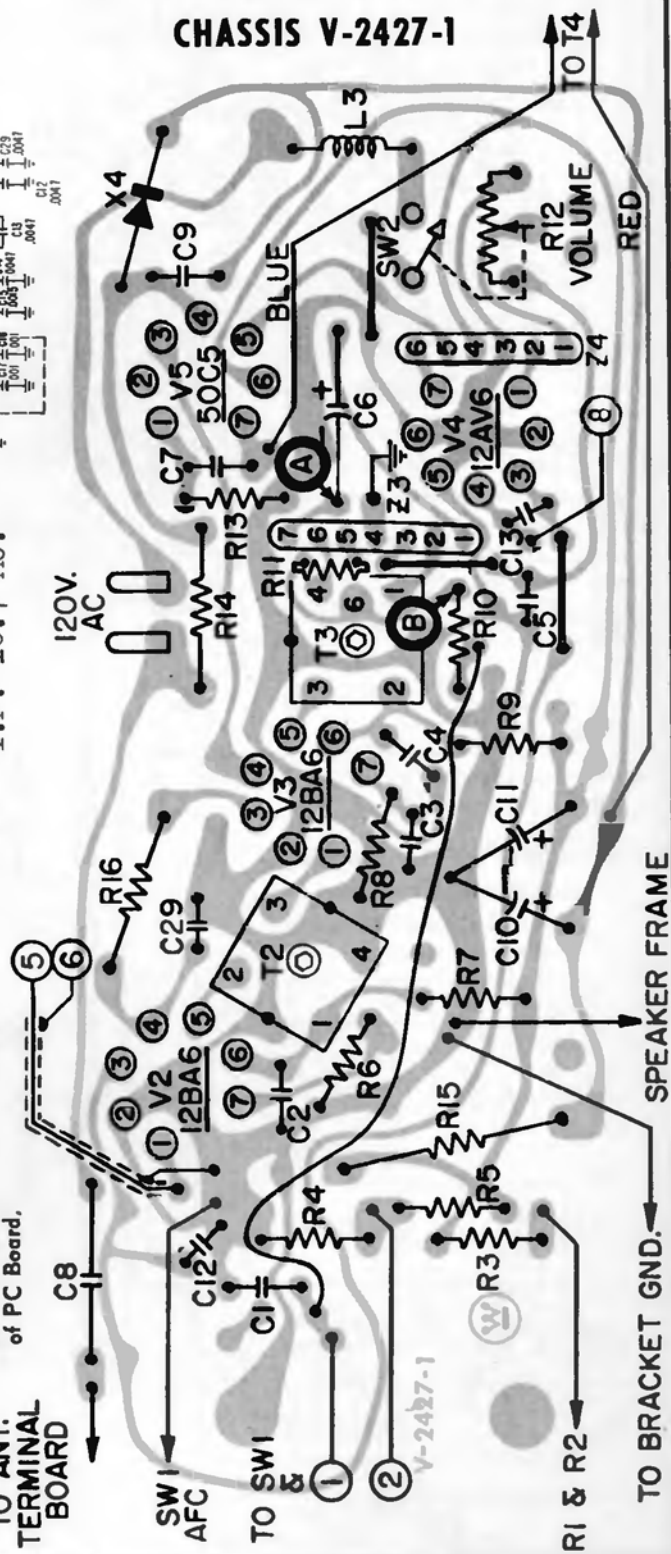


Westinghouse

MODEL H-839N5

CHASSIS V-2427-2


FM TABLE RADIO

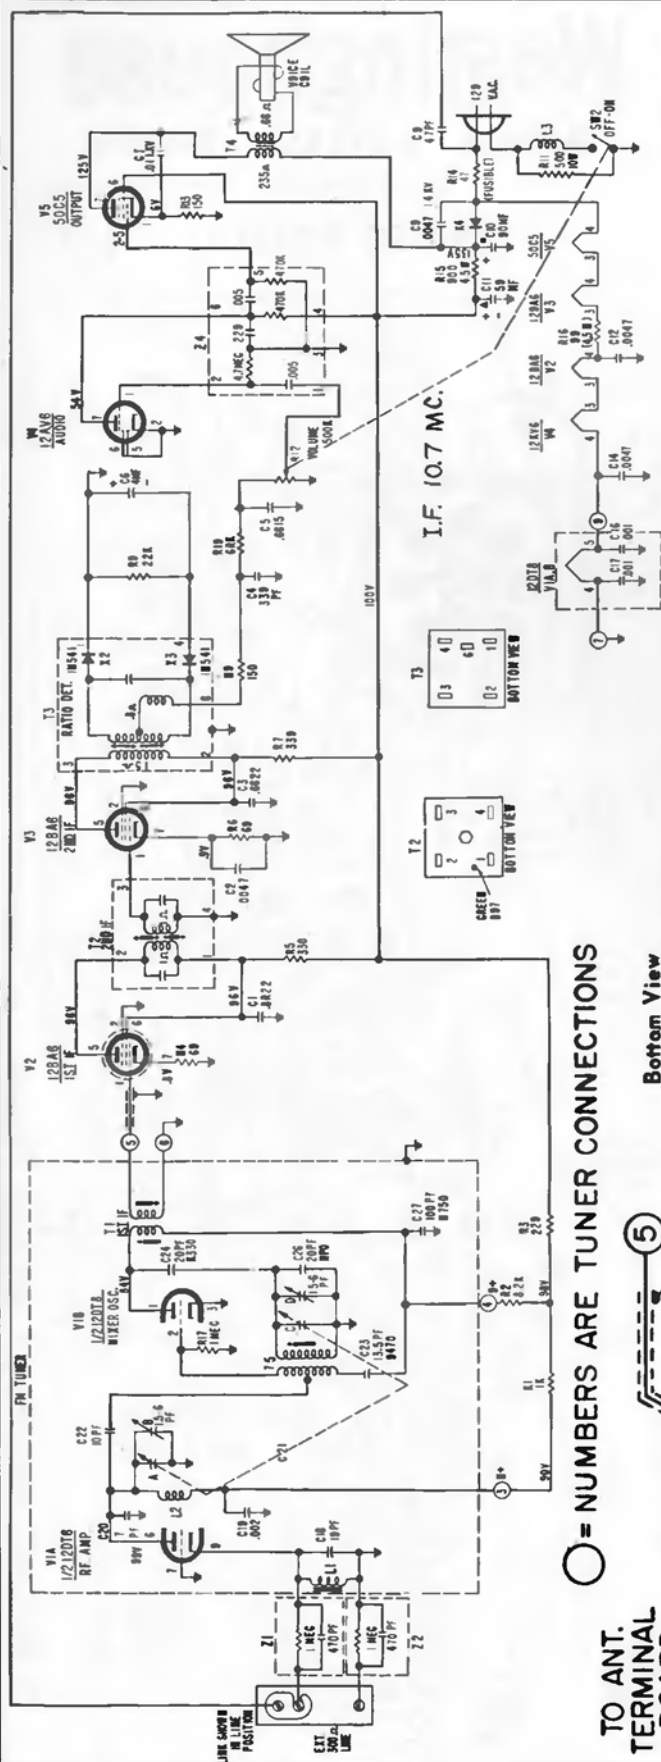

○ = NUMBERS ARE TUNER CONNECTIONS

TO ANT. TERMINAL BOARD

Bottom View of PC Board.

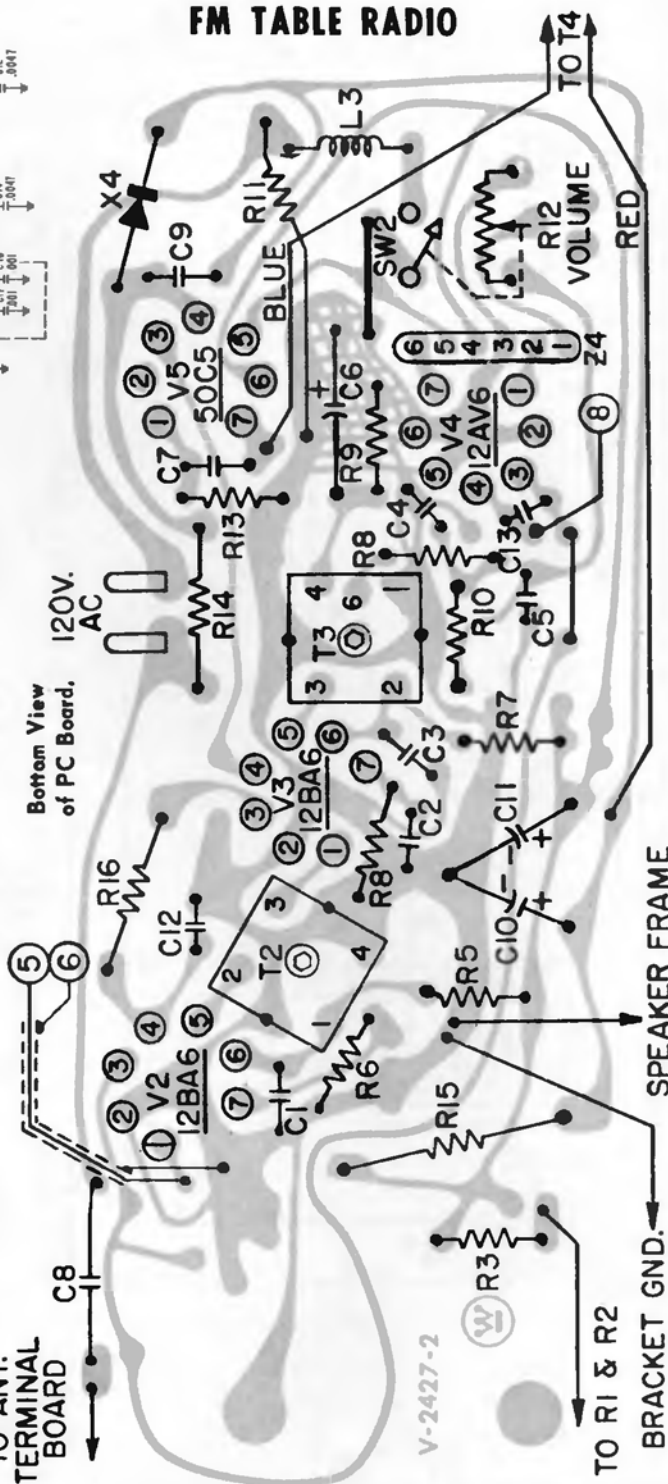


WESTINGHOUSE ELECTRIC

MODELS


ED-1 (Blonde)

ED-2 (Brunette)


TALKING DOLL

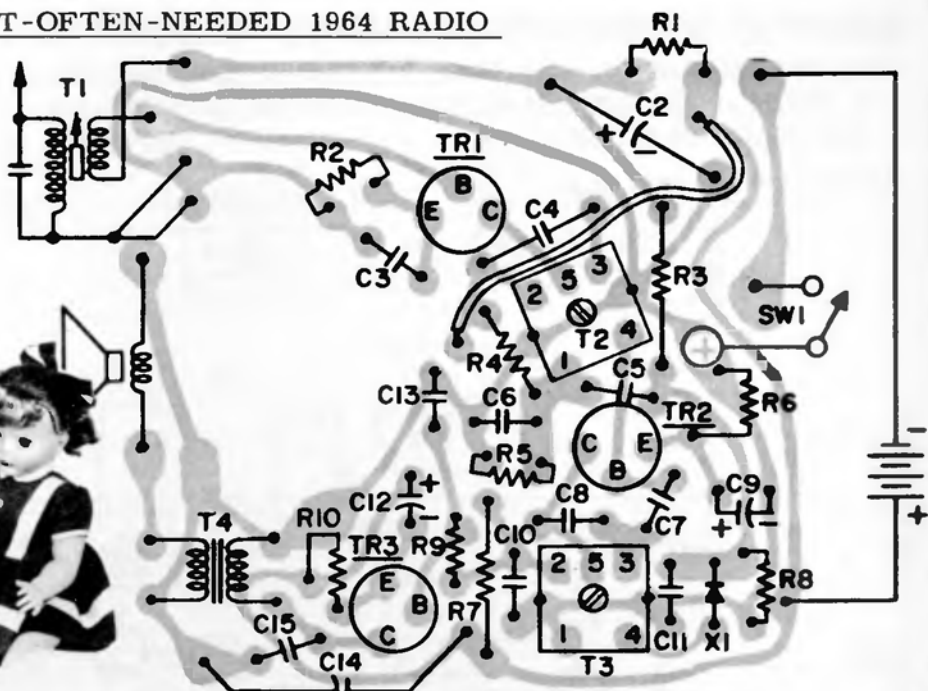


Bottom View of Doll's PC Board With Top Components Shown in Solid Outline.

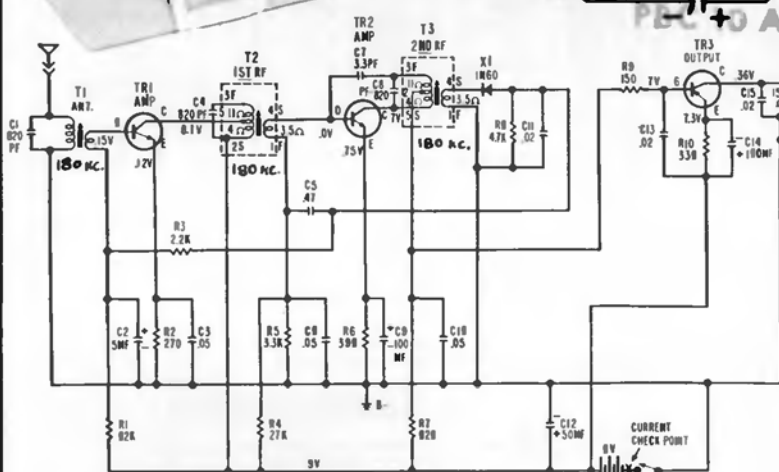


Schematic of Doll's Receiver

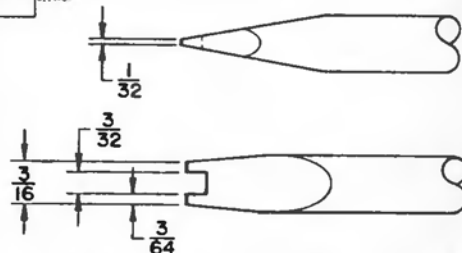

Special tool used for Motorboard Screw Removal. Should be made from a 3/16" screwdriver.

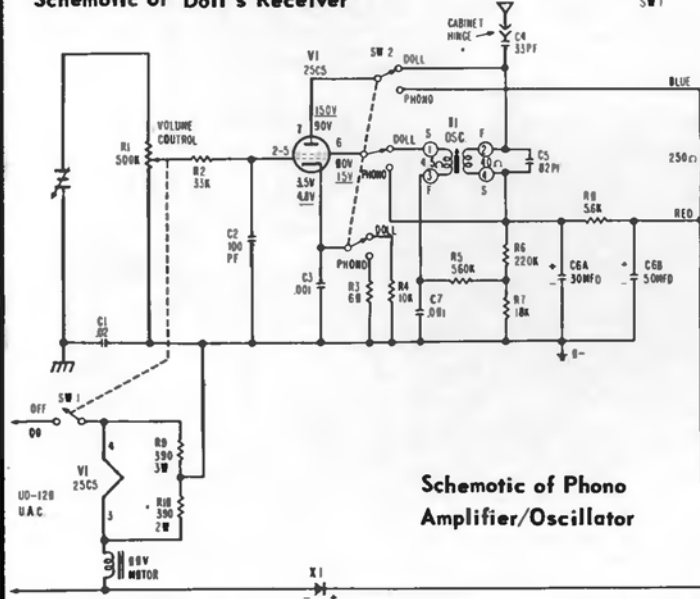

Schematic of Phono Amplifier/Oscillator

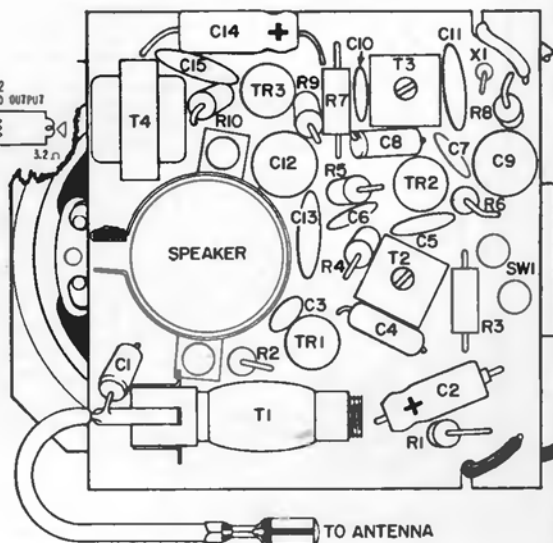


Top View of Doll's PC Board.

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2428-3 and -4, used in Models H-850N6, H-851N6, H-852N6, H-855LN6, H-856LN6, H-871N6, H-872N6, H-873N6, H-875LN6, H-876LN6, H-877LN6.


(Continued on next page)

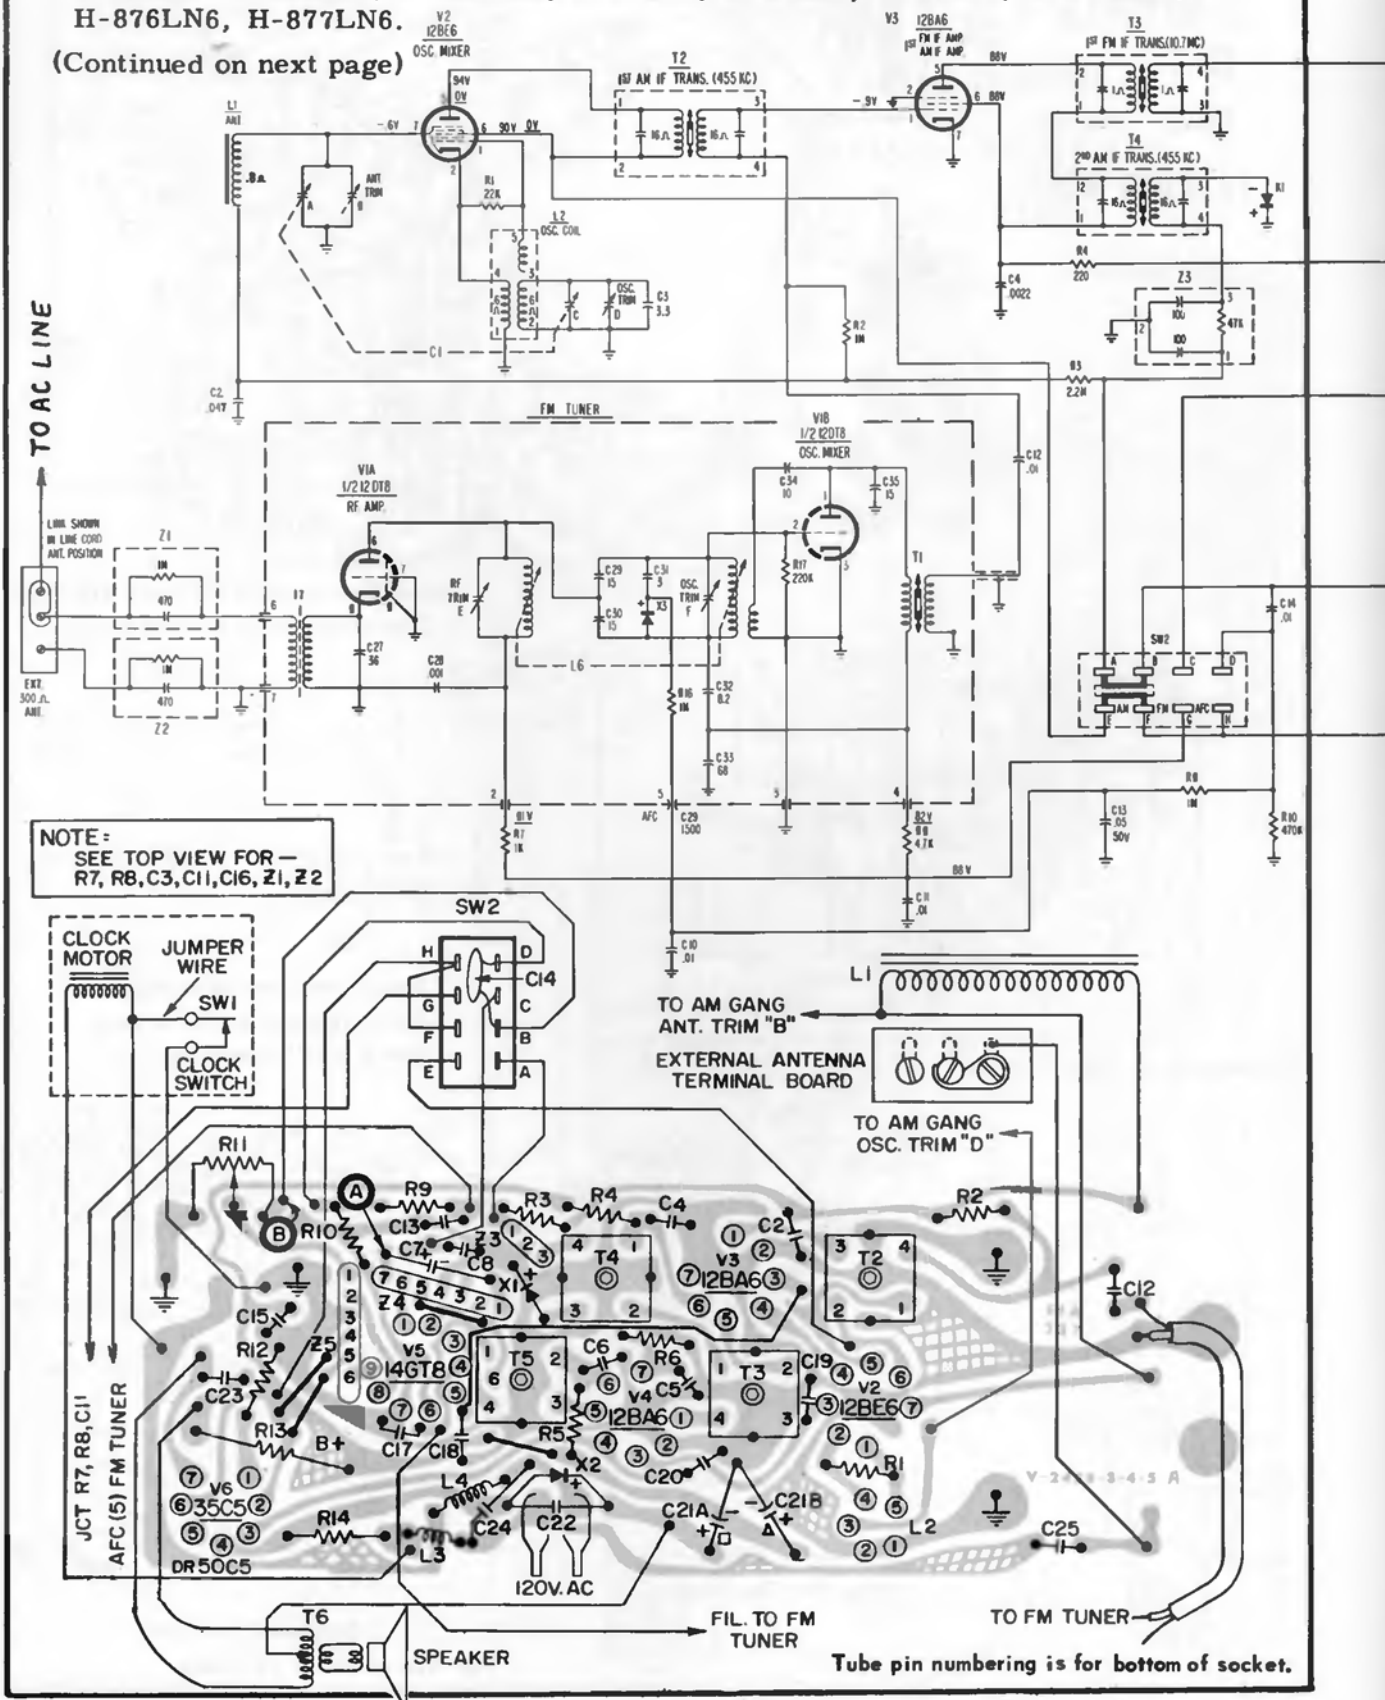

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION


WESTINGHOUSE Chassis V-2428-3 and -4, used in Models H-850N6, H-851N6, H-852N6, H-855LN6, H-856LN6, H-871N6, H-872N6, H-873N6, H-875LN6, H-876LN6, H-877LN6.

(Continued from preceding page, at right)

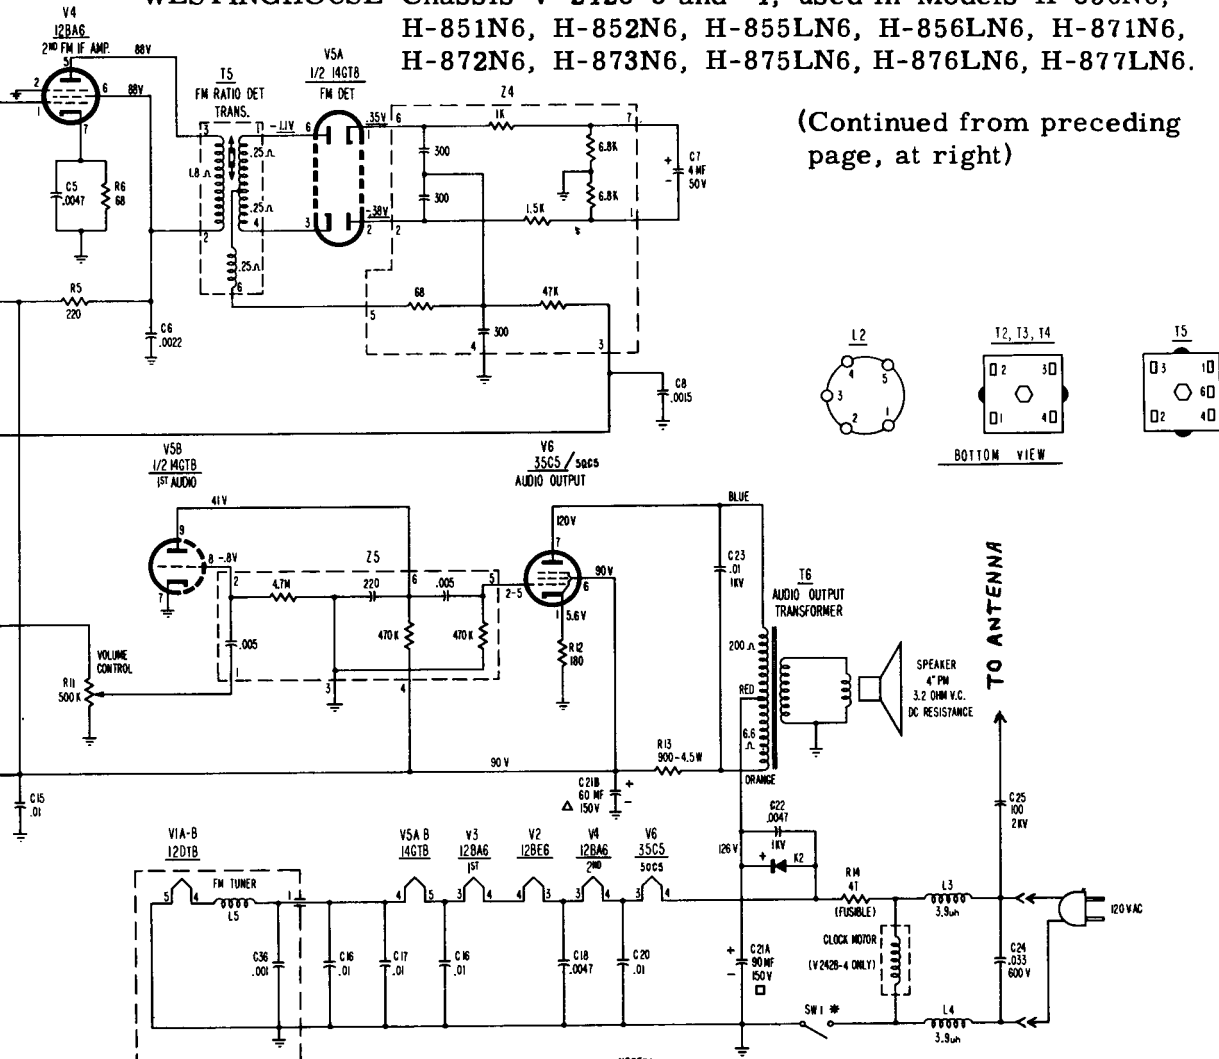

NOTES:



- ALL CAPACITANCE VALUES LESS THAN (10N) ARE IN NF AND VALUES GREATER THAN (10N) ARE IN PF (PICOFARAD). ALL RESISTANCE VALUES ARE IN OHMS 1/2 WATT UNLESS OTHERWISE INDICATED.
 - VOLTAGES TAKEN WITH A VTVM FROM POINTS INDICATED TO B-. TUNING CAPACITOR AT MAXIMUM, VOLUME CONTROL AT MINIMUM, LINE VOLTAGE AT 120V AC NO SIGNAL INPUT. SW2 IN FM POSITION.
- * SW1 IS PART OF VOLUME CONTROL CHASSIS V 2428-3
SW1 IS PART OF CLOCK CHASSIS V 2428-4

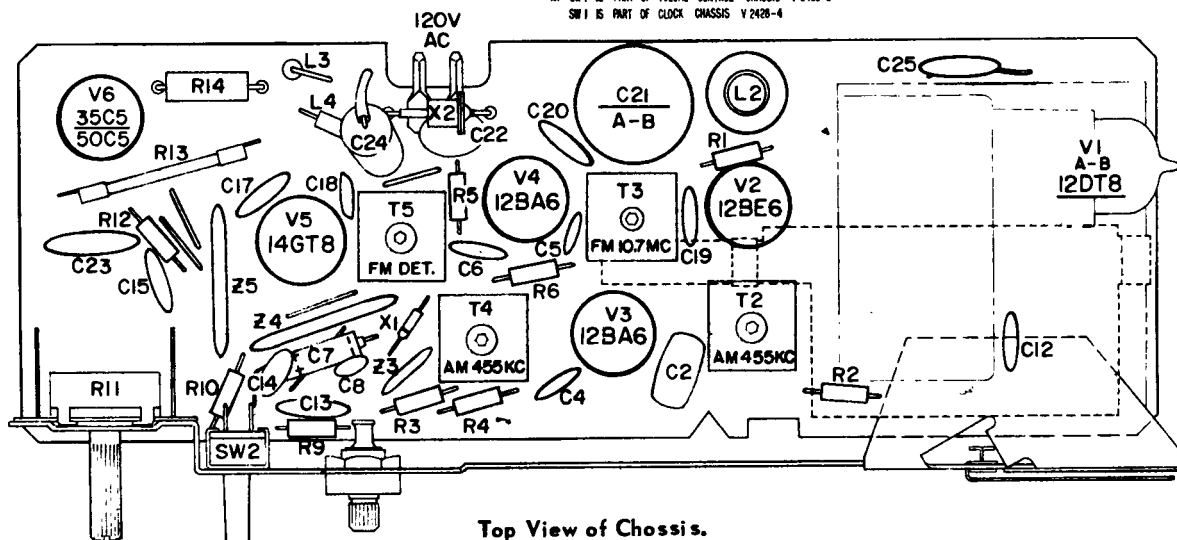

Top View of Chassis.


Westinghouse

CHASSIS V-2450-1
MODELS H-880T5, H-881T5

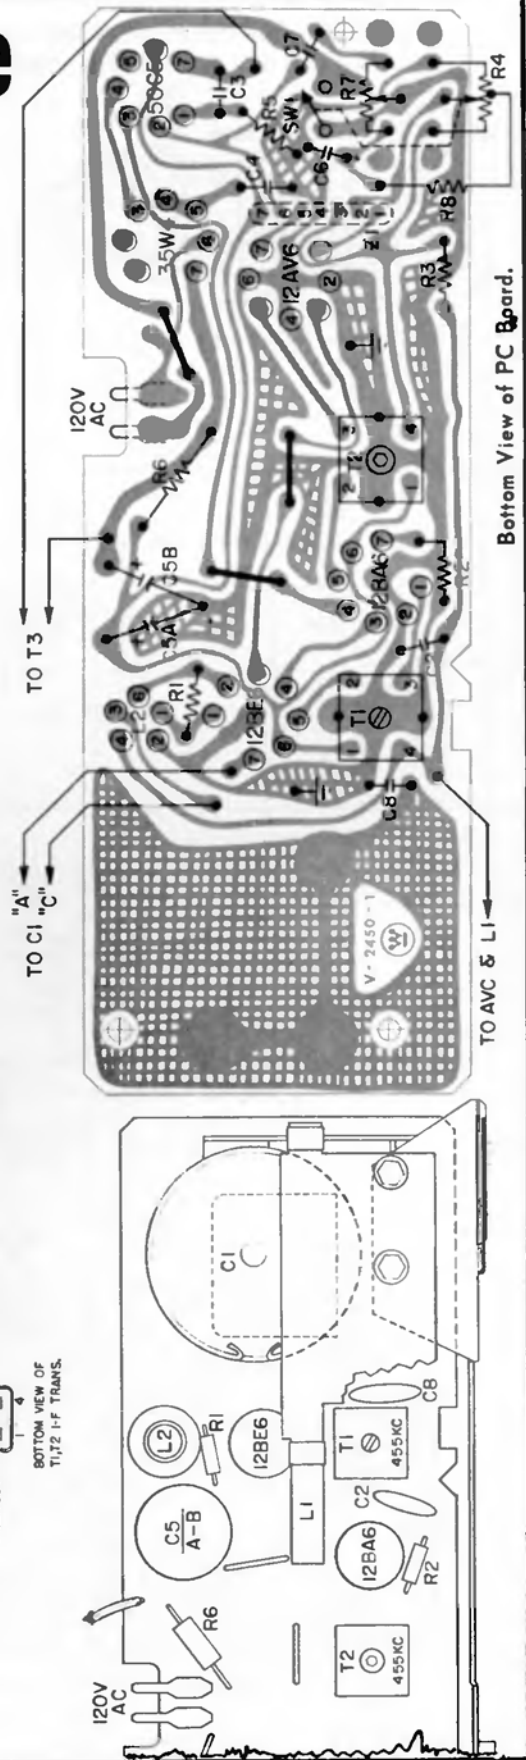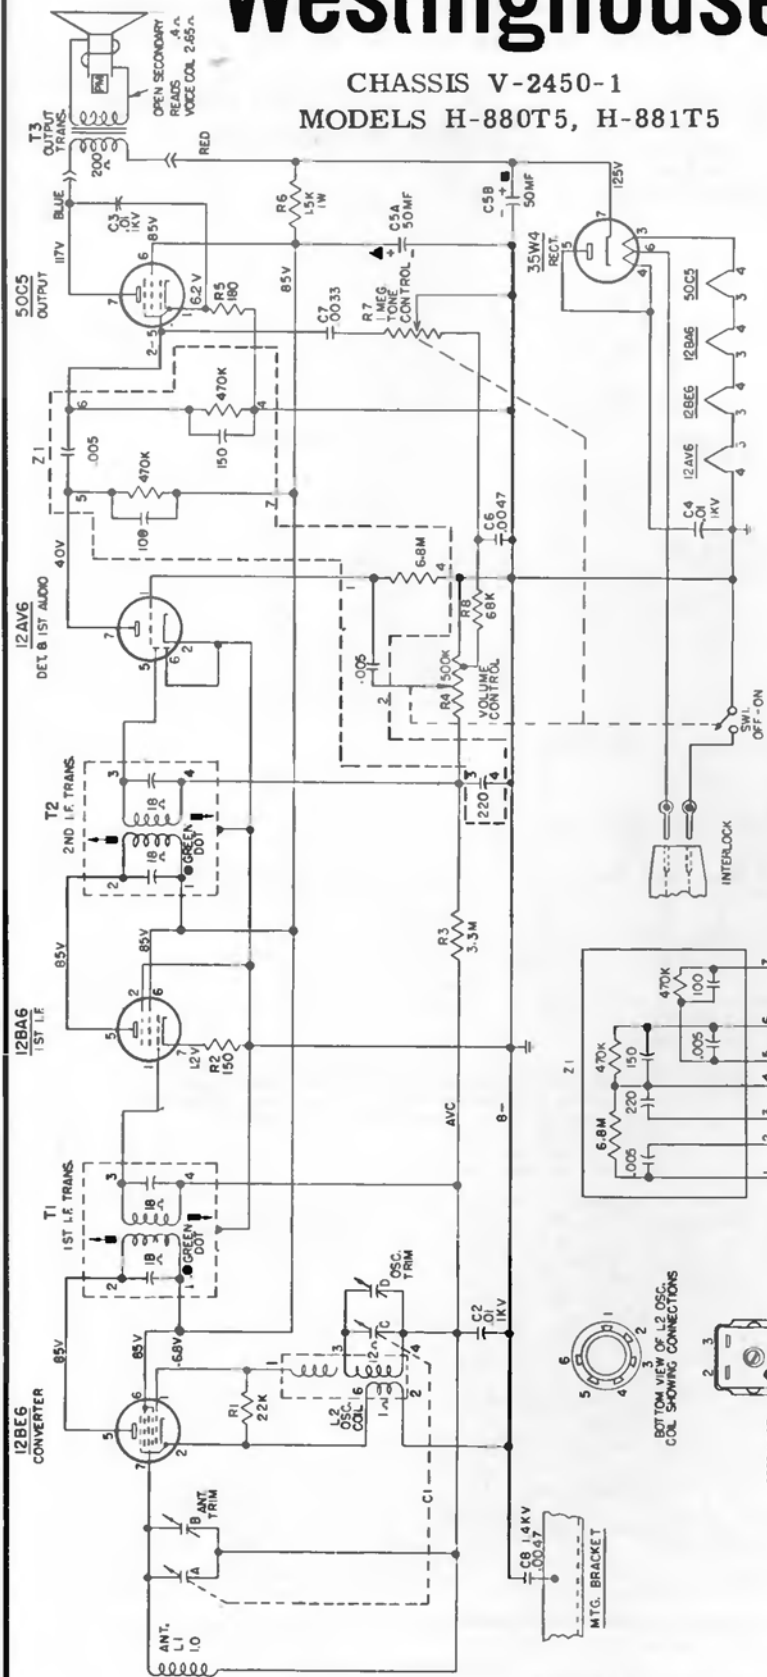


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2507-7, Model H-69ACS1A

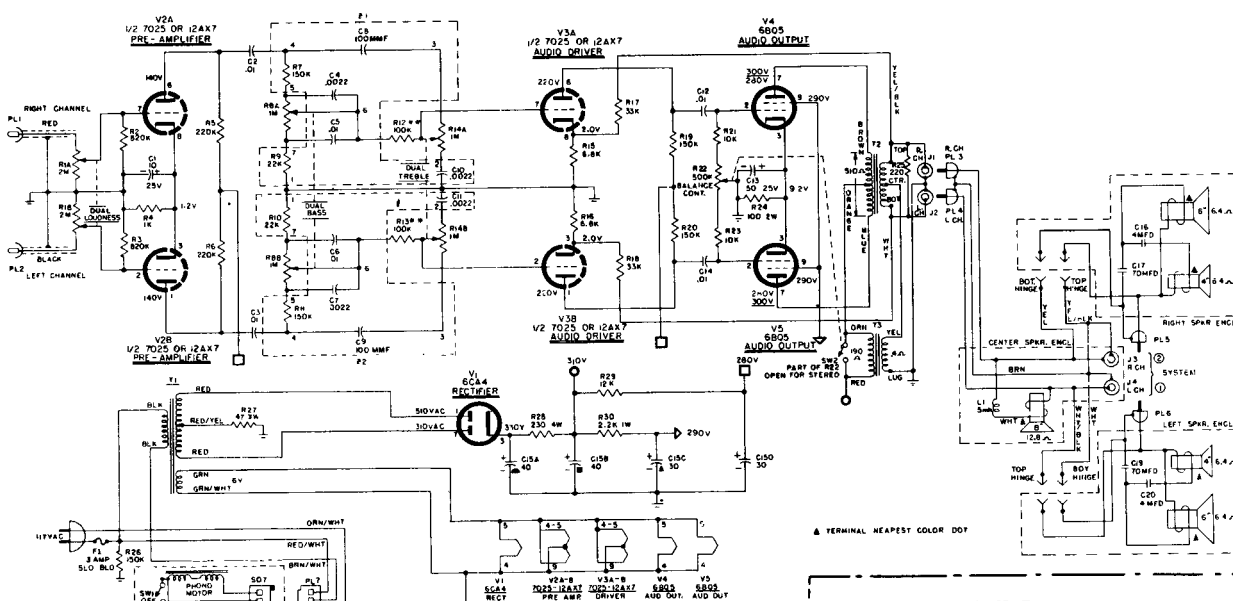


Models H-62MPS1A, H-62MPS2A, H-62MPS3A, Chassis V-2508-2

- NOTES:
1. ALL CAPACITANCE VALUES IN MFD AND ALL RESISTANCE VALUES IN OHMS UNLESS OTHERWISE STATED.
 2. ALL VOLTAGES MEASURED FROM B- USING A V.T.V.M. LINE VOLTAGE SET AT 117 VAC. READINGS SHOULD BE AS SHOWN ± 20%.
 3. CHASSIS GROUND COMMON B- *

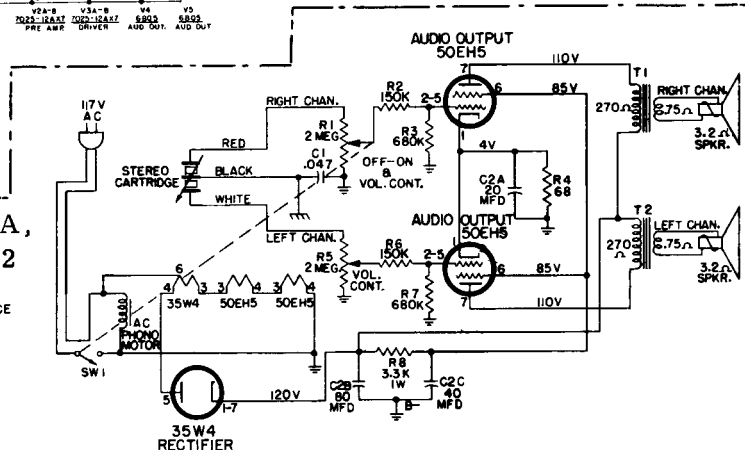


Chassis V-2508-5, Models H-75AC1A, H-75AC2A

Chassis V-2508-14, Models H-96AC1, H-96AC2

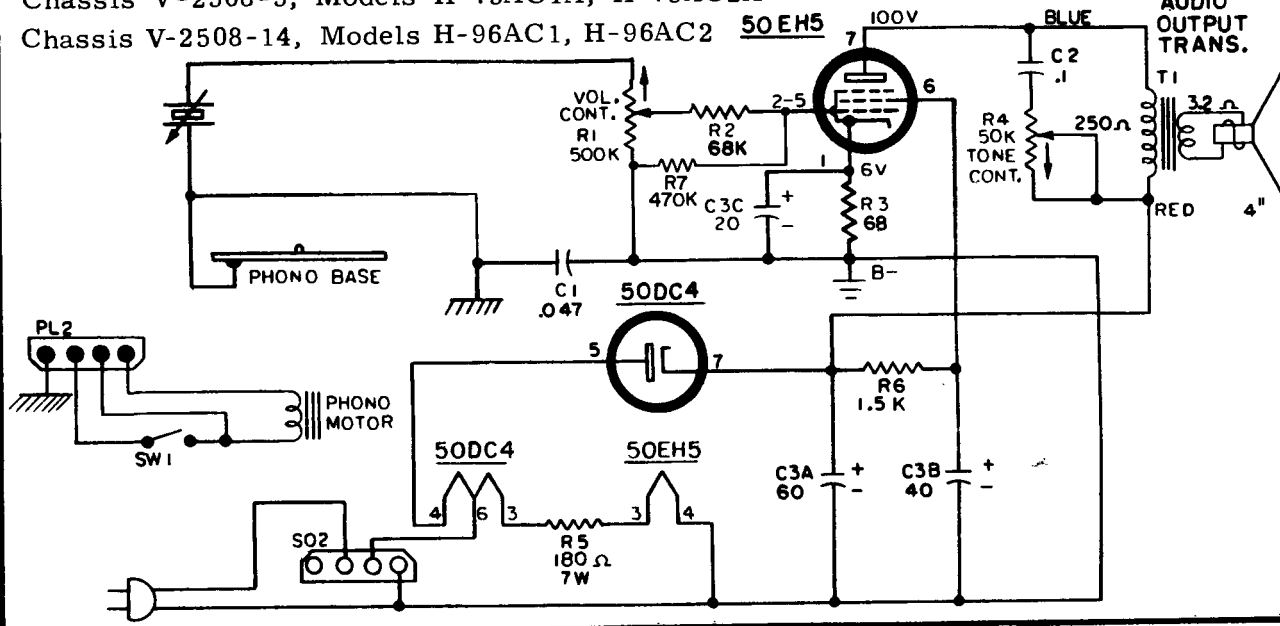

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2508-13, Models H-85MP1, H-85MP2, H-85MP3

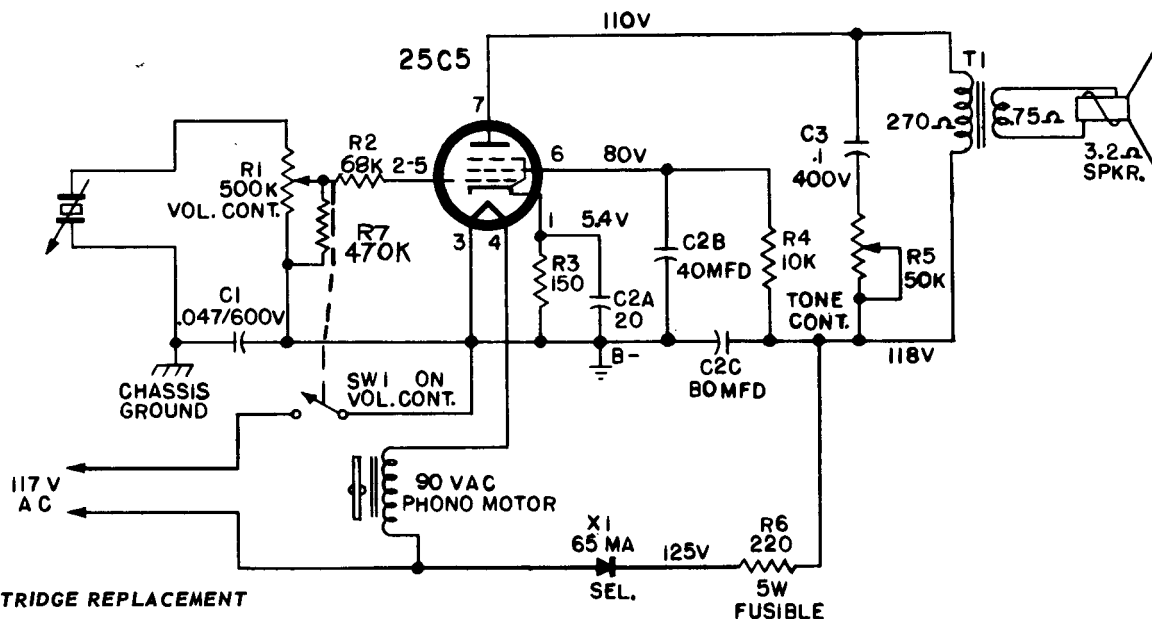

CARTRIDGE REPLACEMENT

1. Remove the knob retainer screw and turnover knob.
2. Pull the cartridge out from the tone arm. Remove the spring, washer, and push-on connectors.


CHASSIS REMOVAL

1. Remove two nylon-head screws from bottom of cabinet base.
2. Remove turntable.
3. Remove two screws located underneath turntable.
4. Snap the edge of the motorboard out of the retaining grooves in the cabinet. Lift motorboard out of cabinet.

CHASSIS REMOVAL

1. Remove the tube service cover.
2. Remove the speaker compartment cover on the left side of the cabinet.
3. Remove the screws holding the motorboard. Lift the motorboard out of the cabinet.
4. Disengage the amp-lok from the changer. Unsolder the leads to the changer terminal board and the leads to the speakers.
5. Remove the control panel screws and lift the control panel out of the cabinet. The chassis is attached to studs on the underside of this panel.

CHASSIS V-2508-11, MODEL H-87ACS1

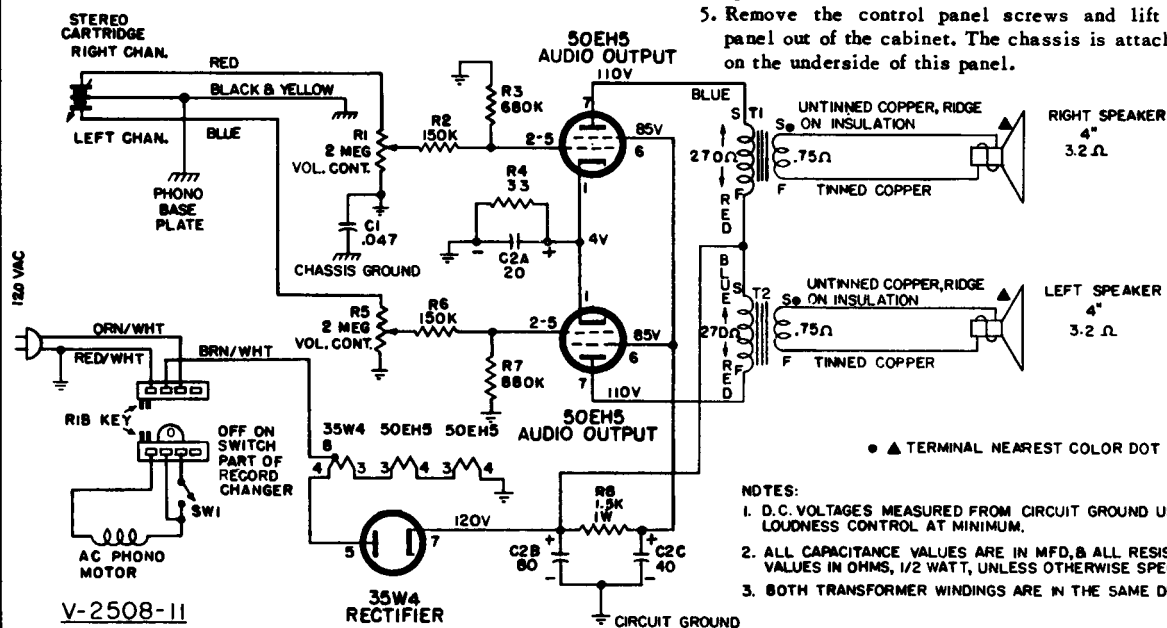


NOTES:

1. D.C. VOLTAGES MEASURED FROM CIRCUIT GROUND USING A VTVM, LOUDNESS CONTROL AT MINIMUM.
2. ALL CAPACITANCE VALUES ARE IN MFD, & ALL RESISTANCE VALUES IN OHMS, 1/2 WATT, UNLESS OTHERWISE SPECIFIED.
3. BOTH TRANSFORMER WINDINGS ARE IN THE SAME DIRECTION.

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2523-1, Model H-89ACS1

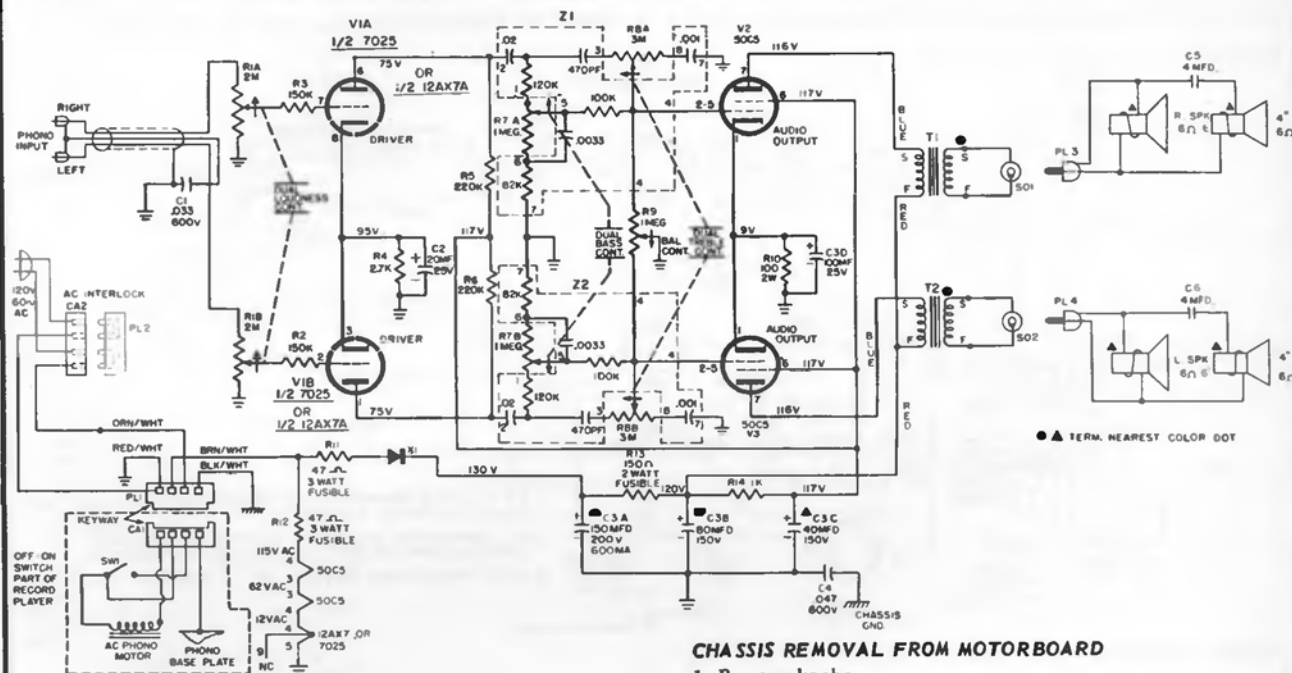


MOTORBOARD REMOVAL

1. Remove 4 rubber feet from bottom of case.
2. Lift entire motor board up and out of the case. Interlock plate screws must be removed before you can lift motor board. Be careful when pulling the motorboard out of the case. See that all components on the bottom of the board clear the case. In some instances it may be necessary to remove the tube service cover and pry the interlock out of its socket.
3. Unsolder the leads connected to phono output jacks. Note the colors and resolder the leads to the same terminals when they are replaced.

CHASSIS REMOVAL FROM MOTORBOARD


1. Remove knobs.
2. Remove 2 screws from control escutcheon.
3. Remove 2 screws from board underneath the control escutcheon.
4. Remove 2 screws located underneath the wooden escutcheon. These are accessible through holes in the escutcheon.
5. Disconnect the amplok and phono plug from the changer.
6. Remove one screw holding power supply section of chassis to motorboard.
7. Remove all chicken bands and tape from wires.
8. Remove the screw holding the line cord, located inside the plastic cup.

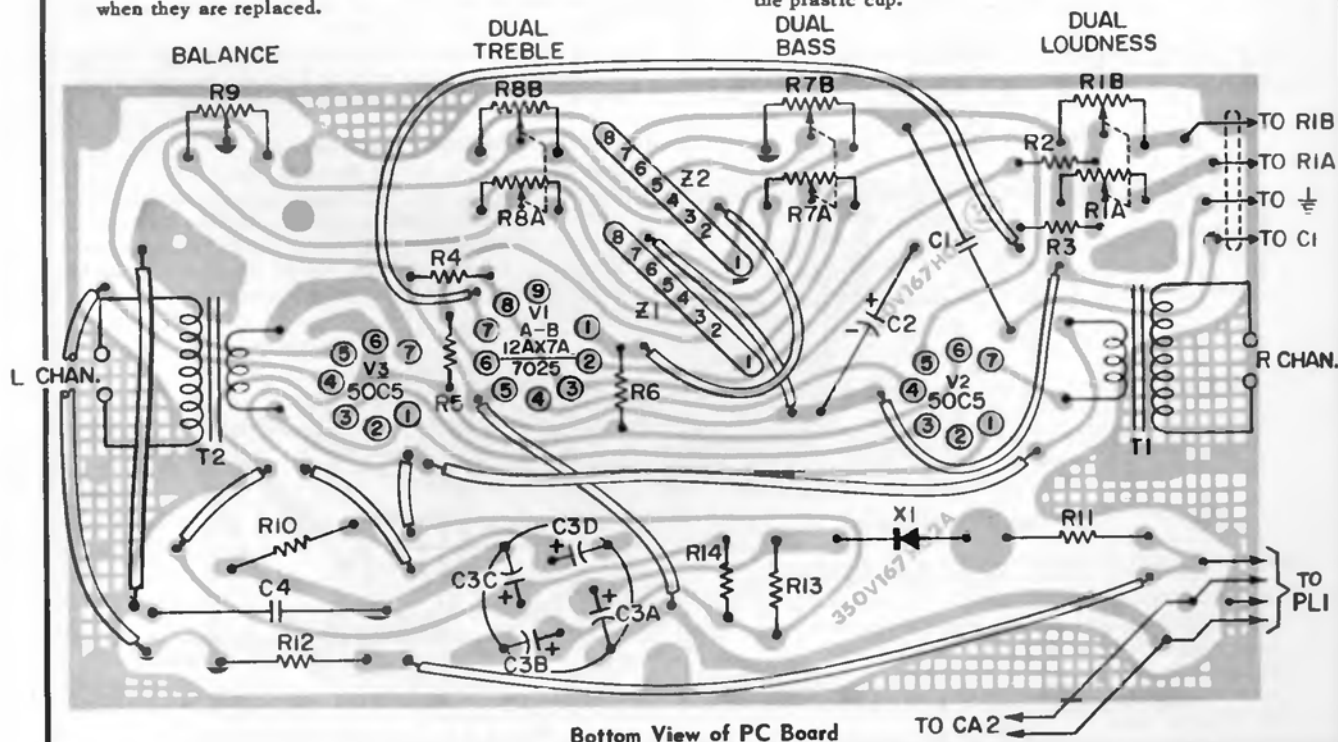

Bottom View of PC Board

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2527-2, Models H-86ACS1A, H-86ACS2A,
Also applicable to Chassis V-2527-1 used in same models and H-86ACS3.

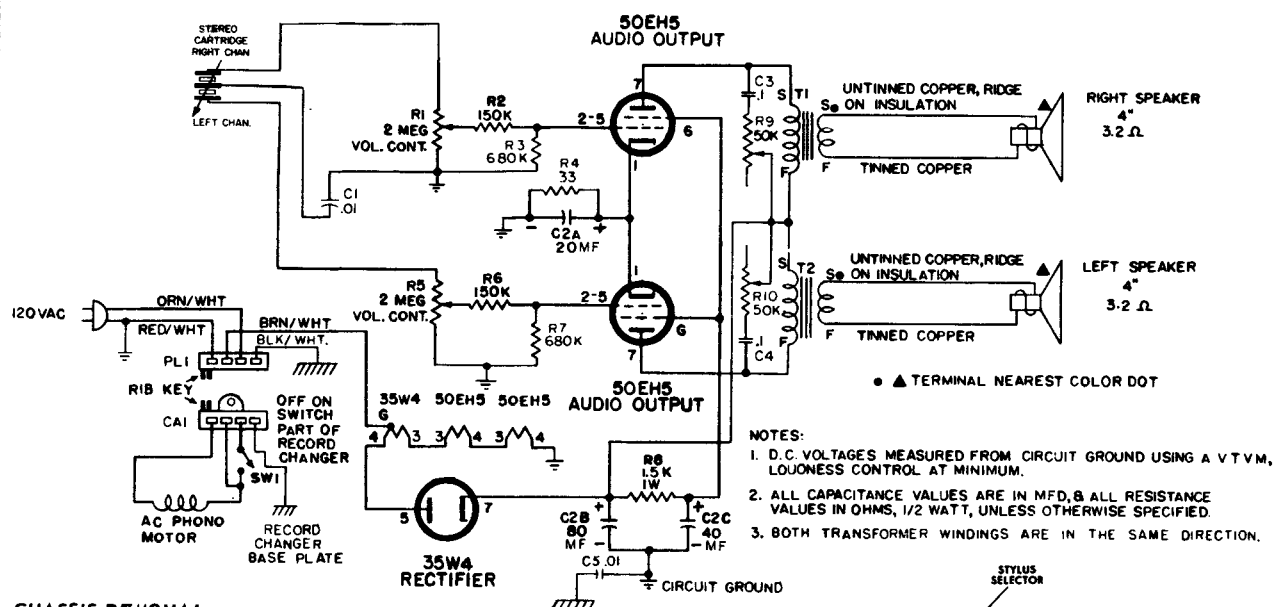

CHASSIS REMOVAL

1. Remove the perforated tube service cover, attached by one phillips screw.
2. Remove 4 phillips screws holding the motor-board. Lift the motor-board out of the cabinet.
3. Disengage the amp-lok and unsolder the three input leads to the amplifier. Unsolder the leads connected to the output transformers.
4. Remove the 3 knobs.
5. Remove the 4 speed nuts holding the chassis to the cabinet side. Remove the chassis from the cabinet.

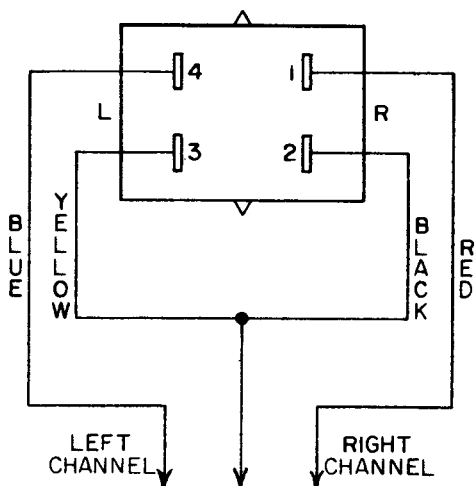


Figure 1 - Cartridge Wiring Diagram

CARTRIDGE REPLACEMENT (CHASSIS V-2527-2)

1. Observe the sequence of wires, as shown in Figure 1. Remove the push-on connectors from the terminals.
2. Remove the screw from the stylus selector knob.
3. Remove the cartridge, pulling it away from the cartridge holder. CAUTION: A spring and 2 washers are located on the mounting shaft.

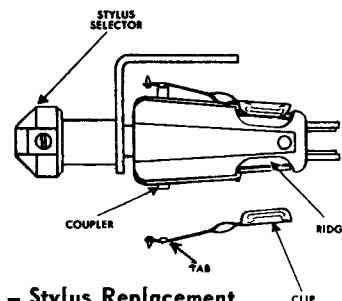


Figure 2 - Stylus Replacement

4. Slide the new cartridge into the cartridge holder with the stylus marked SA-250 facing in the same direction as the side of the stylus marking 33-45.
5. Apply slight pressure to the rear of the cartridge to align the holes in the stylus selector knob and mounting shaft. Replace the screw in the stylus selector knob.

STYLUS REPLACEMENT (see Figure 2)

1. Pull the stylus clip off the cartridge ridge.
2. Push the clip of the replacement stylus onto the ridge.
3. Lift the front part of the stylus a small amount so that it is not pressing against the coupler — then let it fall back and engage the coupler. The tabs on the stylus should be centered, with one on each side of the projecting end of the coupler.


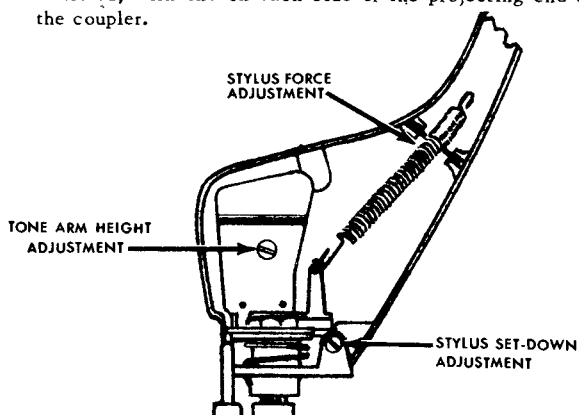


Figure 3 - Tone Arm Adjustments


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2522-1, -2, Models H-79ACS1B, H-79ACS2B, H-88ACS1
Chassis V-2522-3, Models H-90ACS1, H-90ACS2, H-90ACS3,
are similar to sets listed.

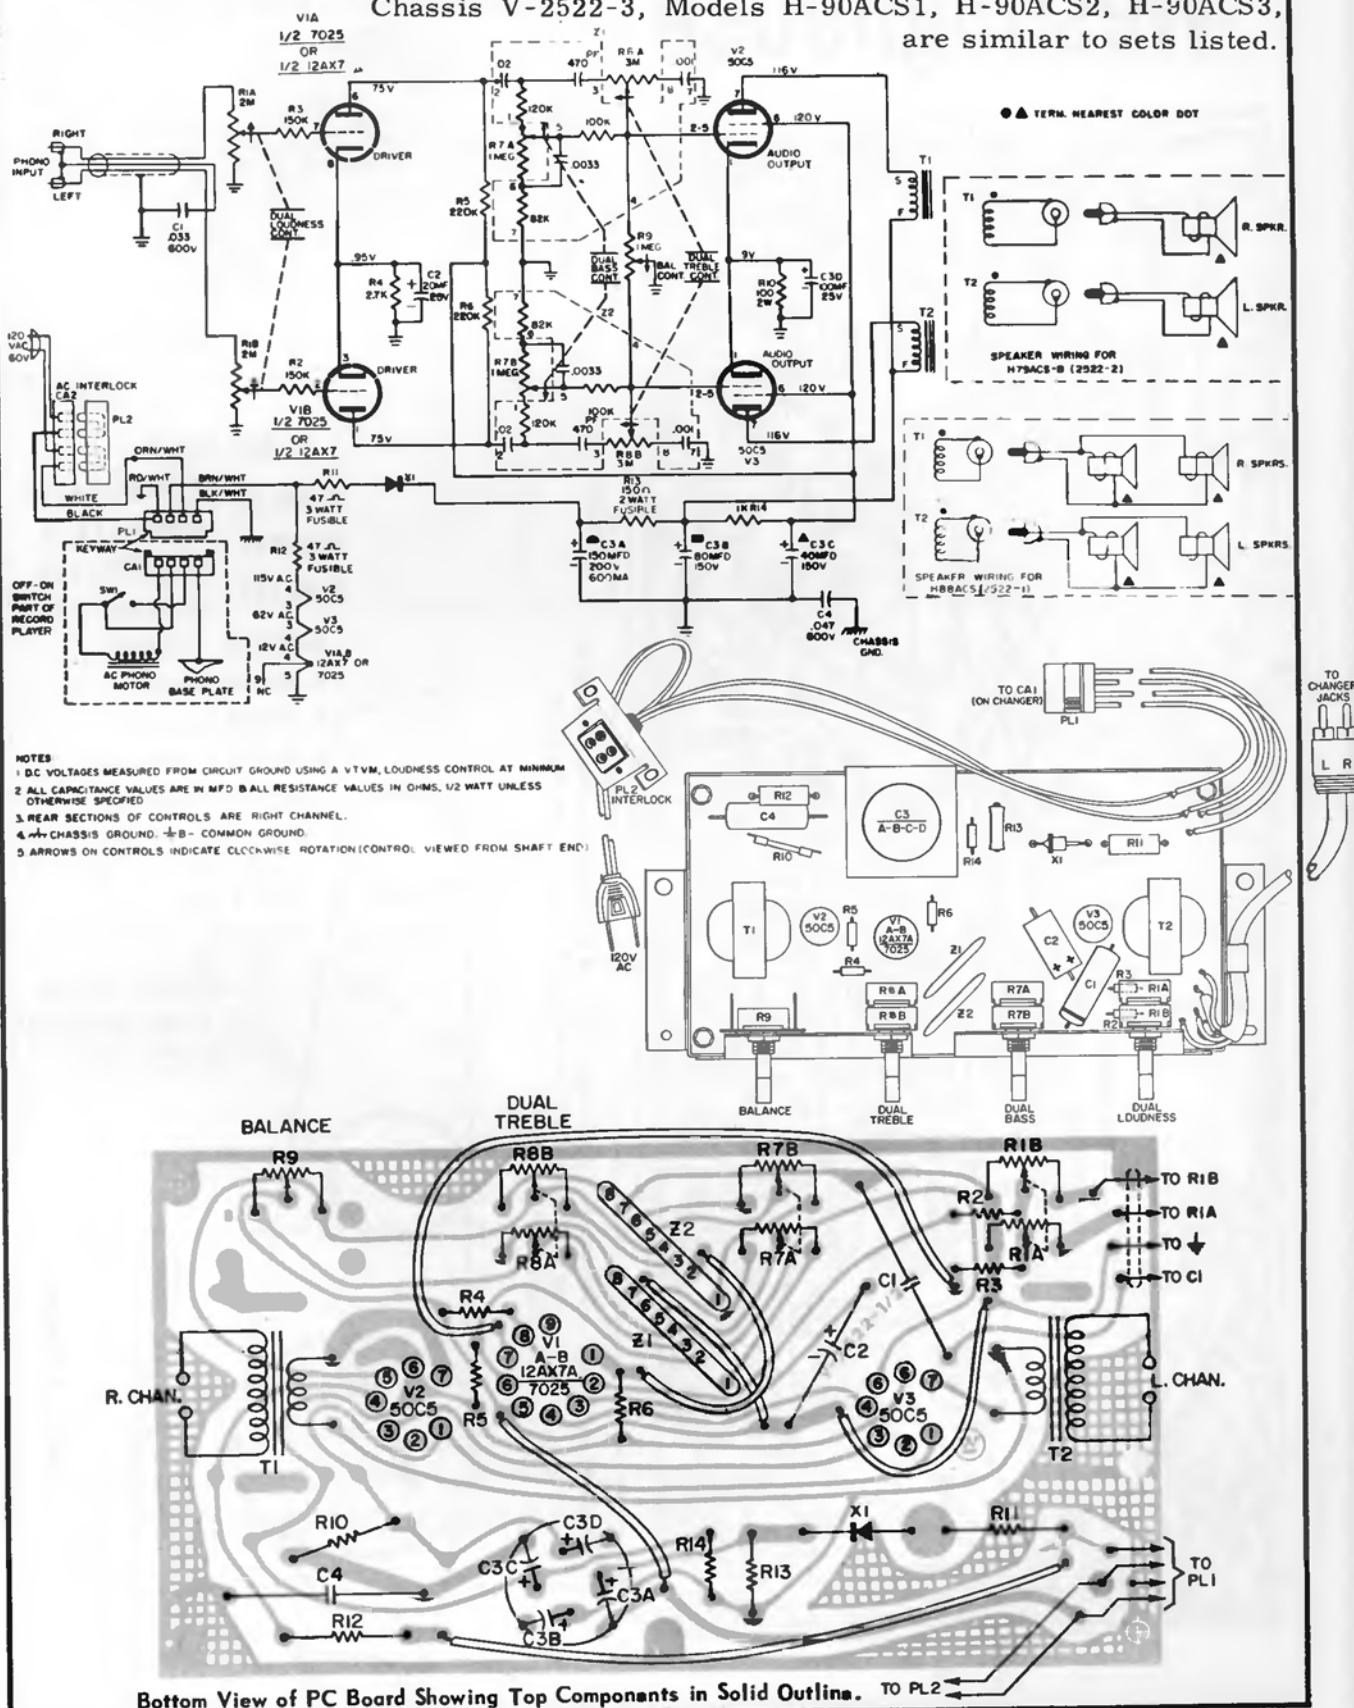


Westinghouse

(Continued on page at right)

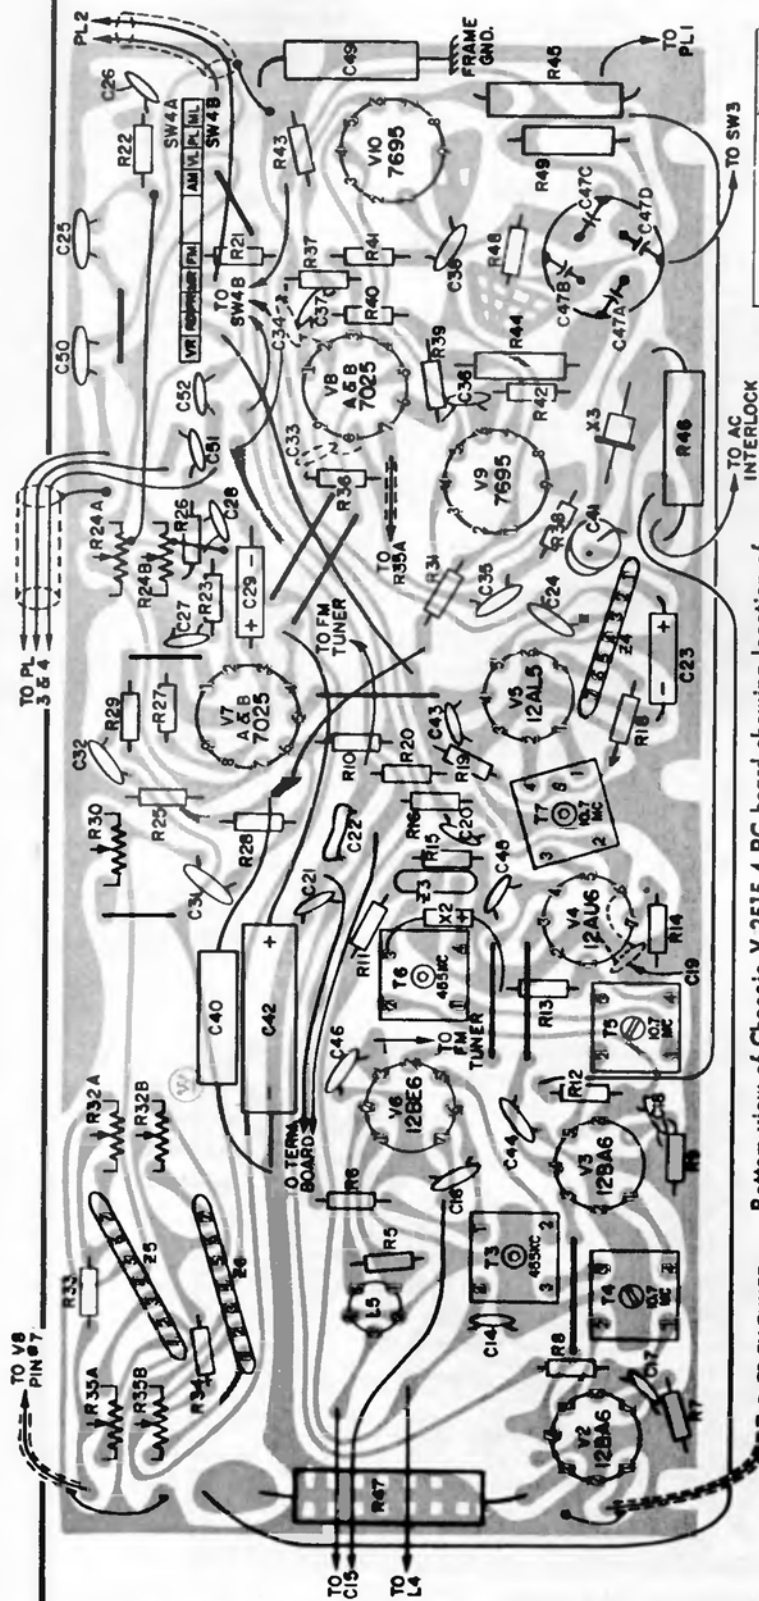

Bottom view of Chassis V-2515-4 PC board showing location of top components in solid outline. Tube pin numbering is for bottom of socket.

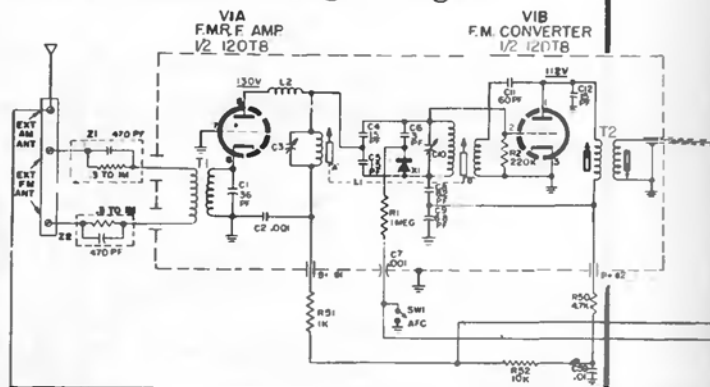


MODELS

- | | |
|---------|-------------|
| H-M1790 | H-M1810/A/B |
| H-M1791 | H-M1811/A/B |
| H-M1793 | H-M1813/A/B |
| | H-M1815/A/B |
| H-M1910 | (walnut) |
| H-M1911 | (cherry) |
| H-M1913 | (maple) |
| H-M1914 | (butternut) |

CHASSIS V-2515-4

and similar Models
H-M1760, H-M1761,
H-M1763, using
Chassis V-2515-8.

(Continued on the
next page adjacent
at right)

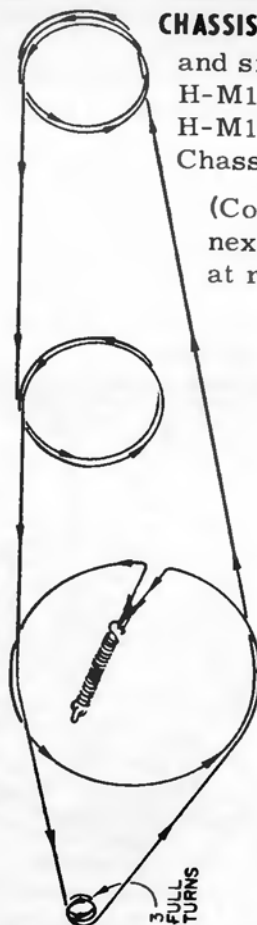


Diol Cord Stringing

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2515-4, Models H-M1810/A/B, H-M1811/A/B, H-M1813/A/B, H-M1815/A/B, H-M1910, H-M1911, H-M1913, and H-M1914, and others models,

continued from preceding page.

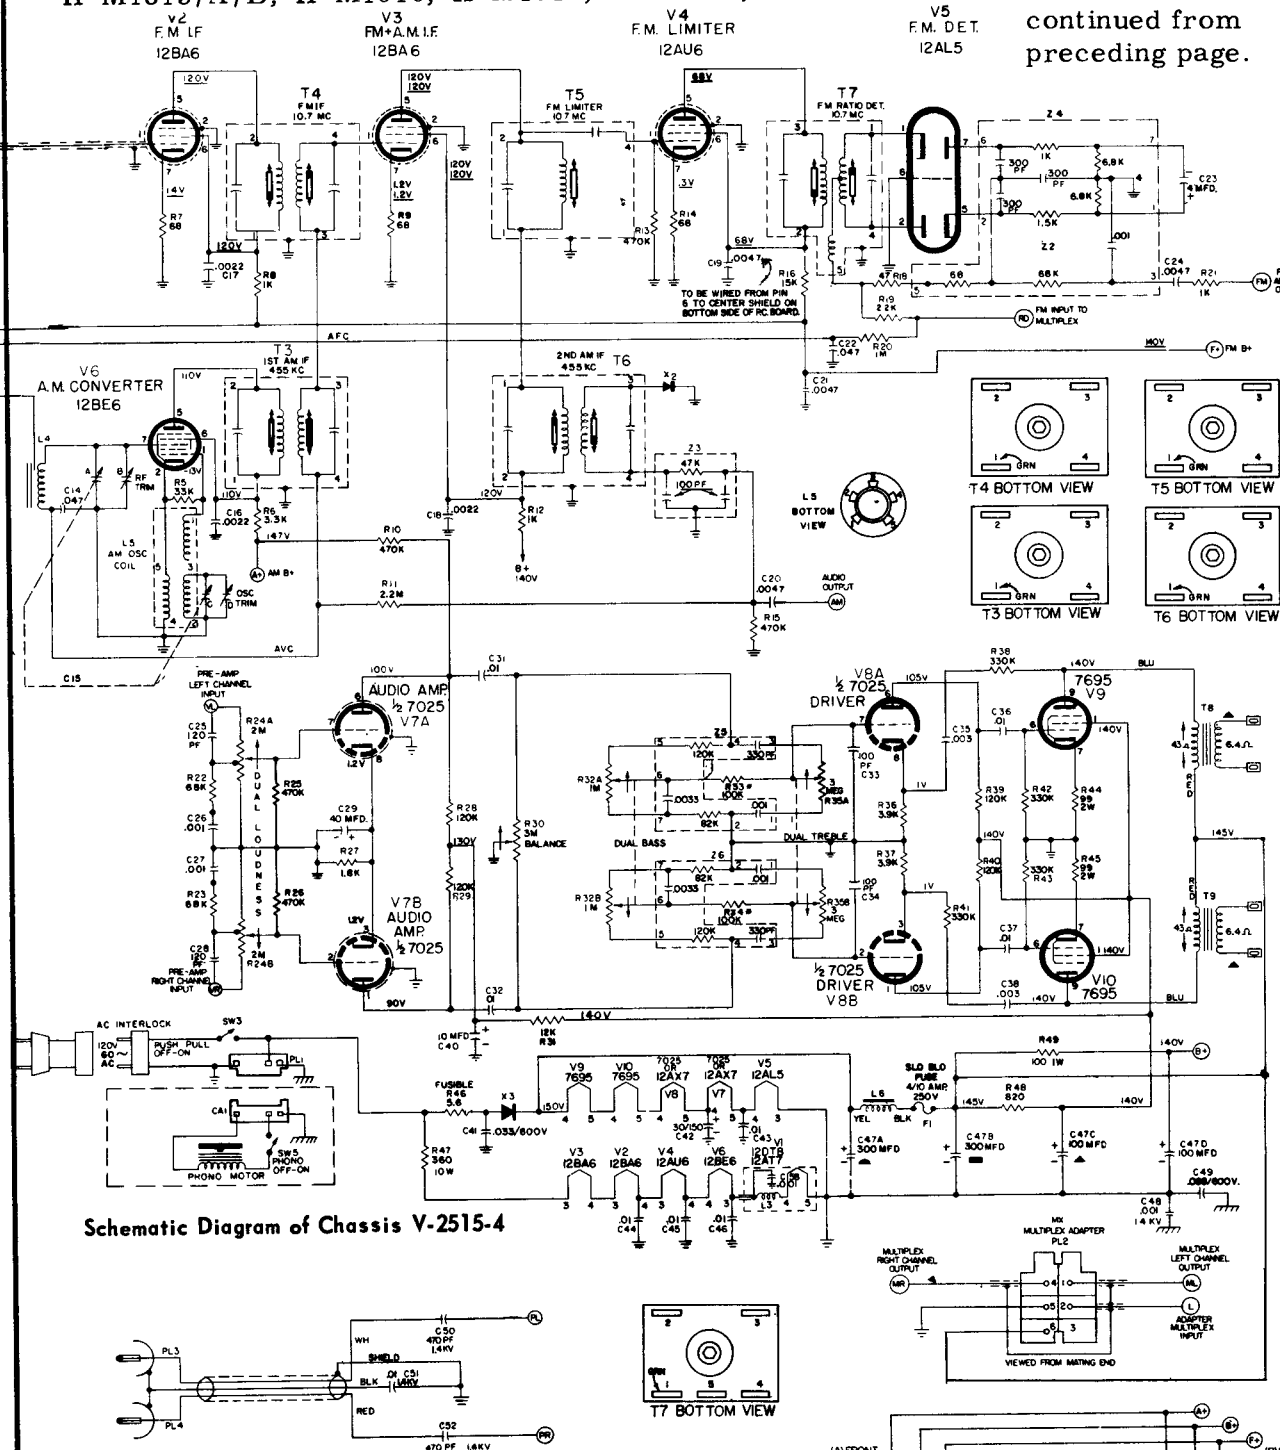


Schematic Diagram of Chassis V-2515-4


1. ALL CAPACITANCE VALUES IN MFD. AND ALL RESISTANCE VALUES IN OHMS, $\frac{1}{2}$ WATT, UNLESS OTHERWISE SPECIFIED.
2. D.C. VOLTAGES MEASURED FROM POINTS INDICATED TO CIRCUIT GROUND, NO SIGNAL APPLIED, USING A V.T.V.M., LINE VOLTAGE SET AT 120 VAC. LOUDNESS AT MIN. TUNING CAP. AT MAX.
3. * R33 & R34 NOT INCLUDED IN PACKAGE CIRCUITS Z5 & Z6.
4. UNDERLINED VOLTAGES ARE TAKEN IN FM POSITION.
5. ALL REFERENCES TO LEFT & RIGHT ARE AS VIEWED FACING FRONT OF SET
6. SW4A, B IS SHOWN IN THE CCW POSITION, (AM POSITION)
7. REAR SECTIONS OF CONTROLS (FARTHEST FROM SHAFTS) ARE RIGHT CHANNEL.
8. ARROWS ON CONTROLS INDICATE CW ROTATION (CONTROL VIEWED FROM SHAFT END)

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

ZENITH Model Royal 130, Chassis 6KT47Z1

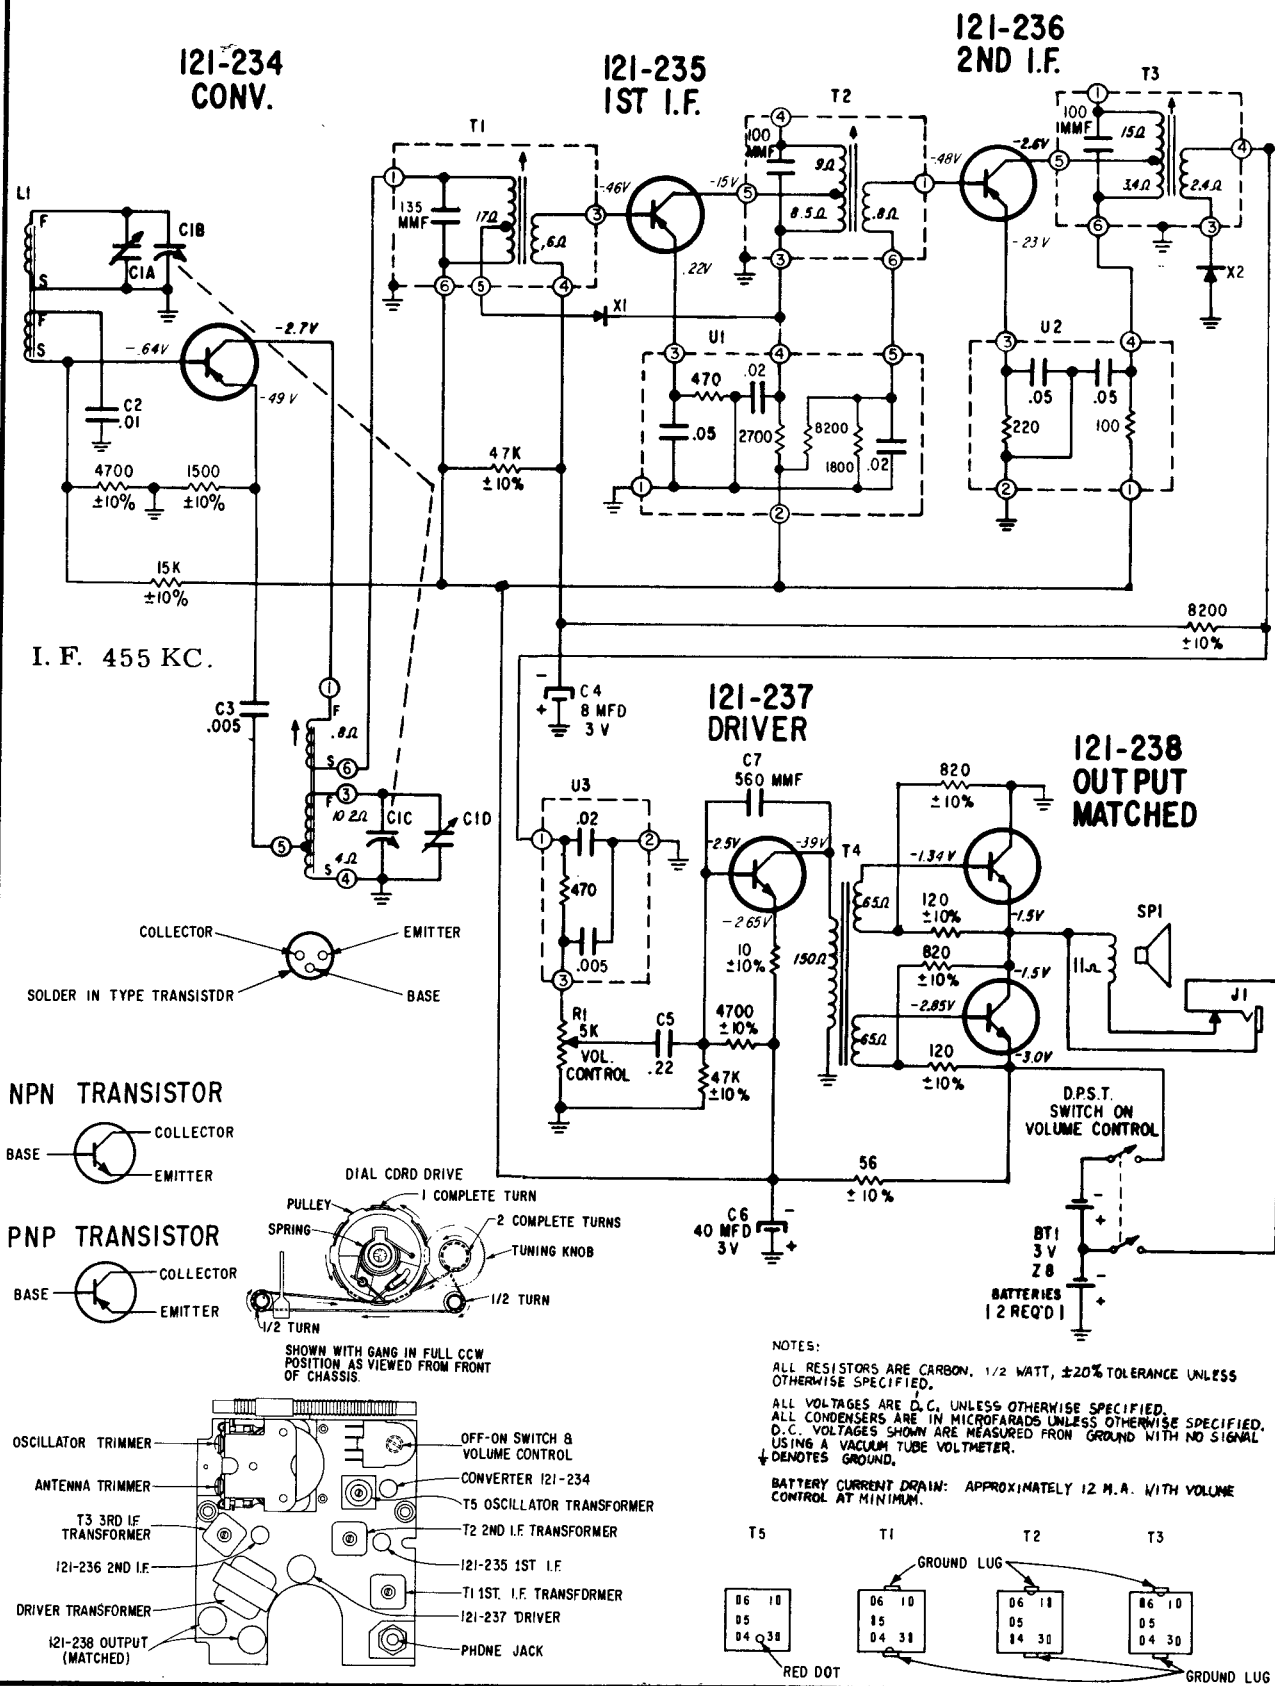


ZENITH RADIO MODELS L519C, F, G, W CHASSIS 5L07

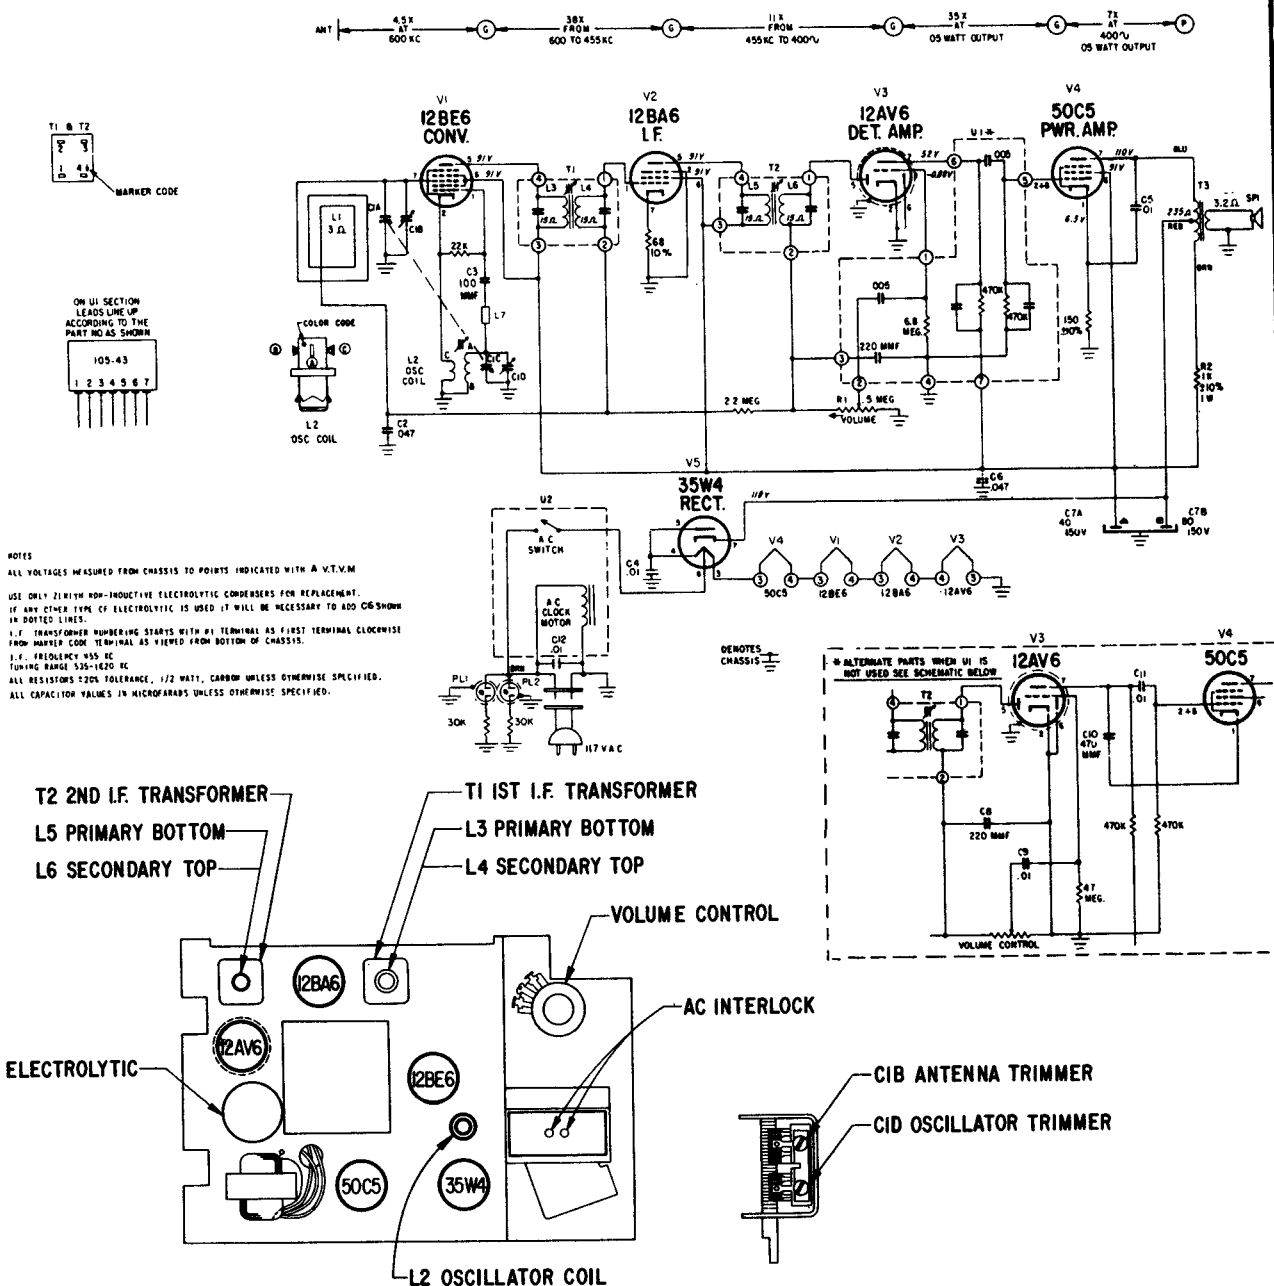

ALIGNMENT PROCEDURE

Operation	Connect Oscillator To	Dummy Antenna	Input Sig. Frequency	Set Dial At	Trimmers	Purpose
1	Converter Grid	.5 Mfd.	455 Kc.	600 Kc.	L3,L4,L5, L6	For I.F. Alignment.
2	One Turn Loop Coupled Loosely to Wave Magnet	—	1600 Kc.	1600 Kc.	C1D	Set Oscillator to Dial Scale
3		—	1400 Kc.	1400 Kc.	C1B	Align Antenna Stage

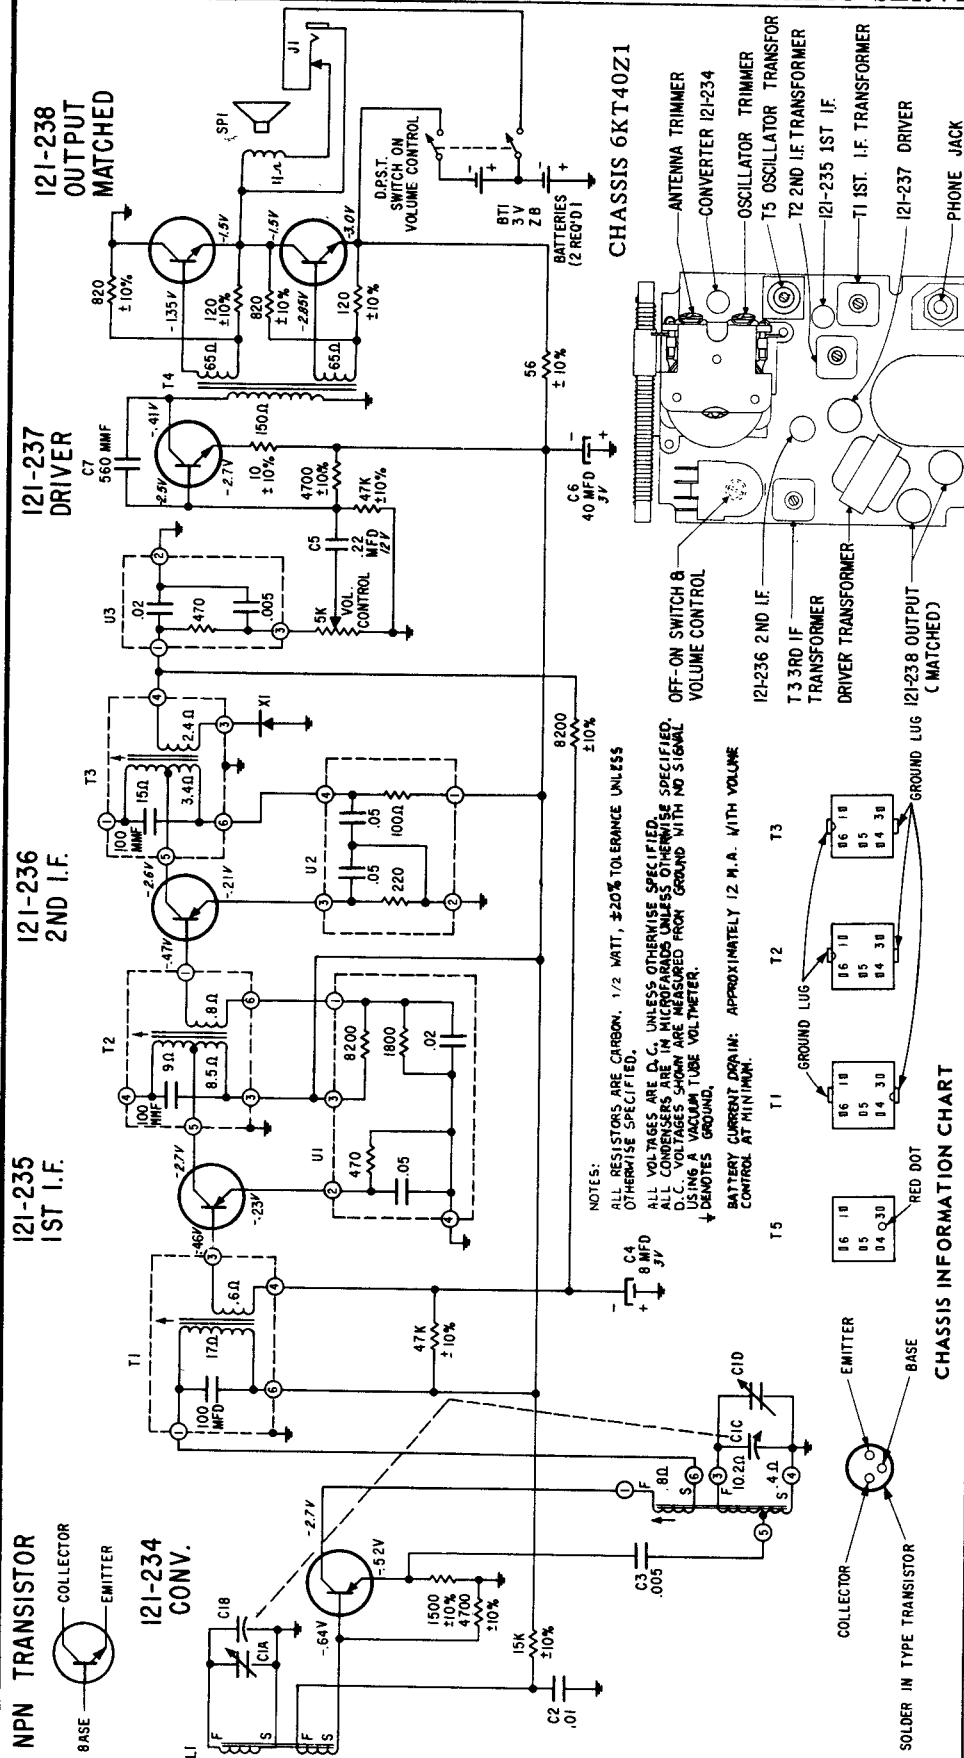


CHASSIS INFORMATION CHART

Chassis	Transistor Layout Label Color	Part No.	Conv.	1st I.F.	2nd I.F.	Crystal Diode Detector	Driver	Output-Output	Supplier
6KT40Z1	Black 102-9403	Zenith E1A Type	121-234 GC282 PNP	121-235 GC283 PNP	121-236 GC284 PNP	103-44 IN191	121-237 GC286 NPN	121-238 GC285 Matched Pair NPN NPN	Texas Instrument
6KT40Z8	Red 102-9419	Zenith E1A Type	121-244 2N993 PNP	121-242 2N993 PNP	121-243 2N993 PNP	103-44 IN191	121-245 C-1438 PNP	121-246 C-1437 Matched Pair PNP PNP	AMPEREX


ZENITH Model Royal 50L
using Chassis 6KT40Z1

(For alignment information see data on next page, at right)

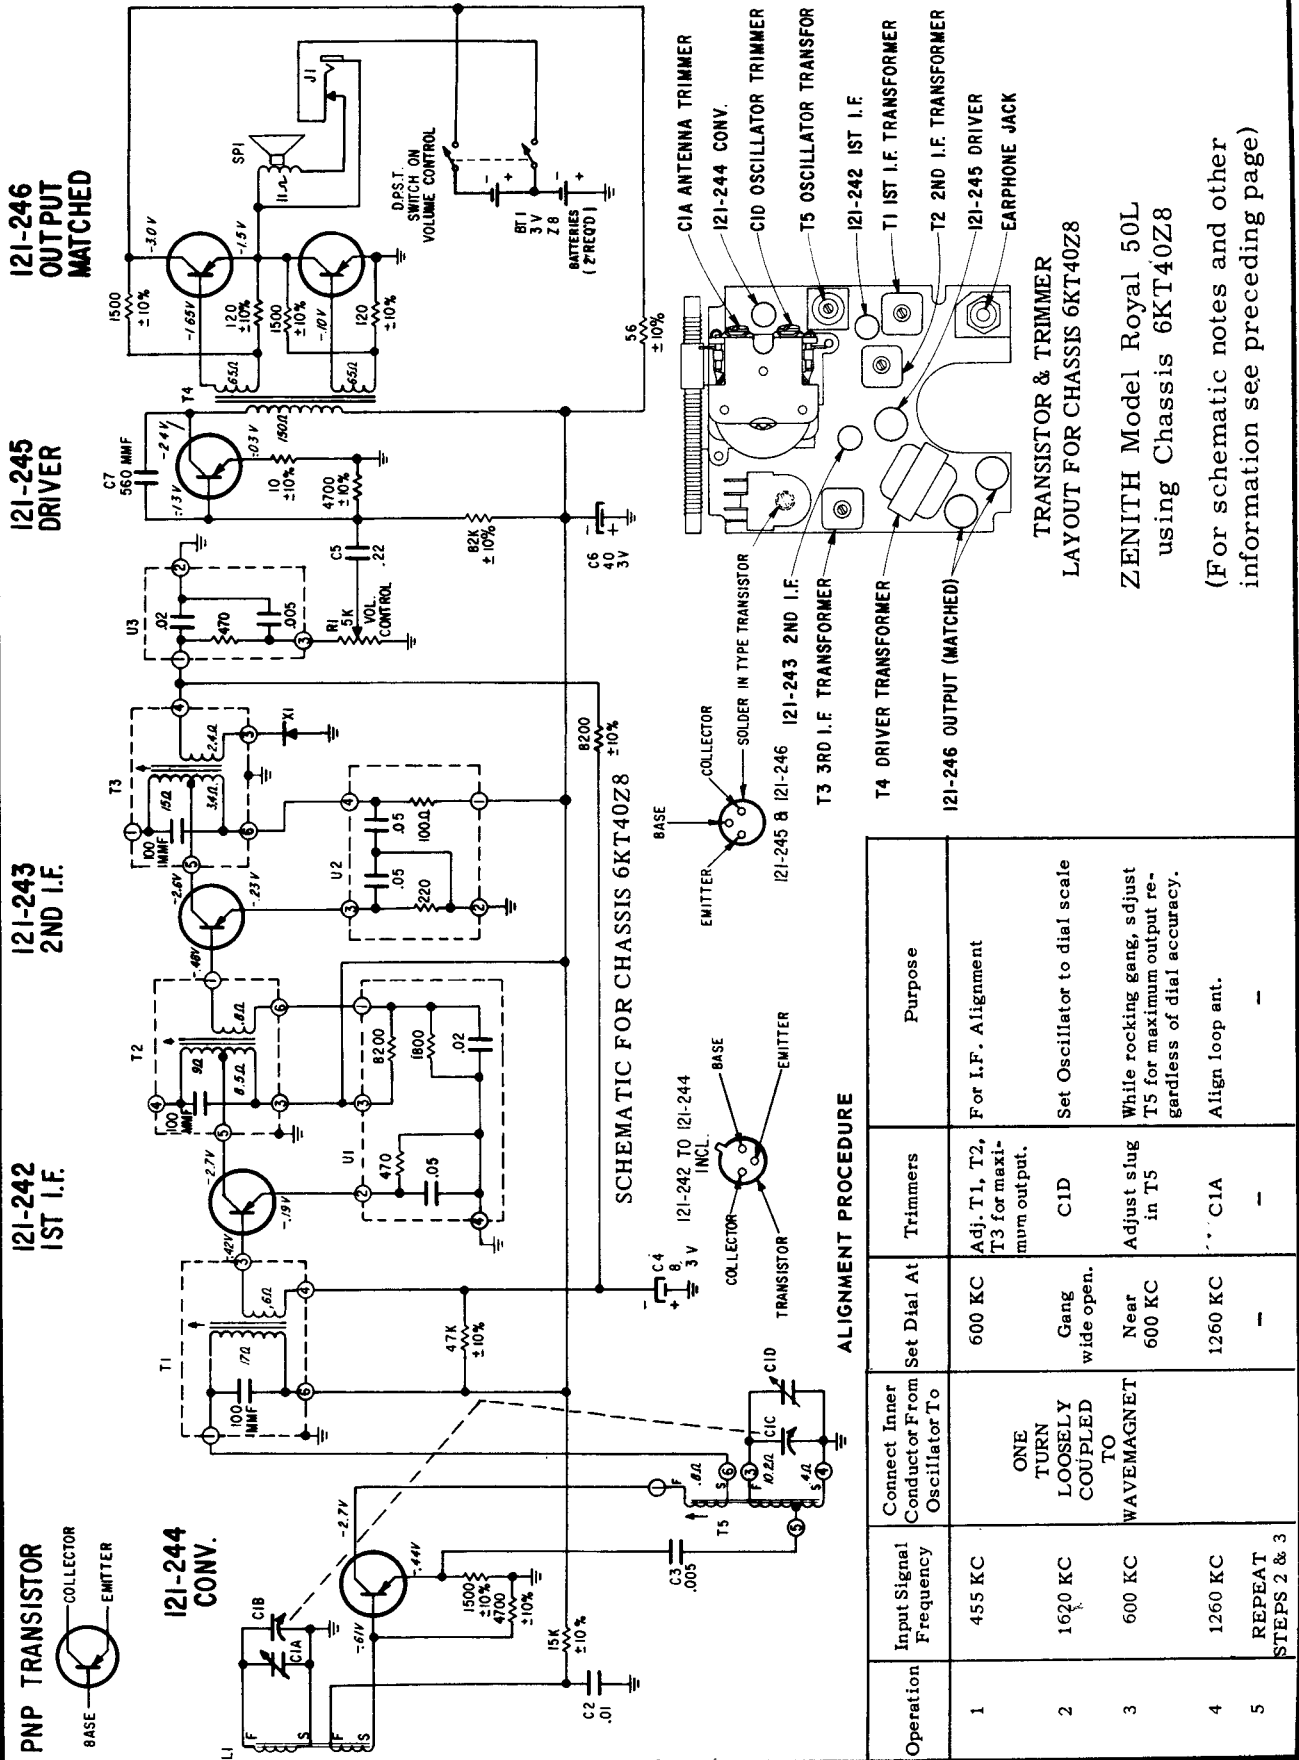

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

ZENITH Models 265, 645, 670, Chassis 6KT41Z1, 6KT42Z1, 6KT45Z1

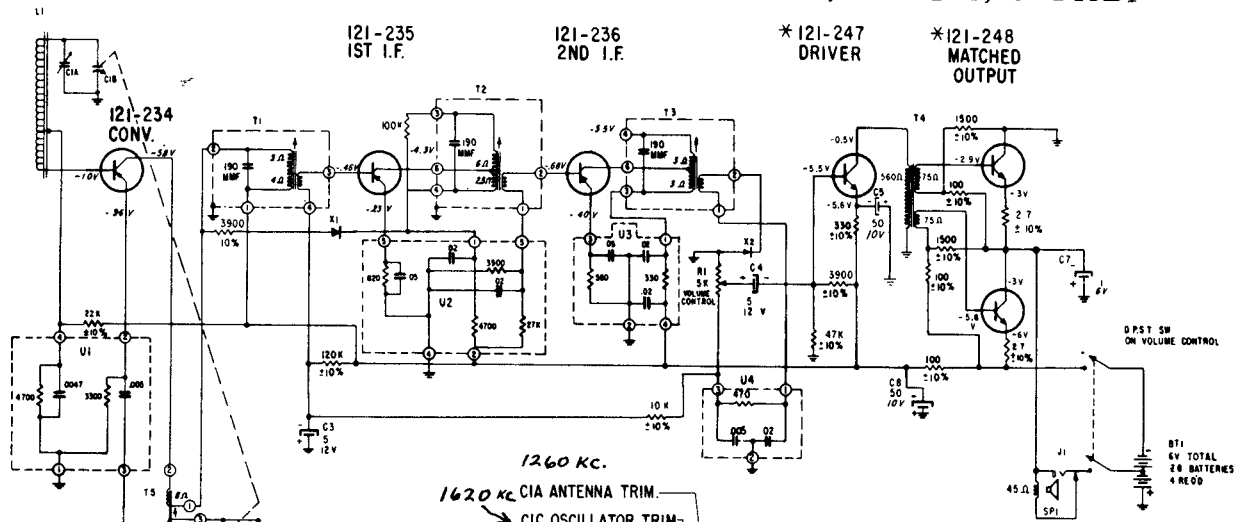

SCHEMATIC FOR CHASSIS 6KT42Z1

NOTES:
ALL RESISTORS ARE CARBON, 1/2 WATT, ±20% TOLERANCE UNLESS OTHERWISE SPECIFIED.
ALL VOLTAGES ARE D.C. UNLESS OTHERWISE SPECIFIED.
ALL CAPACITORS ARE IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
D.C. VOLTAGES SHOWN ARE MEASURED FROM CHASSIS WITH NO SIGNAL USING A VACUUM TUBE VOLTMETER

DEMOTES CHASSIS

BATTERY CURRENT DRAIN APPROX. 6.5 MA WITH VOLUME CONTROL AT MINIMUM.


*SPEAKER IMPEDANCE 22Ω AT 400 CPS

TS	COLOR CODE
D 4	4 10
D 5	0 5
D 6	0 4
D 7	0 3

DRIVER	MATCHED OUTPUT
121-247	121-248
VIOLET	BLACK
BLACK	VIOLET
WHITE	BLUE

*THE MATCHING IDENTIFICATION WILL BE A COLORED DOT.
THE MATCHING OF TRANSISTORS WILL BE AS INDICATED IN THE ABOVE CHART

PNP TRANSISTORS




NPN TRANSISTOR

TRANSISTOR & TRIMMER LAYOUT FOR CHASSIS 6KT45Z1 & 6KT41Z1

121-235 1ST I.F.
121-236 2ND I.F.

TRANSISTOR & TRIMMER LAYOUT FOR CHASSIS 6KT42Z1

*121-247 DRIVER
*121-248 MATCHED OUTPUT

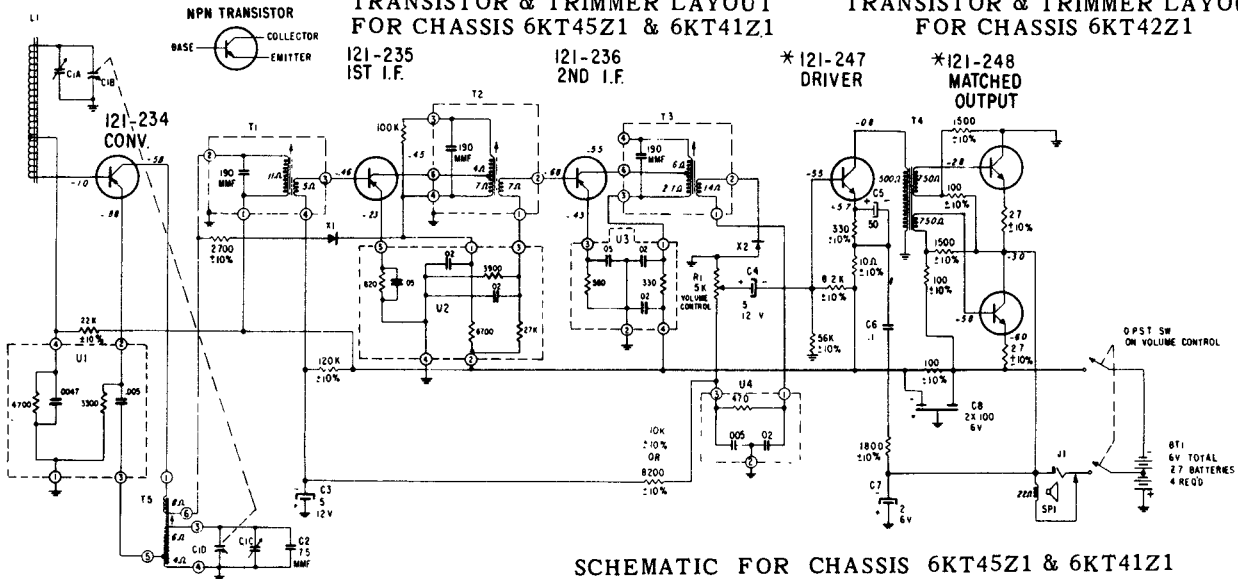


SCHEMATIC FOR CHASSIS 6KT45Z1 & 6KT41Z1

VIEWED FROM WIRING SIDE




ZENITH Model "Royal 490" Chassis 7KT45Z1

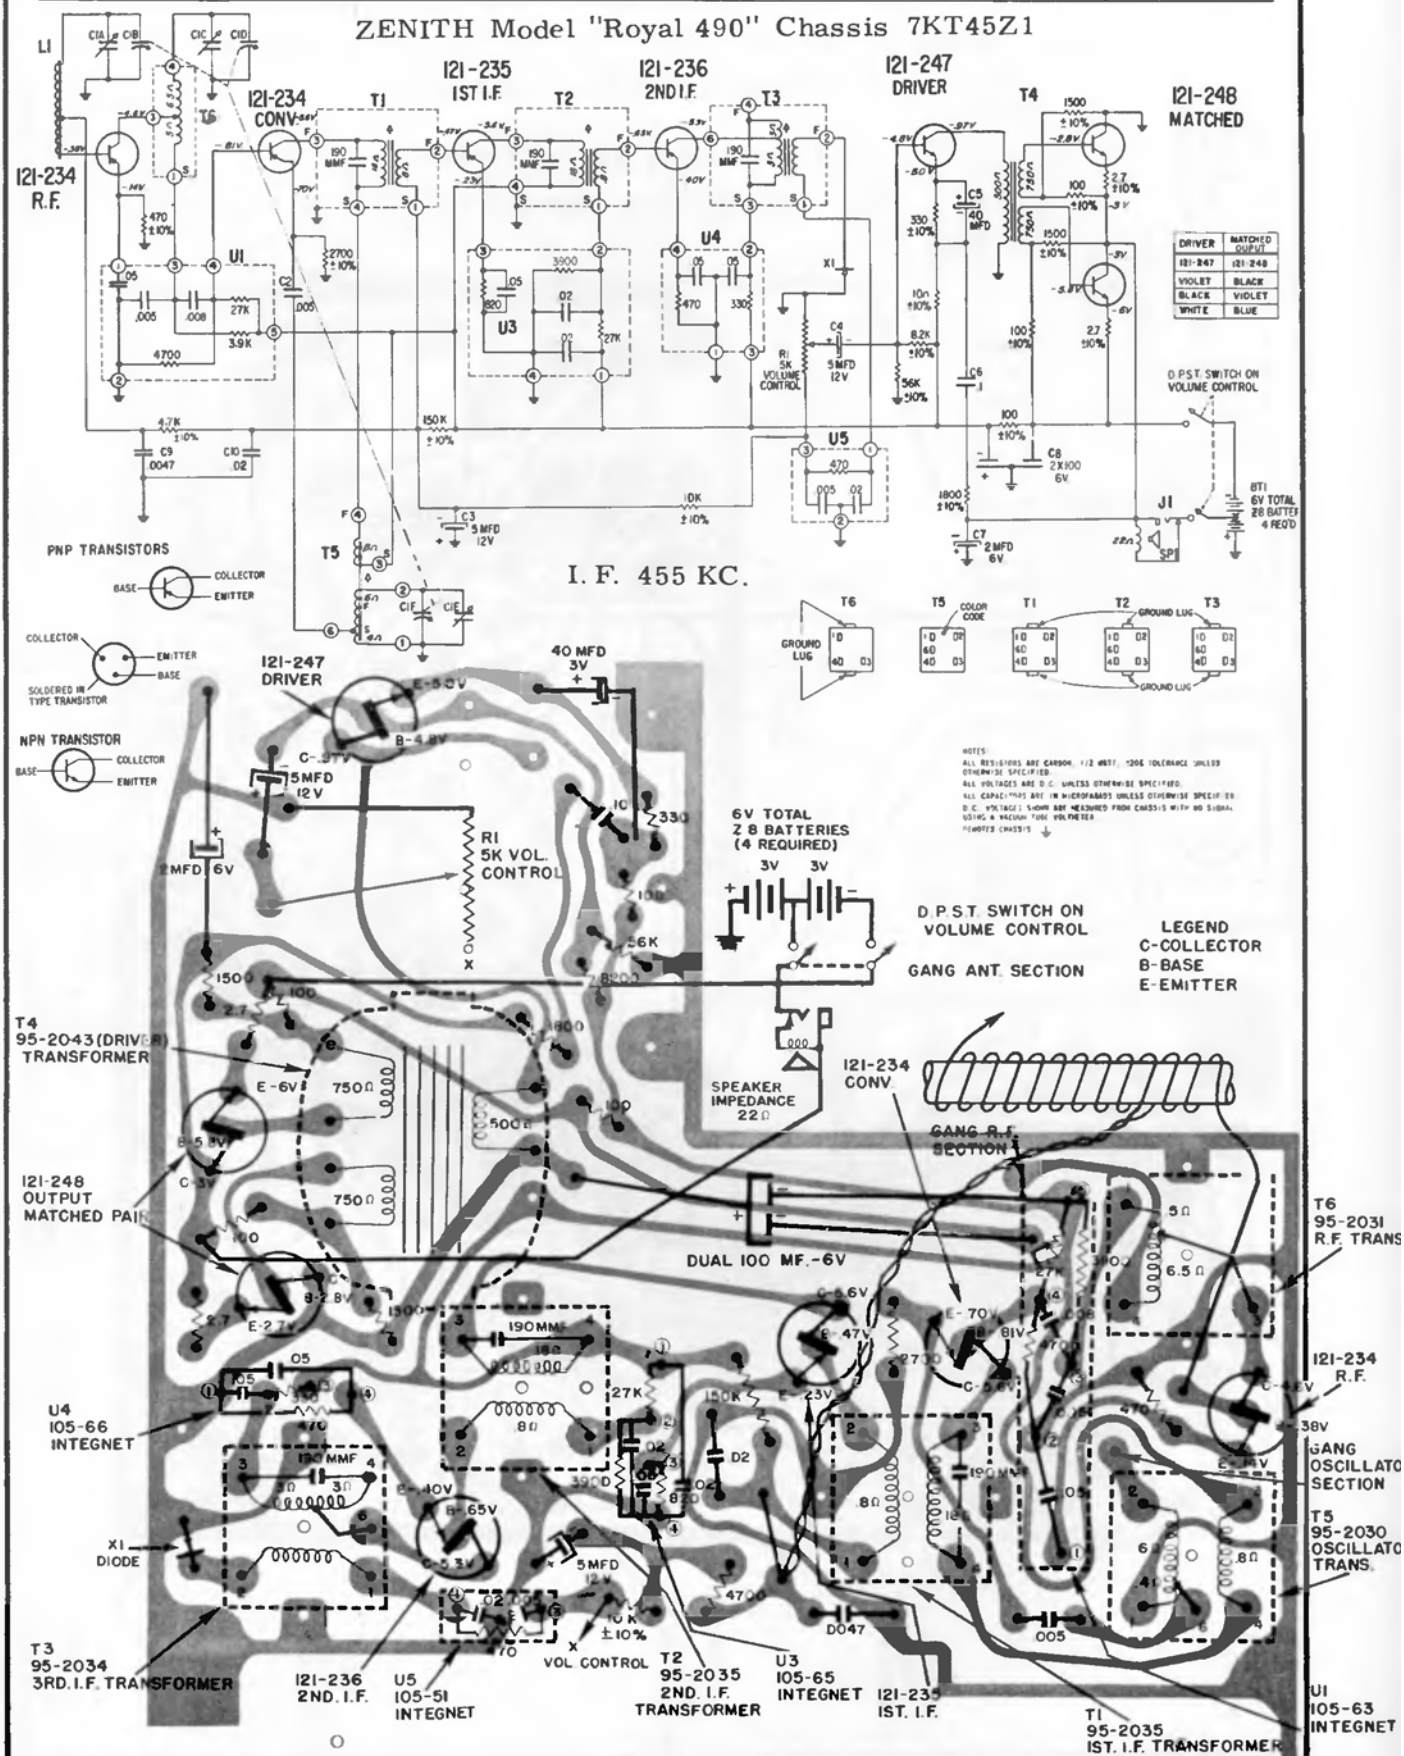

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING

ZENITH RADIO Model K615B, C, W, Chassis 6K05

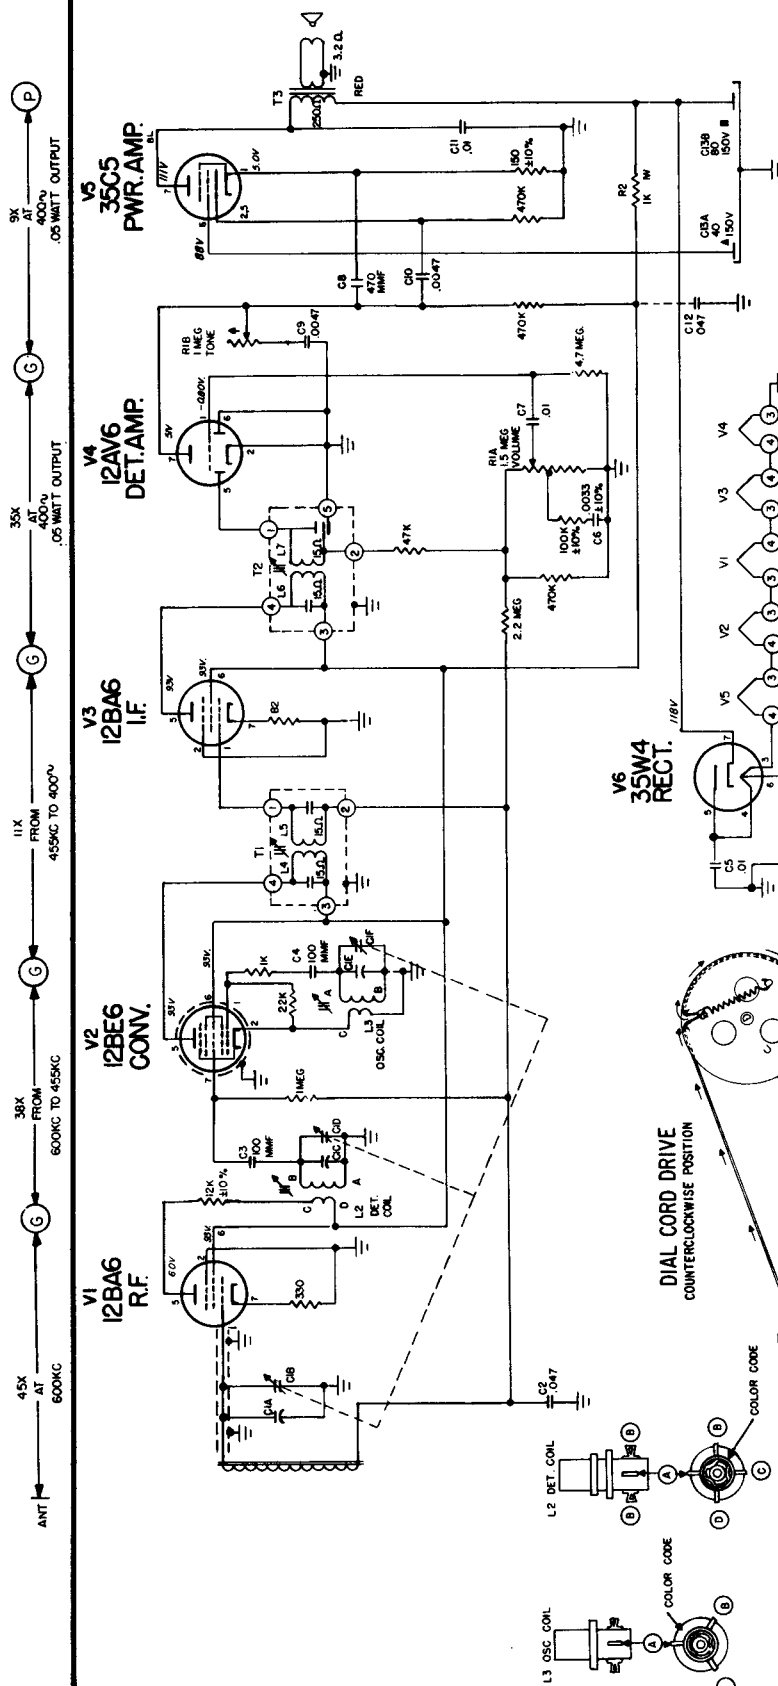


NOTES:
ALL VOLTAGES MEASURED FROM CHASSIS TO POINTS INDICATED WITH AC-DC OR VACUUM TUBE VOLTMETER.
ALL VOLTAGES ARE D. C. UNLESS OTHERWISE SPECIFIED.
ALL RESISTORS ARE 5% TOLERANCE. 1/2 WATT CALIBER UNLESS OTHERWISE SPECIFIED.
ALL CAPACITOR VALUES IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
USE ONLY ZENITH NON-INDUCTIVE ELECTROLYTIC CONDENSERS FOR REPLACEMENT.
IF ANY OTHER TYPE OF ELECTROLYTIC IS USED, IT WILL BE NECESSARY TO REWIND THE TRANSFORMER.
L.P. TRANSFORMER NUMBERING STARTS WITH 41 TERMINAL, AS FIRST TERMINAL CLOCKWISE FROM MARKER CODE TERMINAL AS VIEWED FROM BOTTOM OF CHASSIS.
L.P. FREQUENCY 445 KC, TUNING RANGE 539 KC TO 1600 KC.

ALIGNMENT PROCEDURE

Operation	Connect Oscillator To	Dummy Antenna	Input Sig. Frequency	Set Dial At	Trimmers	Purpose
1	Converter Grid	.5 Mfd.	455 Kc.	600 Kc	L4, L5, L6, L7	For I.F. Alignment.
2	One Turn Loop Coupled Loosely to Wave Magnet	—	1600 Kc.	1600 Kc.	C1F	Set Oscillator to Dial Scale
3	Wave Magnet	—	1400 Kc.	1400 Kc.	C1D, C1B	Align Detector and Antenna Stage


DIAL CORD DRIVE COUNTERCLOCKWISE POSITION

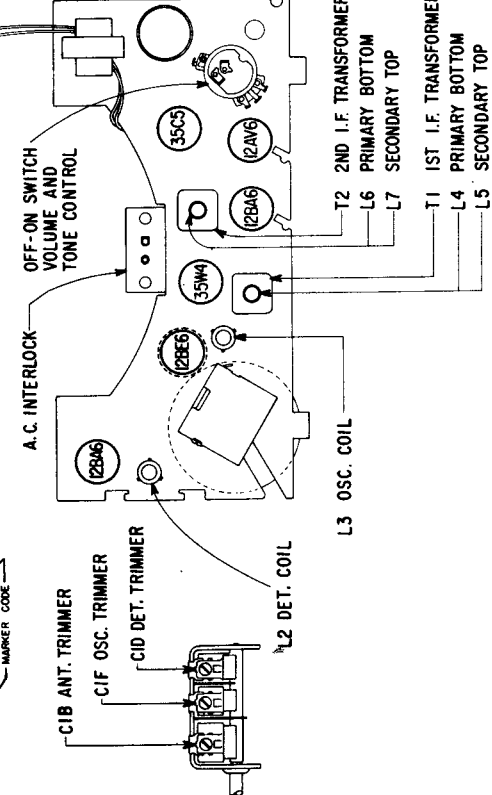

ZENITH RADIO

MODEL L624


CHASSIS 6L03

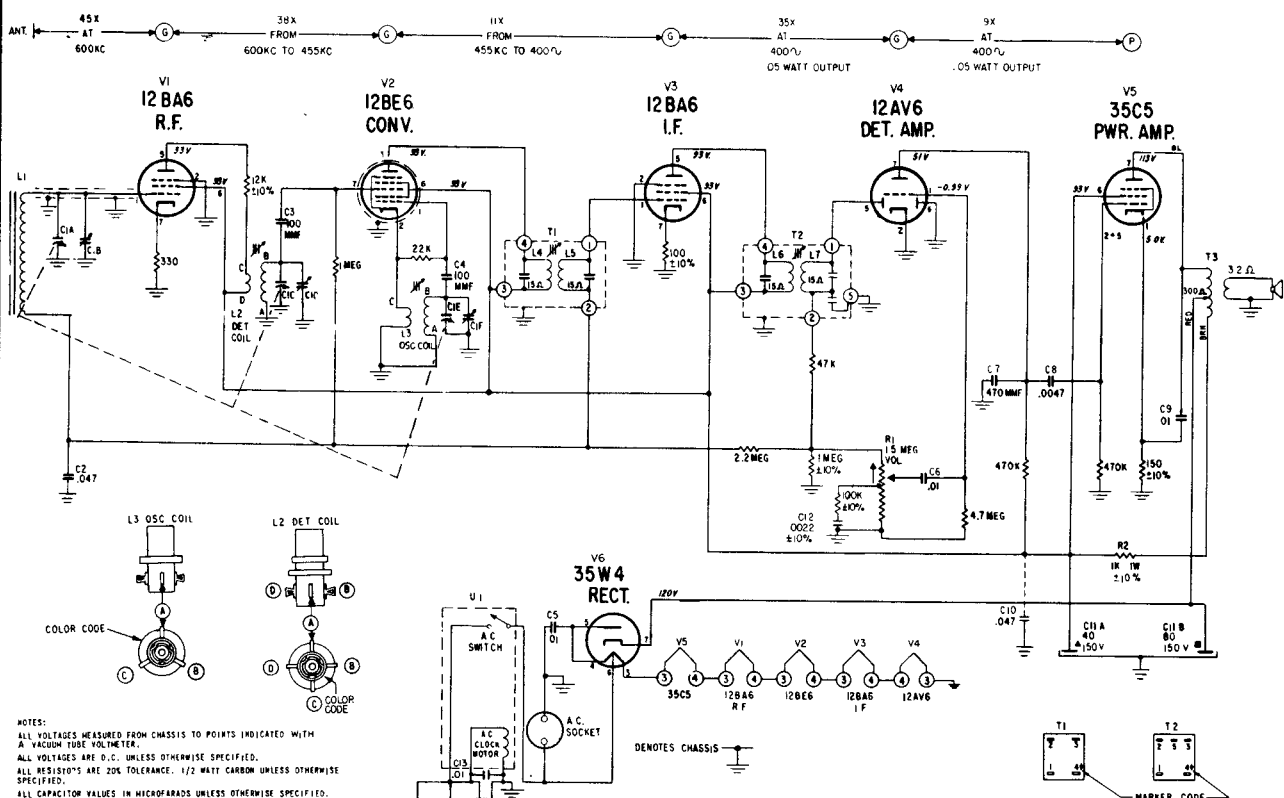

CID DETECTOR TRIMMER
 C1F OSCILLATOR TRIMMER
 C1B ANTENNA TRIMMER

DIAL CORD DRIVE

SHOWN IN FULL COUNTER
 CLOCKWISE POSITION

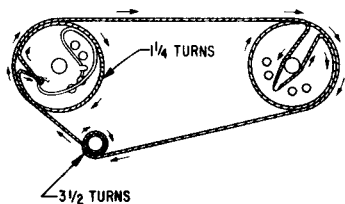

T2 2ND I.F. TRANSFORMER
 L4 PRIMARY BOTTOM
 L5 SECONDARY TOP

ELECTROLYTIC

T1 1ST I.F. TRANSFORMER
 L6 PRIMARY BOTTOM
 L7 SECONDARY TOP
 L3 OSCILLATOR COIL
 R1 VOLUME CONTROL


AC INTERLOCK

L2 DETECTOR COIL


ALIGNMENT PROCEDURE

Operation	Connect Oscillator To	Dummy Antenna	Input Sig. Frequency	Set Dial At	Trimmers	Purpose
1	Converter Grid	.5 Mfd.	455 Kc.	600 Kc.	L4,L5,L6, L7	For I.F. Alignment.
2	One Turn Loop Coupled Loosely to Wave-magnet	—	1600 Kc.	1600 Kc.	C1F	Set Oscillator to Dial Scale.
3		—	1400 Kc.	1400 Kc.	C1D, C1B	Align Detector and Antenna Stage.


ZENITH RADIO MODEL L722C, G & W CHASSIS 6L06

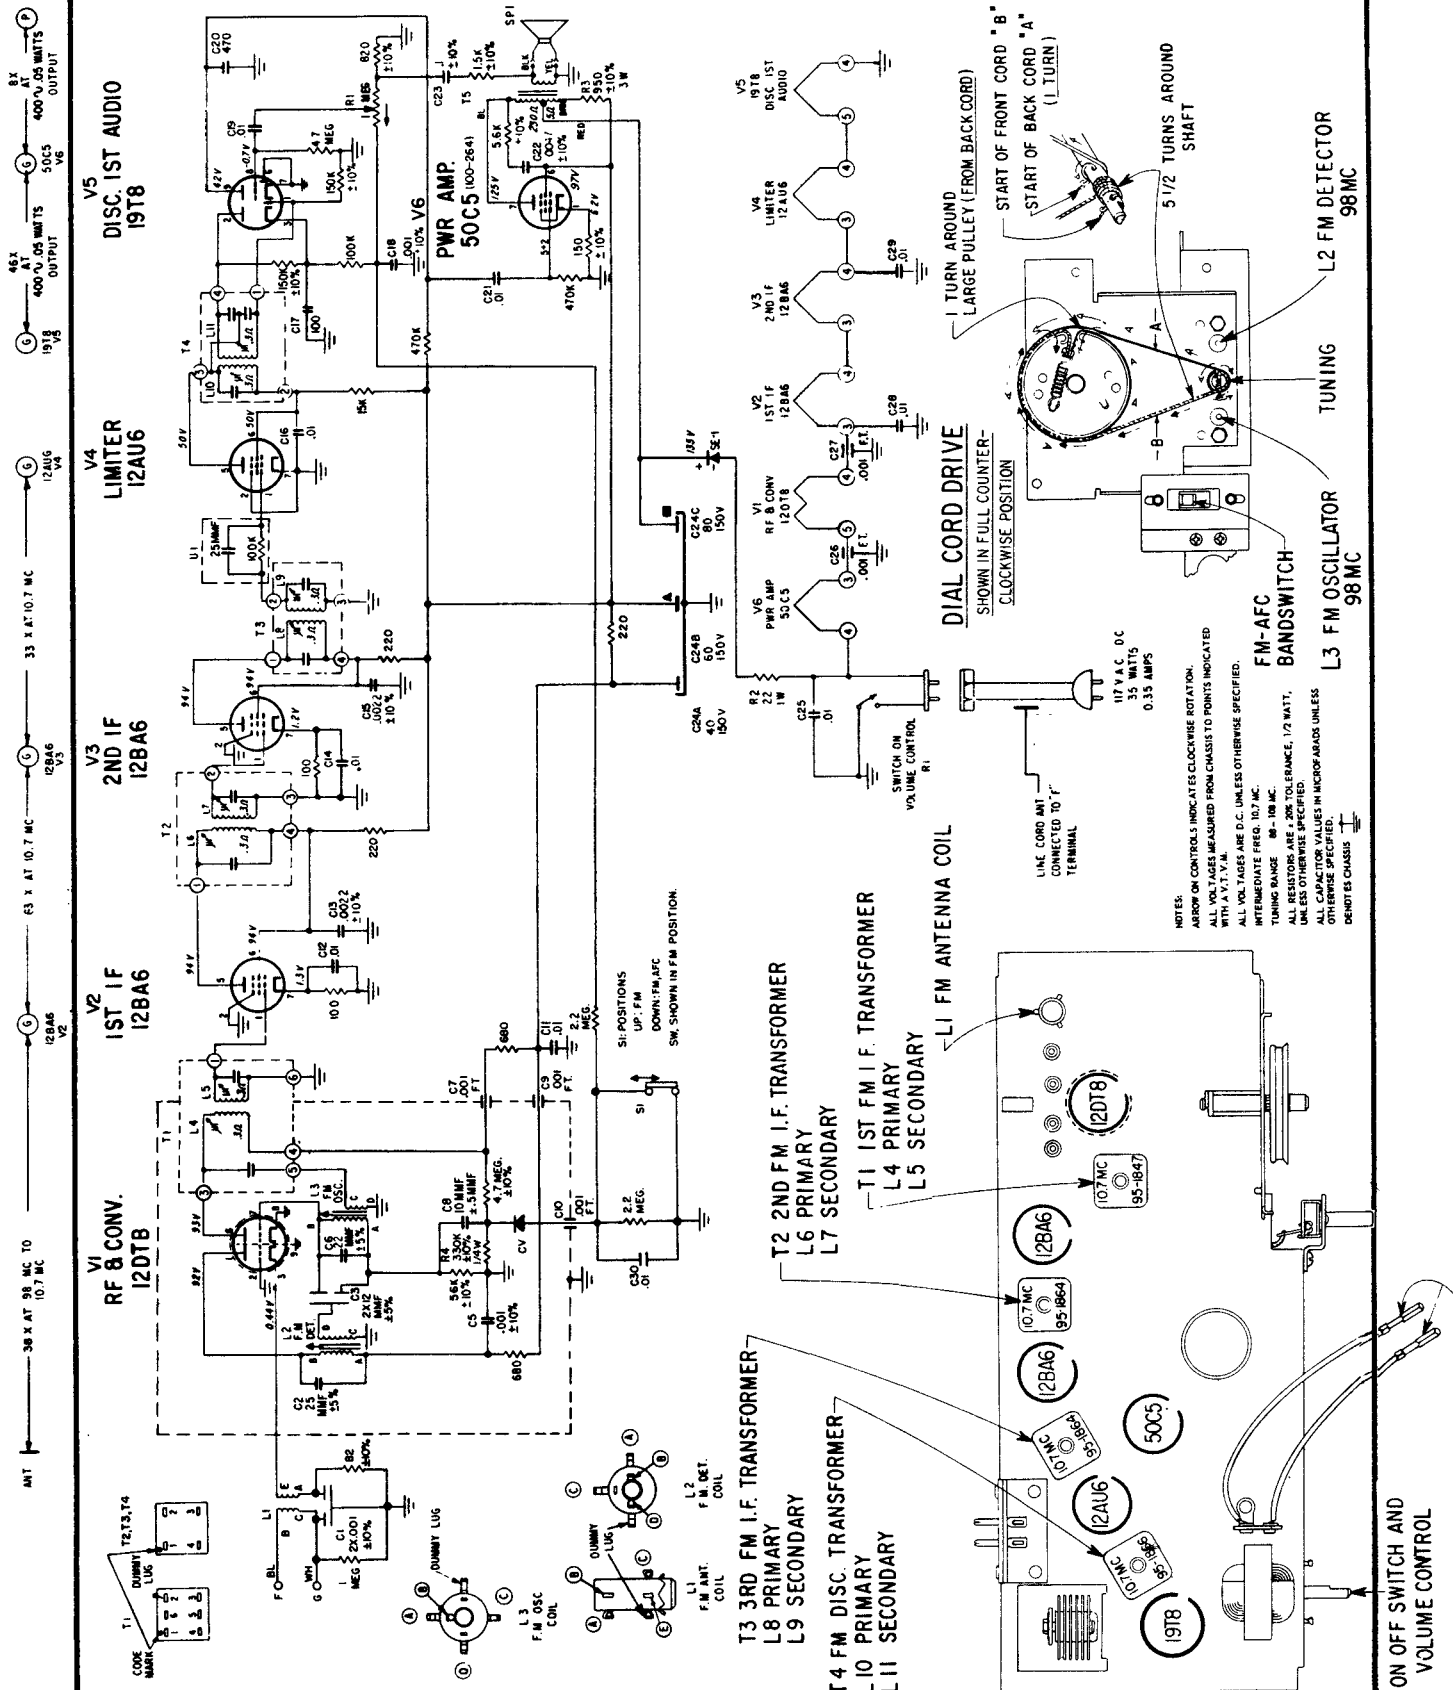


ZENITH RADIO MODEL L723C, G & W CHASSIS 7L04

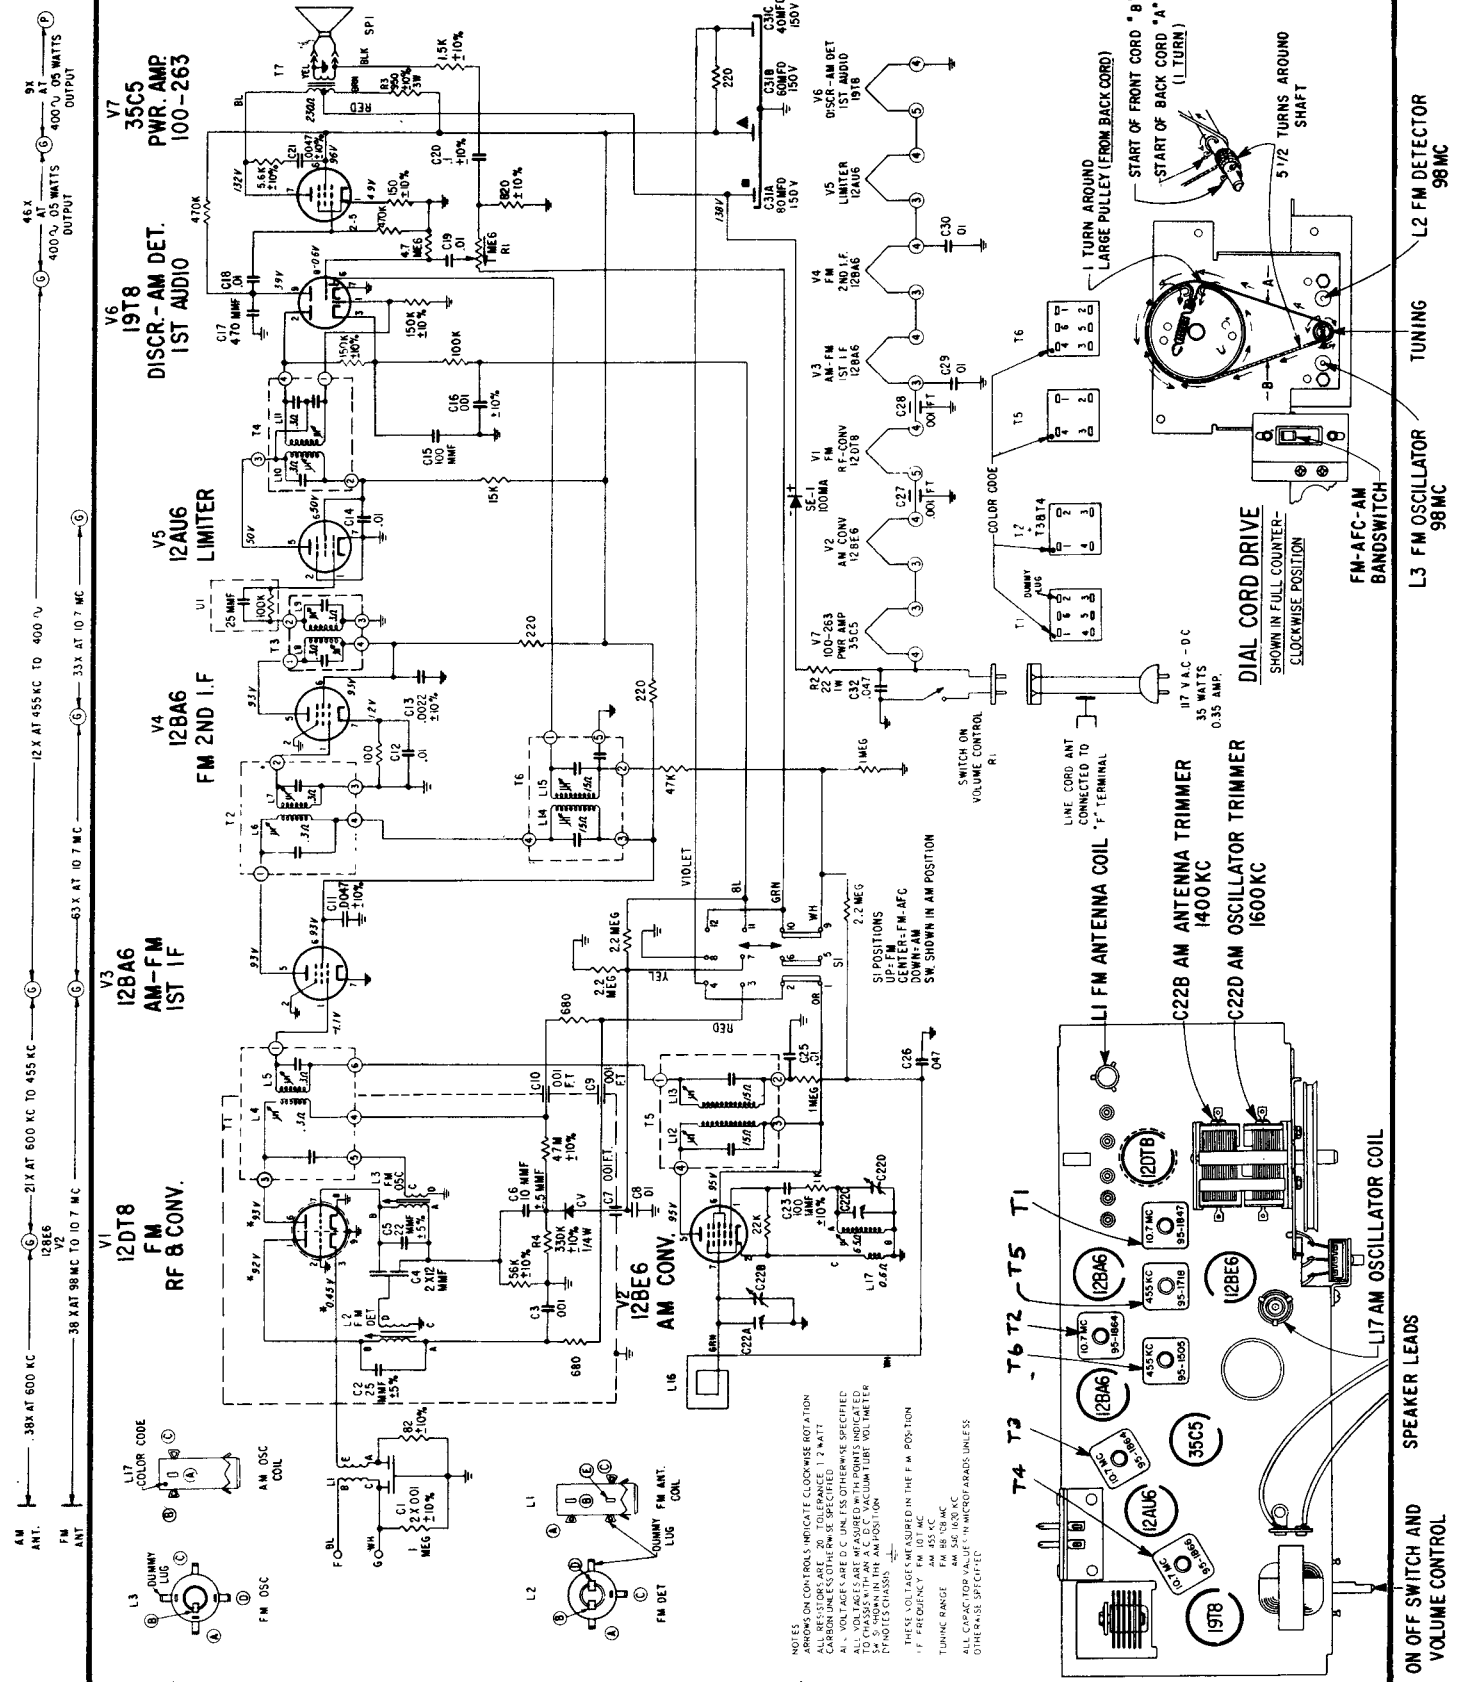



ZENITH 3L01 FOR MODELS SP401, MP401, ST1951, MT1951, MT1955, ST1959, SL2501 AND ML2601.

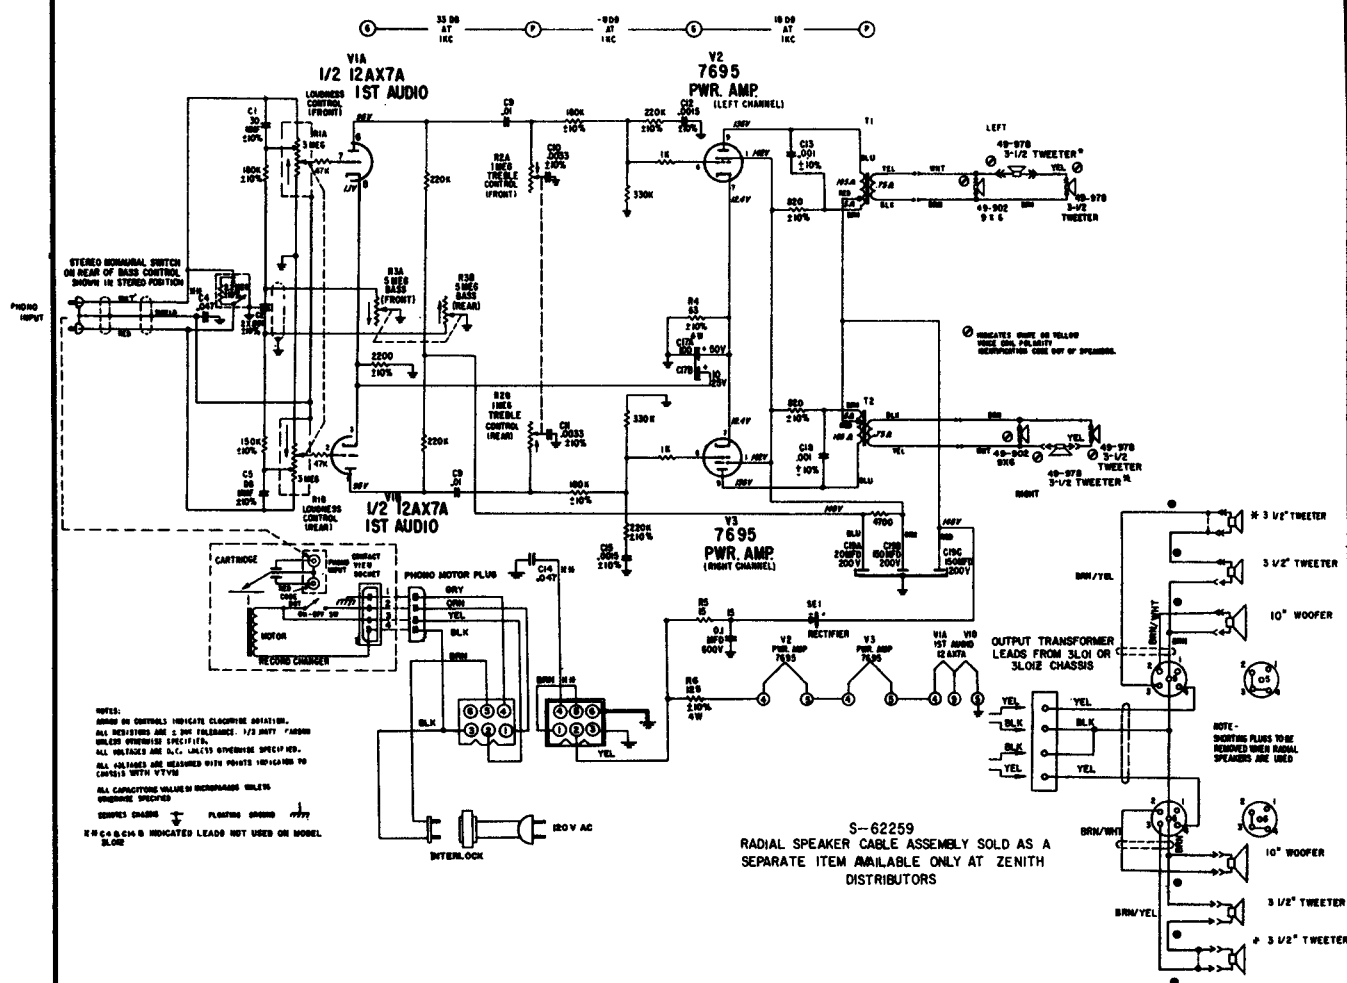

ZENITH Type 2L20 used in Models LPS45J, L

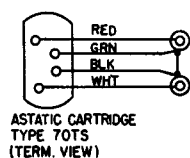

ALL CAPACITOR VALUES IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
ALL RESISTORS ARE $\pm 20\%$, 1/2W UNLESS OTHERWISE SPECIFIED.

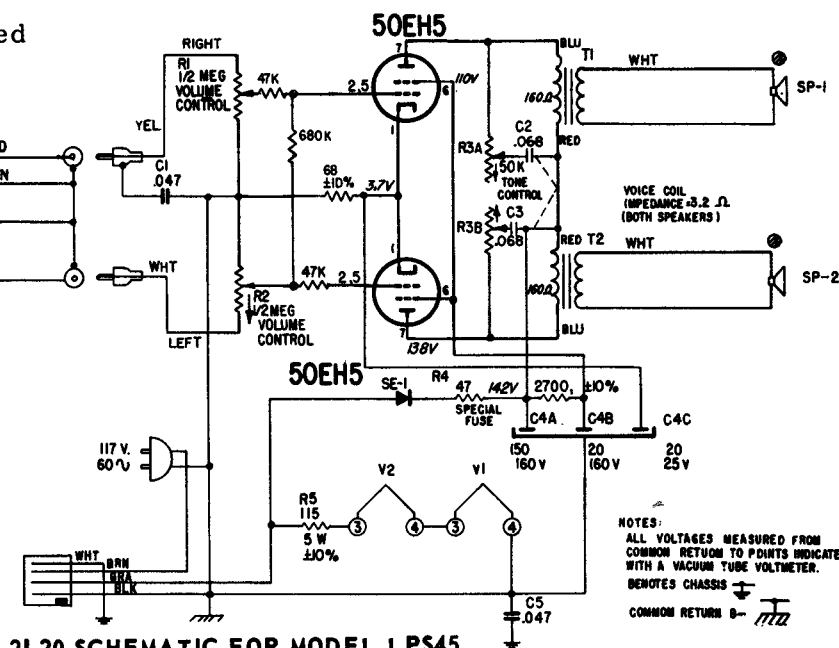
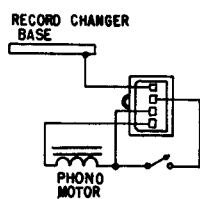


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

1 MIL STYLUS
SILVER PIN
3 MIL STYLUS


TERMINAL VIEW
OF CARTRIDGE

ZENITH 1L20 used in Models ZP2 types,
and 1L21 used in Models LP8 types.

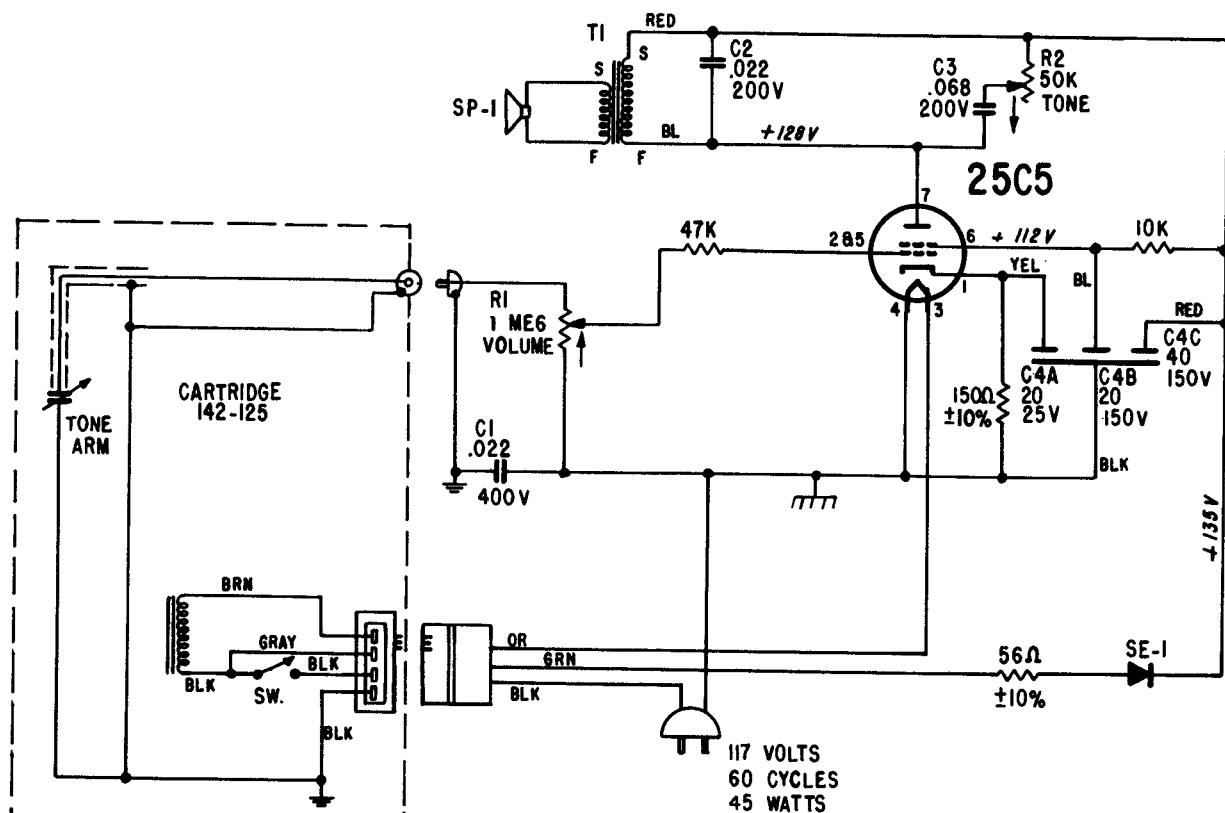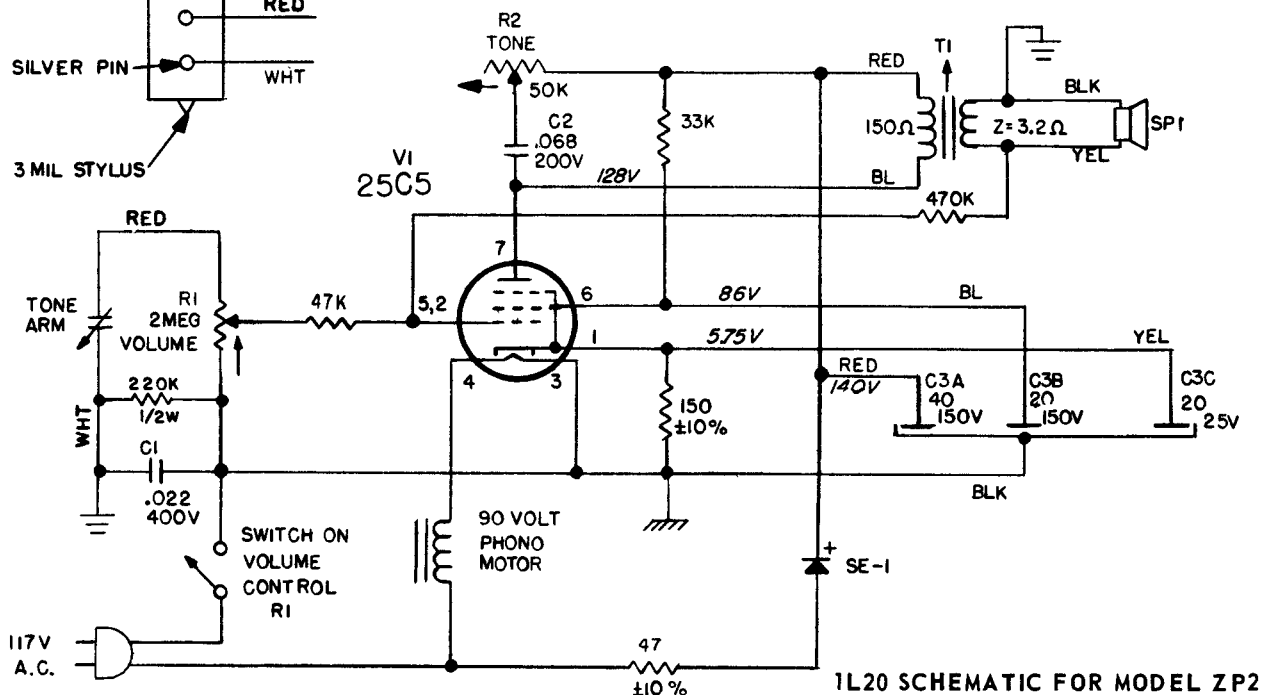


VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

ZENITH 4L21 SCHEMATIC FOR MODELS ST1971, MT1971, ST1981, MT1981, ML2786 AND 7200. AUDIO OUTPUT STRIP SPEAKER TERMINAL STRIP

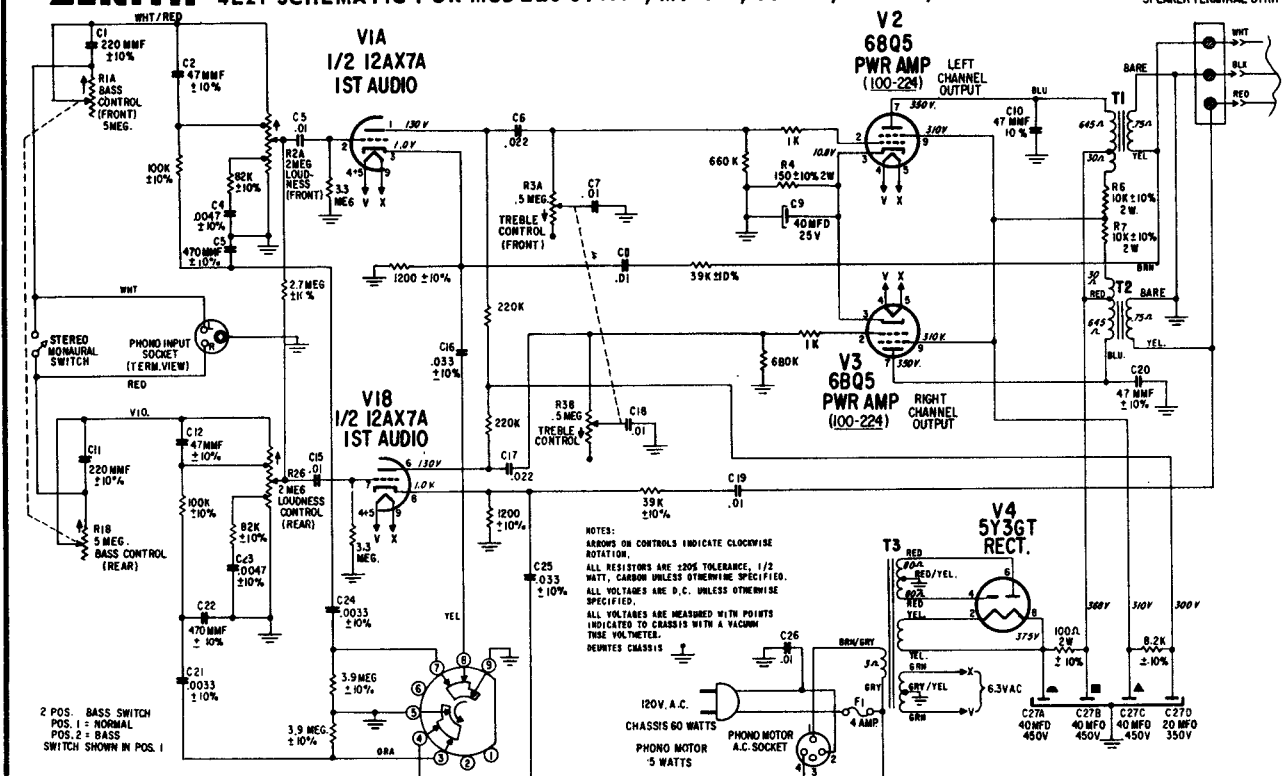


5L29 SCHEMATIC FOR MODELS SL2505, ML2605, ML2606, ML2607, ML2608, ML2610 AND ML2636.

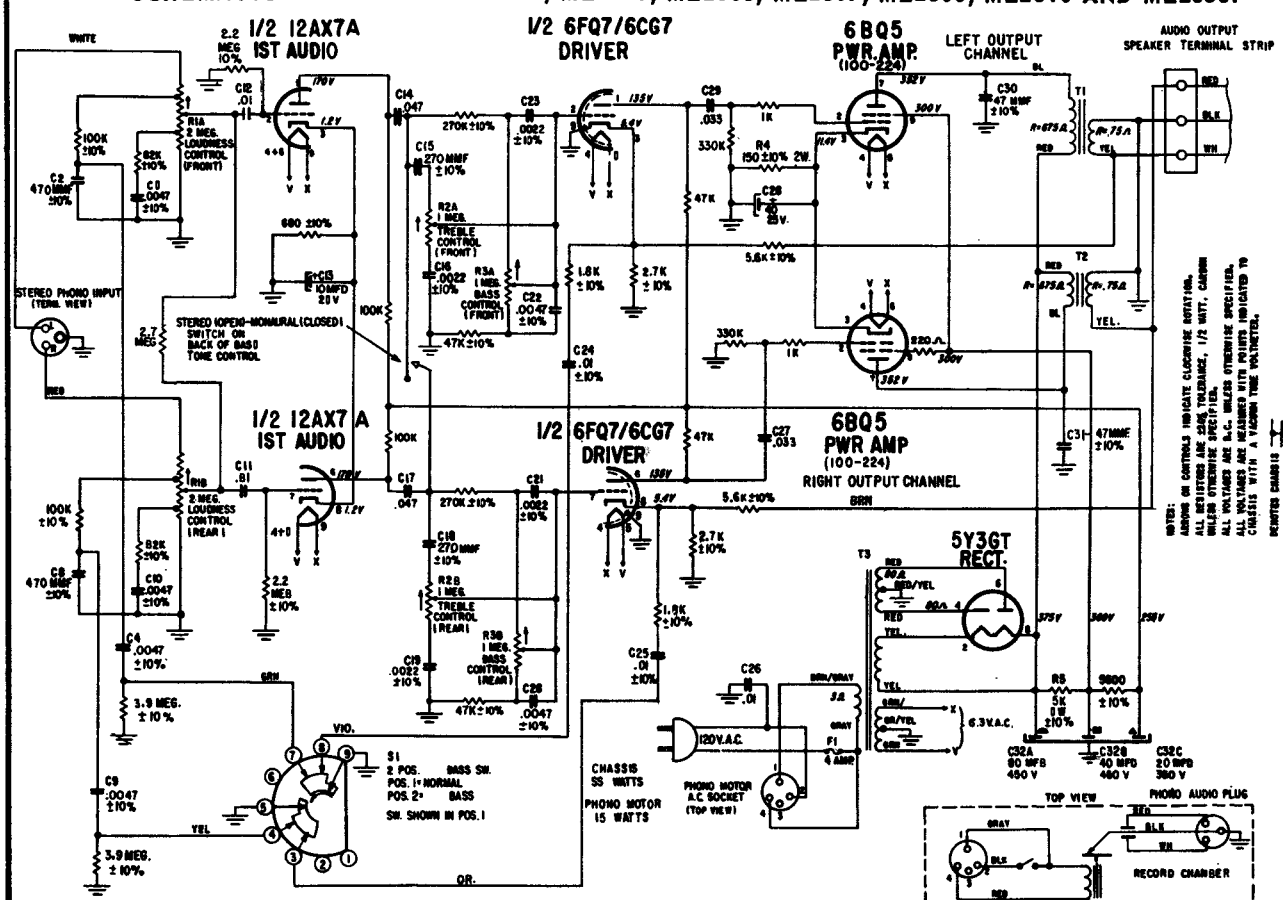

ZENITH

[illegible]


SHOWN IN FULL COUNTERCLOCKWISE POSITION

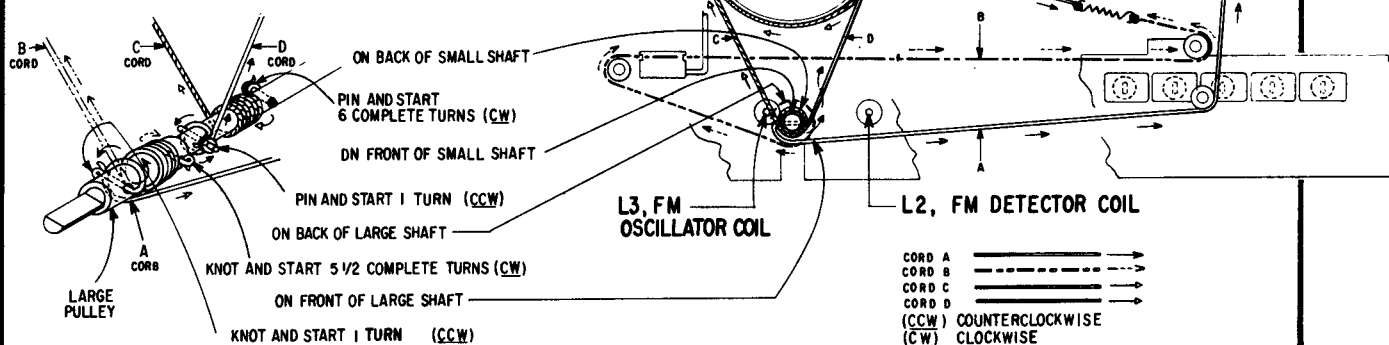

ZENITH

ML2668, ML2670, ML2675, ML2685 AND 7500.

TEST POINTS	
A	1st FM LIMITER GRID
B	2nd FM-AM I.F. GRID
C	2nd FM LIMITER GRID
D	AM CONV. GRID
E	1st FM-AM I.F. GRID
F	FM CONV. GRID
G	AM RF GRID
H	FM ANTENNA
J	RATIO DET. OUTPUT-67MC TRAP
K	NM, STEREO MONAURAL
L	19KC-DOUBLER
N	DET. COIL PEAK-PHASING
M	MX PHASING

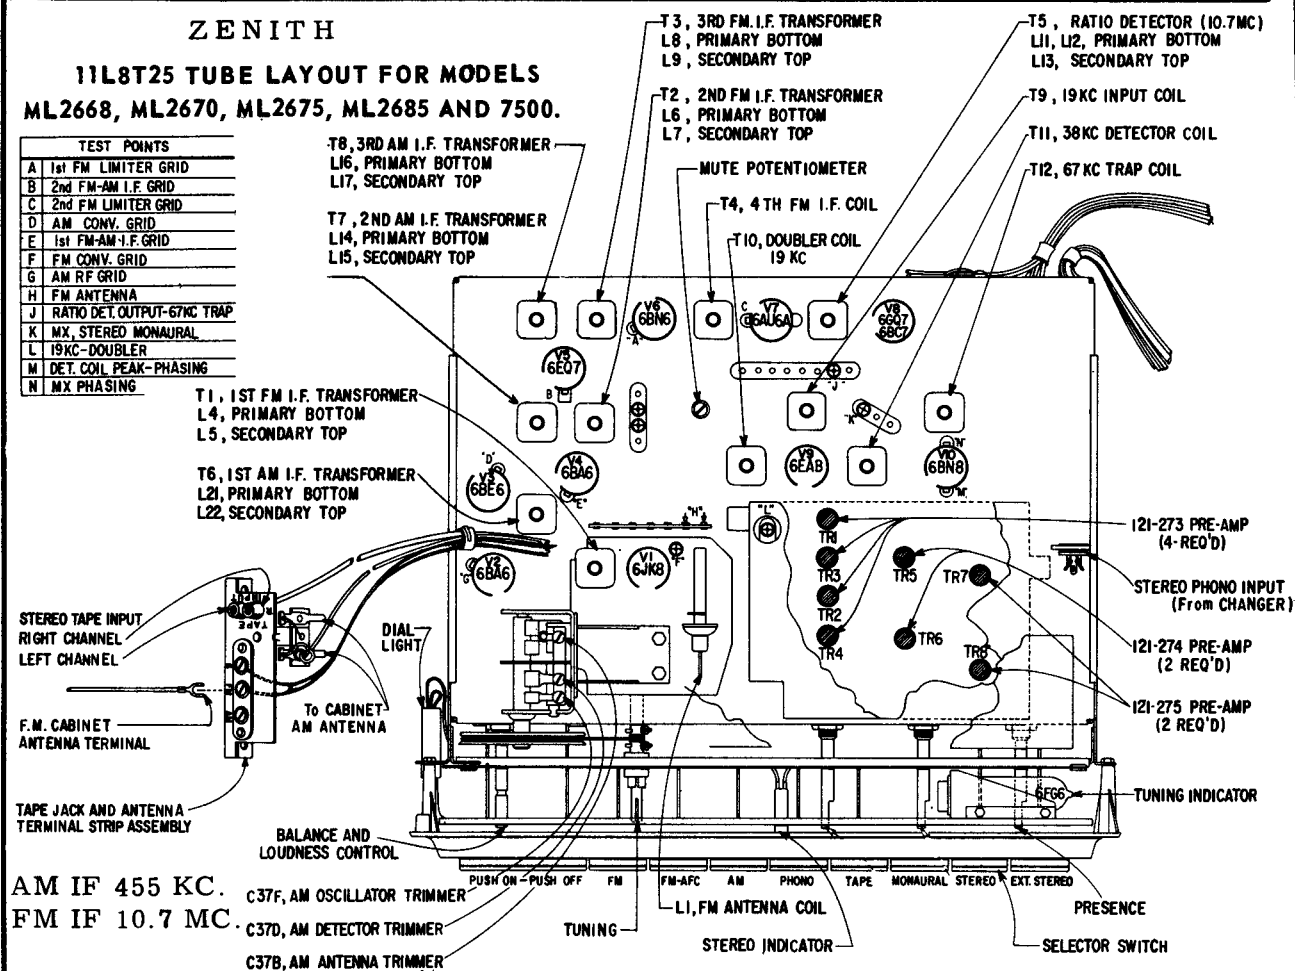

VI-A FM-RF
1/2 6JK8

VI-B FM-CONV.
1/2 6JK8

POINT "F" 1ST FM IF

L2 FM DET - COLOR CODE

DUMMY LUG

T1

RF R+

AFC


AGC

HTR

CONV.

ZENITH 11L8T25 SCHEMATIC FOR MODELS ML2668, ML2670, ML2675, ML2685 AND 7500.

(For chassis layout and FM tuner schematic see page 189)

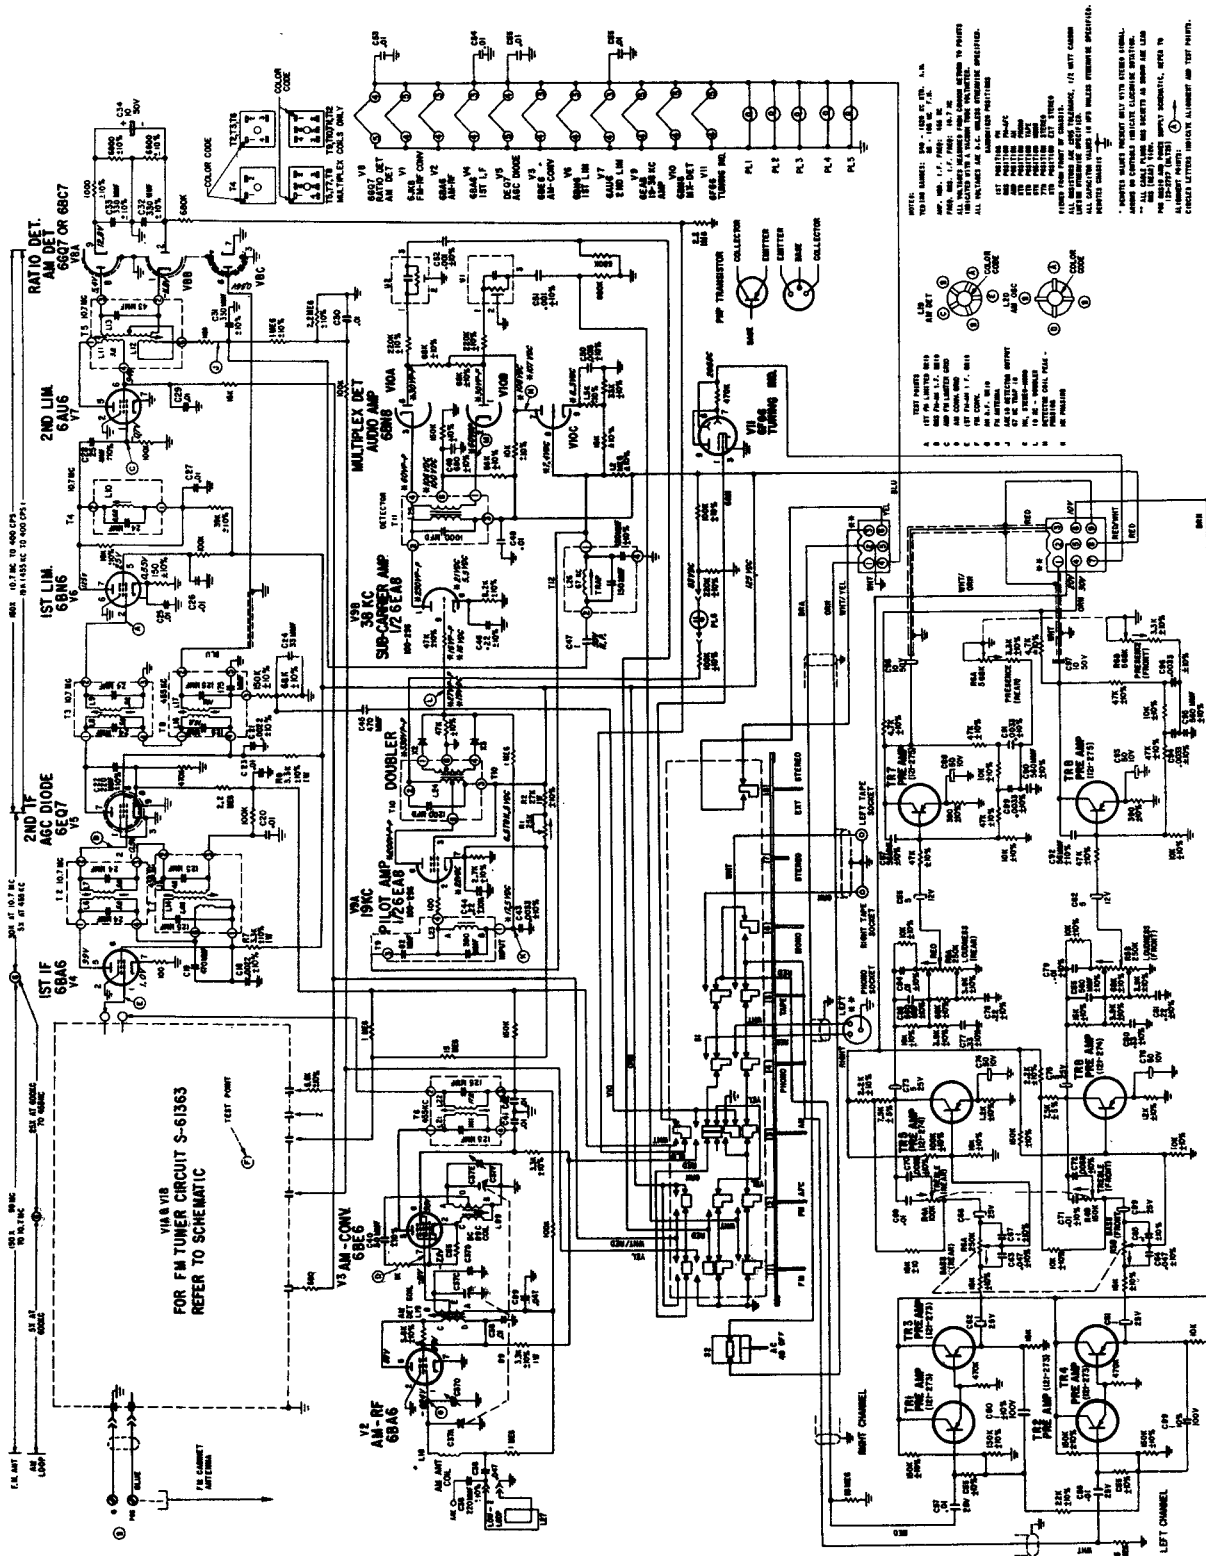

INDEX

Under each manufacturer's name, at left there are listed that make chassis and models in numerical order. The corresponding page number at right of each listing refers to the first page of the section dealing with such material.

Admiral Corp.	Arvin, Cont.	Delco	Emerson, Cont.	G. E. Continued	Montgomery Ward
1F1B 3	43R43 15	300 21	P-1913 34	P895A-M 46	GEN-769A 61
4S3A 3	53R05 11	331 21	P-1914 36	P910A-M 46	GEN-951A 61
4X3,A 4	53R07 11	332 21	P-1915 39	P911 46	JWR-953A 60
5D6A 5	53R17 11	333 21	P-1926 37	P911A-M 46	JWR-956A 60
5D6B,C 5	53R19 11	AC-3351 22	P-1919 42	P912A-M 46	JWR-1033B 60
6X3,A 6	53R27 11	AC-3352 24	P-1920 42	P913A-M 46	JWR-1035B 60
7L2 7	53R28 11	AC-3353 22	P-1921 42	P915A,B 49	GEN-1730A 61
8G2 10	63R38 13	AC-3354 24	P-1923 43	P916A,B 49	GEN-1731A 61
8P1 8	63R58 12	AC-3377 24	P-1936 38	P917A,B 49	
9P1 8	83P15 14	980462 24	P-1937 38	P925A 50	
Y2347 7	83P43 14	980463 18	120486 28	P955A 51	<u>Motorola</u>
Y2351 10	83P53 14	980464 24	120567B 42	RP1530 56	BC2 82
Y3303 4	83P55 14	980626 21	120637 38	RP1590A,C 53	CX2 81
Y3308 4	1.67201 14	980635 21	120638 39	RC1641 54	BC3 82
Y3309 4	1.74301 15	980655 26	120639 35	RC1642 54	3AT 62
Y3321 4	1.74401 11	982136 24	120640 34	RC1651 54	3MT 62
Y3323 5	1.74501 11	982137 18	120646 40	RC1652 54	3TME 64
Y3337 4	1.75001 13	982149 22	120647 35	RC1660 55	3TMF 64
Y3346 5	1.75101 12	982212 21	120649 36	RC1661 55	3TMR 66
Y3353 5	1.75401 11	983873 24	120666 28	RC1662 55	3TMY 64
Y3354 5	1.76001 11	983874 22	120668 42	RC1663 55	A24 84
Y3359 5	1.77001 14	983875 24	120670 43	RC1664 55	C34 85
Y3363 5	1.78001 15	985396 18	120685 29	RC1670 55	C35 85
Y3364 5		985431 22	120686 41	RC1671 55	C36 85
Y3368 5	<u>Buick</u>	985432 24	120693 37	RC1672 55	SP41 100
Y3376 5	980462 24	985443 22	and 42	RC1673 55	SP42 100
Y3377 5	980463 18	985447 22	120700 29	RC1674 55	X42 86
Y3379 5	980464 24	985449 24	120701 41	RP2080 54	X42-1 86
Y3381 5	980626 21	985453 22	120713 28	RP2081 54	SP43 100
Y3383 5	980635 21	985455 24		RP2085 54	SP44 102
Y3421 6	980655 26	985471 24	<u>Ford</u>	RP2090 54	SP44-1 102
Y3426 6		985686 21	C3AA-18806 64	RP2091 54	X47 87
Y3431 6	<u>Cadillac</u>	2234003 24	C3GA-18806 64	RP2095 54	X48 88
Y3436 6	7282315 18	7282315 18	C3YA-18806 64	RP2110 56	X49 89
Y3443 4	7283295 21	7283295 21		RP2111 56	X50 89
Y4659 3		<u>Delmonico</u>	<u>Gamble-Skogmo</u>	RP2113 56	SP51 93
Y4677 8	<u>Channel Master</u>	8B-2 17	RA60-9921A 44	RP2130 56	X51 90
Y4851 8	6535 16		RA60-9922A 44	RP2131A 56	SP52 94
Y4852 8		<u>Dodge</u>	RA60-9924A 44	RP2138A 56	HK53-1 95
Y4871 8	<u>Chevrolet</u>	331 21		RC4670 55	HK53-2 95
Y4872 8	985396 18	332 21	<u>General</u>	RC4671 55	HK54-2 96
Y4885 8	985431 22		<u>Electric</u>	RC4672 55	X54 91
Y4918 3	985432 24	<u>Emerson Radio</u>	T215A 52	RC4675 55	X56 92
Y4941A 8	985443 22	911 28	T216A 52	RC4679 55	BKA63 62
<u>American</u>	985447 22	990 28	H220A 45	P9151A,B 49	CA63 68
<u>Motors</u>	985449 24	991 28	H221A 45	P9161A,B 49	CRA63 68
8991142 66	985453 22	G-1700 29	T265A 52	P9171A,B 49	CRM63 69
<u>Arvin</u>	985455 24	G-1707 30	T266A 52		CTA63 62
13R35 11	985471 24	G-1708 32	C540A 52	<u>Hitachi</u>	CTM63 62
13R37 11	985686 21	G-1709 29	C541A 52	TH-650 57	CYA63 68
33R28 15	<u>Chrysler</u>	G-1710 41	P807G,H 48		CYM63 69
33R29 15	333 21	G-1711 41	P807S,T 48	<u>Magnavox</u>	OEA63 68
		G-1713 29	P808G,H 48	59 Series 59	PCA63 62
			P808S,T 48	93 Series 58	VWA63 71

(INDEX continued on page 192)

VOLUME R-24, MOST-OFTEN-NEEDED 1964 RADIO SERVICING INFORMATION

INDEX Continued

Motorola, Cont.		Philco		RCA Continued		Sears, Roebuck		Westinghouse+		Westinghouse	
VWM63	70	T-67	105	4RA34	132	RC-1213A	132	H-62MPS3A	167	V-2522-1	171
X70	86	T-68	106	4RA41	132	RC-1213B	132	H-69ACS1A	167	V-2522-2	171
SK100-4	99	T-81	108	4RA42	132	RC-1213E	132	H-75AC1A	167	V-2522-3	171
SK103	100	T-84	107	4RA45	132	RC-1213F	132	H-75AC2A	167	V-2523-1	169
SK104	100	T-90	110	4RD1	132	RC-1213H	132	H-79ACS1B	171	V-2527-1	170
SK105	100	T-703	111	4RD5	132	RC-1214A	143	H-79ACS2B	171	V-2527-2	170
SK106	98	M-709	112	4RD4.0	132	RC-1215A	140	H-85MP1	168		
SK107	98	M-712	113	4RD4.1	132	RC-1215B	140	H-85MP2	168		
SK108	100	M-714	113	4RD44	132			H-85MP3	168	Zenith Radio	
SK109	98	M-715	113	4RD51	132			H-86ACS1A	170	1L20	186
SK110	98	M-716	113	4RD52	132			H-86ACS2A	170	1L21	186
SK-111	97	M-719	114	4RD55	132			H-86ACS3	170	2L20	185
SK-112	97	M-798	114	4RG1	137			H-88ACS1	171	ZP2	186
SK-115	97	M-869	112	4RG3	137			H-89ACS1	169	3L01	185
SK-116	97	M-871	113	4RG5	143			H-90ACS1	171	4L21	187
SK124	99	M-872	113	4RG6	143			H-90ACS2	171	5L07	175
SK125	99	M-874	113	4RG11	137			H-90ACS3	171	5L29	187
216	72	M-876	113	4RG12	137			H-96AC1	167	6K05	181
217	72	T-902 (128)	115	4RG16	137			H-96AC2	167	6KT4.0Z1	176
290T	76	T-907	116	4RG31	137			H-839N5	162	6KT4.0Z8	177
323T	78	T-911	120	4RG34	137			H-846P8++	160	6KT4.1Z1	179
337	72	M-936	114	4RG51	143			H-848N5	161	6KT4.2Z1	178
339	72	M-937	114	4RG52	143			H-849N5	161	6KT4.5Z1	178
344	72	M-938	114	4RG56	143			H-850N6	164	6KT4.7Z1	174
345	72	M-939	114	4RG61	143			H-851N6	164	6L03	182
413T	80	M-14.16	123	4RG62	143			H-852N6	164	6L06	183
SP511	94	M-14.21	122	4RG66	143			H-855LN6	164	7KT4.5Z1	180
HS-996	96	M-14.28	119	4VC64	131			H-856LN6	164	7L04	184
HS-998	85	M-14.30	119	4VC69	131			H-871N6	164	ZP8	186
HS-1011	86	M-15.29	122	4VC82	131			H-872N6	164	9L20	188
HS-1048	97	M-15.37	123	4VE045	131			H-873N6	164	11L8T25	189
HS-1049	98	L-1651	124	4VE046	131			H-875LN6	164	LPS45J,L	185
HS-1050	97	L-1652	124	4VF095	140			H-876LN6	164	50L	177
HS-1051	98	L-1653	124	4VF096	140			H-877LN6	164	130	174
HS-1055	100	L-1656	129	4VF105	140			H-880T5	166	265	178
HS-1058	102	L-1667	129	4VF106	140			H-881T5	166	MP4.01	185
HS-1059	100	L-1679	129	4VF114	140			H-881T5	166	SP4.01	185
HS-1061	100			4VF124	140			H-M1760	172	490	180
HS-1102	100			4VF145	140			H-M1761	172	L519C,+	175
HS-1117	95			4VF146	140			H-M1763	172	K615B,C,W	181
HS-1123	95			4VF156	140			H-M1790	172	L624	182
HS-1125	102			4VF156	140			H-M1791	172	645	178
HS-1134	93			4VF206	140			H-M1793	172	670	178
HS-1135	94			4VF224	140			H-M1810/A	172	L722C,G,W	183
HS-1192	101			4VF282	140			H-M1810B	172	L723C,G,W	184
HS-1201	99			4VF289	140			H-M1811/A	172	MT1951	185
HS-4124	82			4VF304	138			H-M1811B	172	ST1951	185
HS-4136	84			4VF325	138			H-M1813/A	172	MT1955	185
HS-6108	87			4VF326	138			H-M1813B	172	ST1959	185
HS-6110	81			4VF348	138			H-M1815/A	172	SL2501	185
HS-6111	88			4VF349	138			H-M1815B	172	SL2505	187
HS-6112	89			4VF405	138			H-M1910	172	ML2601	185
HS-6114	90			4VF446	138			H-M1911	172	ML2605	187
HS-6117	86			4VF464	138			H-M1913	172	ML2606	187
HS-6118	86			4VF480	138			H-M1914	172	ML2607	187
HS-6123	91			4VF488	138			V-24.26-3,M	160	ML2608	187
HS-6124	92			4VF534	138			V-24.27-1	161	ML2610	187
				4VF534	138			V-24.27-2	162	ML2636	187
				RS-177H	134			V-24.28-3	164	ML2668	189
				RS-177J	138			V-24.28-4	164	ML2670	189
				RS-199B	134			V-24.50-1	166	ML2675	189
				RS-199C	138			V-2507-7	167	ML2685	189
				RS-202A	131			V-2508-2	167	ML2785	188
				RS-202B	131			V-2508-5	167	ML2786	188
				RS-203A	140			V-2508-11	168	7200	188
				RC-1205C	134			V-2508-13	168	7500	189
				RC-1208D	137			V-2508-14	167	S-61017	189
				RC-1208H	137			V-2515-4	172	S-61363	189
				RC-1211A	138			V-2515-8	172	S-62259	185